

Functional Description

Electronic Equipment
Control panel PAN 9

E532406/03E



Power. Passion. Partnership.

© 2017 Copyright MTU Friedrichshafen GmbH

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of MTU Friedrichshafen GmbH. This particularly applies to its reproduction, distribution, editing, translation, micro-filming and storage or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. MTU Friedrichshafen GmbH reserves the right to change, delete or supplement the information provided as and when required.

Table of Contents

1	Safety			
1.1	Important provisions for all products	4	2.3	Design of control panel PAN 9 12
1.2	Correct use of all products	5	2.4	Configuration of control panel PAN 9 17
1.3	Personnel and organizational requirements	6	2.5	Connection of control panel PAN 9 21
1.4	Safety regulations for initial start-up and operation	7	2.6	Technical data of control panel PAN 9 22
1.5	Standards for warning notices in the text and highlighted information	9	3	Appendix A
2	Functional Description		3.1	List of abbreviations 23
2.1	Function of control panel PAN 9	10	3.2	Conversion tables 26
2.2	Features of control panel PAN 9	11	3.3	MTU Contact/Service Partners 30
			4	Appendix B
			4.1	Index 31

1 Safety

1.1 Important provisions for all products

General information

This product may pose a risk of injury or damage in the following cases:

- Incorrect use
- Operation, maintenance and repair by unqualified personnel
- Changes or modifications which are neither made nor authorized by the manufacturer
- Noncompliance with the safety instructions and warning notices

Nameplates

The product is identified by nameplate, model designation or serial number and must match with the information on the title page of this manual.

Nameplates, model designation or serial number can be found on the product.

All EU-certified engines delivered by MTU come with a second nameplate. When operating the machine in the EU: The second nameplate must be affixed in a prominent position as described in the accompanying specifications.

Emission regulations and emission labels

Responsibility for compliance with emission regulations

Modification or removal of any mechanical/electronic components or the installation of additional components including the execution of calibration processes that might affect the emission characteristics of the product are prohibited by emission regulations. Emission control units/systems may only be maintained, exchanged or repaired if the components used for this purpose are approved by the manufacturer.

Noncompliance with these regulations will invalidate the design type approval issued by the emissions regulation authorities. The manufacturer does not accept any liability for violations of the emission regulations.

The product must be operated over its entire life cycle according to the conditions defined as "Intended use" (→ Page 5).

Replacing components with emission labels

On all MTU engines fitted with emission labels, these labels must remain on the engine throughout its operational life.

Exception: Engines used exclusively in land-based, military applications other than by US government agencies.

Please note the following when replacing components with emission labels:

- The relevant emission labels must be affixed to the spare part.
- Emission labels shall not be transferred from the replaced part to the spare part.
- The emission labels must be removed from the replaced part and destroyed.

1.2 Correct use of all products

Correct use

The product is intended for use in accordance with its contractually-defined purpose as described in the relevant technical documents only.

Intended use entails operation:

- Within the permissible operating parameters in accordance with the (→ Technical data)
- With fluids and lubricants approved by the manufacturer in accordance with the (→ Fluids and Lubricants Specifications of the manufacturer)
- With preservation approved by the manufacturer in accordance with the (→ Preservation and Represervation Specifications of the manufacturer)
- With spare parts approved by the manufacturer in accordance with the (→ Spare Parts Catalog/MTU contact/Service partner)
- In the original as-delivered configuration or in a configuration approved by the manufacturer in writing (also applies to engine control/parameters)
- In compliance with all safety regulations and in adherence with all warning notices in this manual
- In compliance with the maintenance work and intervals specified in the (→ Maintenance Schedule) throughout the useful life of the product
- In compliance with the maintenance and repair instructions contained in this manual, in particular with regard to the specified tightening torques
- With the exclusive use of technical personnel trained in commissioning, operation, maintenance and repair

The product must not be operated in explosive atmospheres unless the engine fulfills the conditions for such use and approval has been granted.

Any other use, particularly misuse, is considered as being contrary to the intended purpose. Such improper use increases the risk of injury and damage when working with the product. The manufacturer shall not be held liable for any damage resulting from improper, non-intended use.

The specifications of the manufacturer will be amended or supplemented as necessary. Prior to operation, make sure that the latest version is used. The latest version can be found on the websites:

- For drive systems: <http://www.mtu-online.com>
- For power generation: <http://www.mtuonsiteenergy.com>

Modifications or conversions

Unauthorized changes to the product represent a contravention of its intended use and compromise safety.

Changes or modifications shall only be considered to comply with the intended use when expressly authorized by the manufacturer. The manufacturer shall not be held liable for any damage resulting from unauthorized changes or modifications.

1.3 Personnel and organizational requirements

Organizational measures of the user/manufacturer

This manual must be issued to all personnel involved in operation, maintenance, repair, assembly, installation, or transportation.

Keep this manual handy in the vicinity of the product such that it is accessible to operating, maintenance, repair, assembly, installation, and transport personnel at all times.

Personnel must receive instruction on product handling and repair based on this manual. In particular, personnel must have read and understood the safety requirements and warnings before starting work.

This is important in the case of personnel who only occasionally perform work on or around the product. Such personnel must be instructed repeatedly.

Personnel requirements

All work on the product must be carried out by trained, instructed and qualified personnel only:

- Training at the Training Center of the manufacturer
- Qualified personnel from the areas mechanical engineering, plant construction, and electrical engineering

The operator must define the responsibilities of the personnel involved in operation, maintenance, repair, assembly, installation, and transport in writing.

Personnel shall not report for duty under the influence of alcohol, drugs or strong medication.

Clothing and personal protective equipment

Always wear appropriate personal protective equipment, e.g. safety shoes, ear protectors, protective gloves, goggles, breathing mask. Follow the instructions concerning personal protective equipment in the descriptions of the individual activities.

Safe handling of Substances of Very High Concern pursuant to the REACH regulation (Registration, Evaluation, Authorisation and restriction of CHemicals): We recommend wearing protective gloves at all times in order to reduce risk when working.

1.4 Safety regulations for initial start-up and operation

Safety regulations for initial start-up

Install the product correctly and carry out acceptance in accordance with the manufacturer's specifications before putting the product into service. All necessary approvals must be granted by the relevant authorities and all requirements for initial startup must be fulfilled.

Whenever the product is subsequently taken into operation ensure that:

- All personnel is clear of the danger zone surrounding moving parts of the machine.
Electrically-actuated linkages may be set in motion when the Engine Control Unit (governor) is switched on.
- All maintenance and repair work has been completed.
- All loose parts have been removed from rotating machine components.
- All safety equipment is in place.
- All components must be properly grounded. Ground separately by means of a grounding stake as necessary.
- No persons wearing pacemakers or any other technical body aids are present.
- The service room is adequately ventilated.
- In the first few hours of operation, the product emits gases as a result of smoldering e.g. lacquers or oil. These gases may be hazardous to health. Always wear respiratory protection in the operating room during this period.
- The exhaust system is leak-tight and that the gases are vented to atmosphere.
- The product must be free of any damage, this applies in particular to lines and cabling.
- Protect battery terminals, generator terminals or cables against accidental contact.
- Check that all connections have been correctly allocated e.g. +/- polarity, fuel line/urea solution line, supply/return.

Immediately after putting the product into operation, make sure that all control and display instruments as well as the monitoring, signaling and alarm systems work properly.

Smoking is prohibited in the area of the product.

Safety regulations during operation

The operator must be familiar with the control and display elements.

The operator must be familiar with the consequences of any operations performed.

During operation, the display instruments and monitoring units must be permanently observed with regard to present operating status, violation of limit values and warning or alarm messages.

Malfunctions and emergency stop

Practice emergency procedures, especially emergency stopping, at regular intervals.

Take the following steps if any system malfunctions are detected or signaled by the system:

- inform supervisor(s) in charge,
- analyze the message,
- respond by taking any necessary emergency action, e.g. emergency stop.

Contact Service if the root cause of the malfunction cannot be clearly identified.

Operation

Do not remain in the operating room when the product is running unless absolutely necessary. Keep your stay as short as possible.

Keep a safe distance away from the product if possible. Do not touch the product unless expressly instructed to do so following a written procedure.

Do not inhale the exhaust gases of the product.

The following requirements must be fulfilled before the product is started:

- Wear ear protectors.
- Mop up any leaked or spilled fluids and lubricants immediately or soak up with a suitable binding agent.

Operation of electrical equipment

When electrical equipment is in operation, certain components of these appliances are electrically live.

Follow the applicable operating and safety instructions when operating the devices and heed warnings at all times.

1.5 Standards for warning notices in the text and highlighted information

DANGER 	In the event of immediate danger. Consequences: Death, serious or permanent injury! • Remedial action.
WARNING 	In the event of a situation involving potential danger. Consequences: Death, serious or permanent injury! • Remedial action.
CAUTION 	In the event of a situation involving potential danger. Consequences: Minor or moderate injuries! • Remedial action.
NOTICE 	In the event of a situation involving potentially adverse effects on the product. Consequences: Material damage! • Remedial action. • Additional product information.

Warning notices

1. This manual with all safety instructions and warning notices must be issued to all personnel involved in operation, maintenance, repair, assembly, installation, or transportation.
2. The highest level warning notice is used if several hazards apply at the same time. Warnings related to personal injury shall be considered to include a warning of potential damage.

Highlighted information


Important

This field contains product information which is important or useful for the user.
This information must not refer to hazards related to personal injury or material damage.

2 Functional Description

2.1 Function of control panel PAN 9

Control panel PAN 9 is used as a control and display unit in the BlueVision NG system.

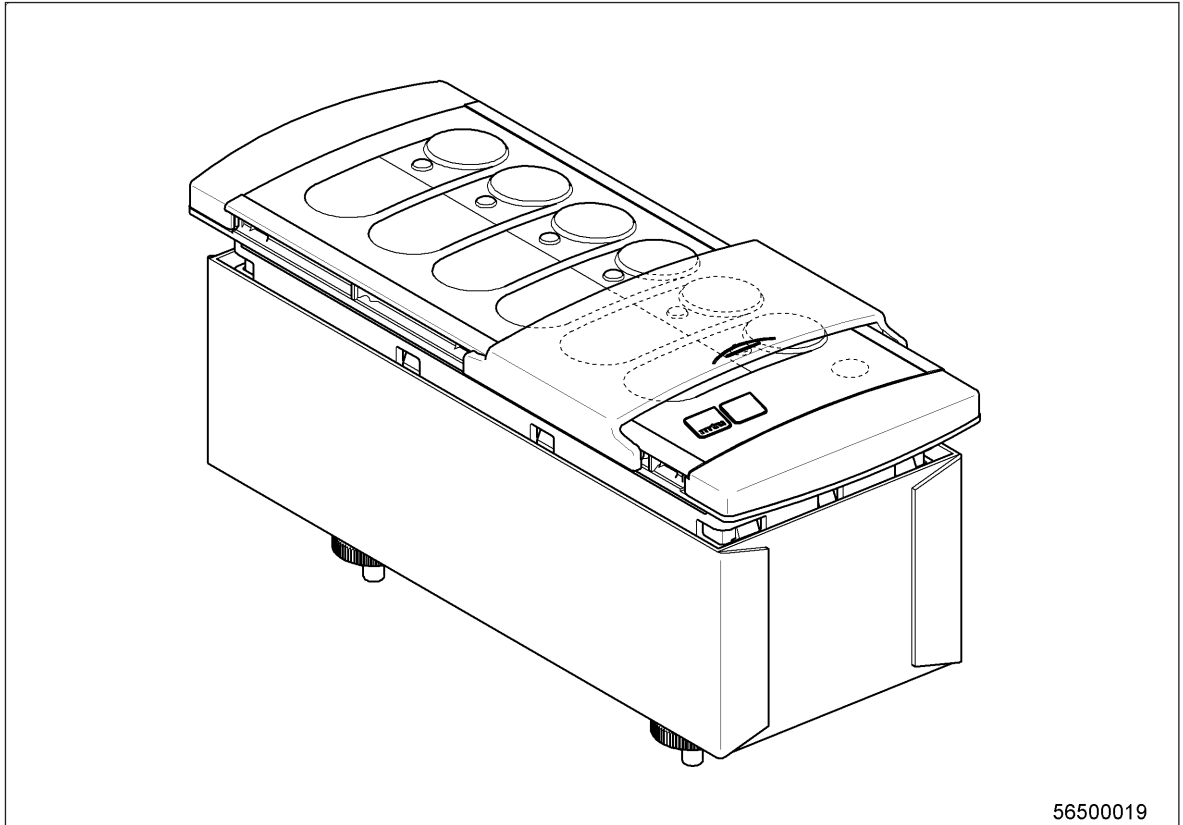

PAN 9 has the following tasks:

- Display of PAN 9 operating status by means of operating lamp.
- Display of propulsion plant operating status by means of signal lamps.
- Display of any alarms by means of signal lamps.
- Operation of the propulsion plant by means of pushbuttons.

PAN 9 transmits and receives data using the CAN SAE J1939 protocol.