


LC control lever position scale

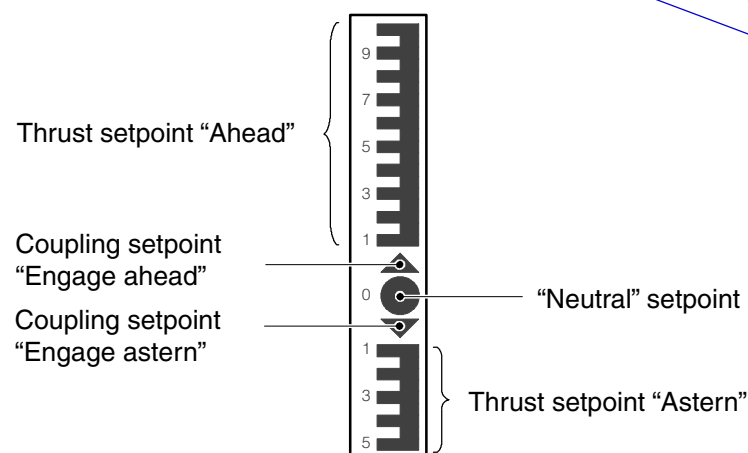


Non-commanding control lever panel:

Master display shows current control lever position setpoint
Slave display (flashing) indicates handle position on non-commanding control lever panel.


Commanding control lever panel:

Master display shows current control lever position setpoint

Control lever panel

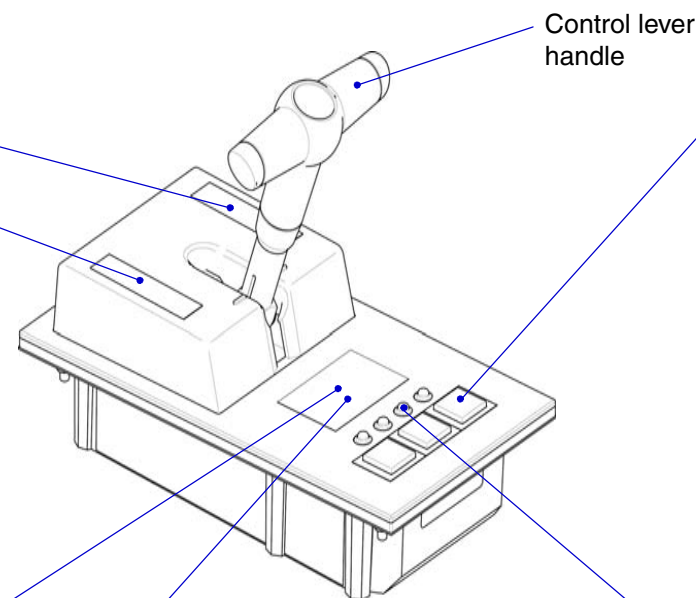

LC graphic display

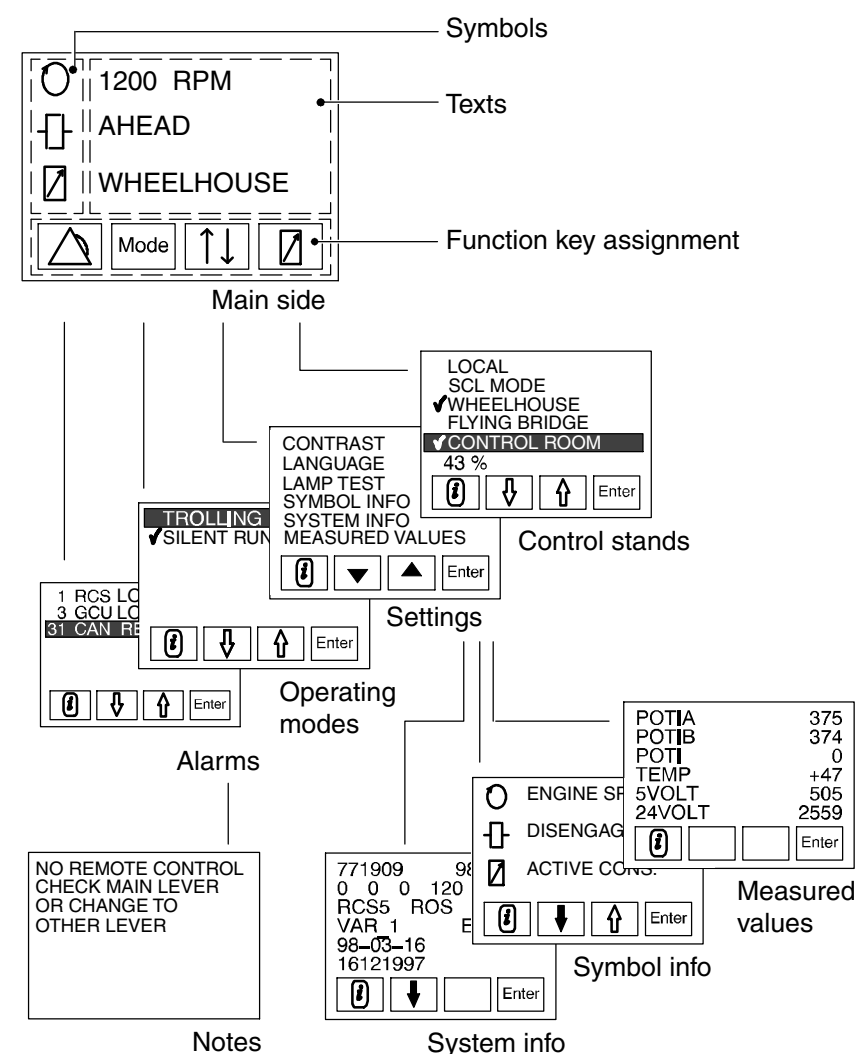

Illuminated pushbuttons

	Lit:	At active control stand with pending, acknowledged RCS combined alarm; at inactive control stands with pending, acknowledged or unacknowledged RCS combined alarm
	Flashing:	At active commanding control stand with unacknowledged RCS combined alarm
	Dark:	No RCS combined alarm
	Press:	Acknowledge alarm at active control stand
	Lit:	With SCL operation on all control lever panels of all participating shafts
	Flashing:	With deselection of SCL operation of all shafts if conditions are not met
	Dark:	SCL operation inactive, or shaft is not participating in SCL operation
	Press:	Select and deselect SCL mode at active control stand
	Lit:	At active control stand
	Flashing slowly:	At target control stand, command transfer still not acknowledged
	Flashes quickly:	if control lever position is not harmonized with previously active control lever position
	Dark:	At inactive control stands
	Press:	Select own control stand, assume command

Function key assignment

	To main page		To Settings page
	To Alarms page		To Control stands page
Mode	To Operating modes page		
	Down to next entry		Up to next entry
Black arrow:	More entries present than displayed		
Empty arrow:	Top/bottom entry displayed		
	Decrease value of DIMMING or CONTRAST		Increase value of DIMMING or CONTRAST
Black arrow:	Setting limit not yet reached		
Empty arrow:	Setting limit reached		
Enter	Depending on displayed page: – Display lower page of selected entry – Activate / confirm / deactivate selected entry – Acknowledge flashing alarm entry on Alarm page		

Symbols in the LC graphic display (extract)

- Setpoint for engine speed in rpm
- Setpoint for gearbox state, e.g. AHEAD
- Gearbox state TROLLING activated
- Commanding control stand
- Operating mode active
- Coupling position active
- Control stand active
- Running-in lever mode (=SCL mode) active
- Flashing, target control stand during command transfer