




LC propulsion stage scale

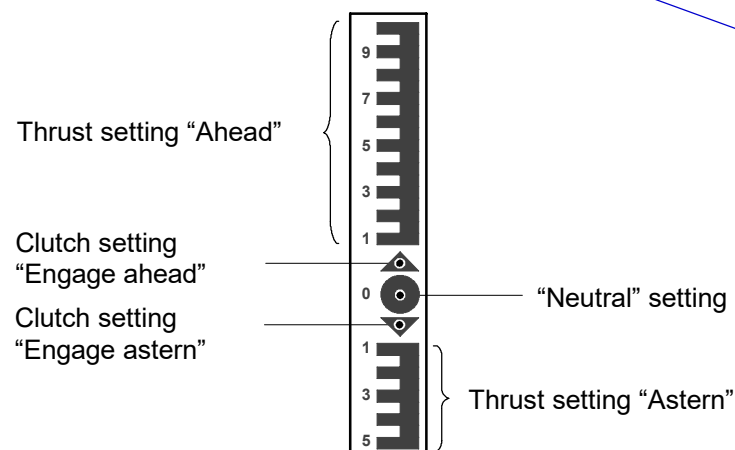

Slave control lever panel:

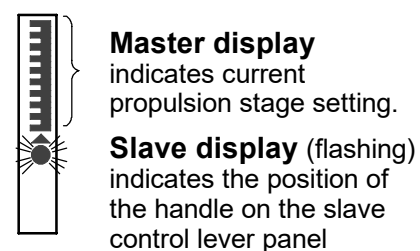


Commanding control lever panel:

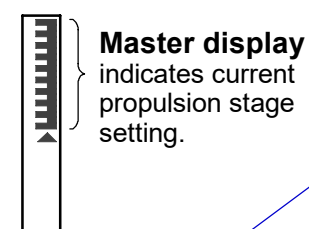


Symbols in the LC graphic display (excerpt)

- Engine speed setting in rpm
- Gear setting, e.g. AHEAD
- Gear setting TROLLING activated
- Commanding control stand
- Operating mode Active
- Control stand Active
- Single control lever mode (= SCL mode) Active
- Flashing, target control stand during command transfer

Control lever panel

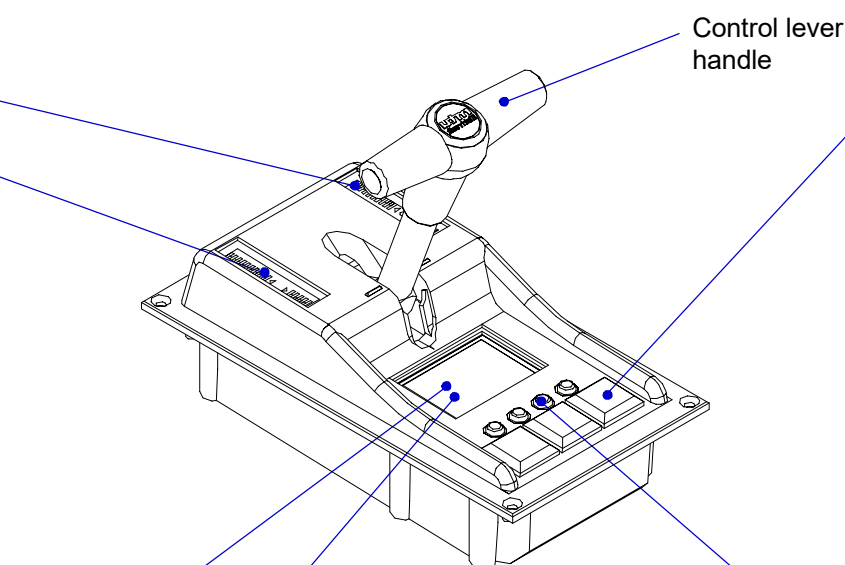

LC graphic display

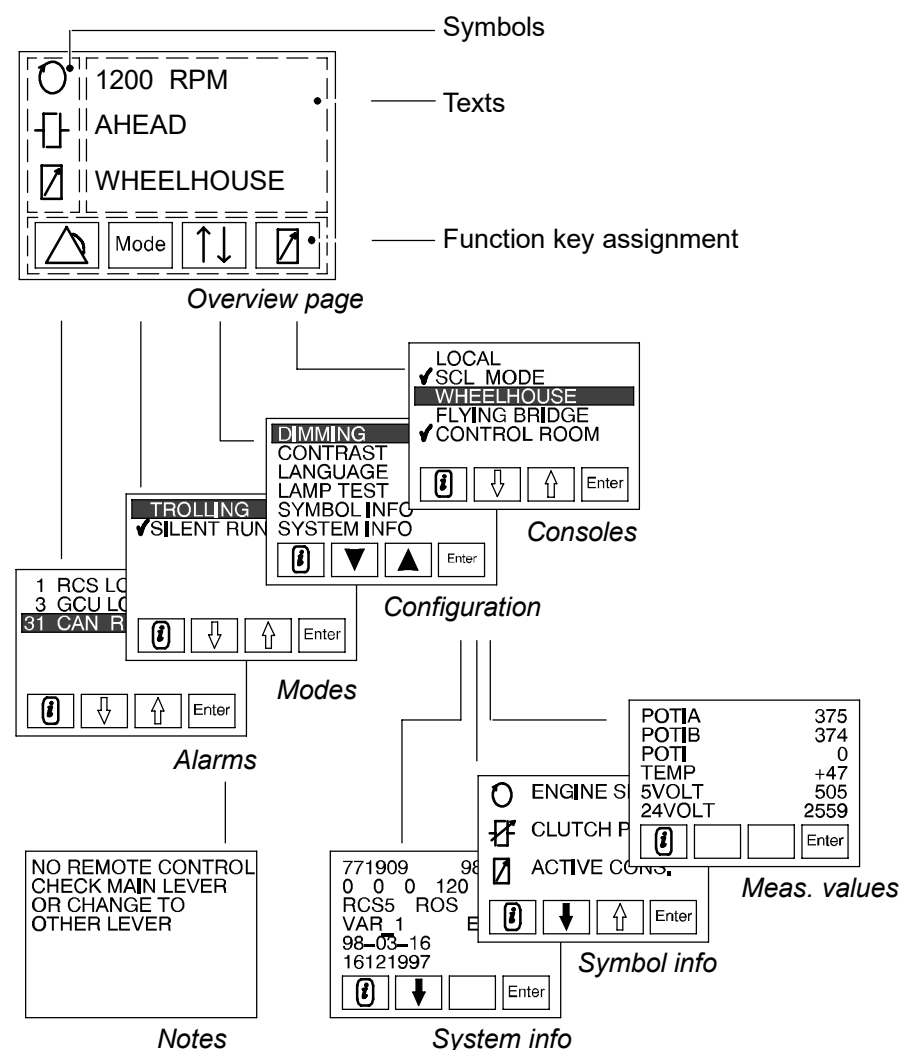

Luminous pushbuttons

- Lit: On the active control stand when an acknowledged RCS combined alarm is applied; on inactive control stand when an acknowledged or unacknowledged RCS combined alarm is applied
- Flashing: On the active control stand when an unacknowledged RCS combined alarm is applied
- Dark: No RCS combined alarm
- Press: Acknowledges alarm at the active control stand
- Lit: In SCL mode on all control lever panels of all participating shafts
- Flashing: When SCL mode is deselected for all shafts if conditions are not fulfilled
- Dark: SCL mode inactive or shaft not participating in SCL mode
- Press: Selects and deselects SCL mode at the active control stand
- Lit: At the active control stand
- Slow flashing: At the target control stand, command transfer not yet acknowledged
- Rapid flashing: At the target control stand when the target propulsion stage does not match the previously active propulsion stage
- Dark: At inactive control stands
- Press: Selects this control stand, assumes command

Function key assignment

- Opens Overview page
- Opens Configuration page
- Opens Alarms page
- Opens Consoles page
- Opens Modes page
- Scroll down to next entry
- Scroll up to next entry
- Additional entries available for display
- First/last entry displayed
- Decreases DIMMING/CONTRAST value
- Increases DIMMING/CONTRAST value
- Setting limit not yet reached
- Setting limit reached
- Depending on page displayed:
 - Displays sub-page for the selected entry
 - Activates/confirms/deactivates selected entry
 - Acknowledges flashing alarm entry on the alarm page