





Before using this Quick Reference, read and observe the detailed MTU overall documentation on BlueVision!  
**In particular, all safety instructions in the overall documentation must be observed!**

Cable channels and entries

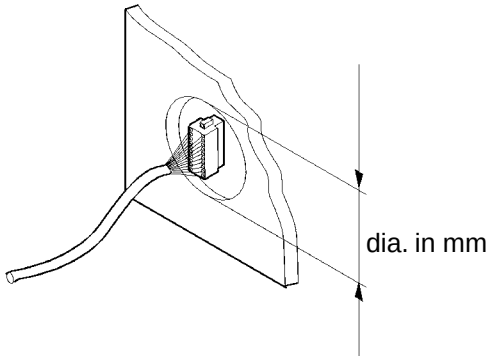

| From                               | To                                 | min. dia. in mm |
|------------------------------------|------------------------------------|-----------------|
| Engine room                        | Main control stand (CCP1)          | 100             |
| Main control stand (CCP1)          | Main control stand (console front) | 60              |
| Main control stand (CCP1)          | Slave control stand 1              | 60              |
| Slave control stand (CCP2 or CCP3) | Slave control stand 2              | 60              |

Installing cables between ECS-5 and MCS-5

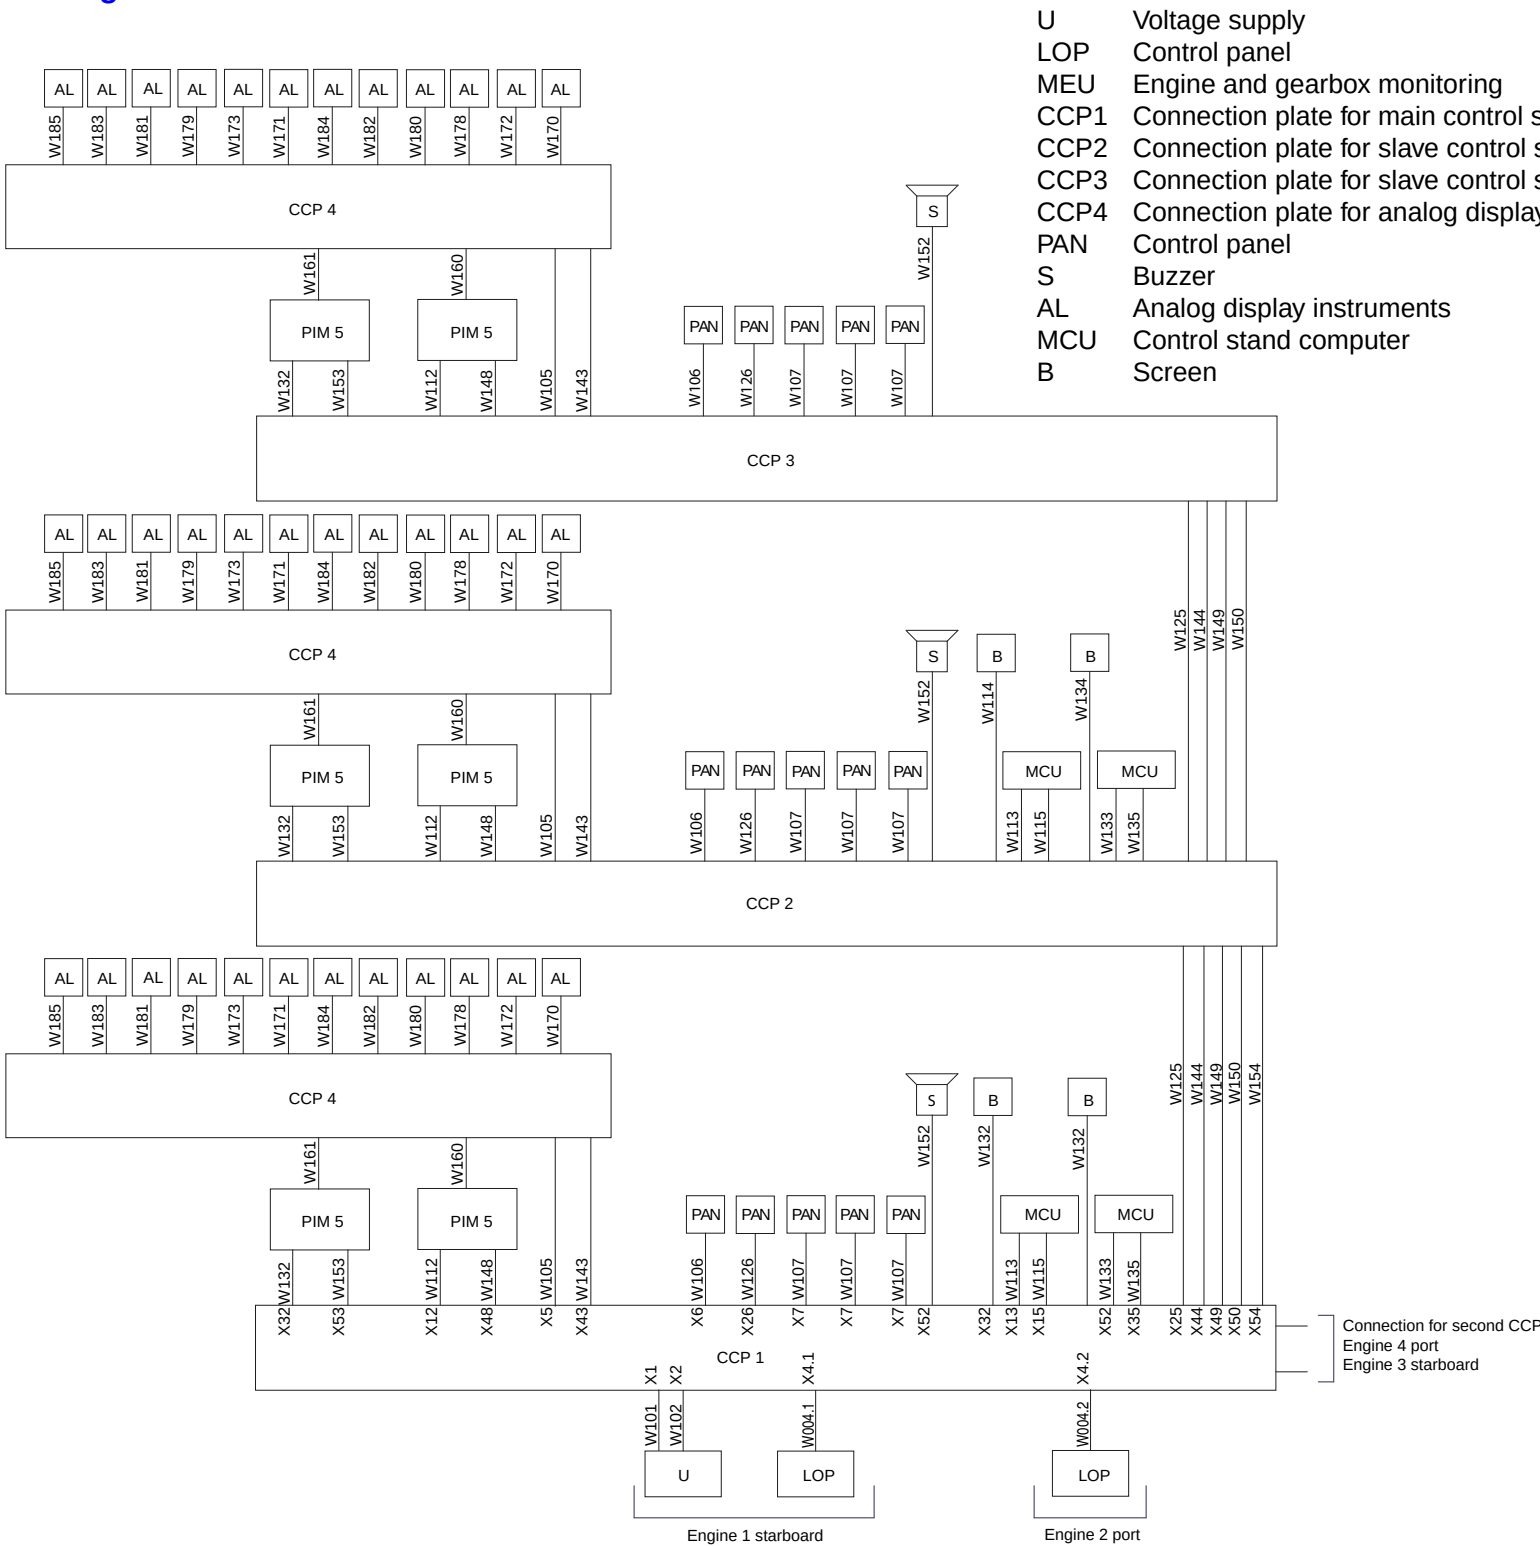



Before using this Quick Reference, read and observe the detailed MTU overall documentation on BlueVision!

**In particular, all safety instructions in the overall documentation must be observed!**

### Connection of engine room to control stand

Note: All power supply ground potentials from the engine room and control stands must be connected!

#### Main voltage supply (shipyard scope)

| Cable | to connection plate | Connector |
|-------|---------------------|-----------|
| -W101 | CCP 1/2/3           | X1        |


#### Emergency power supply (shipyard scope)

| Cable | to connection plate | Connector |
|-------|---------------------|-----------|
| -W101 | CCP 1/2/3           | X1        |


#### Engine and gearbox monitoring

| Cable | from connector | to    | Connector |          |
|-------|----------------|-------|-----------|----------|
|       |                |       | Engine 1  | Engine 2 |
| -W004 | LOP -X4        | CCP 1 | -X4.1     | -X4.2    |
| -W051 | MEU -X8        | CCP 1 | -X8.1     | -X8.2    |
| -W052 | MEU -X9        | CCP 1 | -X9.1     | -X9.2    |

### Connecting MCU 8/11/12

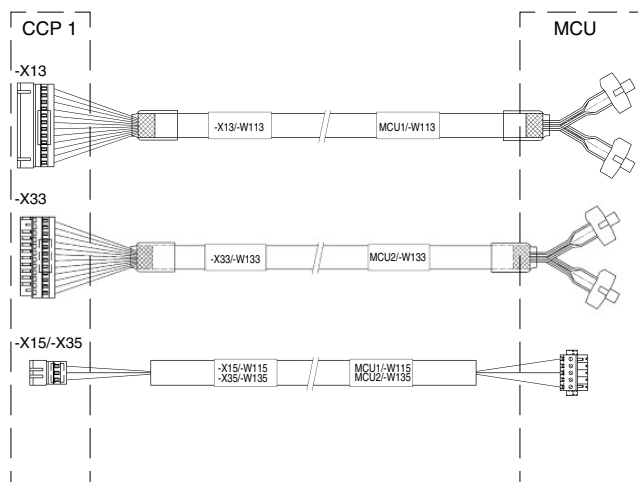


### Connecting MCU 14

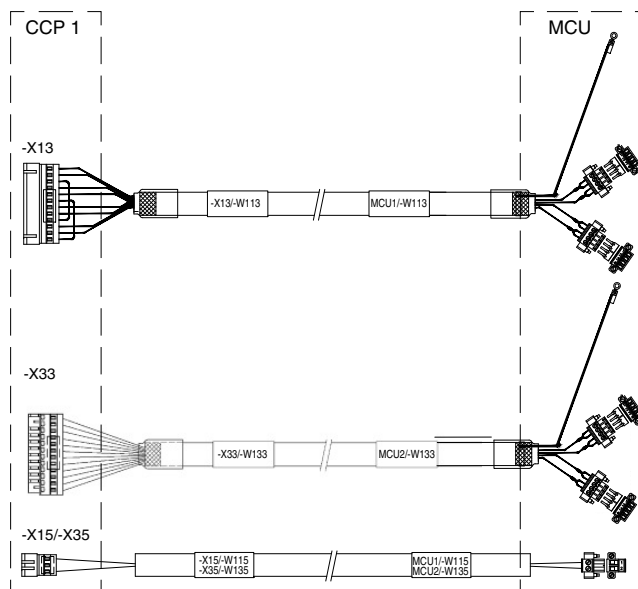

### Connecting control panel PANs


#### Engine 1 (Start/Stop/Emergency stop) - PAN 3/4 and PAN 7/8

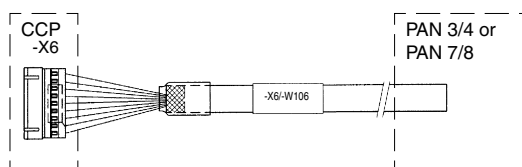

|    |    |    |    |                 |  |
|----|----|----|----|-----------------|--|
| 11 | 12 | 14 | 1  | +24V DC         |  |
| 21 | 22 | 24 | 61 | CAN_H           |  |
| 31 | 32 | 34 | 3  | PE              |  |
| 41 | 42 | 44 | 62 | CAN_L (CAN_GND) |  |
| 51 | 52 | 54 | 2  | GND (-)         |  |

| -X6<br>PIN assignment | Cond.<br>no. | Cond.<br>color | PAN<br>PIN assignment | Signal      |
|-----------------------|--------------|----------------|-----------------------|-------------|
| 1                     | 1            | white          | 1                     | +24VDC      |
| 2                     | 2            | brown          | 2                     | GND         |
| 3                     | 3            | green          | 3                     | PE          |
| 4                     | 5            | gray           | 61                    | CAN_H       |
| 5                     | 6            | pink           | 62                    | CAN_L       |
| 6                     | 7            | blue           | 61                    | CAN_H       |
| 7                     | 8            | red            | 62                    | CAN_L       |
| 8                     | 9            | black          | 51                    | +24V E-stop |
| 9                     | 10           | purple         | 54                    | E-stop      |


#### Engine 2 (Start/Stop/Emergency stop) - PAN 3/4 and PAN 7/8

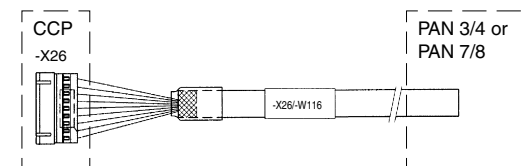

|    |    |    |    |                 |  |
|----|----|----|----|-----------------|--|
| 11 | 12 | 14 | 1  | +24V DC         |  |
| 21 | 22 | 24 | 61 | CAN_H           |  |
| 31 | 32 | 34 | 3  | PE              |  |
| 41 | 42 | 44 | 62 | CAN_L (CAN_GND) |  |
| 51 | 52 | 54 | 2  | GND (-)         |  |

| X26<br>PIN assignment | Cond.<br>no. | Cond.<br>color | PAN<br>PIN assignment | Signal      |
|-----------------------|--------------|----------------|-----------------------|-------------|
| 1                     | 1            | white          | 1                     | +24VDC      |
| 2                     | 2            | brown          | 2                     | GND         |
| 3                     | 3            | green          | 3                     | PE          |
| 4                     | 5            | gray           | 61                    | CAN_H       |
| 5                     | 6            | pink           | 62                    | CAN_L       |
| 6                     | 7            | blue           | 61                    | CAN_H       |
| 7                     | 8            | red            | 62                    | CAN_L       |
| 8                     | 9            | black          | 51                    | +24V E-stop |
| 9                     | 10           | purple         | 54                    | CAN_L       |

#### Dimming / Alarm - PAN 1/2 and PAN 5/6

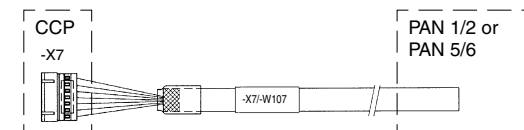

|    |   |                 |  |
|----|---|-----------------|--|
| 1  | 1 | +24V DC         |  |
| 61 |   | CAN_H           |  |
| 3  |   | PE              |  |
| 62 |   | CAN_L (CAN_GND) |  |
| 2  |   | GND (-)         |  |


| -X7<br>PIN assignment | Cond.<br>no. | Cond.<br>color | PAN<br>PIN assignment | Signal |
|-----------------------|--------------|----------------|-----------------------|--------|
| 1                     | 1            | white          | 1                     | +24VDC |
| 2                     | 2            | brown          | 2                     | GND    |
| 3                     | 3            | green          | 3                     | PE     |
| 4                     | 5            | gray           | 61                    | CAN_H  |
| 5                     | 6            | pink           | 62                    | CAN_L  |
| 6                     | 7            | blue           | 61                    | CAN_H  |
| 7                     | 8            | red            | 62                    | CAN_L  |



Before using this Quick Reference, read and observe the detailed MTU overall documentation on BlueVision!

**In particular, all safety instructions in the overall documentation must be observed!**

### Connecting buzzer



| -X52<br>PIN assignment | Cond.<br>no. | Cond.<br>color | Buzzer<br>PIN assignment | Signal |
|------------------------|--------------|----------------|--------------------------|--------|
| 1                      | 1            | white          | +                        | Buzzer |
| 2                      | 2            | brown          | -                        | GND    |


### Connecting keyboard

|             | MCU8     | MCU11/12 | MCU14 |
|-------------|----------|----------|-------|
| -W612/-W622 | KEYBOARD | KEYBOARD | USB3  |


### Connecting trackball

|             | MCU8  | MCU11/12 | MCU14 |
|-------------|-------|----------|-------|
| -W611/-W621 | MOUSE | MOUSE    | USB1  |

### Connecting monitor

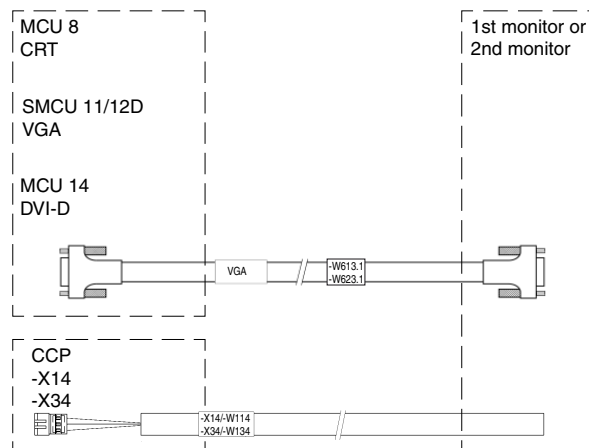

### Connecting printer

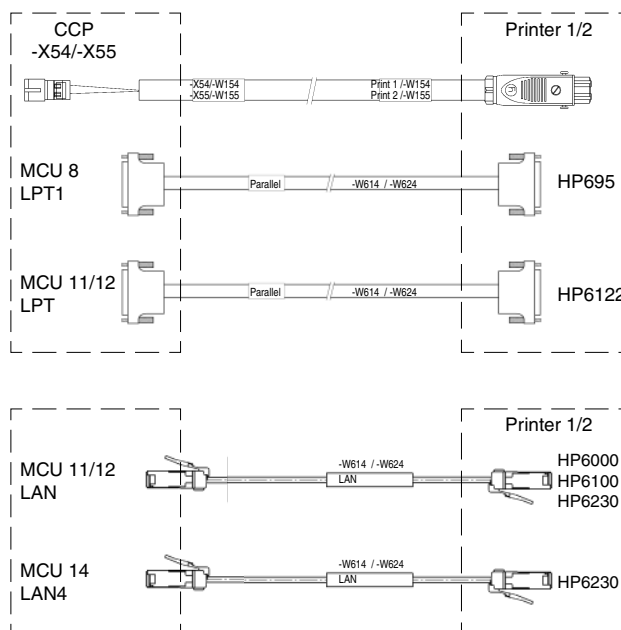


### Connecting engine speed instrument



| -X43<br>PIN assignment | Cond.<br>no. | Conductor<br>color | Engine 1 | Engine 2 | Signal  |
|------------------------|--------------|--------------------|----------|----------|---------|
| 1                      | 1            | white              | 1        |          | n-Eng + |
| 2                      | 2            | brown              | -        |          | n-Eng - |
| 3                      | 3            | green              | L+       |          | UDim +  |
| 4                      | 4            | yellow             | L-       |          | UDim -  |
| 5                      | 5            | gray               | +        |          | 24V DC  |
| 6                      | 6            | pink               |          | 1        | n-Eng + |
| 7                      | 7            | blue               |          | -        | n-Eng - |
| 8                      | 8            | red                |          | L+       | UDim +  |
| 9                      | 9            | black              |          | L-       | UDim -  |
| 10                     | 10           | purple             |          | +        | 24V DC  |

### Connecting shaft speed instrument

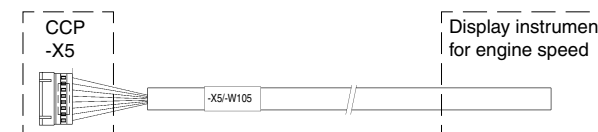

| -X5<br>PIN assignment | Cond.<br>no. | Conductor<br>color | Engine 1 | Engine 2 | Signal    |
|-----------------------|--------------|--------------------|----------|----------|-----------|
| 1                     | 1            | white              | +        |          | n-Shaft + |
| 2                     | 2            | brown              | -        |          | n-Shaft - |
| 3                     | 3            | green              | L1+      |          | UDim +    |
| 4                     | 4            | yellow             | L2-      |          | UDim -    |
| 5                     | 5            | gray               |          | +        | n-Shaft + |
| 6                     | 6            | pink               |          | -        | n-Shaft - |
| 7                     | 7            | blue               |          | L1+      | UDim +    |
| 8                     | 8            | red                |          | L2-      | UDim -    |