




Please read the overall Rolls-Royce Solutions BlueVision documentation before using this quick-reference guide.  
**Pay particular attention to the safety notes in the overall documentation!**

### Numbering convention with multiple-shaft systems

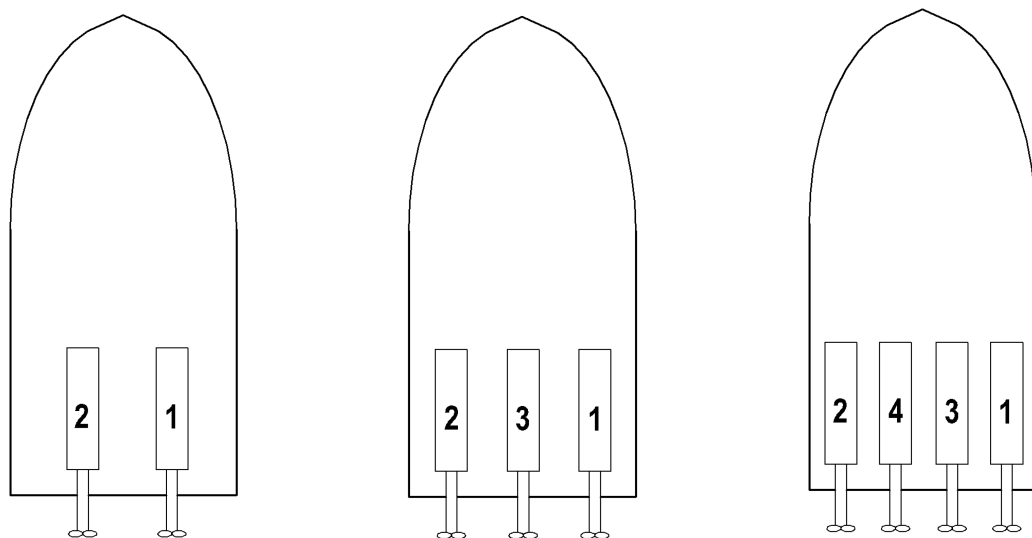

### Cable channels and entries

**Note:** The specified dimensions are based on the cables of the RCS.  
Cable entry dimensions for further subsystems of BlueVision must be considered accordingly.

#### For each power train

| from | to  | min. dia. in mm |
|------|-----|-----------------|
| CCP  | CCP | 55              |

#### On every control stand


| from | to  | min. dia. in mm |
|------|-----|-----------------|
| ROS  | CCP | 125             |

#### In addition, on main control stand with two-shaft systems


| from | to  | min. dia. in mm |
|------|-----|-----------------|
| ROS  | CCP | 45              |

#### In addition, on main control stand with two-shaft systems


| from            | to            | min. dia. in mm |
|-----------------|---------------|-----------------|
| CCP1 engine 1/2 | CCP1 engine X | 70              |

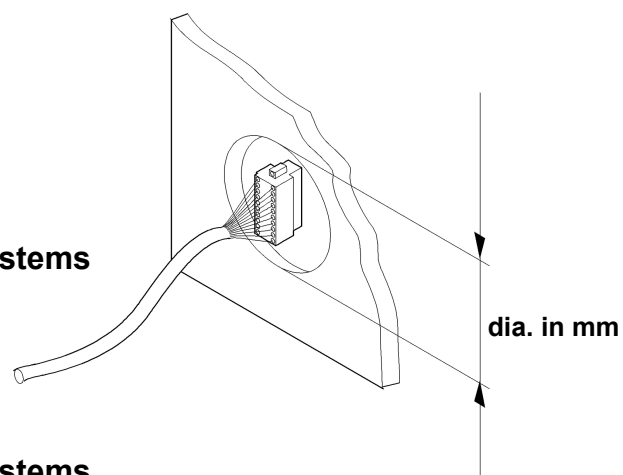

### Installation opening and securing bores – Single control lever panel

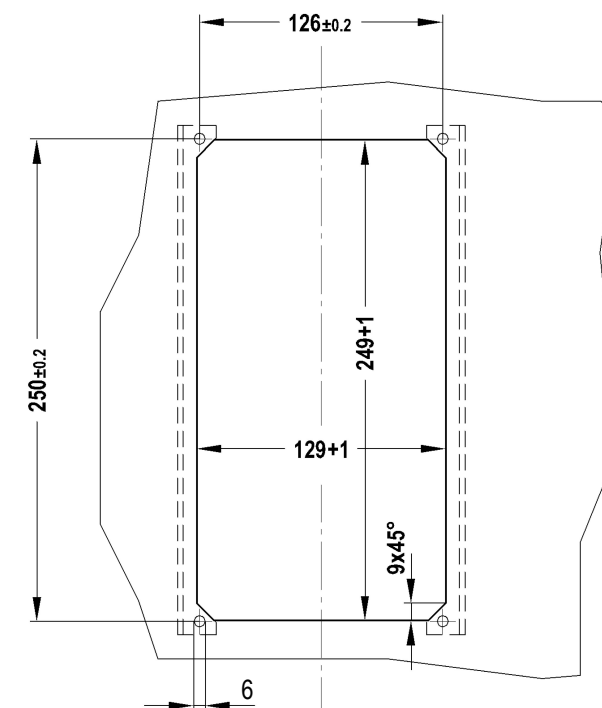

### Installation opening and securing bores – Twin control lever panels

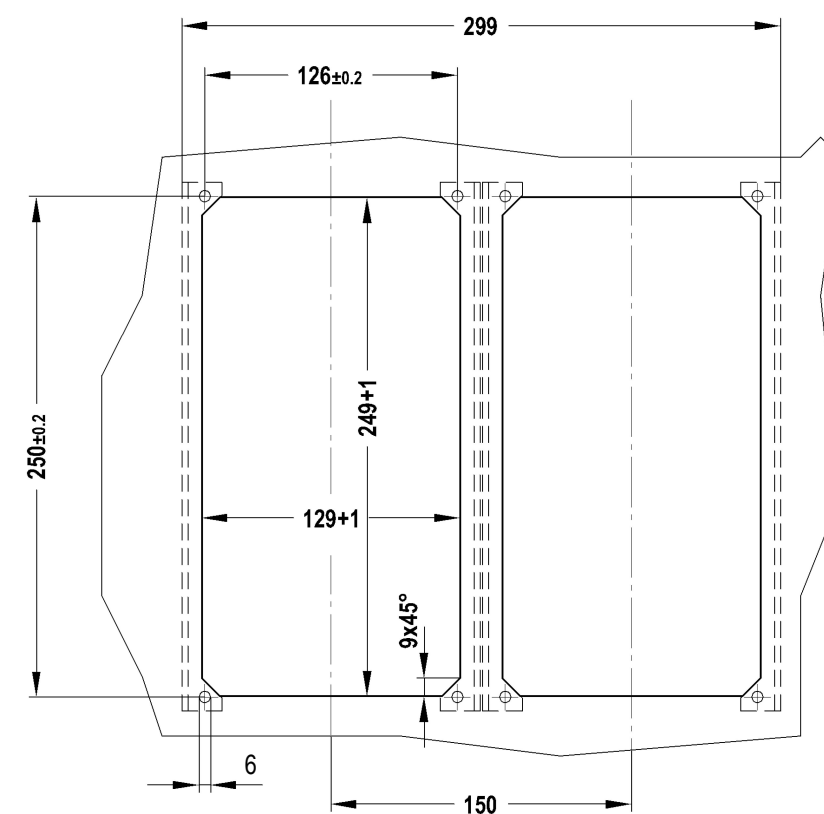





Please read the overall Rolls-Royce Solutions BlueVision documentation before using this quick-reference guide.  
**Pay particular attention to the safety notes in the overall documentation!**

## Installation opening and securing bores


### – Wheel

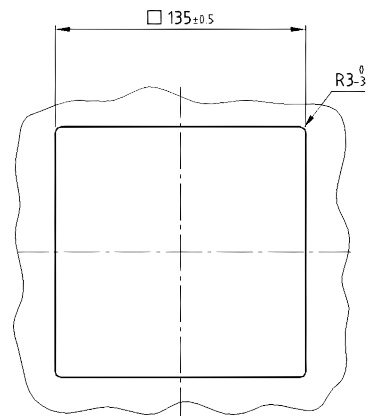

### – Joystick

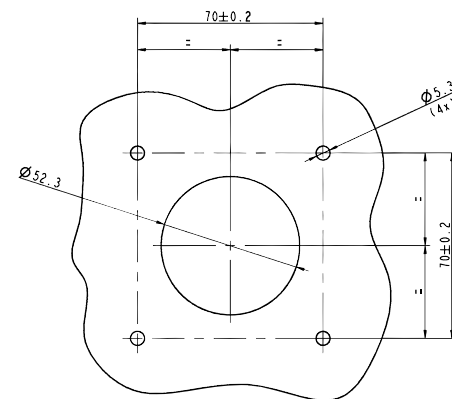


## Installation opening and securing bores – Analog display instruments

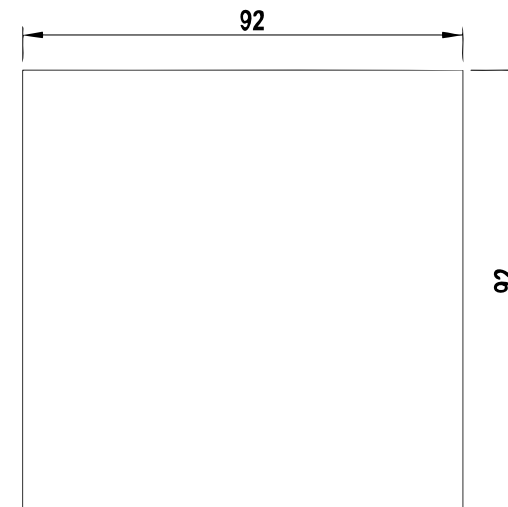

## Installation opening and securing bores


### – Control panel PAN

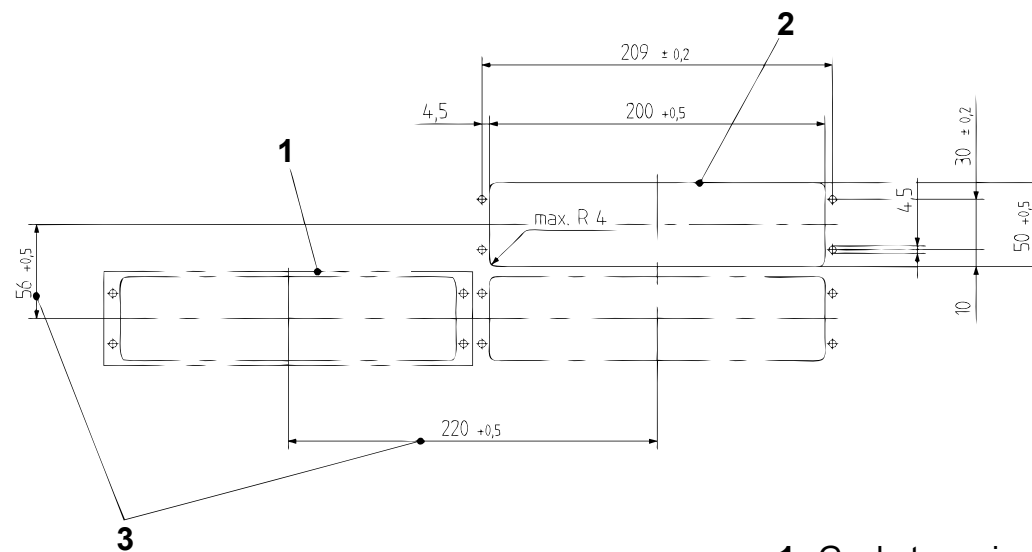

- 1 Gasket required for installation
- 2 Front plate thickness max. 9 mm
- 3 Marking off dimension of panel

## Installation opening and securing bores


### – Waterjet control system PCMU

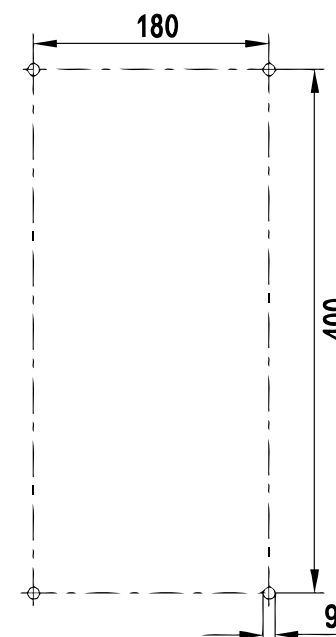




Please read the overall Rolls-Royce Solutions BlueVision documentation before using this quick-reference guide.  
**Pay particular attention to the safety notes in the overall documentation!**

## Control lever panel ROS – Overview for installation

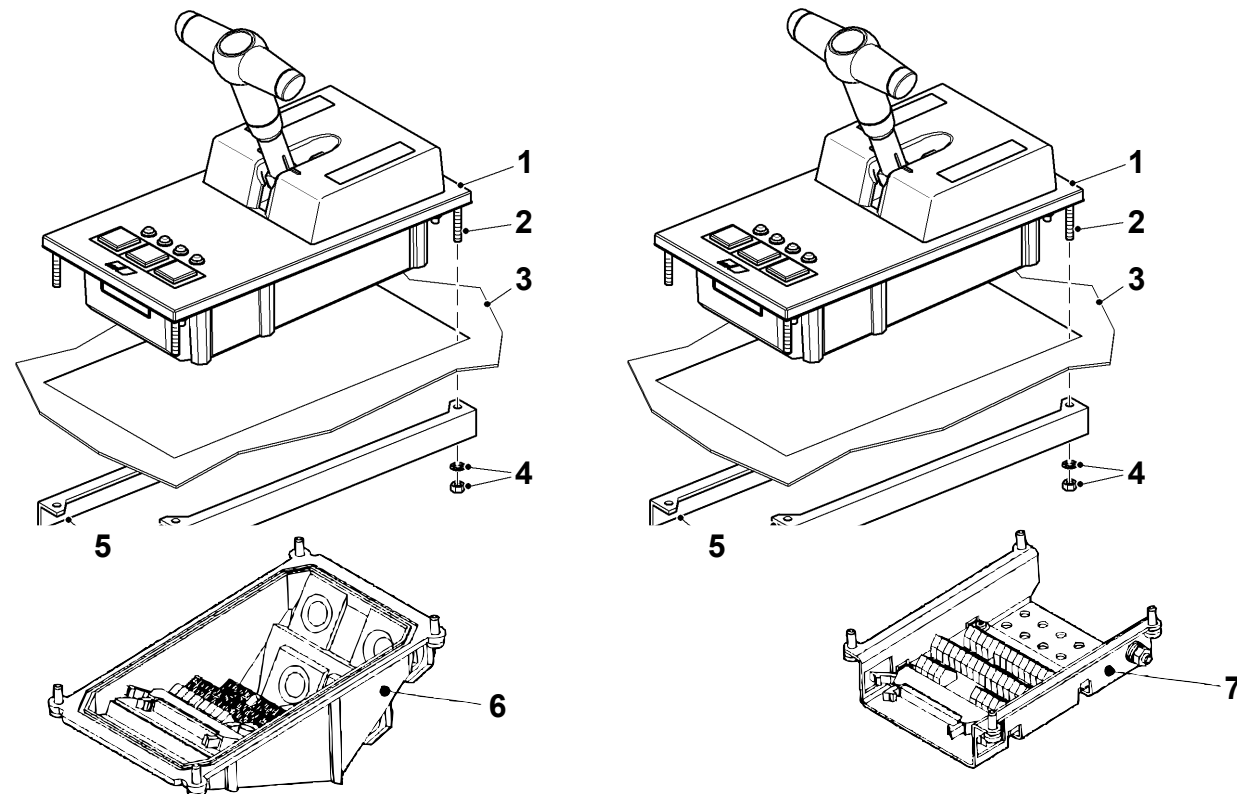

- 1 Control lever housing
- 2 Stud bolt
- 3 Panel cutout
- 4 Nut with washer
- 5 Installation bracket


- 6 Connection housing for open control stand
- 7 Connection housing for closed control stand

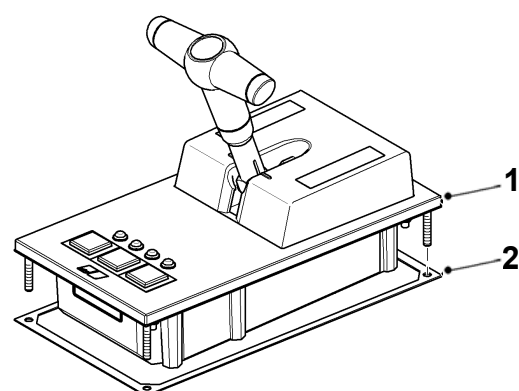


- 1 Mounting surface
- 2 Gasket

**Note:** When the control lever panel is delivered, the gasket with installation brackets is bolted onto the control lever housing.

## Control lever panel ROS – Connecting connection housing

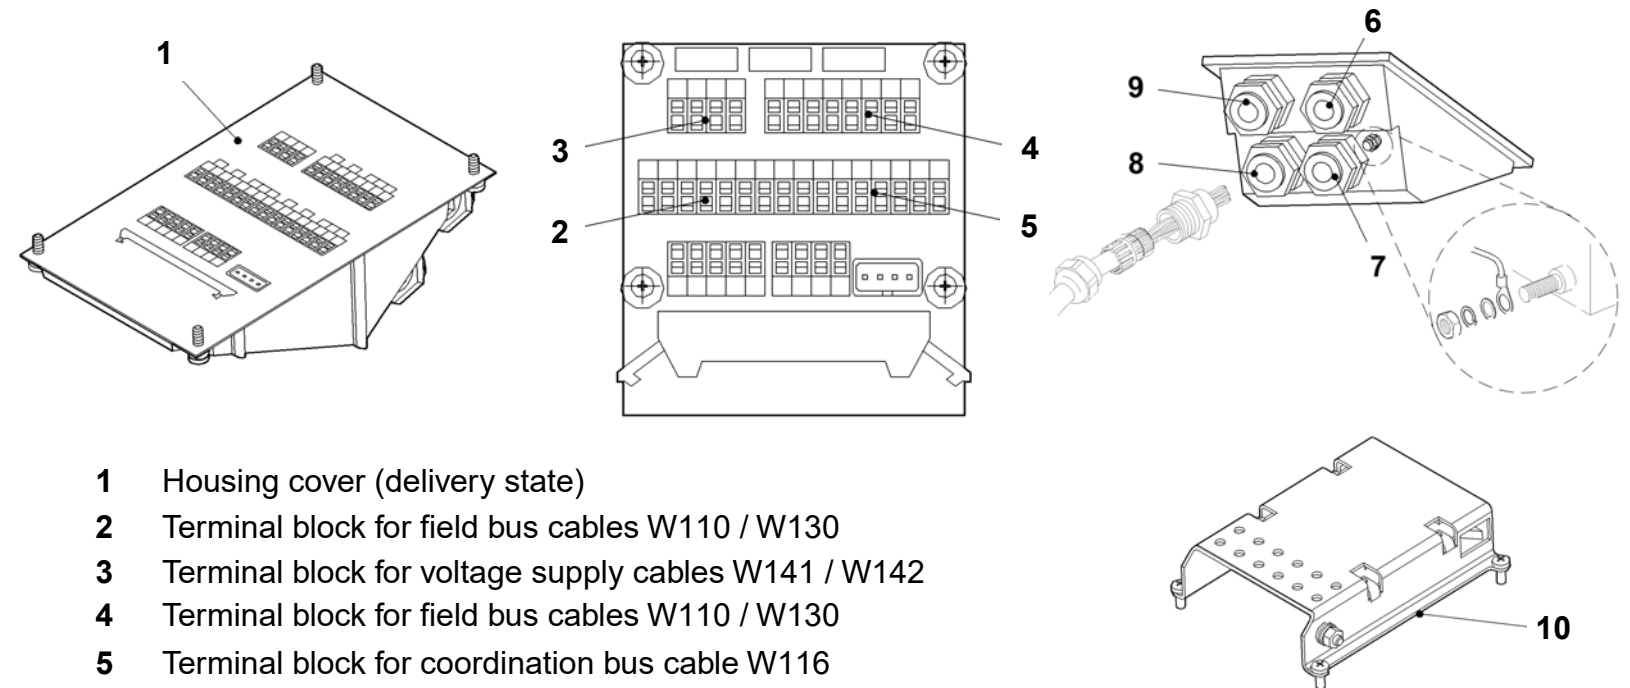

- 1 Housing cover (delivery state)
- 2 Terminal block for field bus cables W110 / W130
- 3 Terminal block for voltage supply cables W141 / W142
- 4 Terminal block for field bus cables W110 / W130
- 5 Terminal block for coordination bus cable W116 (only for multiple-shaft system and main control stand)
- 6-9 Cable entries on connection housing for open control stand
- 10 Connection housing with screws for closed control stand

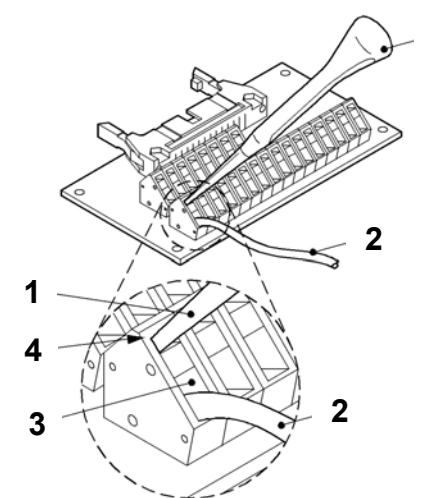

- 1 Actuation tool
- 2 Conductor
- 3 Conductor slot
- 4 Slot clamp

| Cable no.                         | Conductor no. | Core color | Terminal no. | Signal designation |
|-----------------------------------|---------------|------------|--------------|--------------------|
| W141                              | 1             | white      | 1            | +24 V              |
| W142                              | 2             | brown      | 3            | +24 V SL           |
|                                   | 3             | green      | 2            | GND                |
|                                   | 4             | yellow     | 2            | GND                |
| W110                              | 1             | white      | 61           | CAN 1 H            |
| W130                              | 2             | brown      | 62           | CAN 1 L            |
|                                   | 3             | green      | 63           | CAN 1 GND          |
|                                   | 4             | yellow     | 73           | CAN 2 GND          |
|                                   | 5             | gray       | 71           | CAN 2 H            |
|                                   | 6             | pink       | 72           | CAN 2 L            |
|                                   | 7             | blue       | 61           | CAN 1 H            |
|                                   | 8             | red        | 62           | CAN 1 L            |
|                                   | 9             | black      | 63           | CAN 1 GND          |
|                                   | 10            | violet     | 73           | CAN 2 GND          |
|                                   | 11            | gray-pink  | 71           | CAN 2 H            |
|                                   | 12            | red-blue   | 72           | CAN 2 L            |
| W116<br>(only main control stand) | 1             | white      | 81           | CAN 3 H            |
|                                   | 2             | brown      | 82           | CAN 3 L            |
|                                   | 3             | green      | 83           | CAN 3 GND          |
|                                   | 4             | yellow     | 83           | CAN 3 GND          |
|                                   | 5             | gray       | 81           | CAN 3 H            |
|                                   | 6             | pink       | 82           | CAN 3 L            |
| Engine 1:<br>W231.1               | 1             | white      | 94           | +24 VDC            |
| Engine 2:<br>W231.2               | 2             | brown      | 95           | GND                |
|                                   | 3             | green      | 91           | CAN H              |
|                                   | 4             | yellow     | 92           | CAN L              |

The Core no. / Core color markings are based on DIN 47100 / 01.88




Please read the overall Rolls-Royce Solutions BlueVision documentation before using this quick-reference guide.  
**Pay particular attention to the safety notes in the overall documentation!**

Note: A total of 5 slave control stands are possible.

| Cable no. | Designation      | Explanation                     |
|-----------|------------------|---------------------------------|
| W141      | Voltage supply   | Engine 1/ engine 3              |
| W142      | Voltage supply   | Engine 2/ engine 4              |
| W110      | Field bus        | Engine 1/ engine 3              |
| W130      | Field bus        | Engine 2/ engine 4              |
| W116      | Coordination bus | only main control stand         |
| W125      | Field bus        | Engine 1/ engine 3              |
| W144      | Field bus        | Engine 2/ engine 4              |
| W111      | Coordination bus | only with 3 and 4-shaft systems |
| W156      | Process bus      | only with 3 and 4-shaft systems |

Cable installation and connection for single-shaft system

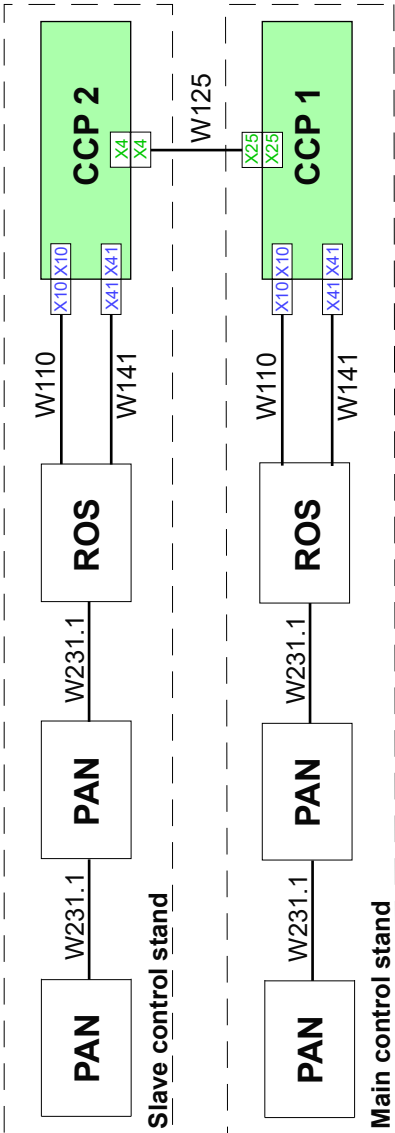

Cable installation and connection for twin-shaft system

