


LC control lever position scale

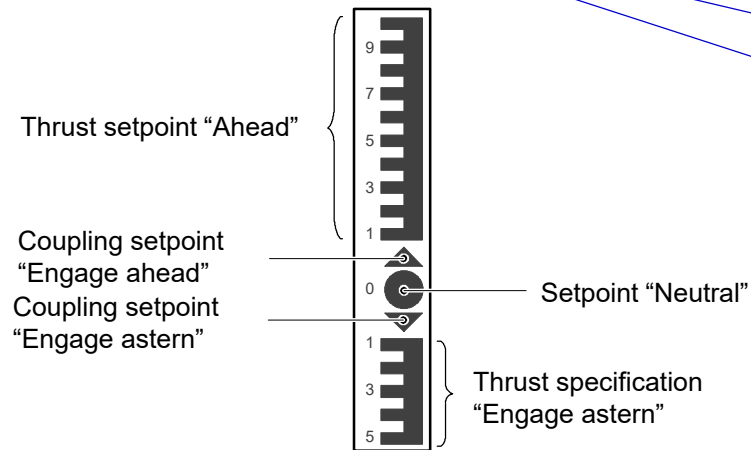

Commanding propulsion control lever panel:



Master display

indicates current control lever position setpoint
Slave display (flashing) indicates handle position on non-commanding propulsion control lever panel


Commanding control lever panel:




Master display

indicates current control lever position setpoint


Propulsion control lever panel

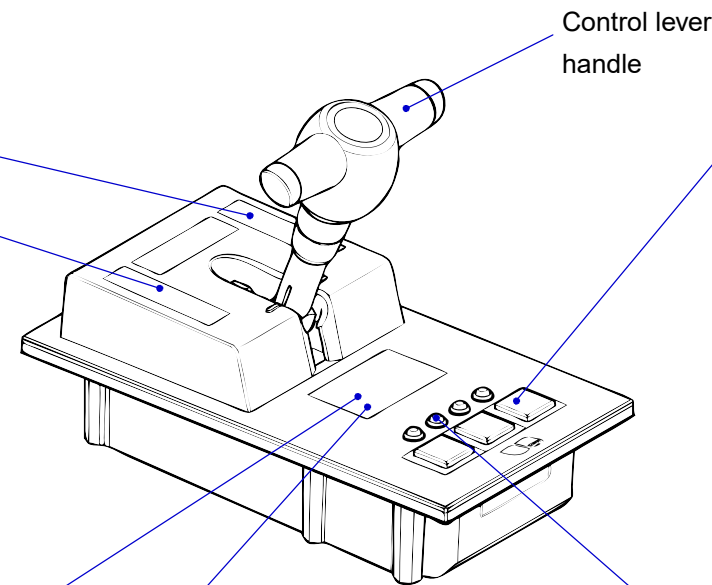


LC graphic display

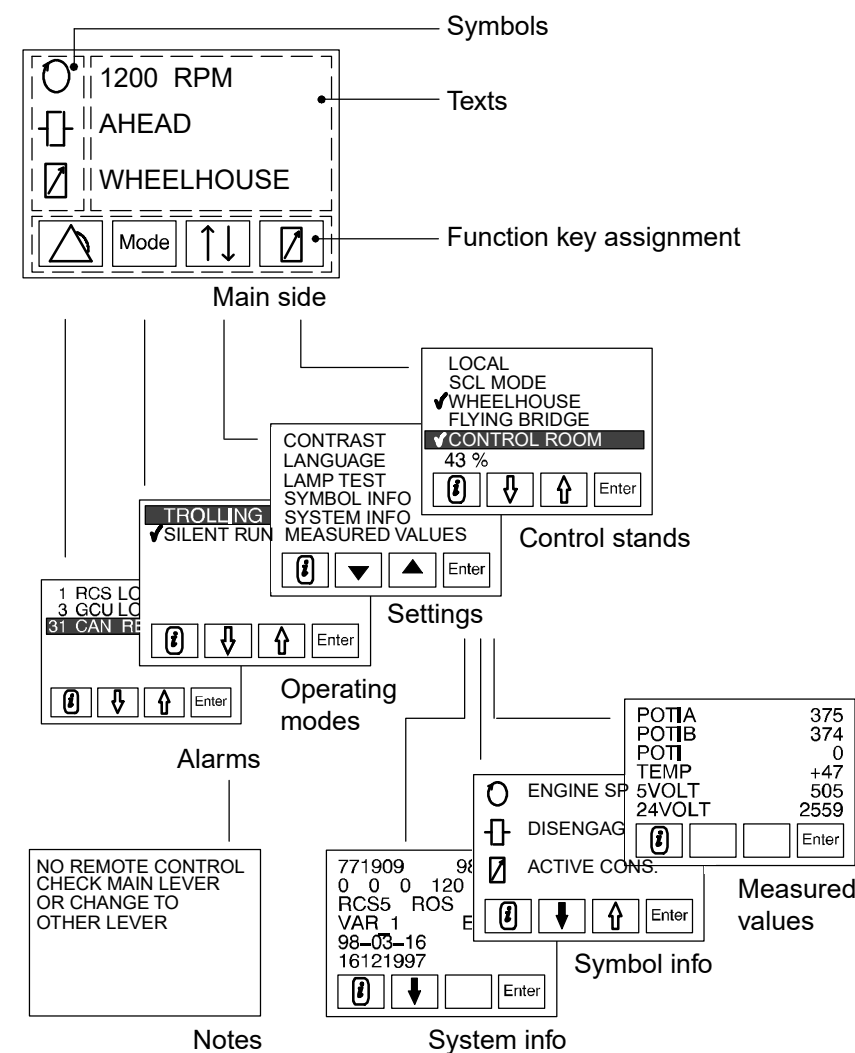


LEDs

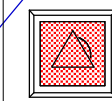

Lit: At active control stand with pending, acknowledged RCS combined alarm; at inactive control stands with pending, acknowledged or unacknowledged RCS combined alarm
Flashing: At active control stand with unacknowledged RCS combined alarm
Dark: No RCS combined alarm
Press: Acknowledge alarm at active control stand

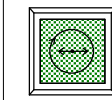

Lit: During SCL mode on all control lever panels of all participating shafts
Flashing: During deselection of SCL mode of all shafts if conditions are not met
Dark: SCL mode inactive, or shaft is not participating in SCL mode
Press: Select and deselect SCL mode at active control stand

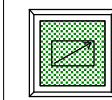


Lit: At active control stand
Flashing slowly: At target control stand, control stand change not yet acknowledged
Flashing quickly: At target control stand if control lever position is not harmonized with previously active control lever
Dark: At inactive control stands
Press: Select own control stand, adopt command position

Function key assignment




To main page

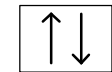


To Settings page



To Alarms page

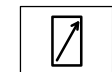

To Control stands page

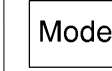


To Operating modes page



Down to next entry



Up to next entry

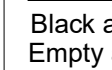


More entries present than displayed
Top/bottom entry displayed



Decrease value of DIMMING or CONTRAST



Increase value of DIMMING or CONTRAST

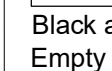

Setting limit not yet reached
Setting limit reached



Depending on displayed page:
- Display lower page of selected entry
- Activate / confirm / deactivate selected entry
- Acknowledge flashing alarm entry on Alarm page

Symbols in the LC graphic display (extract)

- Setpoint for engine speed in rpm
- Setpoint for gearbox state, e.g. Ahead
- Gearbox state TROLLING activated
- Commanding control stand
- Operating mode active
- Coupling position active
- Control stand active
- Running-in lever mode (=SCL mode) active
- Flashing, target control stand during control stand change