





Before using this Quick Reference, read and observe the detailed Rolls-Royce Solutions overall documentation on BlueVision!
In particular, all safety instructions in the overall documentation must be observed!


Display page layout in the LCD window (sample contents)

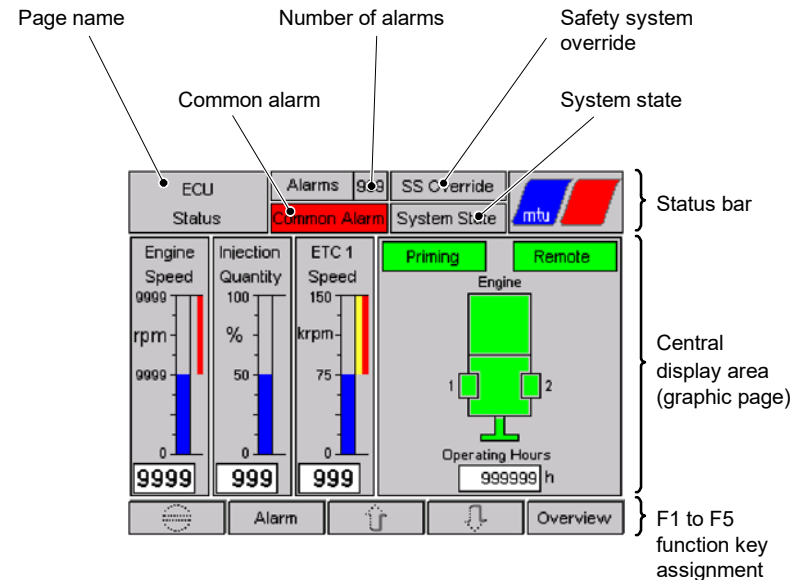

Graphic pages: Names, hierarchy and navigation (Not all pages apply to every plant.)

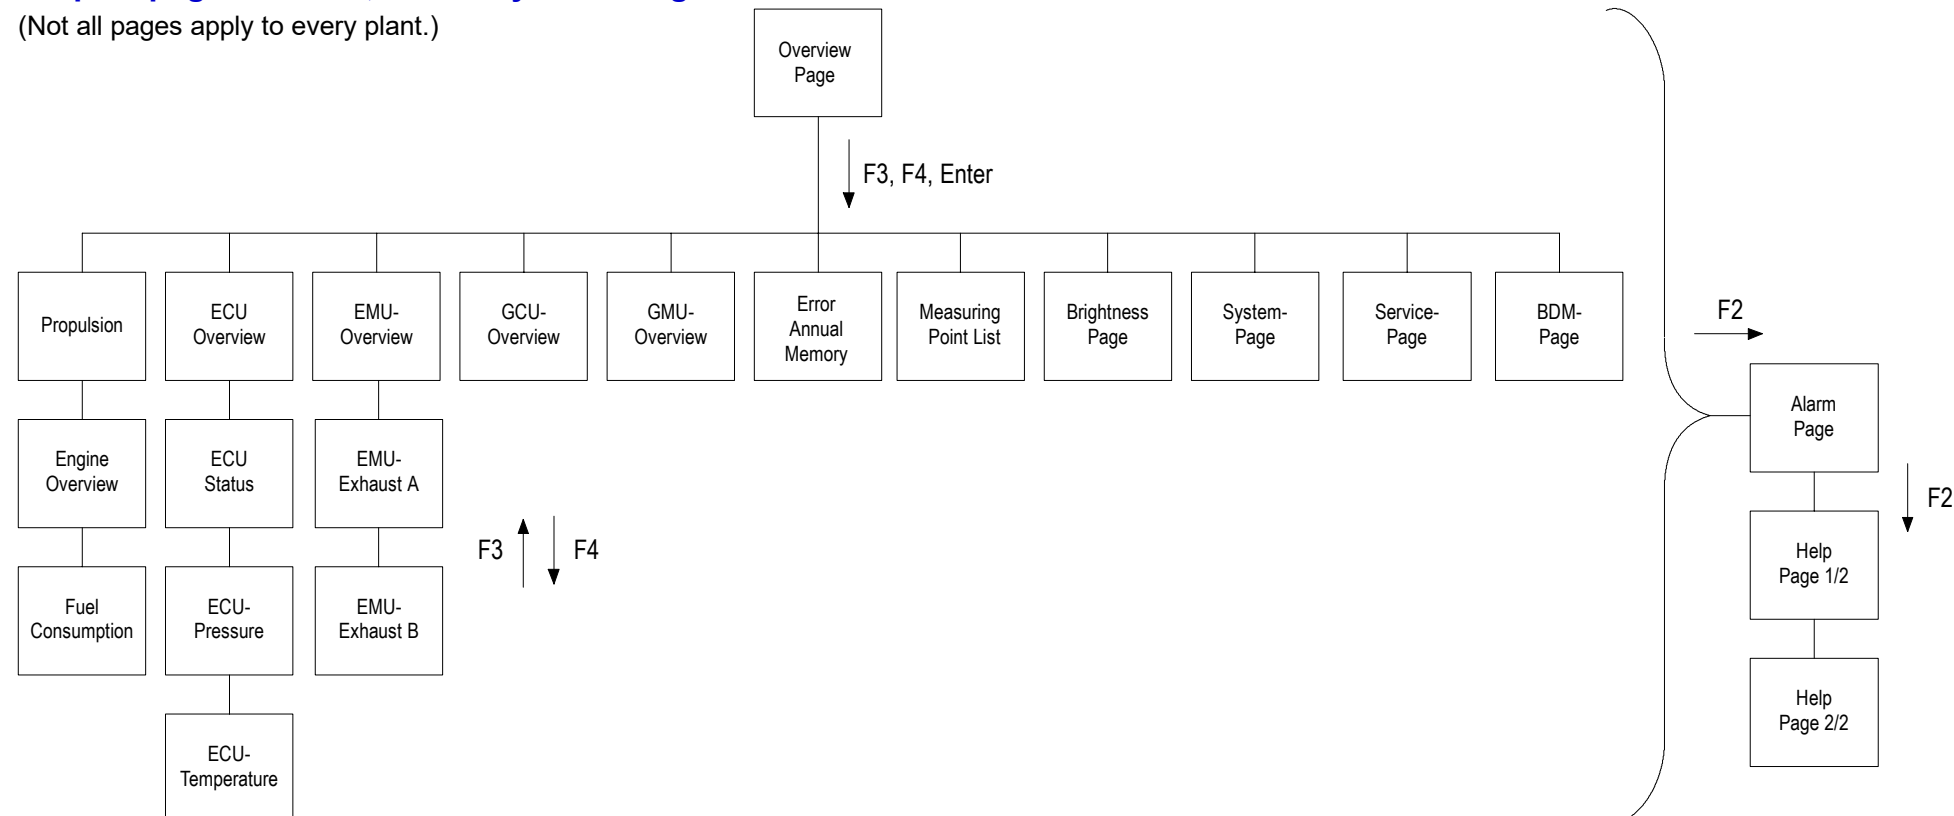

Local Operating Panel LOP

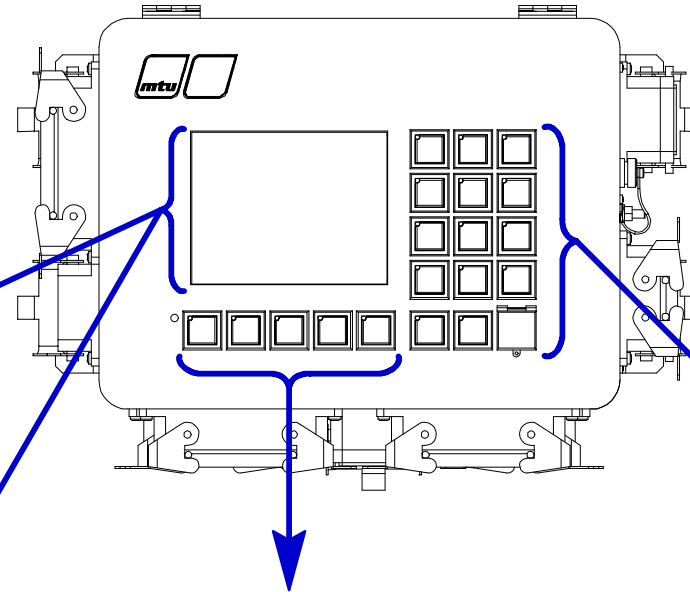

Function keys

- Function keys F1 to F5 are used to control and operate the graphic pages on the display, to acknowledge alarms and for dimming.
- The functions of the keys depend on the graphic page currently on-screen and are displayed graphically on the display.
- The keys light up as long as they are pressed.

Power train control keys

- ENGINE SPEED INCREASE:**
 - Hold key down to increase speed.
 - Lit as long as key is pressed.
- ENGINE SPEED DECREASE:**
 - Hold down key to decrease speed.
 - Lit as long as key is pressed.
- CLUTCH AHEAD:**
 - Reversing gear only
 - Press key to engage gear ahead.
 - Lit when gear is engaged ahead.
- CLUTCH NEUTRAL:**
 - Reversing gear only
 - Press key to disengage gear.
 - Lit when gear is disengaged.
- CLUTCH ASTERN:**
 - Reversing gear only
 - Press key to engage gear astern.
 - Lit when gear is engaged astern.
- CLUTCH IN:**
 - Reduction gear only
 - Press key to engage gear.
 - Lit when gear is engaged.
- CLUTCH OUT:**
 - Reduction gear only
 - Press key to disengage gear.
 - Lit when gear is disengaged.
- BACK FLUSH:**
 - Waterjet and reversing gear only
 - Hold key down to flush Waterjet.
 - Lit as long as key is pressed.
- START:**
 - Press key to start engine.
 - Lit during starting sequence.
- STOP:**
 - Press key to stop engine.
 - Lit during stopping sequence.
- READY FOR OPERATION:**
 - Deactivates/activates start interlock; operator presses key to signal to the system that the power train is ready for operation/not ready for operation.
 - Lit when key has been pressed.
- LOCAL OPERATION:**
 - Press key to activate Local mode.
 - Lit when Local mode is activated.
- EMERGENCY STOP:**
 - Press key to trip emergency engine stop.
 - Lit when emergency engine stop has been tripped.