


	Operators must familiarize themselves with the overall documentation before operating this product! Pay particular attention to the safety notes in the overall documentation.	
---	--	---

Numbering standard for multiple-shaft plants

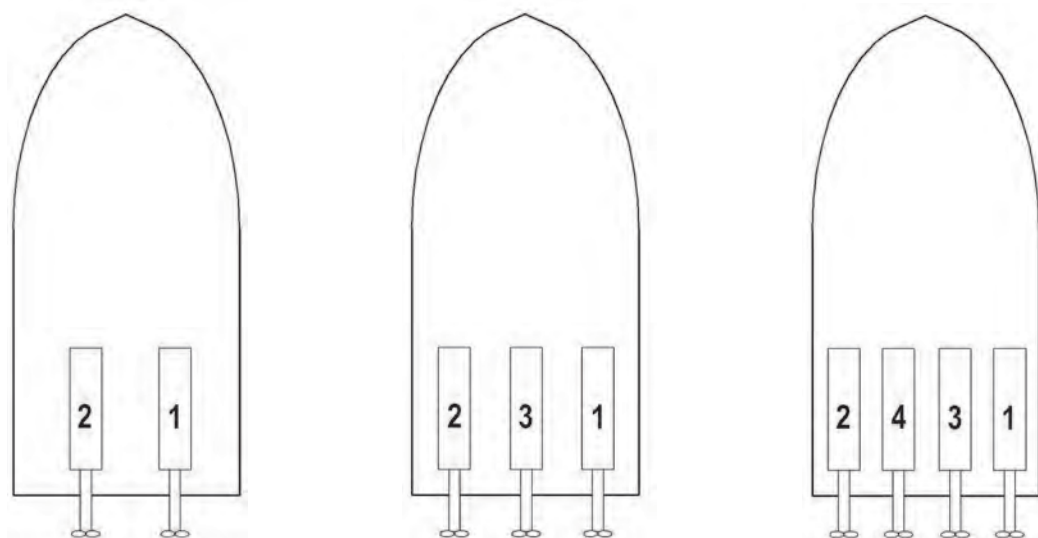

Cable routings and breakouts

NOTE: The dimensions stated here apply to RCS cables only. Opening dimensions for other BlueVision subsystems must also be taken into consideration.

For each power train

from	to	Ø mm min.
CCP	CCP	55

At each control stand


from	to	Ø mm min.
ROS	CCP	125

Additionally on main control stand for twin-shaft plants


from	to	Ø mm min.
ROS	CCP	45

Additionally on main control stand with more than two shafts


from	to	Ø mm min.
CCP1 engine 1/2	CCP1 engine X	70

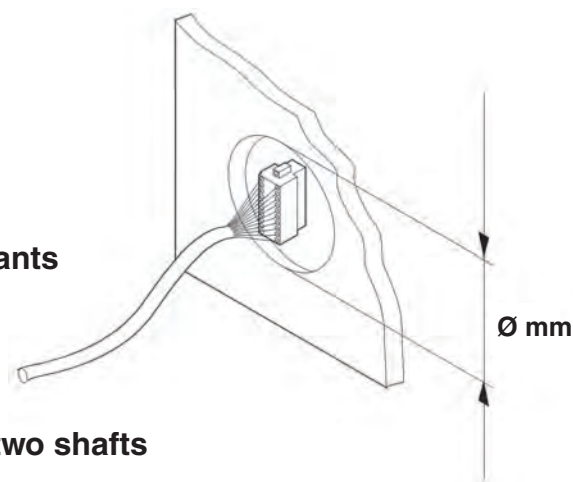

Panel cutout and securing bores - Single control lever panel

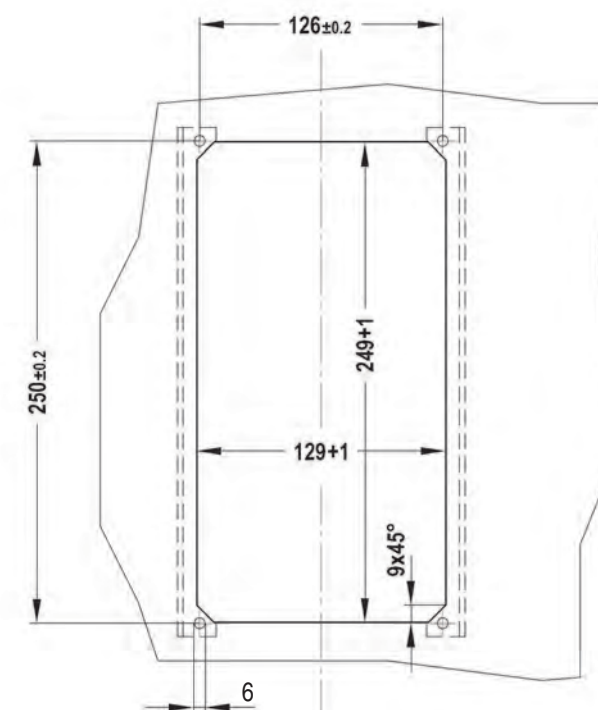


Panel cutout and securing bores - Twin control lever panel

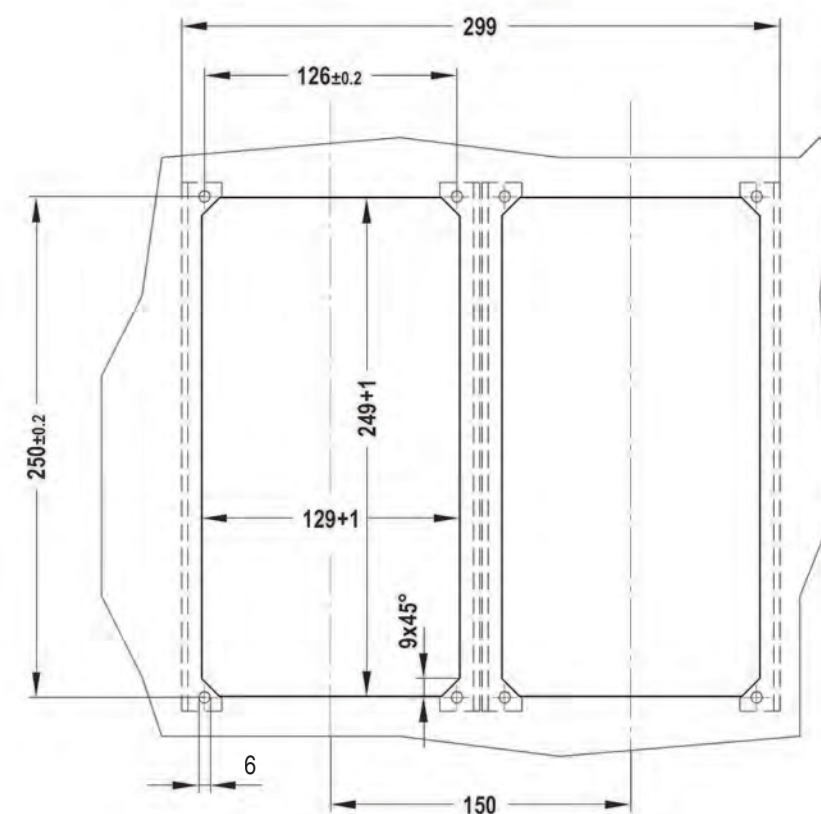


Operators must familiarize themselves with the overall documentation before operating this product!
Pay particular attention to the safety notes in the overall documentation.

Control lever panel ROS – Overview for installation

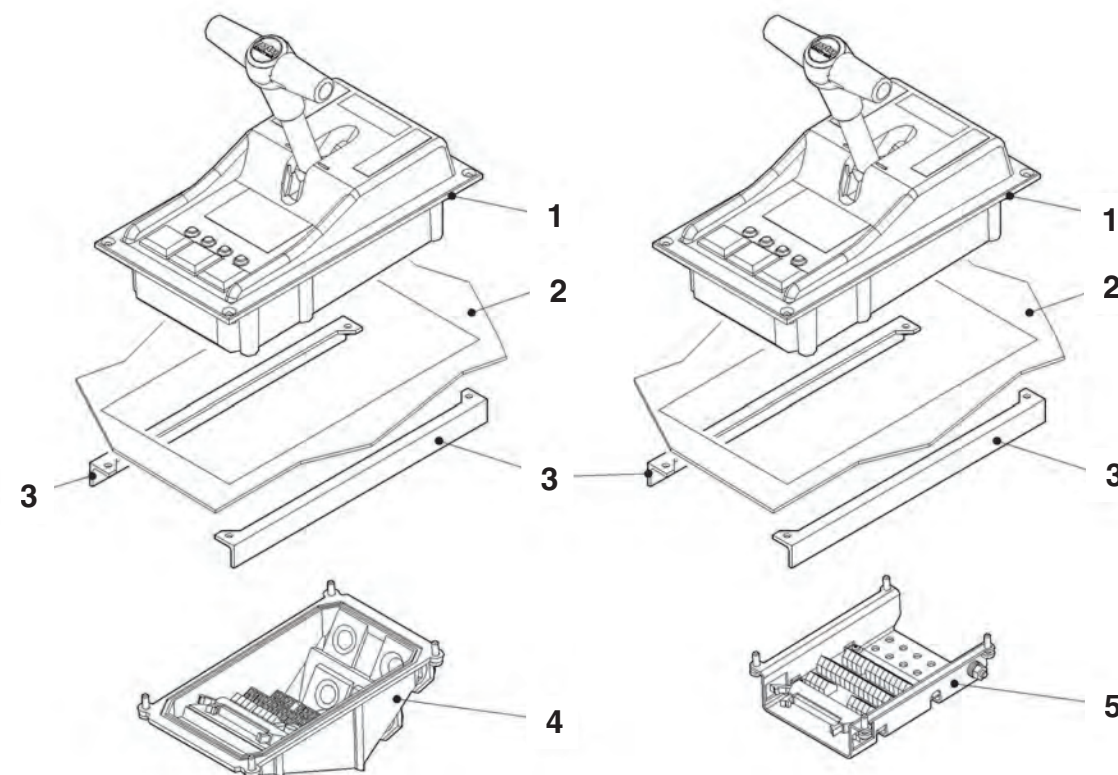


- 1 Control lever housing
- 2 Panel cutout
- 3 Mounting bracket
- 4 Connection housing for exposed control stands
- 5 Connection housing for enclosed control stands

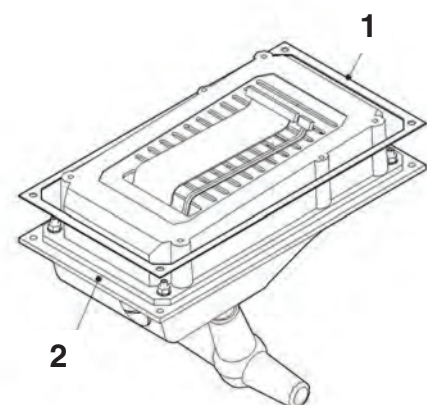


- 1 Seal
- 2 Mating surface

NOTE: The seal is screwed to the control lever housing by the mounting brackets when the control lever panel is shipped.

Control lever panel ROS - Connection housing connection

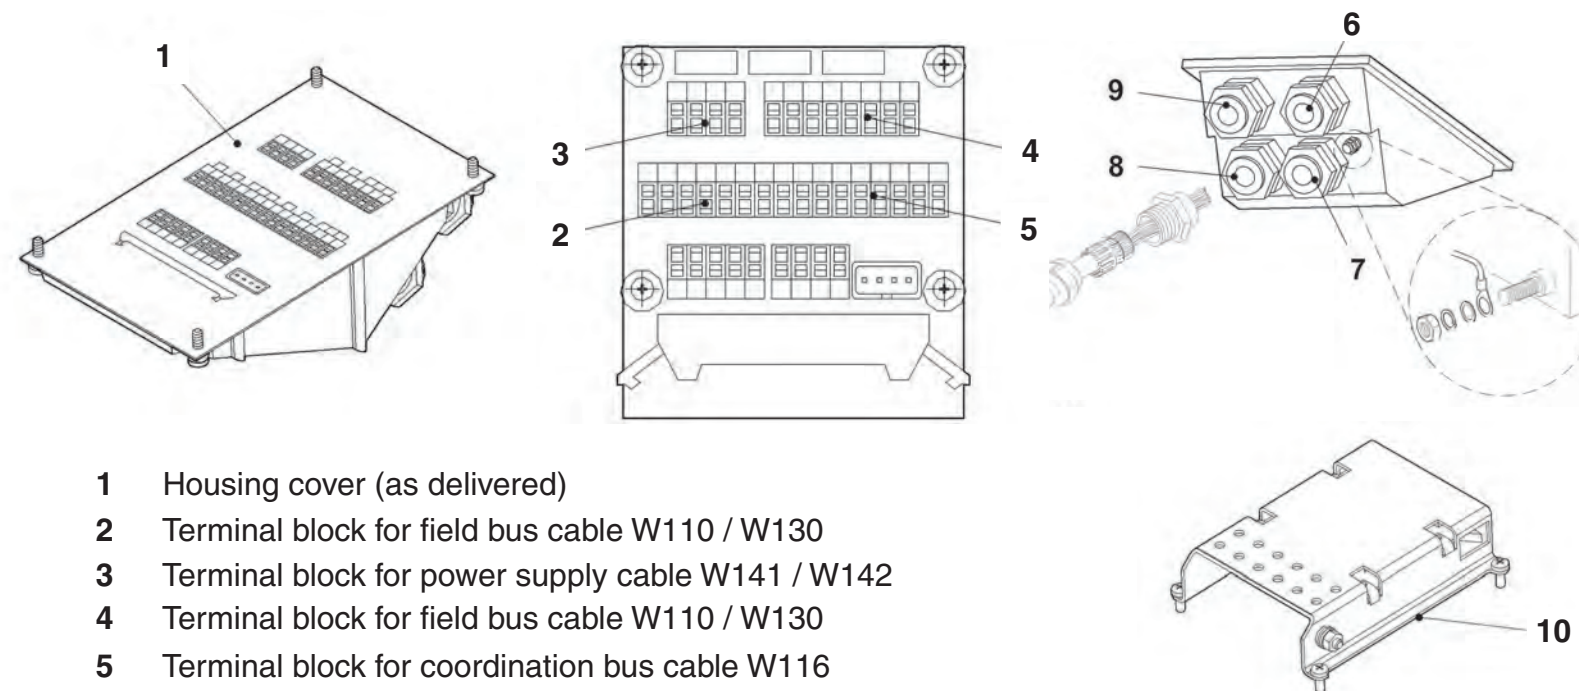

- 1 Housing cover (as delivered)
- 2 Terminal block for field bus cable W110 / W130
- 3 Terminal block for power supply cable W141 / W142
- 4 Terminal block for field bus cable W110 / W130
- 5 Terminal block for coordination bus cable W116 (only for multiple-shaft plants)
- 6-9 Cable glands on connection housing for exposed control stands
- 10 Connection housing with screws for enclosed control stand

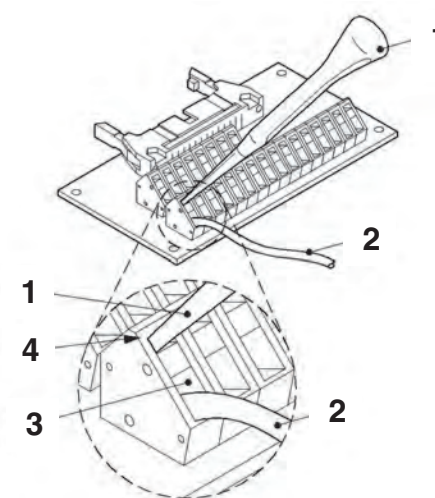

- 1 Actuator tool
- 2 Core
- 3 Core terminal
- 4 Terminal lock

Cable no.	Core no.	Terminal no.	Signal designation
W141	1	1	+24 V
W142	2	3	+24 V SL
	3	2	GND
	4	2	GND
W110	1	61	CAN 1 H
W130	2	62	CAN 1 L
	3	63	CAN 1 GND
	4	73	CAN 2 GND
	5	71	CAN 2 H
	6	72	CAN 2 L
	7	61	CAN 1 H
	8	62	CAN 1 L
	9	63	CAN 1 GND
	10	73	CAN 2 GND
	11	71	CAN 2 H
	12	72	CAN 2 L
W116	1	81	CAN 3 H
	2	82	CAN 3 L
	3	83	CAN 3 GND
	4	83	CAN 3 GND
	5	81	CAN 3 H
	6	82	CAN 3 L




Operators must familiarize themselves with the overall documentation before operating this product!
Pay particular attention to the safety notes in the overall documentation.

NOTE: Up to 5 control stands are possible.

Cable no.	Name	Explanation
W141	Power supply	engine 1 / engine 3
W142	Power supply	engine 2 / engine 4
W110	Field bus	engine 1/ engine 3
W130	Field bus	engine 2 / engine 4
W116	Coordination bus	only at main control stand
W125	Field bus	engine 1/ engine 3
W144	Field bus	engine 2 / engine 4
W111	Coordination bus	only plants with 3 or 4 shafts

Cable routing and connection for a single-shaft plant

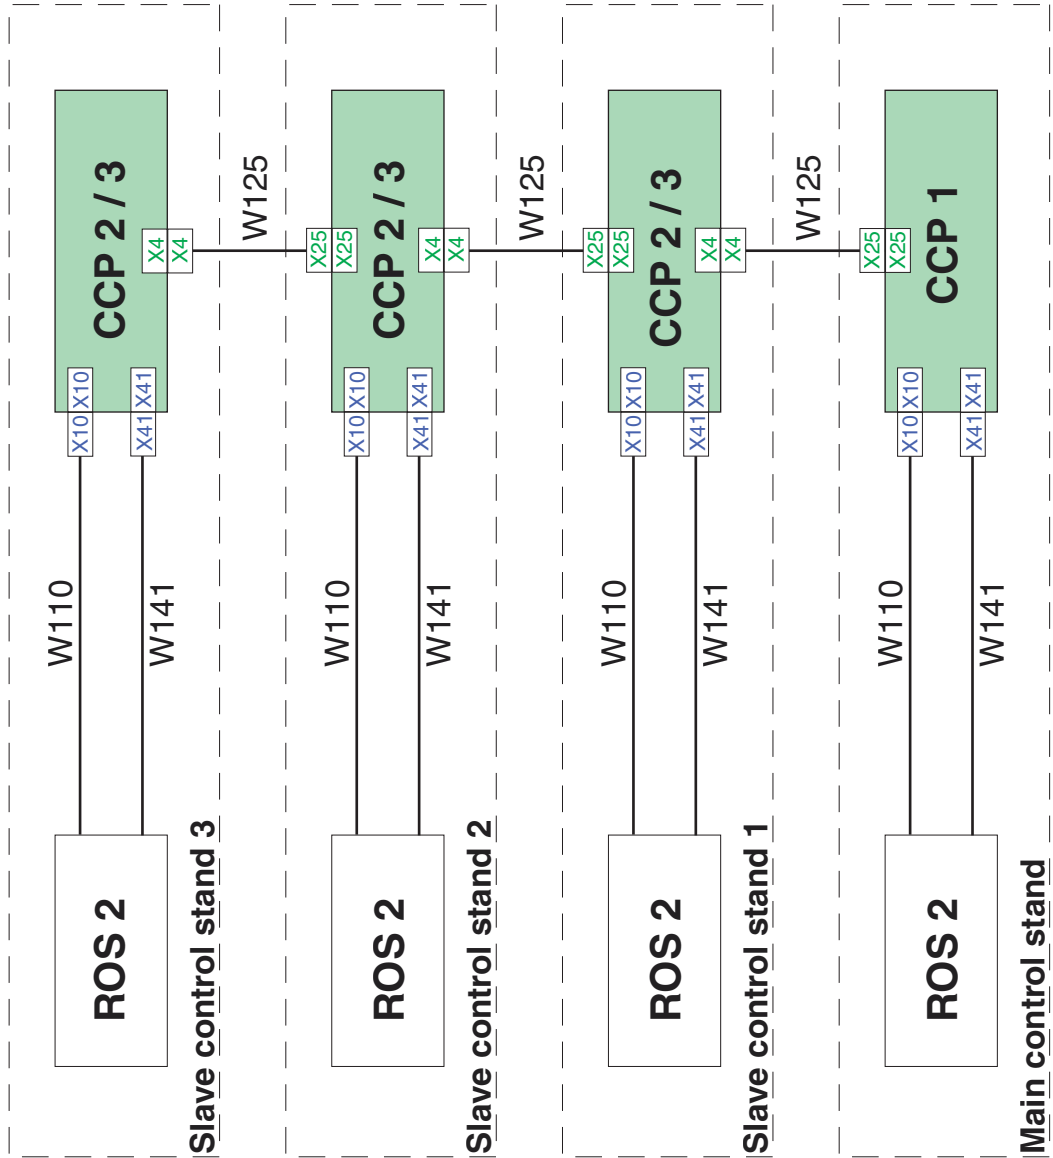

Cable routing and connection for a twin-shaft plant

