


Standard devices:




Please read the overall Rolls-Royce Solutions BlueVision documentation before using this quick reference guide.
Pay particular attention to the safety notes in the overall documentation!


Mounting bores and installation openings for two ROS 7 command units

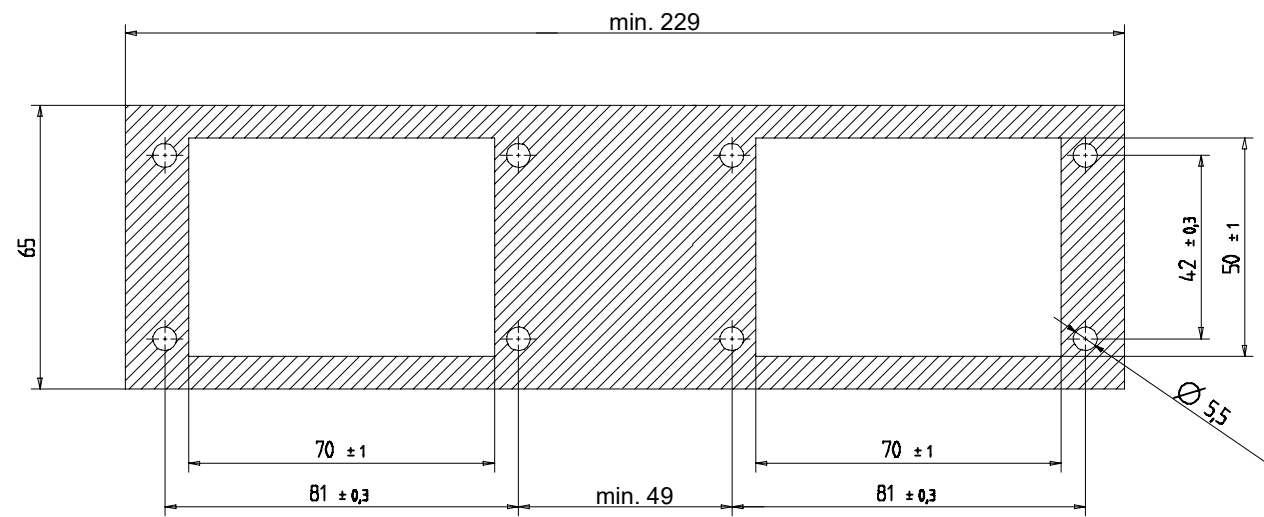


Mounting bores and installation opening for ROS 11 command unit

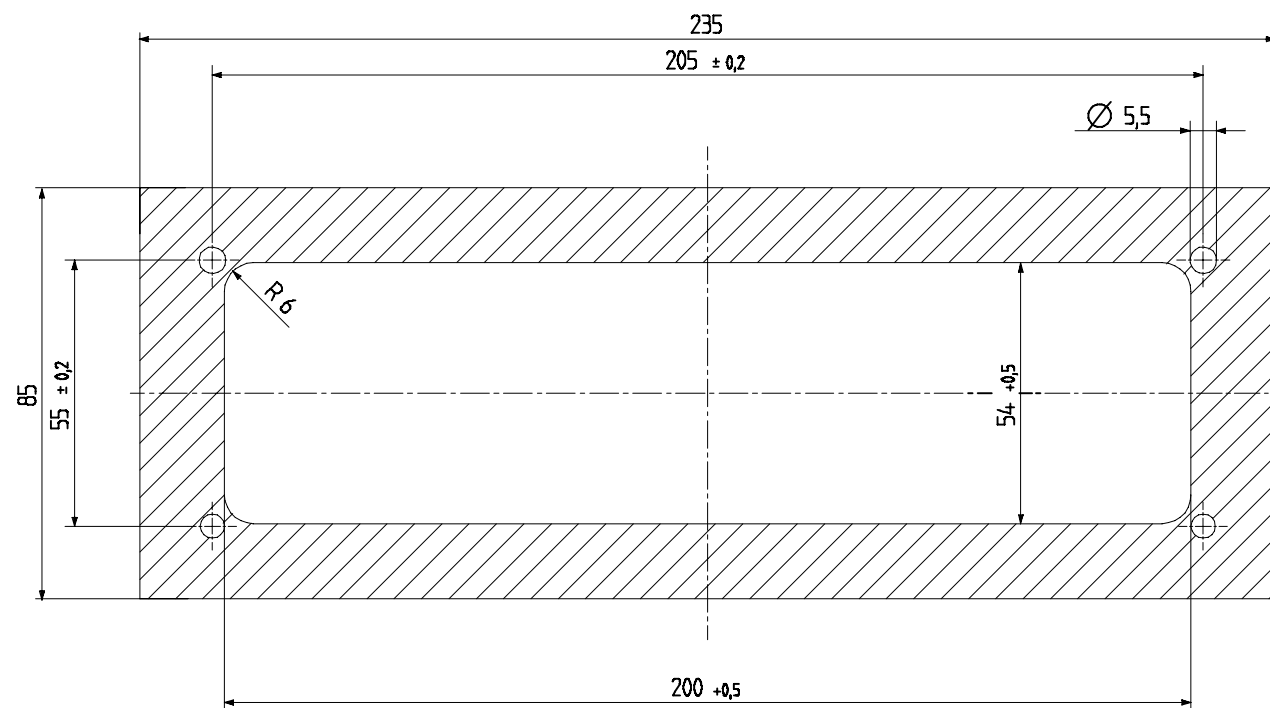

Mounting bores and installation opening for ROS 7 or ROS 9 command unit

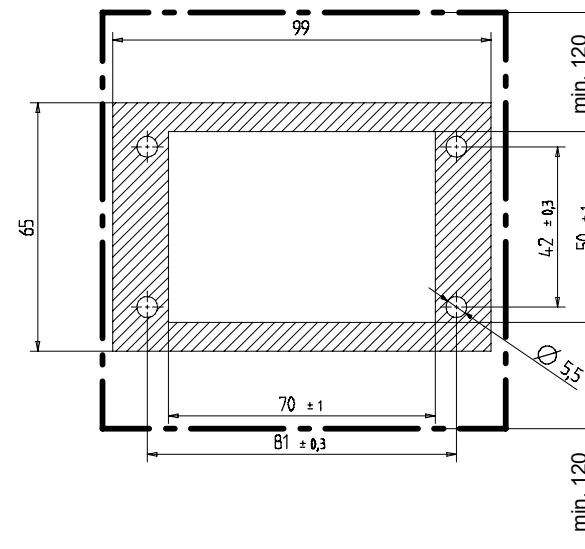


Mounting bores for PIM 4 control unit

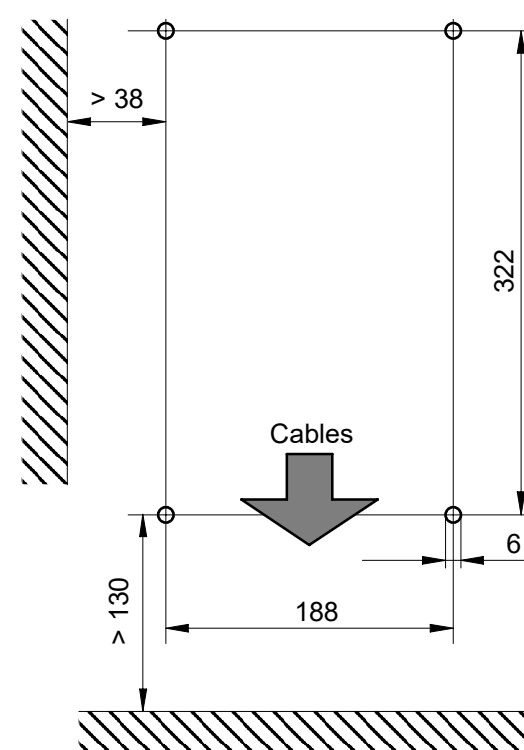


Portable controller (optional):


Mounting bores and installation opening for connecting socket

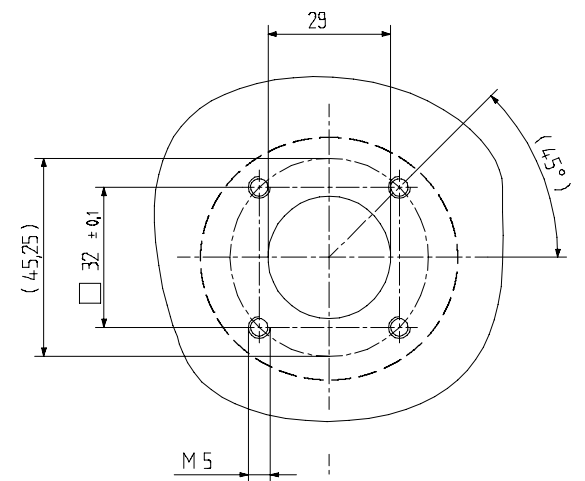


Mounting bores for RIM 2 remote interface module

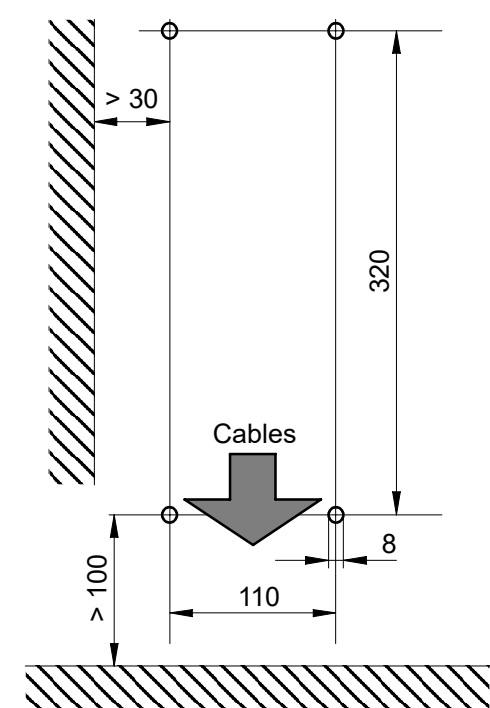


Cable routing for one-shaft plant

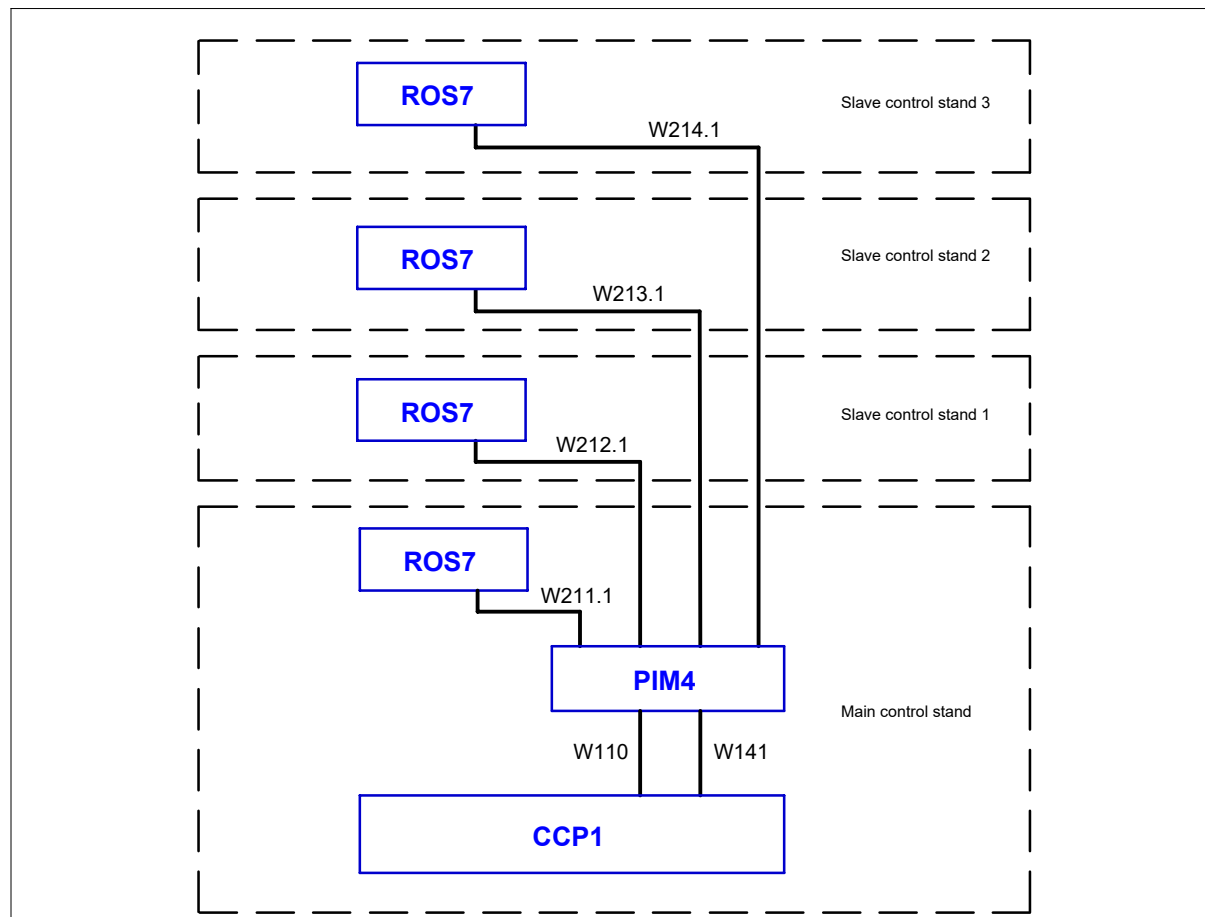

Cable routing for three-shaft plant

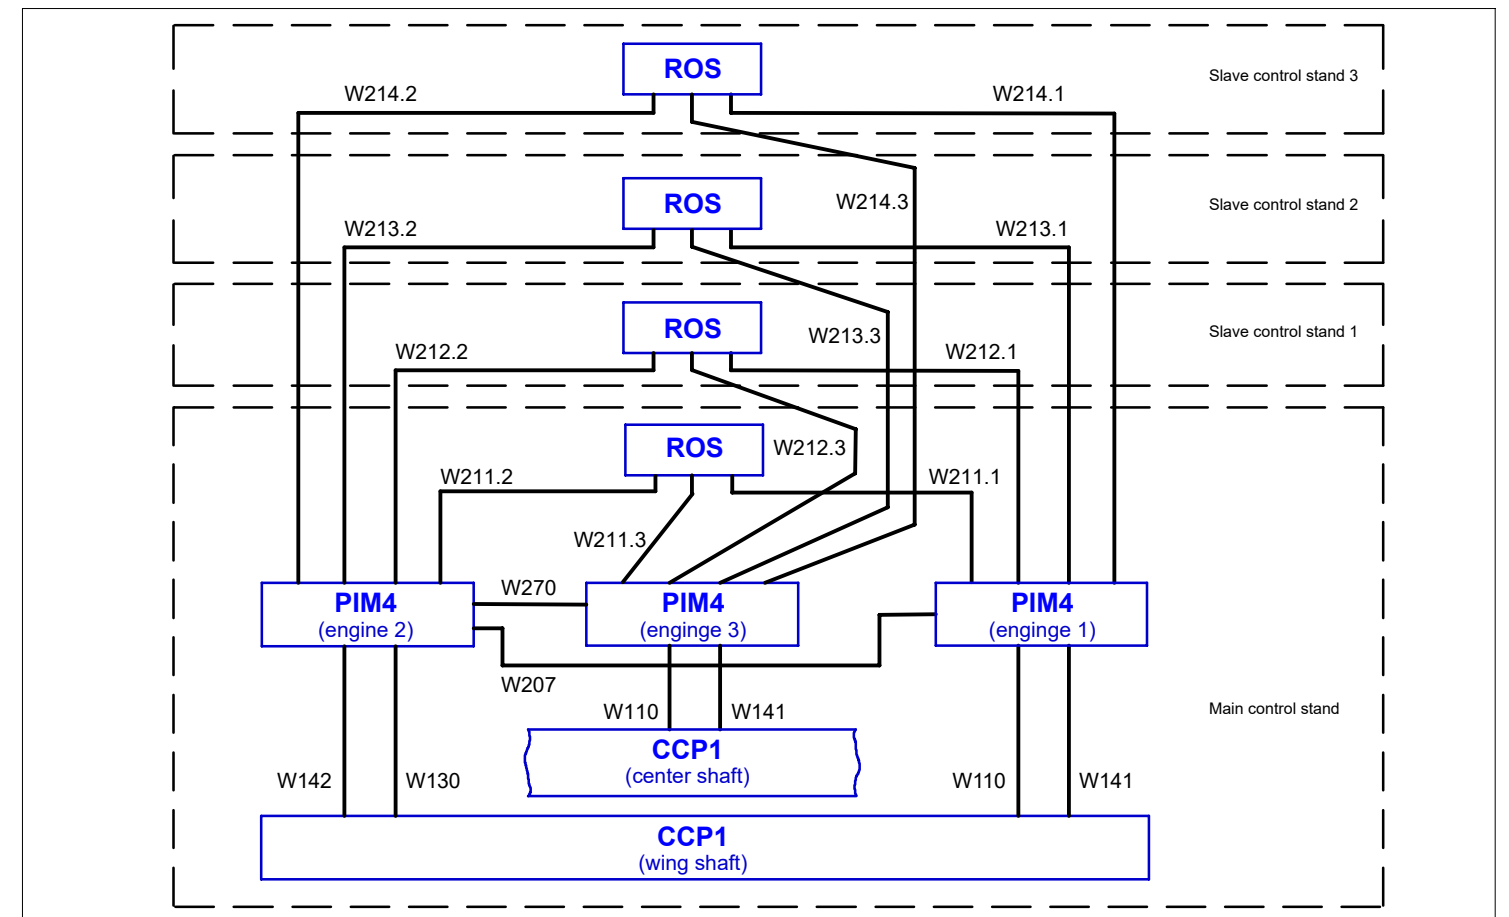

Cable routing for one-shaft plant

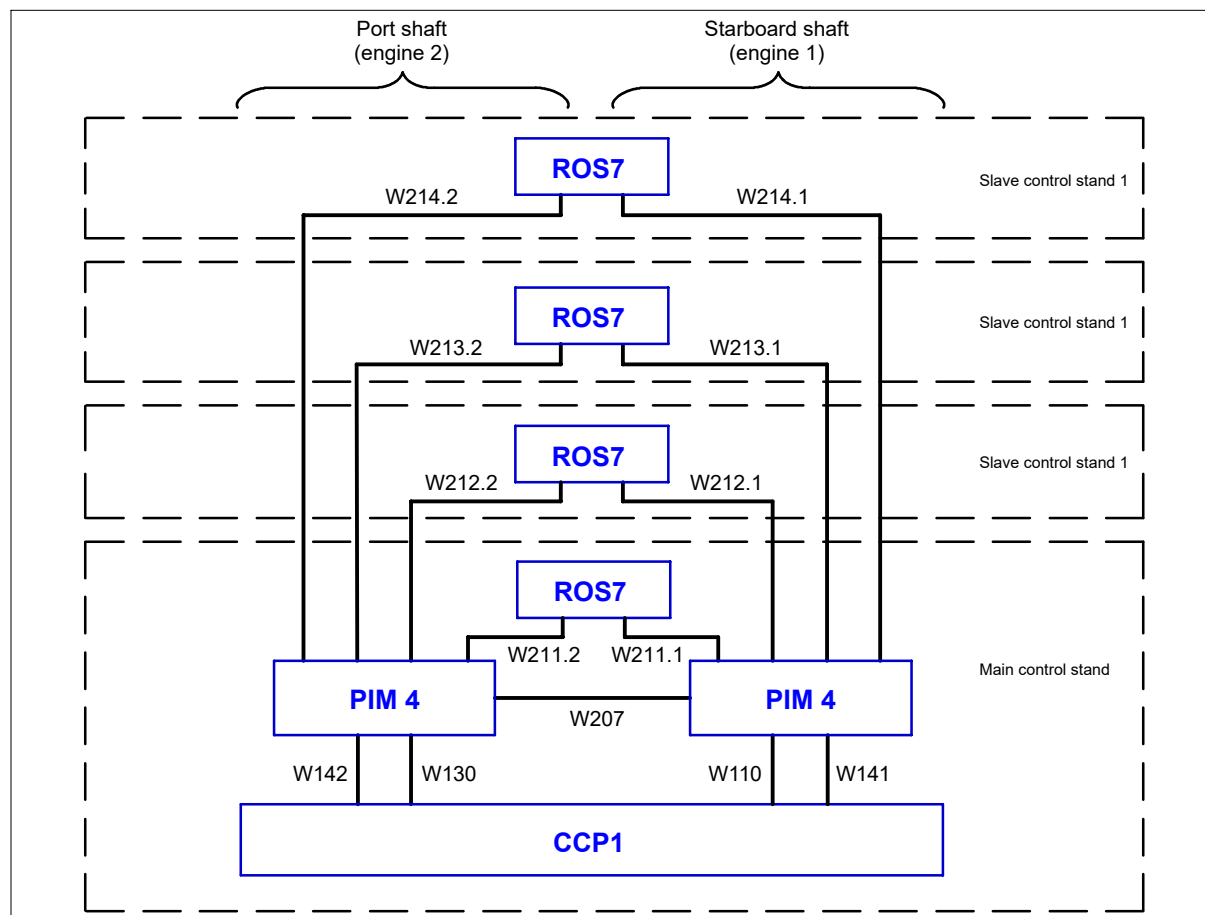

Cable routing for four-shaft plant

