





Read and observe the overall Rolls-Royce Solutions BlueVision documentation before using this quick-reference guide.
Pay particular attention to the safety notes in the overall documentation.


Command unit

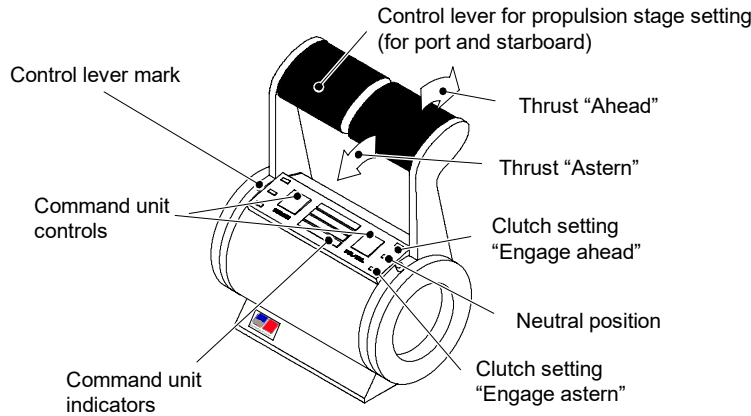


Command unit controls

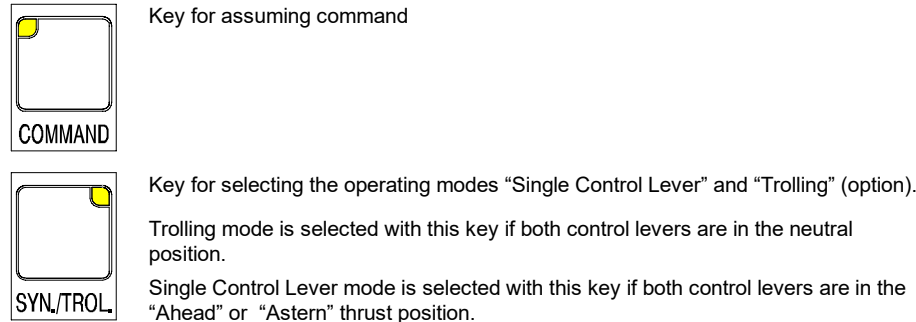


Command unit indicators

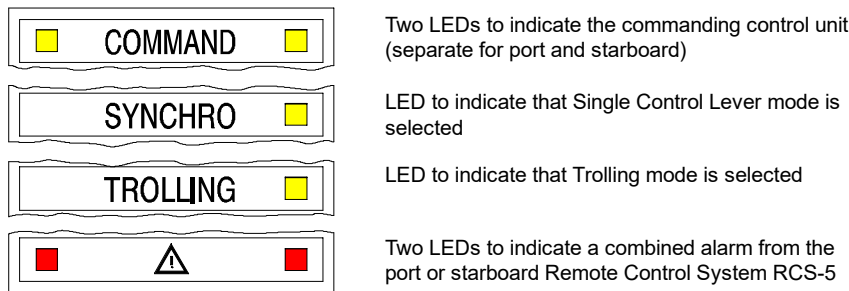


Taking initial command

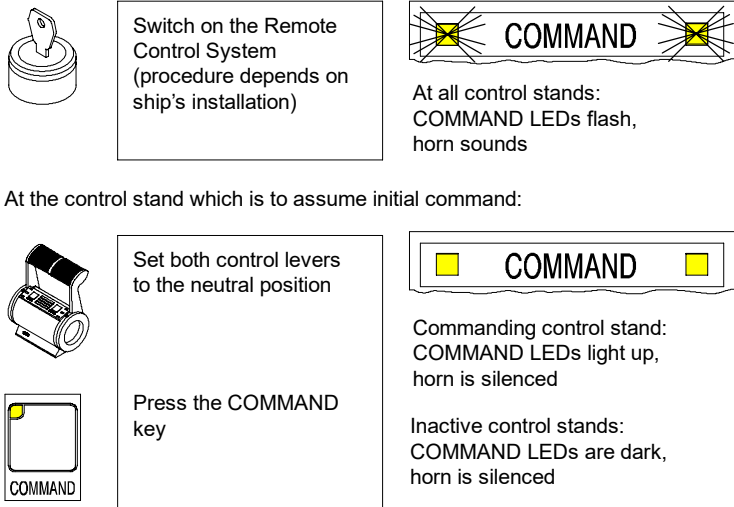


Engaging and changing speed

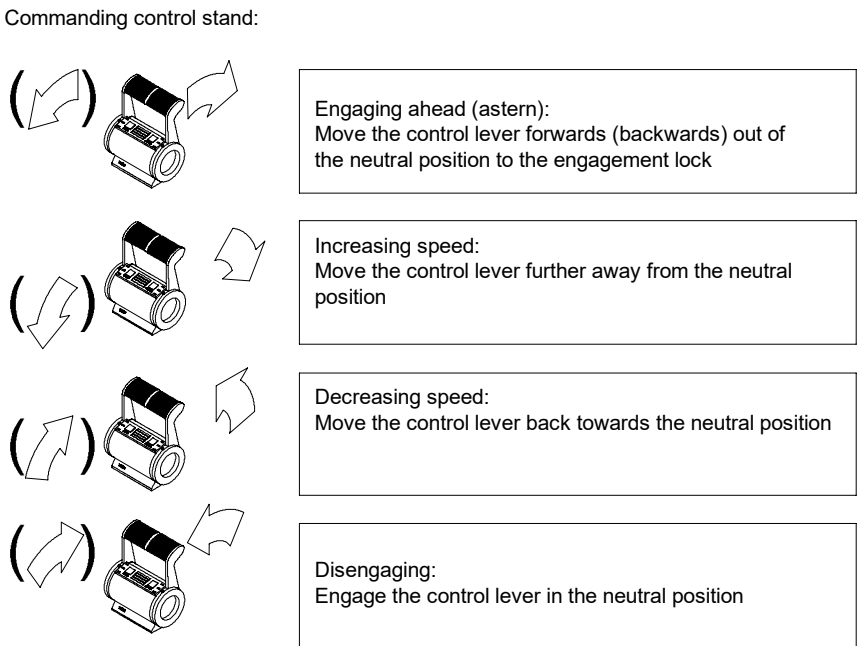

Assuming command at another control station

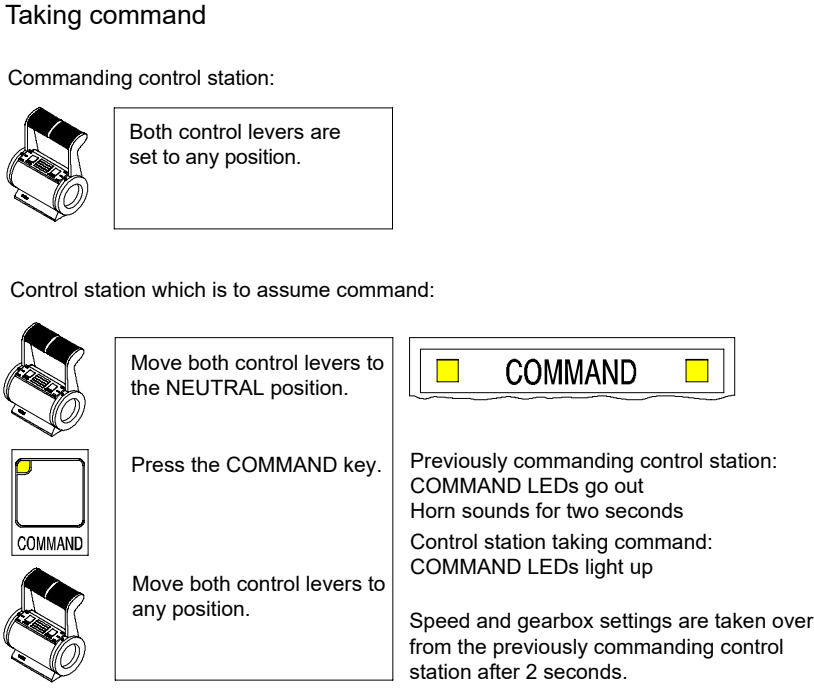

Canceling command transfer

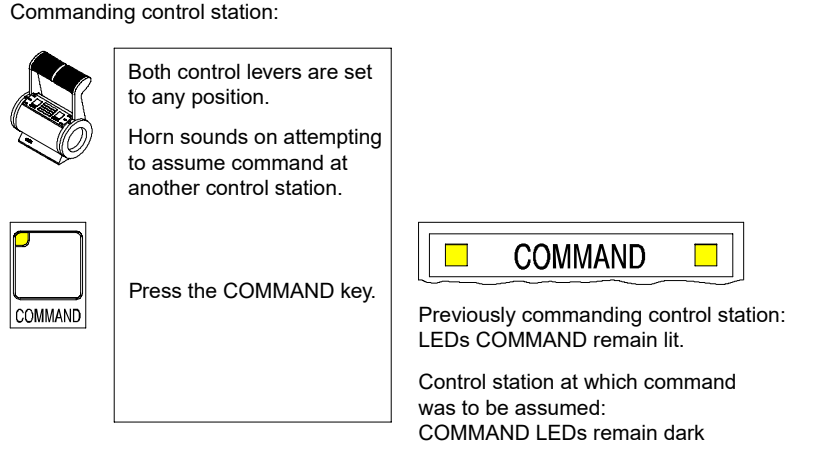



Read and observe the overall Rolls-Royce Solutions BlueVision documentation before using this quick-reference guide.
Pay particular attention to the safety notes in the overall documentation.

Selecting Trolling mode (option)

Commanding control stand:



Pre-requisite:
Both control levers in the neutral position



Press the SYN./TROL. key



TROLLING LED lights up at all control stands,
Trolling mode is active

Deselecting Trolling mode

Commanding control stand:



Set both control levers to the neutral position



Press the SYN./TROL. key



TROLLING LED is dark at all control stands,
Trolling mode is inactive

Selecting Single Control Lever mode

Commanding control stand:



Pre-requisite:
No control lever in the neutral position



Press the SYN./TROL. key



Move the other control lever (SCL Slave) to the neutral position within 4 s



COMMAND LED lights up at the control lever which presets the higher propulsion stage (SCL Master; in this case port)



SYNCHRO LED lights up at all control stands
SCL Master control lever controls both power trains

Deselecting Single Control Lever mode

Commanding control stand:

- To remain engaged:



Move the control lever of the SCL Slave shaft out of the neutral position



COMMAND LED lights up again for both power trains



SYNCHRO LED is dark at all control stands
Horn (SCL Master shaft) sounds for 2 seconds
Each control lever controls the associated power train

- To disengage:



Pre-requisite:
Control lever of the SCL Master shaft is not in the neutral position



Press the SYN./TROL. key



Set the control lever of the SCL Master shaft to the neutral position



SYNCHRO LED flashes at all control stands
Horn (SCL Slave shaft) sounds



COMMAND LED lights up again at both power trains



SYNCHRO LED is dark at all control stands
Horn (SCL Slave shaft) is silenced
Each control lever controls the associated power train


Warm-up mode (changing speed without engaging gearbox)

Activating warm-up mode


Commanding control station:



Prerequisite:
Control lever is set to NEUTRAL position.

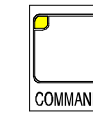

Press the COMMAND key and hold it depressed.

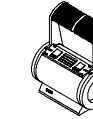

Move control lever to the desired engine speed setting.

Release the COMMAND key.




COMMAND LED flashes.
Engine speed increases, gearbox remains in neutral position.
Engine speed changes in accordance with control lever position.

Deactivating warm-up mode

Commanding control station:



Move control lever to NEUTRAL position.

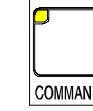

Press the COMMAND key.



COMMAND LED is lit.
Engine is running at idling speed.
Gearbox is in neutral position.

Acknowledging combined alarm

Commanding control stand:



State:
Horn sounds,
ALARM LED for the power train concerned flashes



Press the COMMAND key



Horn is silenced



ALARM LED lights up when alarm cause persists



ALARM LED is dark when alarm cause no longer exists