


Prior to operating the product, the operator must familiarize himself with the complete documentation!
In particular, the safety instructions listed in the documentation must be observed.

Numbering convention with multiple-shaft systems

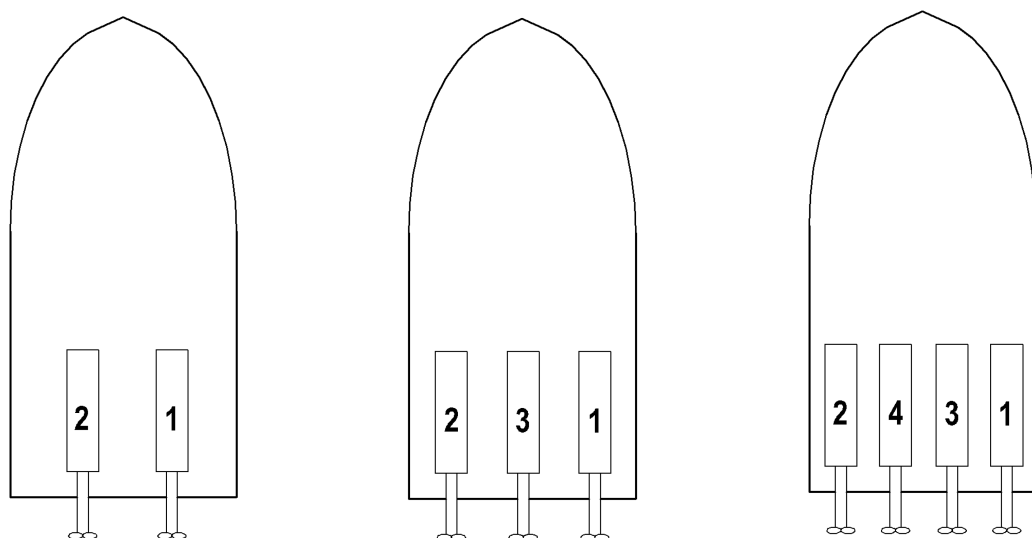

Cable channels and entries

Note: The specified dimensions are based on the cables of the RCS.
Cable entry dimensions for further subsystems of BlueVision must be considered accordingly.

For each power train

from	to	min. dia. in mm
CCP	CCP	55

On every control stand


from	to	min. dia. in mm
ROS	CCP	125

In addition, on main control stand with two-shaft systems


from	to	min. dia. in mm
ROS	CCP	45

In addition, on main control stand with two-shaft systems


from	to	min. dia. in mm
CCP1 engine 1/2	CCP1 engine X	70

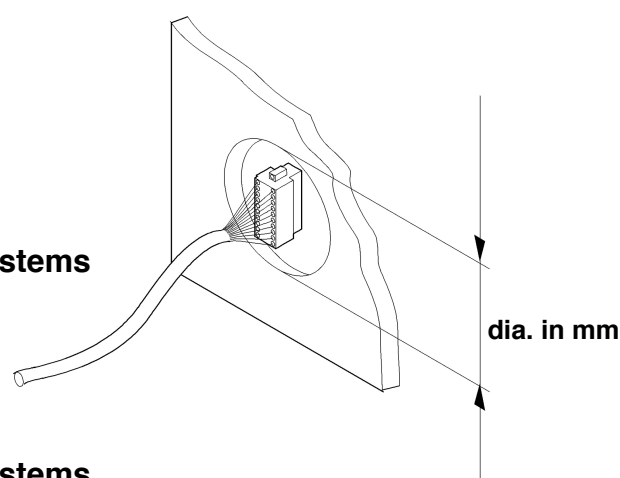

Installation opening and securing bores – Single control lever panel

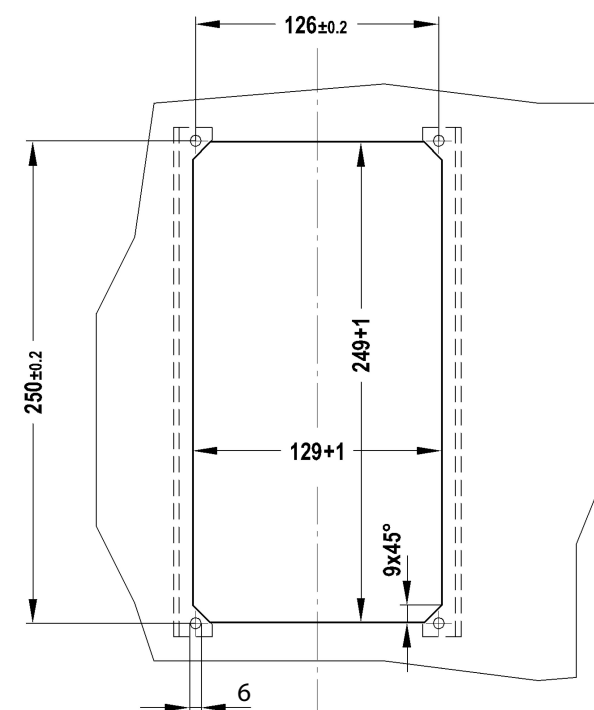


Installation opening and securing bores – Twin control lever panels

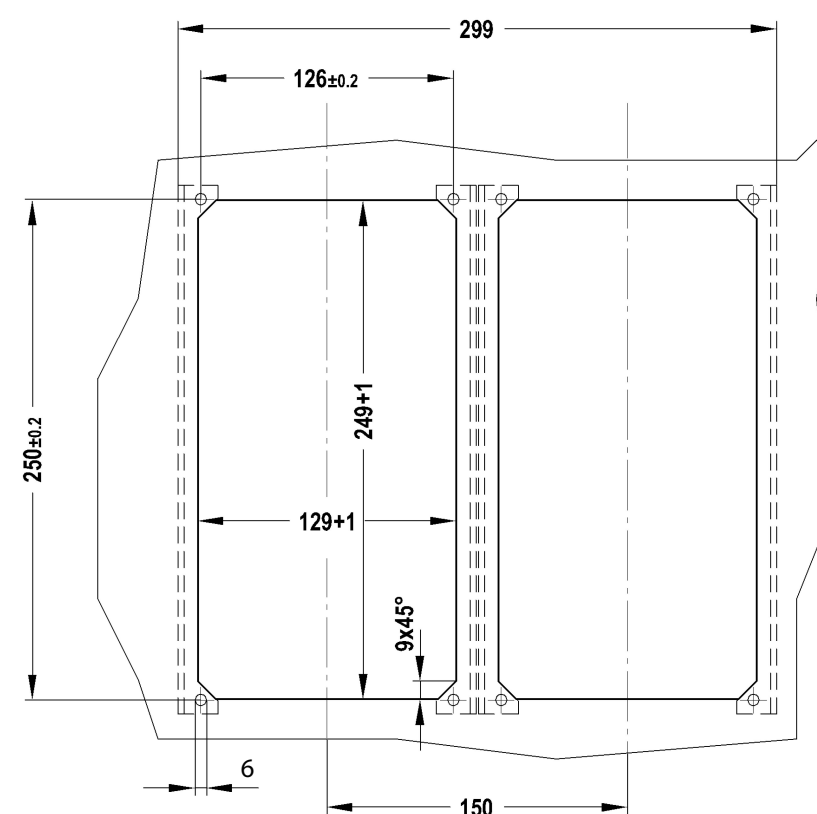


	Prior to operating the product, the operator must familiarize himself with the complete documentation! In particular, the safety instructions listed in the documentation must be observed.	
--	--	--

Installation opening and securing bores

– Wheel

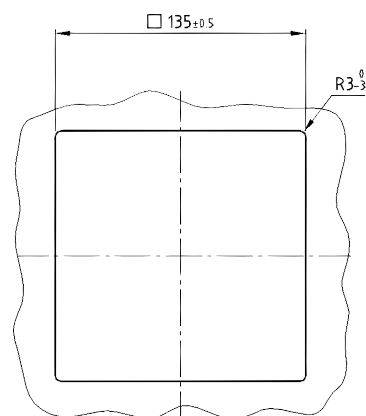


– Joystick

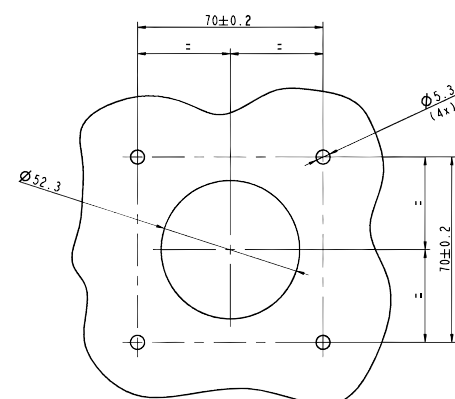


Installation opening and securing bores

– Analog display instruments

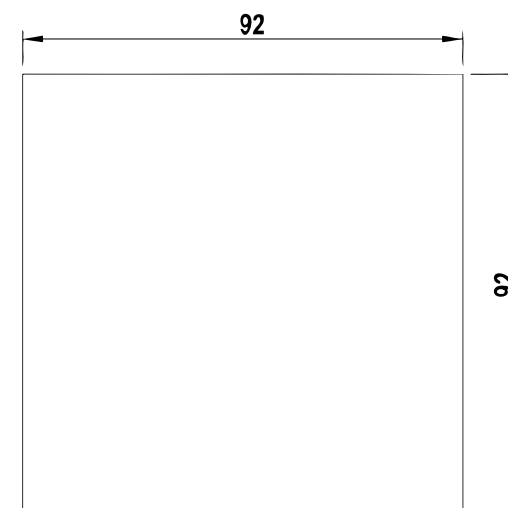

Installation opening and securing bores


– Control panel PAN

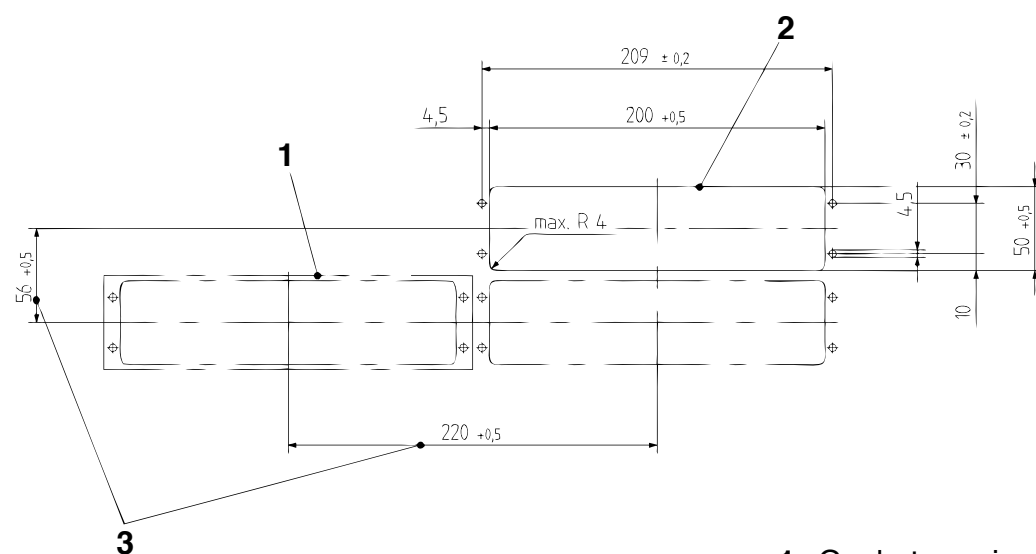

- 1 Gasket required for installation
- 2 Front plate thickness max. 9 mm
- 3 Marking off dimension of panel


Installation opening and securing bores

– Waterjet control system PCMU

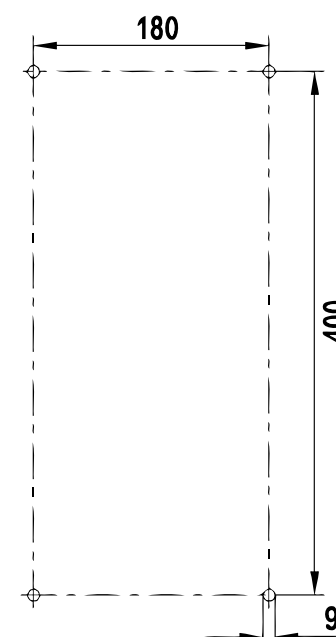


Prior to operating the product, the operator must familiarize himself with the complete documentation!
In particular, the safety instructions listed in the documentation must be observed.

Control lever panel ROS – Overview for installation

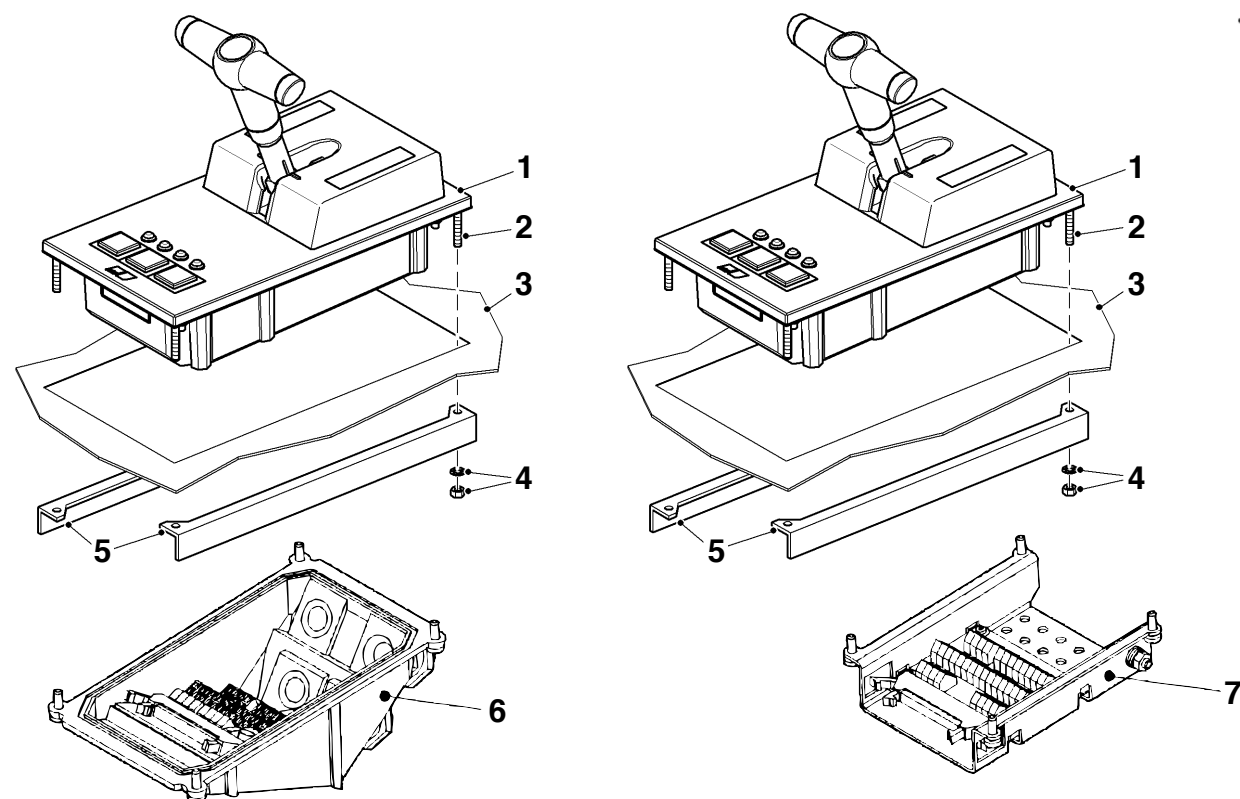

- 1 Control lever housing
- 2 Stud bolt
- 3 Panel cutout
- 4 Nut with washer
- 5 Installation bracket


- 6 Connection housing for open control stand
- 7 Connection housing for closed control stand

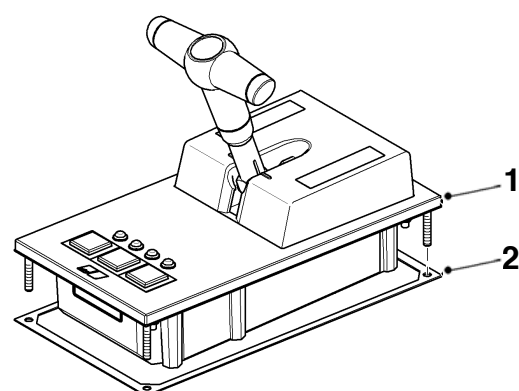


- 1 Mounting surface
- 2 Gasket

Note: When the control lever panel is delivered, the gasket with installation brackets is bolted onto the control lever housing.

Control lever panel ROS – Connecting connection housing

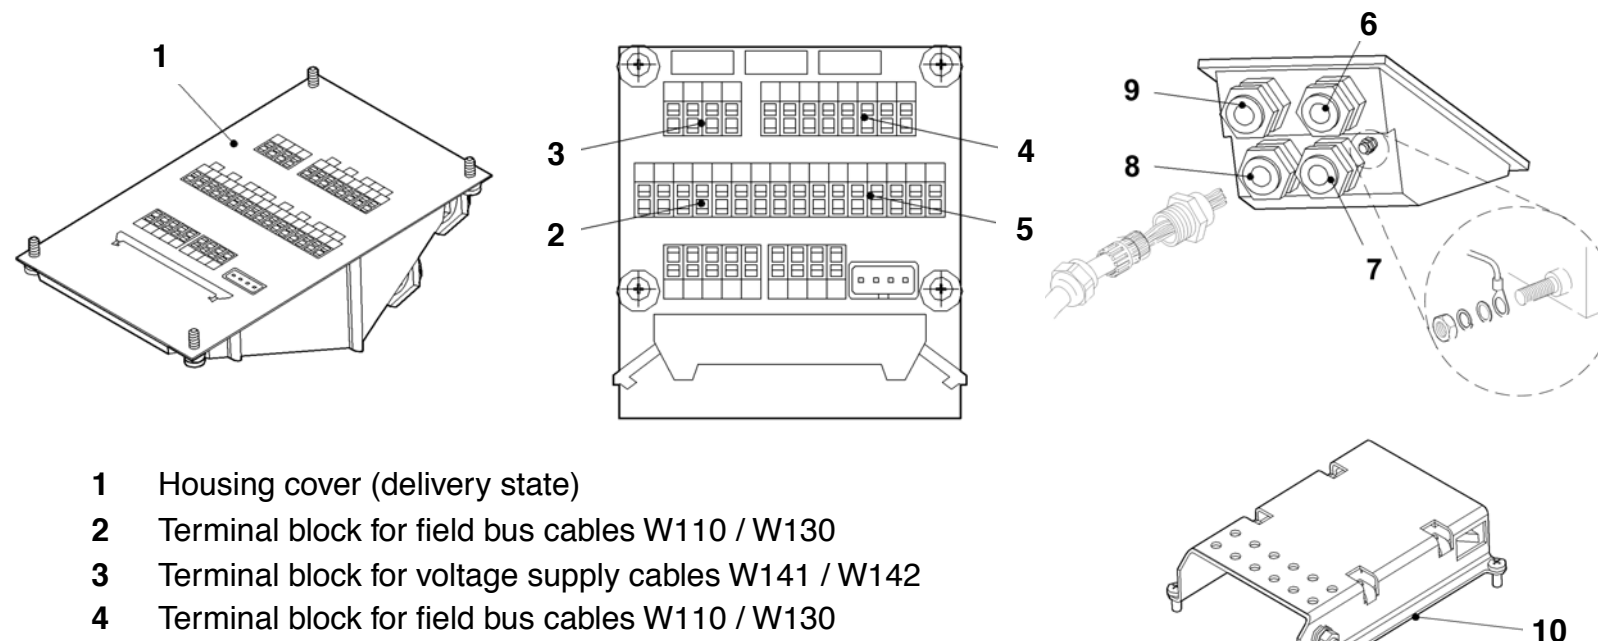

- 1 Housing cover (delivery state)
- 2 Terminal block for field bus cables W110 / W130
- 3 Terminal block for voltage supply cables W141 / W142
- 4 Terminal block for field bus cables W110 / W130
- 5 Terminal block for coordination bus cable W116 (only for multiple-shaft system and main control stand)
- 6-9 Cable entries on connection housing for open control stand
- 10 Connection housing with screws for closed control stand

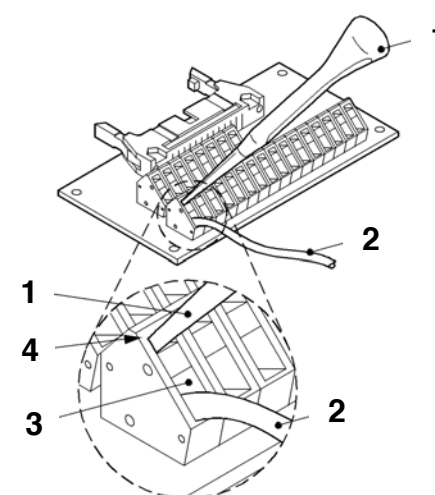

- 1 Actuation tool
- 2 Conductor
- 3 Conductor slot
- 4 Slot clamp

Cable no.	Conductor no.	Core color	Terminal no.	Signal designation
W141	1	white	1	+24 V
W142	2	brown	3	+24 V SL
	3	green	2	GND
	4	yellow	2	GND
W110	1	white	61	CAN 1 H
W130	2	brown	62	CAN 1 L
	3	green	63	CAN 1 GND
	4	yellow	73	CAN 2 GND
	5	gray	71	CAN 2 H
	6	pink	72	CAN 2 L
	7	blue	61	CAN 1 H
	8	red	62	CAN 1 L
	9	black	63	CAN 1 GND
	10	violet	73	CAN 2 GND
	11	gray-pink	71	CAN 2 H
	12	red-blue	72	CAN 2 L
W116 (only main control stand)	1	white	81	CAN 3 H
	2	brown	82	CAN 3 L
	3	green	83	CAN 3 GND
	4	yellow	83	CAN 3 GND
	5	gray	81	CAN 3 H
	6	pink	82	CAN 3 L
Engine 1: W231.1	1	white	94	+24 VDC
Engine 2: W231.2	2	brown	95	GND
	3	green	91	CAN H
	4	yellow	92	CAN L

The Core no. / Core color markings are based on DIN 47100 / 01.88




Prior to operating the product, the operator must familiarize himself with the complete documentation!
In particular, the safety instructions listed in the documentation must be observed.

Note: A total of 5 slave control stands are possible.

Cable no.	Designation	Explanation
W141	Voltage supply	Engine 1/ engine 3
W142	Voltage supply	Engine 2/ engine 4
W110	Field bus	Engine 1/ engine 3
W130	Field bus	Engine 2/ engine 4
W116	Coordination bus	only main control stand
W125	Field bus	Engine 1/ engine 3
W144	Field bus	Engine 2/ engine 4
W111	Coordination bus	only with 3 and 4-shaft systems
W156	Process bus	only with 3 and 4-shaft systems

Cable installation and connection for single-shaft system

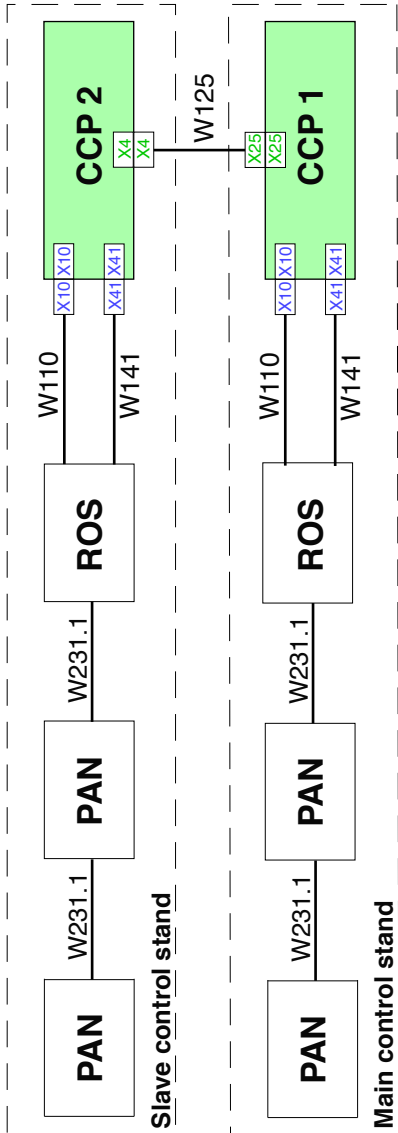

Cable installation and connection for twin-shaft system

