




The operator must familiarize himself with the complete documentation before using the product!
In particular, the Safety Instructions contained in the documentation must be observed.



Scope of delivery of the HP Officejet 6000

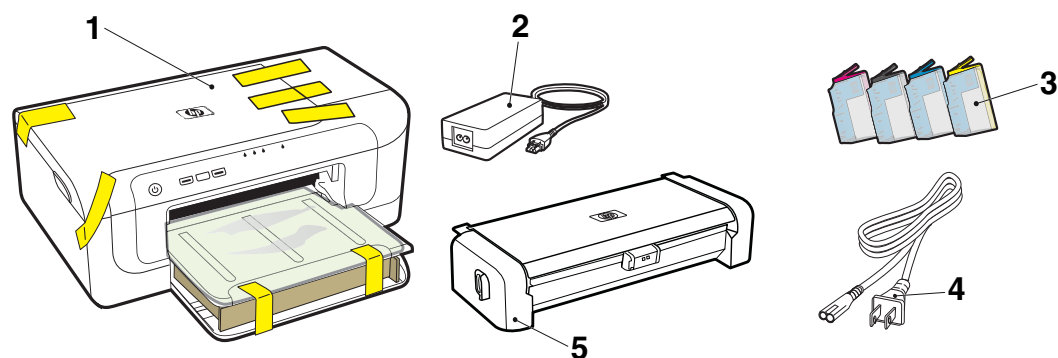


- | | |
|---------------------------------|---------------------|
| 1 HP Officejet 6000 | 4 Mains cable |
| 2 Adapter 0957-2230 / 0957-2271 | 5 Duplexer (option) |
| 3 Ink cartridges | |

System requirements


Ink cartridge:	Four (black, yellow, magenta, cyan)
Operating system compatibility:	Windows XP, Windows NT, Windows 3.11
Operating temperature:	5-40 °C
Recommended operating conditions:	15-32 °C
Recommended air humidity:	25-75 %, not condensing
Power supply:	External power supply unit
Input voltage:	100-240 VAC (±10 %), 50/60 Hz (± 3 Hz)
Output voltage:	32 VDC, 1560 mA
Power consumption:	29.6 W
Protection:	IP20 in accordance with DIN 40050

Connections

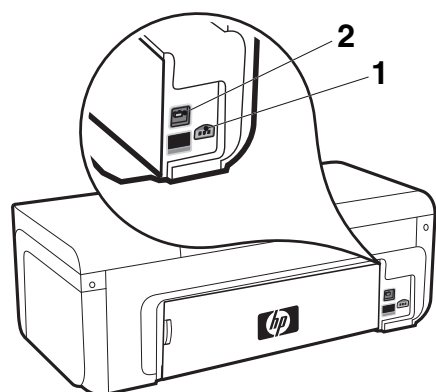


- 1 Mains connection
- 2 LAN port

Connection for voltage supply

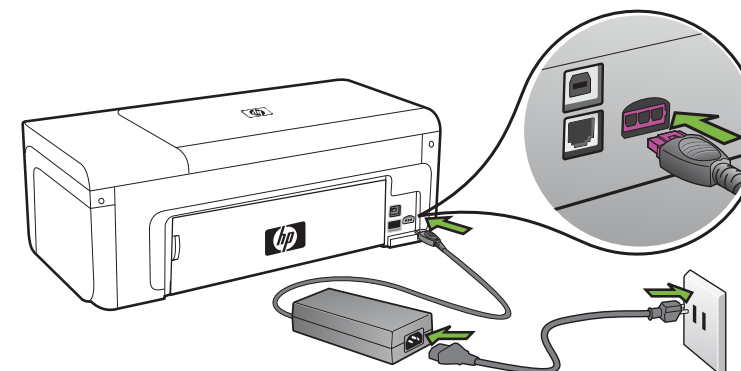

Connection of the LAN cable to MPC
Connection to interface LAN

Replacing ink cartridge

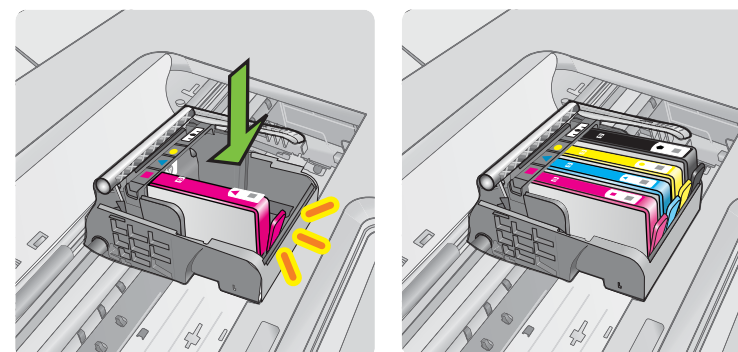

1. Remove packaging.
2. Slide cartridge in accordance with color coding into correct slot. The contacts must face the print head.
3. Press cartridge downwards until it engages.
4. When all cartridges are inserted, close the top cover. The carriage moves to the right-hand side of the device.

Inserting paper

