

System Documentation

Electronic Equipment

Engine Control System ECS

- **Engine Control Unit ECU 9**
- **Engine Monitoring Unit EMU 8**
- **Engine Interface Module EIM 2**

Application: Marine

- **12V2000M86, M96, M96L**
- **16V2000M86, M96, M96L**

E532848/00E



Power. Passion. Partnership.

Engine model	kW/cyl.	Application group
12V2000M86	106 kW/cyl.	1D, continuous operation, variable, medium utilization
12V2000M96	112 kW/cyl.	1DS, continuous operation, variable, low utilization
12V2000M96L	119 kW/cyl.	1DS, continuous operation, variable, low utilization
16V2000M86	102 kW/cyl.	1D, continuous operation, variable, medium utilization
16V2000M96	112 kW/cyl.	1DS, continuous operation, variable, low utilization
16V2000M96L	121 kW/cyl.	1DS, continuous operation, variable, low utilization

Table 1: Applicability

Table of Contents

1	Safety		2.5.2.1.3	Pressure sensor 0 to 15 bar(g)	113
1.1	Safety regulations for startup and operation	5	2.5.2.1.4	Pressure sensor 0.5 to 4.5 bar(a)	118
1.2	Safety regulations for maintenance and repair work	6	2.5.2.1.5	Pressure sensor -70 to 70 mbar(g)	122
			2.5.2.1.6	High-pressure sensor 1800/2400/2700 bar(g)	126
2	Design and Function		2.5.2.2	Temperature sensors	130
			2.5.2.2.1	Temperature sensor -40 to 150 °C	130
			2.5.2.2.2	Temperature sensor -40 to 900 °C	133
2.1	System Layout	9	2.5.2.3	Speed sensors	137
2.1.1	System design of an Engine Control System ECS featuring Engine Control Unit ECU 9	9	2.5.2.3.1	Crankshaft speed sensor 80 to 2800 rpm	137
2.1.2	Bus topology	11	2.5.2.3.2	Camshaft speed sensor 80 to 2800 rpm	141
2.1.3	Device installation locations - Engine Control System ECS	12	2.5.2.3.3	Exhaust turbocharger speed sensor 50 to 100000 rpm	144
2.1.4	Scope of delivery - Engine-related electronic equipment	13	2.5.2.4	Level sensors	147
			2.5.2.4.1	Level sensor	147
			2.5.2.4.2	Level sensor	151
2.2	Devices	14	2.5.3	Actuators	154
2.2.1	Device Functions	14	2.5.3.1	Injectors	154
2.2.1.1	Engine Control Unit ECU 9 - Function	14	2.5.3.2	HP pump	156
2.2.1.2	Engine Monitoring Unit EMU 8	16	2.6	Software	157
2.2.1.3	Engine Interface Module EIM 2	17	2.6.1	Software version	157
2.2.2	Design and Technical Data of Devices	20	2.7	Functions	159
2.2.2.1	ECU 9 - Technical data	20	2.7.1	Engine start - Functional description	159
2.2.2.2	ECU 9 - Mechanical design	22	2.7.2	DBR/MCR power limitation - Functional description	162
2.2.2.3	ECU 9 - Operating voltage	24	2.7.3	Torque limitation - Functional description	165
2.2.2.4	EMU 8 - Technical data	27	2.7.4	Engine load signal - Functional description	167
2.2.2.5	EIM 2 - Technical data	28	2.7.5	Load reserve - Functional description	168
2.2.2.6	EIM 2 - Operating voltage	29	2.7.6	Manual turning - Functional description	169
2.3	Interfaces	32	2.7.7	Overspeed test - Functional description	170
2.3.1	Plant and engine inputs and outputs ECU 9 - Circuit design	32	2.7.8	Setpoint speed generation - Functional description	172
2.3.2	ECU 9 inputs and outputs - Engine	45	2.7.9	Cylinder cutout - Functional description	181
2.3.3	ECU 9 inputs and outputs - Plant	49	2.7.10	Coolant level sensor test - Functional description	182
2.3.4	EMU 8 inputs and outputs - Engine	55	2.7.11	Blankshot - Functional description	183
2.3.5	EMU 8 inputs and outputs - Plant	57	2.7.12	Turbocharger sequencing - Functional description	184
2.3.6	EIM 2 inputs and outputs - Engine	58	2.7.13	Pressure regulating valve Y45 - Functional description	186
2.3.7	EIM 2 inputs and outputs - Plant	61			
2.4	Cabling	64	3	Operation	
2.4.1	Wiring harness overview	64	3.1	Operation in Local mode	187
2.4.2	Engine device wiring harness	66			
2.4.3	Battery-charging generator wiring harness	73	4	Repair	
2.4.4	Sensors, Actuators and Injectors on Engine Wiring Harness	74	4.1	Diagnostic tools	188
2.4.4.1	Wiring harness 12V2000Mx6	74	4.2	Diagnosis and Programming	189
2.4.4.2	Wiring harness 16V2000Mx6	86	4.2.1	Engine Control Unit ECU 9 - Self-testing	189
2.5	Sensors, Actuators and Injectors on the Engine	100	4.2.2	Engine Control Unit ECU 9 - Test functions	190
2.5.1	Sensors and actuators - Installation locations	100	4.2.3	Engine Interface Module EIM 2 - Diagnostic features	191
2.5.2	Sensors	105			
2.5.2.1	Pressure sensors	105			
2.5.2.1.1	Pressure sensor 0 to 10 bar(g)	105			
2.5.2.1.2	Pressure sensor 0 to 15 bar	109			

4.2.4 Diagnostic System DiaSys®	194	4.3 Measuring and Simulation Procedure	235
4.2.4.1 The DiaSys® program	194	4.3.1 Engine alarms - Simulation	235
4.2.4.2 Injector replacement - with IIG	198	4.3.2 Simulation of pressures and temperatures	238
4.2.4.3 Parameters	202	4.3.3 Simulation of speeds	240
4.2.4.3.1 Engine Interface Module EIM 2 - Parameters	202	4.3.4 Simulation of level signals with a sensor	241
4.2.4.3.2 Battery-charging generator monitoring - Parameters	209	4.4 Repair Work	242
4.2.4.3.3 Speed demand source - Parameters	211	4.4.1 Engine Control Unit ECU 9 - Removal and installation	242
4.2.4.3.4 Starter control - Parameters	212	4.4.2 Engine Monitoring Unit EMU 8 - Removal and installation	243
4.2.4.3.5 Intermittent oil priming - Parameters	215	4.4.3 Engine Interface Module EIM 2 - Removal and installation	244
4.2.5 Fault Code List	216		
4.2.5.1 Engine Control Unit ECU 9 Series 2000Mx6 - Fault code list	216	5 Appendix A	
4.2.5.2 Engine Monitoring Unit EMU 8 for Series 2000Mx6 - Fault code list	229	5.1 MTU Contact/Service Partners	245
4.2.5.3 Engine Interface Module EIM 2 Series 2000Mx6 - Fault code list	231	5.2 Abbreviations	246

1 Safety

1.1 Safety regulations for startup and operation

Safety regulations for startup

- Prior to initial operation all official approvals must have been granted and the prerequisites for commissioning met.
- The product must be installed as instructed and accepted to manufacturer's standards before being put into operation for the first time.
- When putting the product into operation, always ensure that:
 - All maintenance and repair work has been completed
 - All loose parts have been removed from rotating machine components
 - All personnel is clear of the danger zone represented by rotating machine components
- Immediately after putting the product into operation, make sure that all control and display instruments as well as the monitoring, signaling and alarm systems are working properly.

Safety regulations for equipment operation

- The operator must be familiar with the controls and displays.
- The operator must be familiar with the consequences of any operations performed.
- During operation, the display instruments and monitoring units must be permanently observed with regard to present operating status, violation of limit values and warning or alarm messages.

Malfunctions and emergency stop

- The procedures for cases of emergency, in particular, emergency stop, must be practiced regularly.
- The following steps must be taken if a malfunction of the system is recognized or reported by the system:
 - Inform supervisor(s) in charge.
 - Analyze the message.
 - If required, carry out emergency operations e.g. emergency stop.

Operation

Note the following requirements before starting the product:

- Wear ear protectors.
- Ensure that the engine room is well-ventilated.
- Do not inhale the exhaust gases of the product.
- The exhaust system is leak-tight and that the gases are vented to atmosphere.
- Mop up any leaked or spilled fluids and lubricants immediately or soak up with a suitable binder agent.
- Protect battery terminals, generator terminals or cables against accidental contact.

Operation of electrical equipment

When electrical equipment is in operation, certain components of these appliances are electrically live.

- Observe the safety instructions for these devices.

1.2 Safety regulations for maintenance and repair work

Before commencing maintenance and repair work

- Have maintenance or repair work carried out by qualified and authorized personnel only.
- Allow the product to cool down to less than 50°C (risk of explosion of oil vapors, fluids and lubricants, risk of burning).
- Relieve pressure in fluid and lubricant systems and compressed-air lines which are to be opened. Use suitable containers of adequate capacity to catch fluids and lubricants.
- When changing the oil or working on the fuel system, ensure that the engine room is adequately ventilated.
- Never carry out maintenance and repair work with the product in operation.
- Do not test operation with the product running unless expressly instructed to do so.
- Secure the product against unintentional starting, e.g. with start interlock.
- Attach “Do not operate” sign in the operating area or to control equipment.
- Disconnect the battery. Lock contactors.
- Close the main valve on the compressed-air system and vent the compressed-air line when pneumatic starters are fitted.
- Disconnect the control equipment from the product.

In addition for starters equipped with copper beryllium pinions:

- Wear a breathing mask (filter class P2) when performing maintenance work to eliminate the health risk presented by the beryllium in the pinion.
- Do not blow out the interior of the flywheel housing or the starter with compressed air.
- Furthermore, the interior of the flywheel housing must be cleaned with a class H dust extraction device.

During maintenance and repair work

- Take special care when removing ventilation or plug screws from the product.
- Cover the screw or plug with a cloth to prevent fluids escaping under pressure when removing vent screws or plugs.
- Take care when draining hot fluids and lubricants (risk of burning).
- Use only proper and calibrated tools. Observe the specified tightening torques during assembly or disassembly.
- Carry out work only on assemblies or plants which are properly secured.
- Never use lines for climbing.
- Keep fuel injection lines and connections clean.
- Always seal connections with caps or covers if a line is removed or opened.
- Take care not to damage lines, in particular fuel lines, during maintenance and repair work.
- Ensure that all retainers and dampers are installed correctly.
- Ensure that all fuel injection and pressurized oil lines are installed with enough clearance to prevent contact with other components. Do not place fuel or oil lines near hot components.
- Do not touch elastomeric seals if they have carbonized or resinous appearance unless hands are properly protected.
- Note cooling time for components which are heated for installation or removal (risk of burning).
- When working high on the equipment, always use suitable ladders and work platforms.
- Make sure components or assemblies are placed on stable surfaces.
- Ensure particular cleanness during maintenance and repair work on the product. After completion of maintenance and repair work, make sure that no unattached parts are in/on the product (e.g. cloths and cable ties).

After completing maintenance and repair work

- Ensure that all personnel is clear of the danger zone presented by the product before cranking.
- Check that all guards have been reinstalled and that all tools and loose parts have been removed after working on the product (in particular, the barring tool).

Welding work

Welding on the product or mounted units are not permitted.

- Remove parts (e.g. exhaust pipes) which are to be welded from the product beforehand.
- Cover the product when welding in surrounding areas.

Before starting welding work:

- Switch off the power supply master switch.
- Disconnect the battery.
- Separate the electrical ground of electronic equipment from the ground of the unit.

When welding in the vicinity of the product:

- Do not perform other maintenance and repair work on the product. Risk of explosion or fire due to oil vapors and highly flammable fluids and lubricants.
- Do not use product as ground terminal.
- Never position the welding power supply cable adjacent to, or crossing wiring harnesses of the product. The welding current may otherwise induce an interference voltage in the wiring harnesses which could conceivably damage the electrical system.

Hydraulic installation and removal

- Check satisfactory function and safe operating condition of tools, jigs and fixtures to be used. Use only the specified jigs and fixtures for hydraulic removal/installation procedures.
- Observe the max. permissible force-on pressure specified for the jig/fixture.
- Do not attempt to bend or apply force to lines.
- During hydraulic installation and removal, ensure that nobody is standing in the immediate vicinity of the component to be installed/removed.

Before starting work, pay attention to the following:

- Vent the hydraulic installation/removal tool, the pumps and the lines at the relevant points for the system to be used (e.g. open vent plugs, pump until bubble-free air emerges, close vent plugs).
- For hydraulic installation, screw on the jig with the piston retracted.
- For hydraulic removal, screw on the jig with the piston extended.
- For a hydraulic installation/removal jig with central expansion pressure supply, screw spindle into shaft end until correct sealing is established.

Working with batteries

- Observe the safety instructions of the battery manufacturer when working with batteries.

Gases emanating from the battery are explosive.

- Avoid sparks and naked flames.
- Never place tools on the battery.
- Before connecting the cable to the battery, check the battery polarity.

Battery pole reversal may lead to injury through the sudden discharge of acid or bursting of the battery body.

- Never place tools on the battery.
- Do not allow electrolyte to come in contact with skin or clothing.
- Wear goggles and protective gloves.

Working on electrical and electronic assemblies

- Always obtain the permission of the person in charge before commencing maintenance and repair work or switching off any part of the electronic system required to do so.
- De-energize the appropriate areas prior to working on assemblies.
- Do not damage cabling during removal work.
- When reinstalling ensure that wiring is not damaged during operation by contact with sharp objects, by rubbing against other components or by a hot surface.
- Do not secure cables on lines carrying fluids.
- Do not use cable straps to secure cables.
- Always use connector pliers to tighten union nuts on connectors.
- Subject the device as well as the product to a function check on completion of all repair work. In particular, check the function of the engine emergency stop feature.
- Store spare parts properly prior to replacement, i.e. protect them against moisture in particular.
- Pack defective electronic components and assemblies in a suitable manner when dispatched for repair, i.e. protected, in particular, against moisture and impact and wrapped in antistatic foil if necessary.

Working with laser equipment

- When working with laser equipment, always wear special laser-protection goggles (hazard due to heavily focused radiation).

Laser equipment must be equipped with the protective devices necessary for safe operation according to type and application.

For conducting light-beam procedures and measurement work, only the following laser devices must be used:

- Laser devices of classes 1, 2 or 3A.
- Laser devices of class 3B, which have maximum output in the visible wavelength range (400 to 700 nm), a maximum output of 5 mW, and in which the beam axis and surface are designed to prevent any risk to the eyes.

2 Design and Function

2.1 System Layout

2.1.1 System design of an Engine Control System ECS featuring Engine Control Unit ECU 9

The Engine Control System ECS comprises the following devices:

- Engine Control Unit ECU 9, also referred to as the engine governor
- Engine Interface Module EIM 2, this device is also referred to as the engine interface
- Engine Monitoring Unit EMU 8 is only used in propulsion plants with an extended scope of monitoring features

All three devices are installed directly on the engine and are interconnected, and connected to the engine sensors, the injectors (and other electrical components on the engine) by wiring harnesses.

The MTU dialog system DiaSys[®] can be connected via a dialog socket (also provided on the engine).

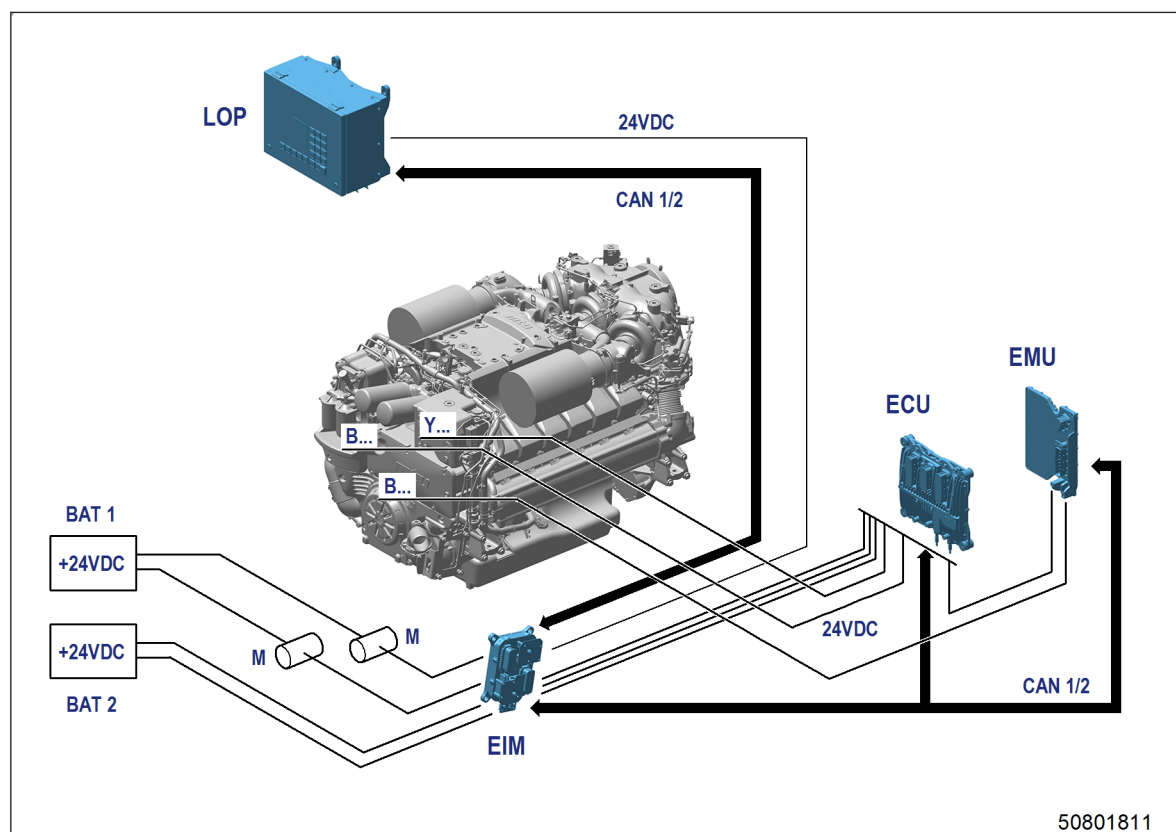


Figure 1: System overview – Engine Control System ECS (engine management system) for Series 2000Mx6

ECU	Engine Control Unit ECU 9	M	Starter (example, pneumatic starting is also possible)	BAT 2	Emergency supply Engine Control System ECS 24 V _{DC}
EMU	Engine Monitoring Unit EMU 8	LOP	Local Operation Panel LOP, belonging to Blue Vision NG with RCS and MCS	Y ...	Actuators on the engine (injectors, solenoid valves)
EIM	Engine Interface Module EIM 2	BAT 1	Main supply Engine Control System ECS 24 V _{DC} , starter supply	B ...	Sensors on the engine

Part of this documentation

This documentation describes the various devices of the engine management system on the engine and their respective functions. It also explains the cabling, sensors and all the electrical devices and assemblies on the engine which are connected to the devices of the Engine Control System ECS. The Engine Interface Module EIM 2 and the Engine Monitoring Unit EMU 8 are described in separate general documents which explain their design and basic functions.

The maximum scope of the Engine Control System ECS is explained (for 16 cylinders and with Engine Monitoring Unit EMU 8). Optional assemblies/devices are indicated as such at the appropriate points, similarly those which are omitted on 12-cylinder engines.

All information pertaining to the ECU 9 are included in this documentation only.

The chapter on “Functions” contains functional descriptions which are especially important for “Marine” applications.

As the ECS does not have any controls of its own, but is controlled externally (in a variety of ways), all the operating functions associated with the ECS are explained in the documents which are based on the ECS. This is primarily the Blue Vision NG system (comprising the Remote Control System RCS and the Monitoring and Control System MCS).

Further documentation

Consult the following documents to gain a general understanding:

For the Engine Control System ECS:

- Engine Control Unit ECU 9: (→ E532848) (this documentation)
- Engine Interface Module EIM 2: (→ E532284)

For the systems based on this:

- Blue Vision NG: (→ E532396), (→ E532792)
- Emergency Panel EP: (→ E532844)

NOTICE



Additional information:

Please read the product-specific documentation.

- A separate document which accompanies the dialog system is provided with DiaSys®.