



Operating Instructions

Automation Marine
mtu NautIQ CoOperate

E532909/00E

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to §15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of Contents

Preface

Intended Audience for This Document	vii
Associated Documents	vii
Book Conventions	vii
Customer-Provided Components	ix

Chapter 1: Product Overview

Introduction	1-2
mtu NautIQ CoOperate Console	1-3
mtu NautIQ CoOperate UI	1-4
mtu NautIQ CoOperate Remote Helm	1-6
mtu NautIQ CoOperate Connections	1-7
Remote Control Mode	1-8
Autonomy Mode	1-8
Safety Considerations	1-9
Warnings and Cautions	1-9
Commonly Used Terms	1-11

Chapter 2: Introducing the User Interface and Controls for the mtu NautIQ CoOperate

Introduction	2-2
Helm Controls	2-2
Controls on the mtu NautIQ CoOperate Console	2-4
Power Switch	2-4
mtu NautIQ CoOperate HMI	2-4
mtu NautIQ CoOperate Remote Helm Interface and Controls	2-6
mtu NautIQ CoOperate UI Interface and Controls	2-15
mtu NautIQ CoOperate UI Main Screen	2-16
mtu NautIQ CoOperate Side Panel	2-23

Chapter 3: Using the mtu NautIQ CoOperate in Remote Control Mode

Remote Control Mode	3-2
Charging, Installing, and Removing the Remote Helm Battery	3-4
Charging the Remote Helm Battery	3-4
Installing the Battery in the mtu NautIQ CoOperate Remote Helm	3-5
Removing the Battery from the Remote Helm	3-6
Turning On the mtu NautIQ CoOperate, and the Remote Helm, and Establishing a Radio Link	3-7
Taking and Releasing Control of the Vessel	3-9
Taking Control of the Vessel from the mtu NautIQ CoOperate Remote Helm	3-9
Releasing Control of the Vessel from Remote Control Mode	3-10

Controlling the Engine Start/Stop Functions from the mtu NautIQ CoOperate Remote Helm	3-12
Starting and Stopping the Blowers from the mtu NautIQ CoOperate Remote Helm	3-12
Starting and Stopping the Engines from the mtu NautIQ CoOperate Remote Helm	3-12
Starting and Stopping the Glow Plugs from the mtu NautIQ CoOperate Remote Helm	3-12
Controlling the Propulsion System from the mtu NautIQ CoOperate Remote Helm...	3-13
Steering the Vessel from the mtu NautIQ CoOperate Remote Helm.....	3-14
Controlling Onboard Devices from the mtu NautIQ CoOperate Remote Helm	3-14

Chapter 4: Using the mtu NautIQ CoOperate in Autonomy Mode

Autonomy Mode.....	4-2
Turning On the mtu NautIQ CoOperate Console and the mtu NautIQ CoOperate UI ..	4-3
Establishing Connections.....	4-9
Connecting the mtu NautIQ CoOperate to the mtu NautIQ CoOperate UI	4-9
Verifying that the mtu NautIQ CoOperate is Receiving a Valid GPS Signal.....	4-10
Activating the Collision Avoidance Source (Radar (ARPA) and AIS)	4-10
Controlling Devices From the mtu NautIQ CoOperate UI	4-11
Importing or Removing Charts	4-13
Importing Nautical Charts	4-13
Removing Nautical Charts	4-15
Adding Markers.....	4-17
Adding a Location Marker	4-17
Adding a Man Overboard Marker.....	4-18
Using Survey Mode (Integrating with QPS QINsy Software)	4-20

Chapter 5: Planning a Mission for Autonomy Mode

Types of Missions	5-2
Creating a Waypoint Mission	5-3
Adding or Modifying Points in a Waypoint Mission	5-8
Using the Waypoint Table	5-18
Adding a Grid to a Waypoint Mission	5-22
Creating a Waypoint Mission with Both Points and Grids	5-26
Mission Planning Tips	5-27
Editing a Mission That is Not Running	5-27
Resetting the Mission.....	5-29
Loading an Existing Mission	5-30
Planning and Running a Collaborative Following Mission	5-32

Chapter 6: Running an Autonomous Mission

Introduction 6-2

Deploying a Mission 6-2

Taking Manual Control of the Vessel During a Mission 6-9

Aborting a Mission 6-16

Pausing and Restarting a Mission 6-17

Editing a Mission that is Running 6-18

Checking the Weather 6-21

Chapter 7: Viewing and Managing Alerts, Alarms, and Banner Messages

Alerts, Alarms, and Banner Messages 7-2

 Alerts Area 7-2

 Planning Alerts 7-4

 General Alerts 7-6

 Alarms 7-6

 Configuring Alarms 7-6

 Viewing System Alarms and Alarm History 7-8

 Banner Messages 7-11

Chapter 8: Troubleshooting the mtu NautIQ CoOperate

Troubleshooting 8-1

Appendix A: Specifications

Appendix B: Replaceable Parts

Appendix C: Contact Person/Service Partner

Service C-1

Local Support C-1

24-h Hotline C-1

Spare Parts Service C-1

Preface

Welcome to the Rolls Royce Power Systems AG *Operating Instructions mtu NautIQ CoOperate*.

Intended Audience for This Document

This document is intended for marine operators who are skilled in operating vessels in a marine environment and trained on using the mtu NautIQ CoOperate.

Note: Only qualified personnel who are fully informed of the system safety hazards should use or operate this equipment.

Associated Documents

- *Installation and Commissioning Instructions mtu NautIQ CoOperate*

Book Conventions

This guide contains the following information highlights and cross-references:




Warning: Warns the user regarding actions that may result in physical damage to the system or personal injury.



Caution: Cautions the user regarding actions that may result in operational issues or data loss.

Note: Identifies important points, helpful hints, special circumstances, or alternative methods.

- Cross references indicate the location of additional information regarding the chosen topic. References may include either headings on specific pages or entire chapters, for example, See **“Introduction” on page 1-2**.
- Buttons, field names, and selections display in **bold**.
- **Blue boxes** and **arrows** highlight areas of interest on screenshots or images as shown:

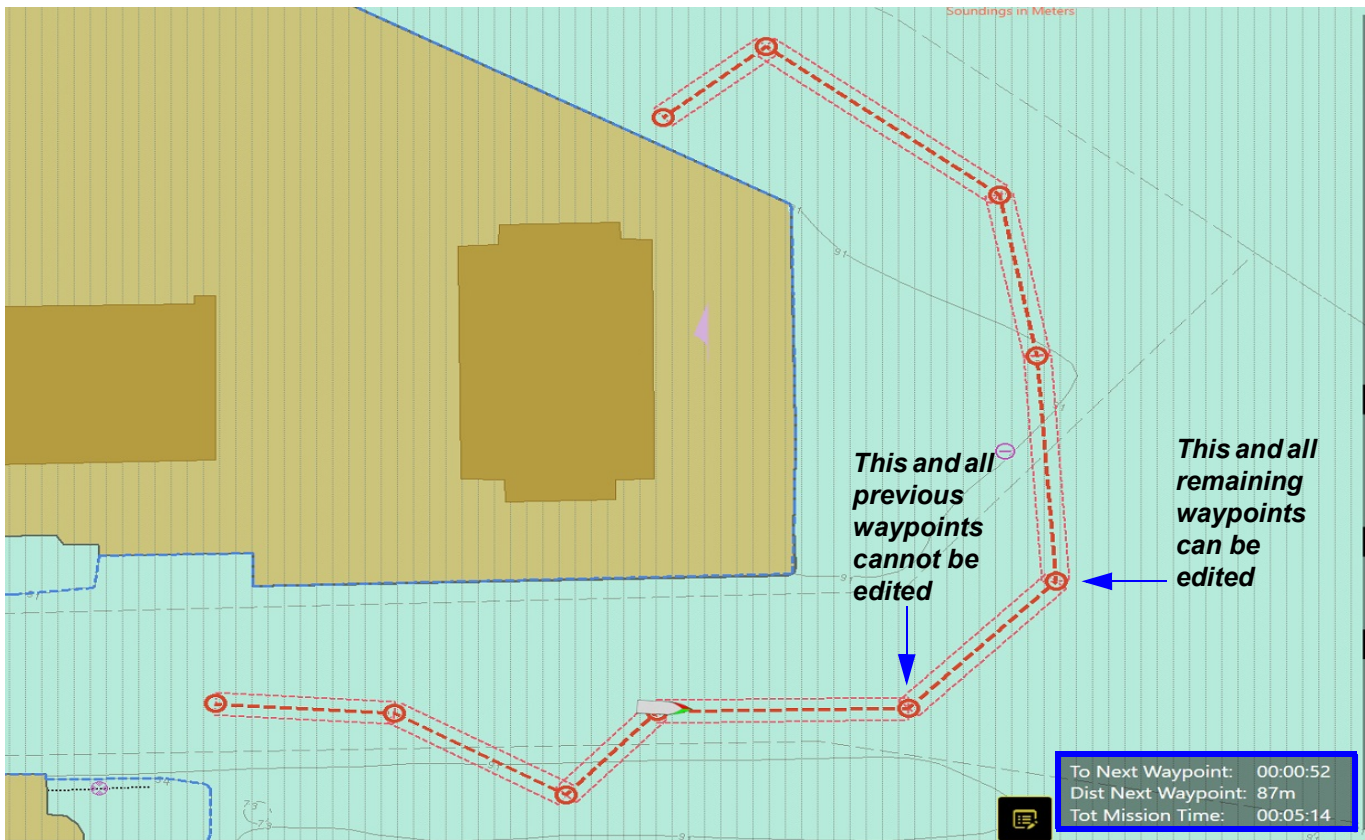

Customer-Provided Components

The following components are provided by the customer:

Component	Model	Description
Custom Cables	N/A	Custom cables to connect the vessel components to the mtu NautIQ CoOperate (M12 A-coded connector on one end to flying leads on the other end)
Network Components	N/A	Networking components for Internet Connection between the mtu NautIQ CoOperate Console and the mtu NautIQ CoOperate UI (for example, 4G/LTE hardware)
Hemisphere	940-3131-10 V123	IMO GNSS Compass (50 Hz, sFreq, mGNSS) Atlas Capable
Digital Yacht	AIT1500	Class B AIS Transponder
Furuno	DRS4D-NXT	Radar
Furuno	TZTL12F	Multi-Function Display (MFD)
Furuno	HUB101D	Dedicated Interswitch Hub for NavNet 3D
Airmar	B60	Thru-Hull Tilted Element Depth Transducer with Temp Sensor
Axis Camera	P1445-LE	Fully-featured, all-around 2MP surveillance IP camera
Airmar (optional)	220 WX	Weather Station instrument that provides real-time, site-specific, weather information

Note: This information is provided for reference. If your vessel has different components, contact Rolls Royce Power Systems AG Customer Support for information.

