



Operating Instructions

Automation Marine
mtu NautIQ CoDirect

E532911/01E

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to §15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of Contents

Preface

Intended Audience for This Document	v
Associated Documents	v
Book Conventions	v
Customer Provided Components	vi

Chapter 1: Product Overview

Introduction	1-2
mtu NautIQ CoDirect Console.....	1-3
mtu NautIQ CoDirect Remote Helm	1-4
mtu NautIQ CoDirect Connections.....	1-5
Remote Control Mode	1-5
Safety Considerations.....	1-6
Warnings and Cautions	1-6
Commonly Used Terms	1-8

Chapter 2: Introducing the User Interface and Controls for the mtu NautIQ CoDirect

Introduction	2-2
Helm Controls	2-2
Controls on the mtu NautIQ CoDirect Console	2-4
mtu NautIQ CoDirect Remote Helm Interface and Controls	2-4

Chapter 3: Using the mtu NautIQ CoDirect in Remote Control Mode

Remote Control Mode	3-2
Charging, Installing, and Removing the Remote Helm Battery.....	3-4
Charging the Remote Helm Battery	3-4
Installing the Battery in the mtu NautIQ CoDirect Remote Helm	3-5
Removing the Battery from the Remote Helm	3-6
Turning On the mtu NautIQ CoDirect, and the Remote Helm, and Establishing a Radio Link	3-7
Taking and Releasing Control of the Vessel.....	3-9
Taking Control of the Vessel from the mtu NautIQ CoDirect Remote Helm	3-9
Releasing Control of the Vessel from Remote Control Mode.....	3-11
Controlling the Engine Start/Stop Functions from the mtu NautIQ CoDirect	
Remote Helm	3-12
Starting and Stopping the Blowers from the mtu NautIQ CoDirect	
Remote Helm	3-12
Starting and Stopping the Engines from the mtu NautIQ CoDirect	
Remote Helm	3-12
Starting and Stopping the Glow Plugs from the mtu NautIQ CoDirect	
Remote Helm	3-12

Controlling the Propulsion System from the mtu NautIQ CoDirect Remote Helm	3-13
Steering the Vessel from the mtu NautIQ CoDirect Remote Helm	3-14
Follow-Up Steering with the Rudder Control Knob	3-14
Non-Follow-Up Steering Control with the Rudder Control Joystick	3-14
Controlling Onboard Devices from the mtu NautIQ CoDirect Remote Helm	3-15

Chapter 4: Troubleshooting the mtu NautIQ CoDirect

Troubleshooting	4-1
-----------------------	-----

Appendix A: Specifications

Appendix B: Replaceable Parts

Appendix C: Contact Person/Service Partner

Service	C-1
Local Support	C-1
24-h Hotline	C-1
Spare Parts Service	C-1

Preface

Welcome to the Rolls Royce Power Systems AG *Operating Instructions mtu NautIQ CoDirect*.

Intended Audience for This Document

This document is intended for marine operators who are skilled in operating vessels in a marine environment and trained on using the mtu NautIQ CoDirect.

Note: Only qualified personnel who are fully informed of the system safety hazards should use or operate this equipment.

Associated Documents

- *Installation and Commissioning Instructions mtu NautIQ CoDirect*

Book Conventions

This guide contains the following information highlights and cross-references:




Warning: Warns the user regarding actions that may result in physical damage to the system or personal injury.



Caution: Cautions the user regarding actions that may result in operational issues or data loss.

Note: Identifies important points, helpful hints, special circumstances, or alternative methods.

- Cross references indicate the location of additional information regarding the chosen topic. References may include either headings on specific pages or entire chapters, for example, See “**Introduction**” on page 1-2.
- Buttons, field names, and selections display in **bold**.
- **Blue boxes** and **arrows** highlight areas of interest on screenshots or images as shown:

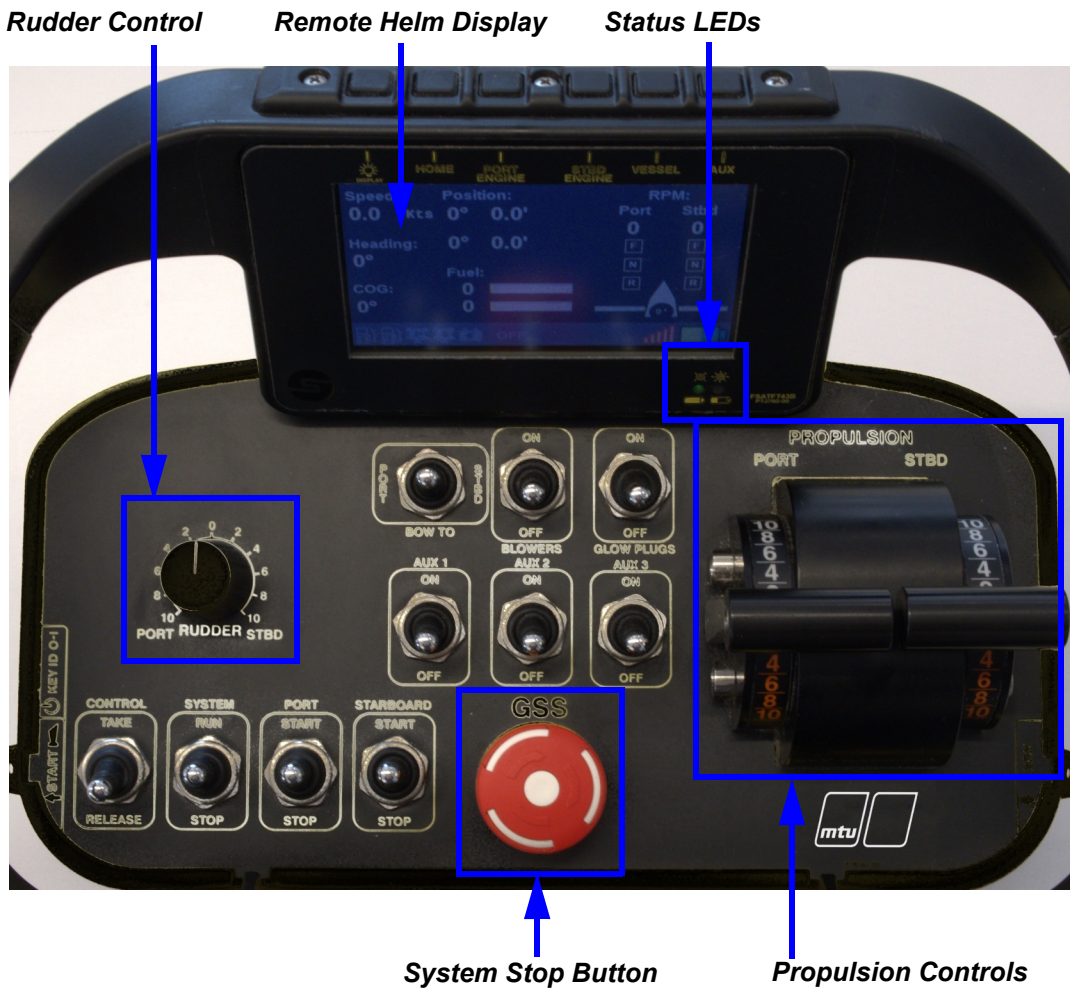

Customer Provided Components

The following components are provided by the customer:

Component	Model	Description
Custom Cables	N/A	Custom cables to connect the vessel components to the mtu NautIQ CoDirect (M12 A-coded connector on one end to flying leads on the other end)

Chapter 1:

Product Overview

Topics described in this chapter include:

Introduction	page 1-2
mtu NautIQ CoDirect Console	page 1-3
mtu NautIQ CoDirect Remote Helm	page 1-4
mtu NautIQ CoDirect Connections	page 1-5
Remote Control Mode	page 1-5
Safety Considerations	page 1-6
Warnings and Cautions	page 1-6
Commonly Used Terms	page 1-8

Introduction


The mtu NautIQ CoDirect is a wireless remote helm control system, suitable for workboats under new construction or as a retrofit. The system is designed to integrate with standard marine controls and electronics to enable remote operation of the vessel from the mtu NautIQ CoDirect Remote Helm Controller.

Direct line of sight remote control of the vessel is available using the included industrial wireless mtu NautIQ CoDirect Remote Helm Controller.

The mtu NautIQ CoDirect system includes two major components (see **Figure 1-1**):

- mtu NautIQ CoDirect Console
- mtu NautIQ CoDirect Remote Helm Controller (mtu NautIQ CoDirect Remote Helm)

Figure 1-1: mtu NautIQ CoDirect System

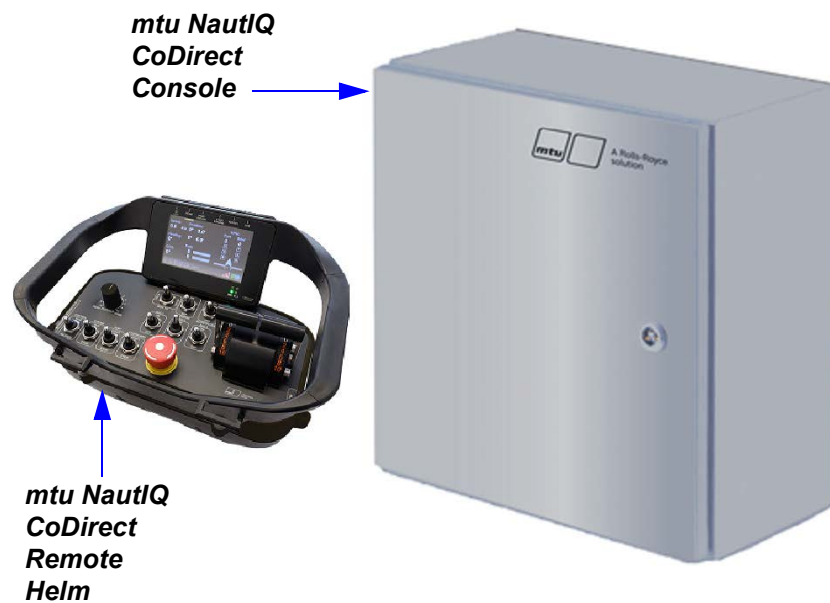

mtu NautIQ CoDirect Console

The mtu NautIQ CoDirect Console (see **Figure 1-2**) is installed in your vessel and contains all the vessel interfaces and remote control technology.

Figure 1-2: mtu NautIQ CoDirect Console Mounted in a Vessel



It is integrated with the propulsion and steering system and other onboard devices.

mtu NautIQ CoDirect Remote Helm

The mtu NautIQ CoDirect Remote Helm (see **Figure 1-3**) is a helm controller used to operate the vessel. You can use it on the vessel (away from the wheelhouse/helm) or remotely (from another vessel or a shore location) up to a maximum of 1000 m (1 km) line-of sight-range of the vessel. You can also use the mtu NautIQ CoDirect Remote Helm to operate your vessel during launch (undocking) and recovery (docking).

Note: The maximum working range may vary significantly and unpredictably when special conditions occur in the working environment (for example, the temporary presence of electromagnetic interference and/or metal obstructions).

Figure 1-3: mtu NautIQ CoDirect Remote Helm



The mtu NautIQ CoDirect Remote Helm shown in **Figure 1-3** has a Rudder Control knob for Follow-Up steering control.

An optional mtu NautIQ CoDirect Remote Helm is available with the Rudder Control joystick for Non-Follow-Up steering control. This remote helm is similar to the one shown in **Figure 1-3**.

The Remote Helm is mounted on a belt that can be secured around your waist, allowing you to use both hands to operate your vessel.