




Before using this quick reference, the detailed MTU overall documentation Genoline I New Generation must be read and observed!
In particular, all safety instructions in the overall documentation must be observed!

The Local Operation Panel LOP¹ 15/16 serves as a central data processing, monitoring and control unit for the diesel engine and generator.


The LOP also acts as a local display and control unit in the engine room.

The LOP 15/16 is not an EPMS² with which the vessel automation can be controlled!

LOP 15

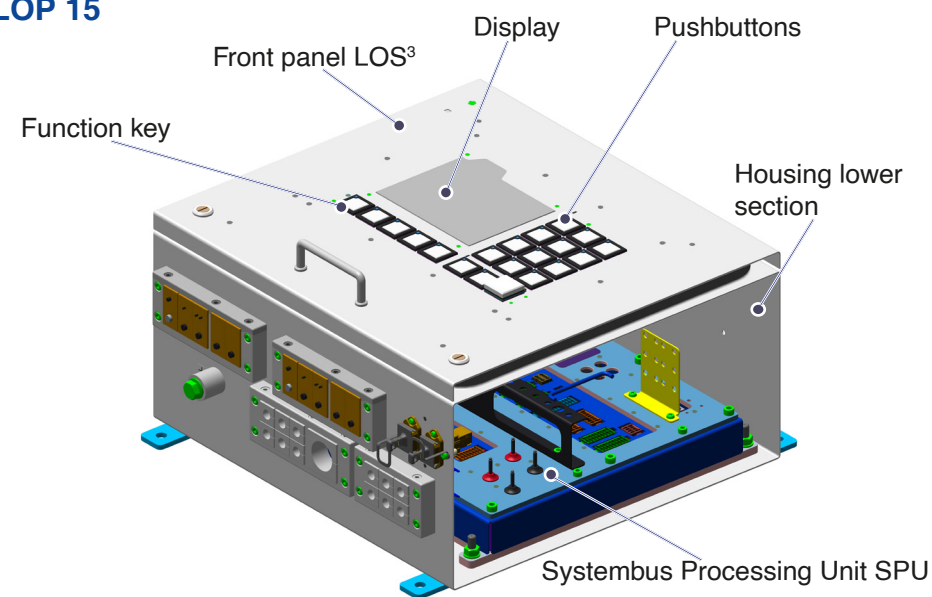

LOP 16

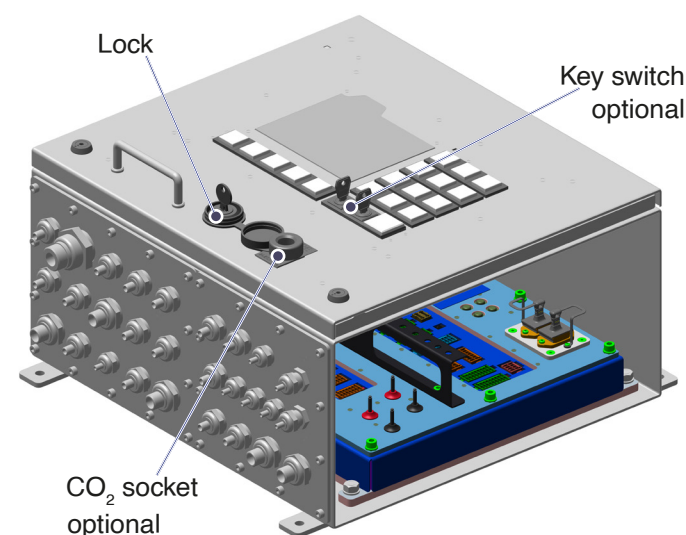

¹ Local Operating Panel (control console)

² Electrical Power Management System (management system for power supply)

³ Local Operating Station (local operating unit)

Function key




Function keys F1 to F5 are used for controlling and operating the graphics pages in the display, for brightness adjustment of the display and illuminating the buttons on the LOP 15/16.


Key functions vary and are represented graphically on the display.

Each pushbutton is lit as long as it is held down.


Pushbuttons

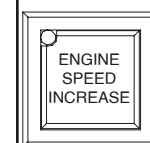


- Holding the pushbutton down continuously increases the engine speed in Local mode.
- Lit as long as the pushbutton is held down.

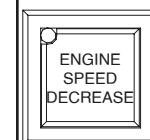


- Holding the pushbutton down continuously decreases the engine speed in Local mode.
- Lit as long as the pushbutton is held down.

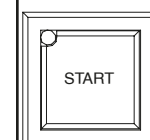

- Pressing the pushbutton in Local mode initiates engine start.
- Lights up during the starting sequence.

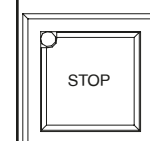

- Pressing the pushbutton initiates engine shutdown.
- Lit during the stopping sequence and as long as a stop signal is pending.

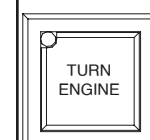


- Pressing the pushbutton activates engine turning.
- Lit during the cranking process.




- Pressing the pushbutton switches Engine Control System ECS⁴-6 to ready for operation.
- Lit when ECS-6 is ready for operation.


⁴ Engine Control System

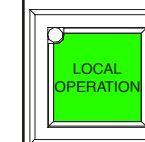


- Pressing the pushbutton switches Local mode on and off.
- Lit when Local mode is activated.

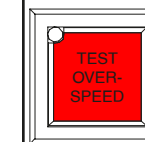


- Pressing the pushbutton initiates an overspeed test.
- Lit during the test.

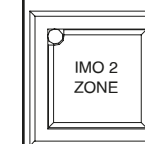

- LOP 15 (optional):
- Pressing the pushbutton signals the exhaust gas aftertreatment system that the vessel is presently in an IMO⁵ 2 or IMO 3 zone.
 - Lit when IMO 2 is activated.

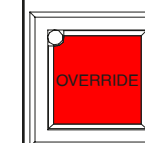

- LOP 15:
- Pressing the pushbutton overrides the engine safety system.
 - Lit when Override is active.

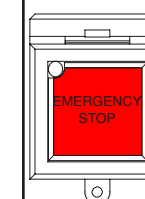

- Pressing the button initiates an immediate emergency engine stop.
- Lit when an engine emergency stop has been initiated.
- Lit until the "Engine emergency stop" alarm is acknowledged.

Key switches LOP 16

- IMO 2 ZONE (optional):
- Key switch controls the IMO Zone.
 - The key for the key switch can be removed in any position.

- OVERRIDE
- Key switch activates override function.
 - Overrides the engine safety system.
 - The key for the key switch can be removed in any position.

⁵ International Maritime Organization