



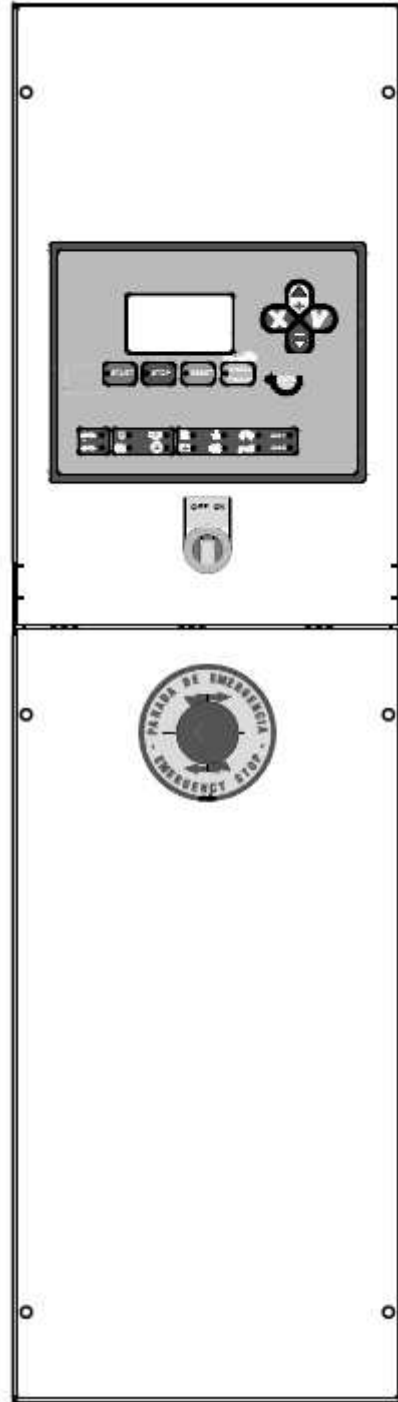


MANUAL DIGITAL START CONTROL PANEL MM7


CONTROL ELECTRIC DIAGRAM J1939 MTU SMART CONNECT

Buchst. Rev.Ltr.	Kommtvor Frequency	Änderung/Revision	AuftragsNr. Rev.Not.No.	Datum Date	Name	Gepr. Check

Oberflächenangaben nach MTN5033 Surface Specification per MTN5033		Allgemeine Fertigungsvorschriften nach MMN 332 Production Specification per MMN 332		-				Masse/Mass kg 0	Format/Size A3
Verwendbar für Typ Applicable to Model		WORD	Datum Date	Name		Benennung/Title WIRING DIAGRAM Control Panel			
Projekt-/Auftrags-Nr. Project/Order No.		Bearb. Drawn							
Referenz-Nr. Reference No.		Gepr. Checked							
Bei Fremdteil/Kaufteil dürfen alle techn. Änderungen am Lieferumfang nur nach unserer vorherigen Genehmigung vor- genommen werden. Techn. modifications to third party or purchased parts require our prior permission.		Norm Stndr.							
		Abt. Dept.							
		MTU Friedrichshafen GmbH		Zeichnungs-Nr./Drawing No. 2210459			Blatt/Sheet 1 von/of 13		
Für diese technische Unterlage behalten wir uns alle Rechte vor. Sie darf ohne unsere Zustimmung weder vervielfältigt, noch Dritten zugänglich gemacht, noch in anderer Weise mißbräuchlich verwertet werden. All rights reserved. This document may not be reproduced or disclosed to a third party or used for any other purpose without our express consent.									

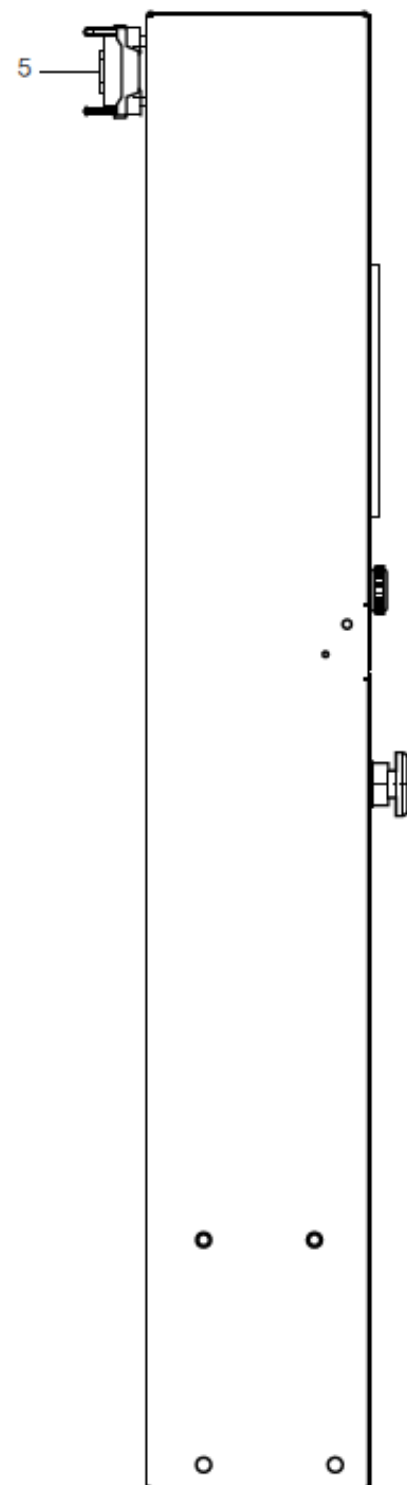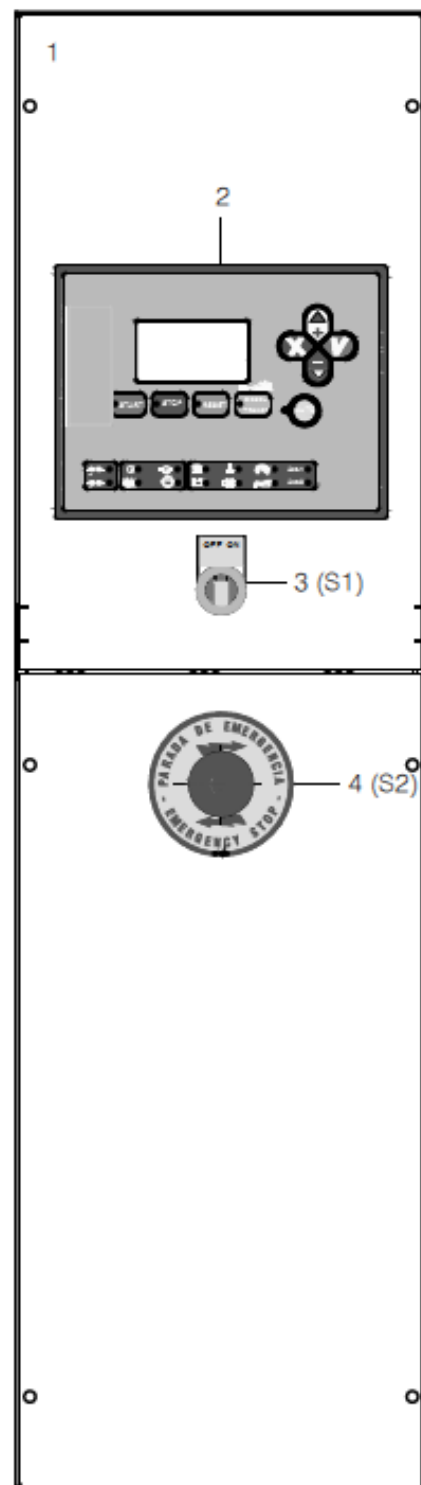

* $\leq 630A$ ----- F7 2A
 $\geq 800A$ ----- F7 4A

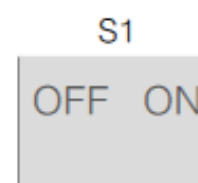


**
 OPTION UNDER REQUEST

MODEL	DIMENSIONS ^(MAX) (mm)			CUBICAL (m) ³	VOLTAGE
CM2	HEIGHT	WIDTH	DEEP	0.027	THREE PHASE
AMPERES	934	206	191.5	WEIGHT KG	
KVA	CARPENTRY (mm)			CARPENTRY CODE	
	934	206	141.5	DUMMY 2207346	


Nº	FUSES	AMPS
F0	START - STOP ENGINE	10
F1	MANUAL DIGITAL SWITCHBOARD	2
F2	ECU 8 SUPPLY	20
F3	SMART CONNECT SUPPLY	6
F4	PHASE "U"	2
F5	PHASE "V"	2
F6	PHASE "W"	2
* F7	DIFFERENTIAL RELAY+ COIL MX	2
** F8	BATTERY CHARGER	4
** F9	FUEL TRANSFER PUMP	10
** F10	FUEL TRANSFER CONTROL KIT	4

Nº	DESCRIPTIONS	CODE
1	DUMMY CM2 M5/AS5 9005	2207346
2	SEMI-AUTOMATIC DIGITAL SWITCHBOARD	3024385
3	TWO POSITIONS SELECTOR	3021403
4	EMERGENCY STOP	3019919
5	CONNECTOR 16P	3001604

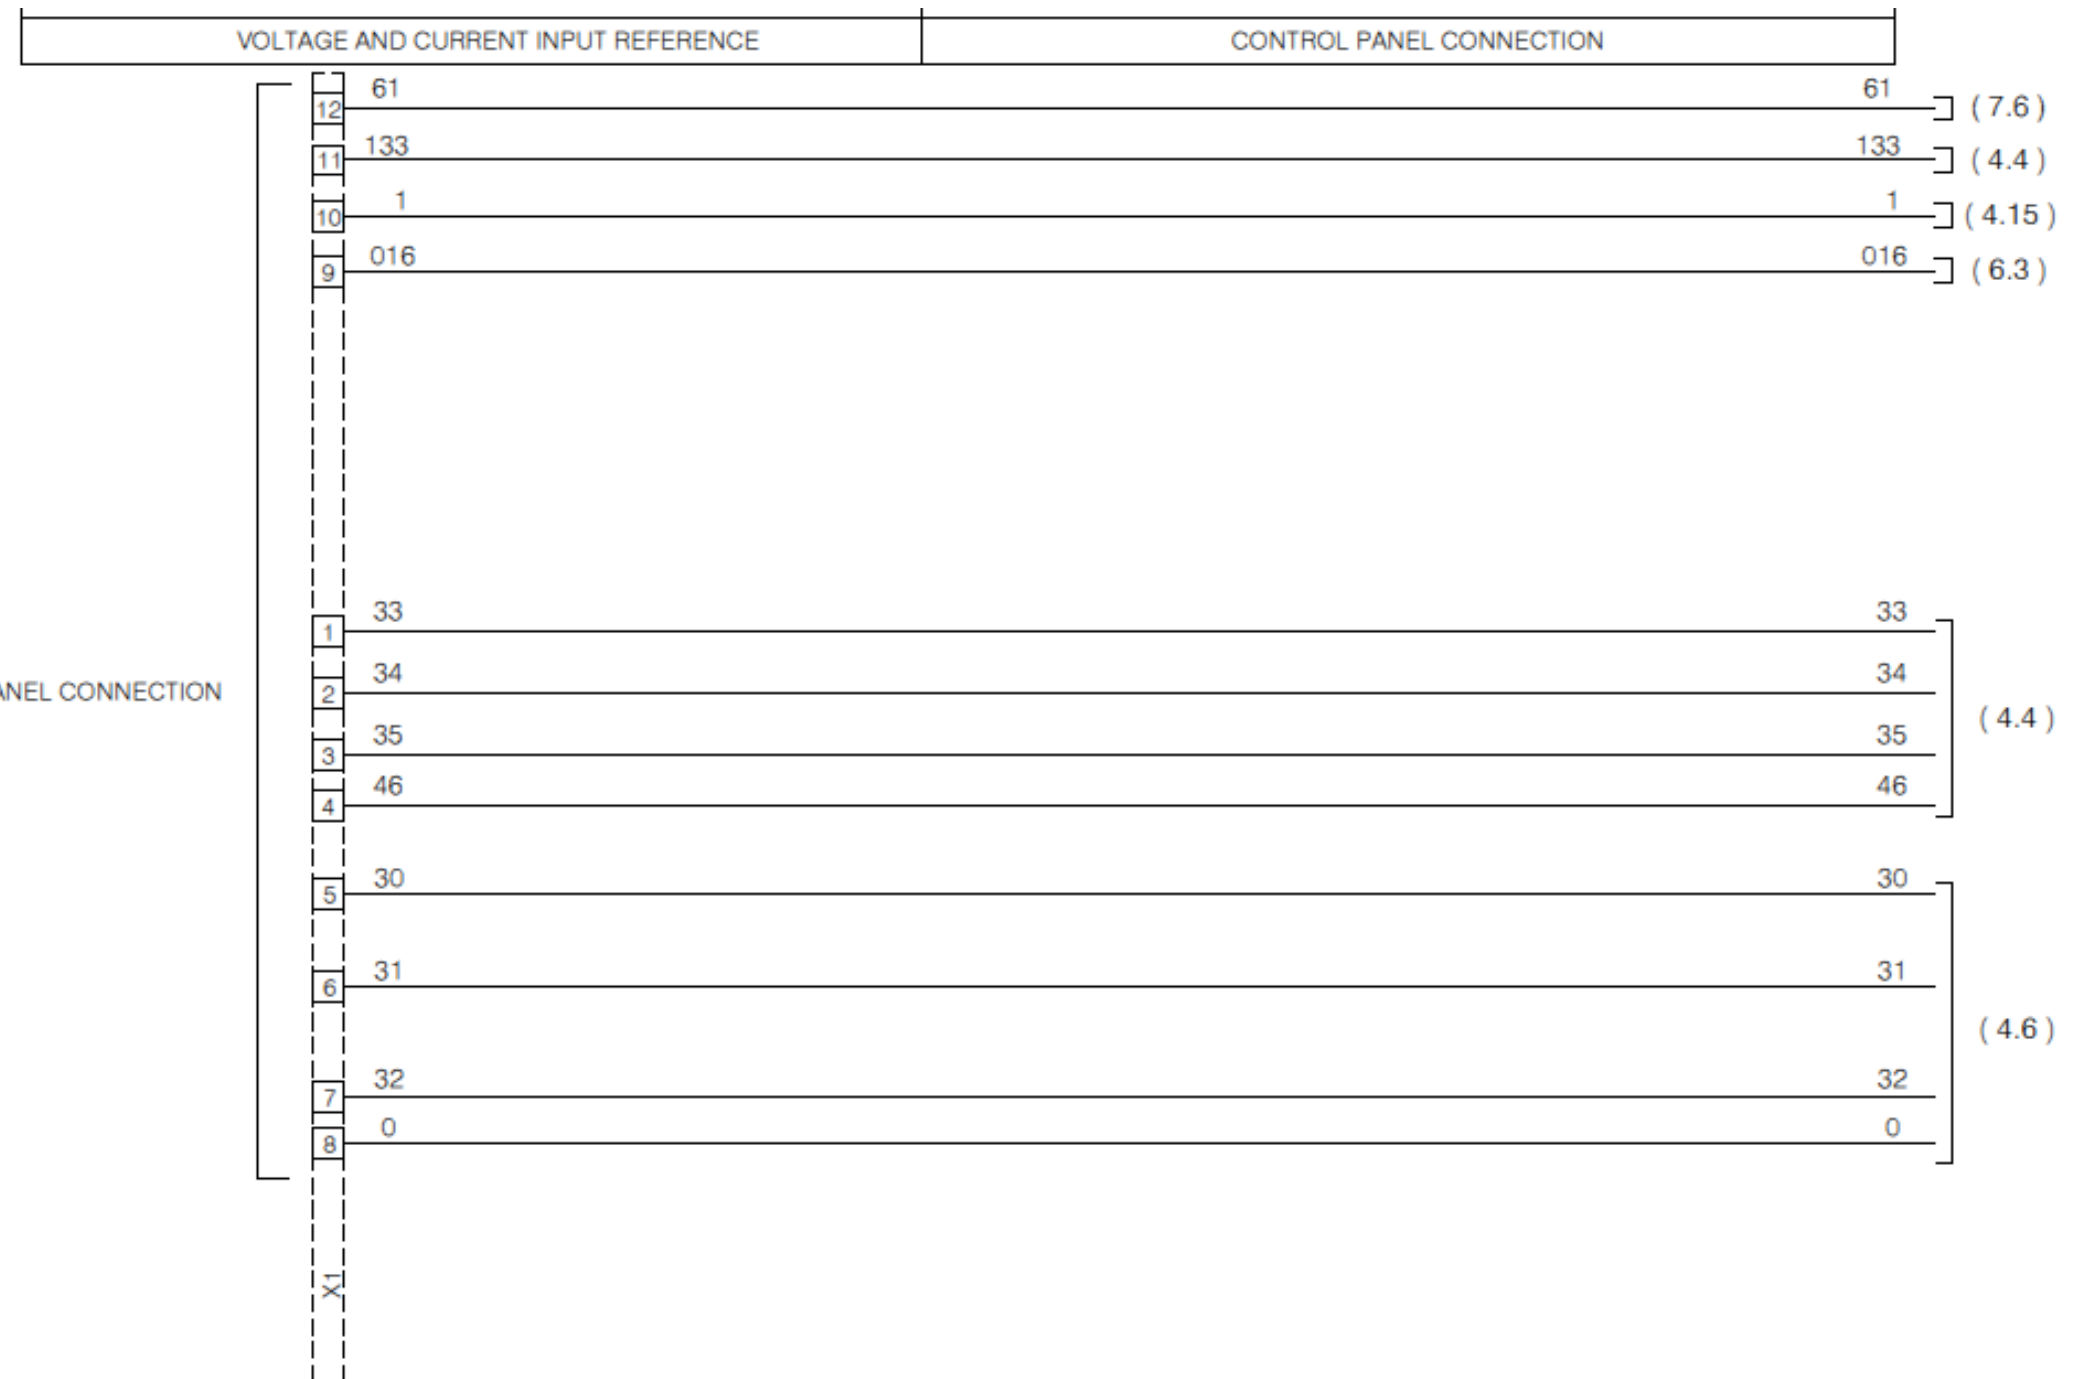


POWER CONTROL PANEL CONNECTION

NOTE: THE CONNECTION TO POWER PANNEL DEPENDES ON THE PANNEL MODEL

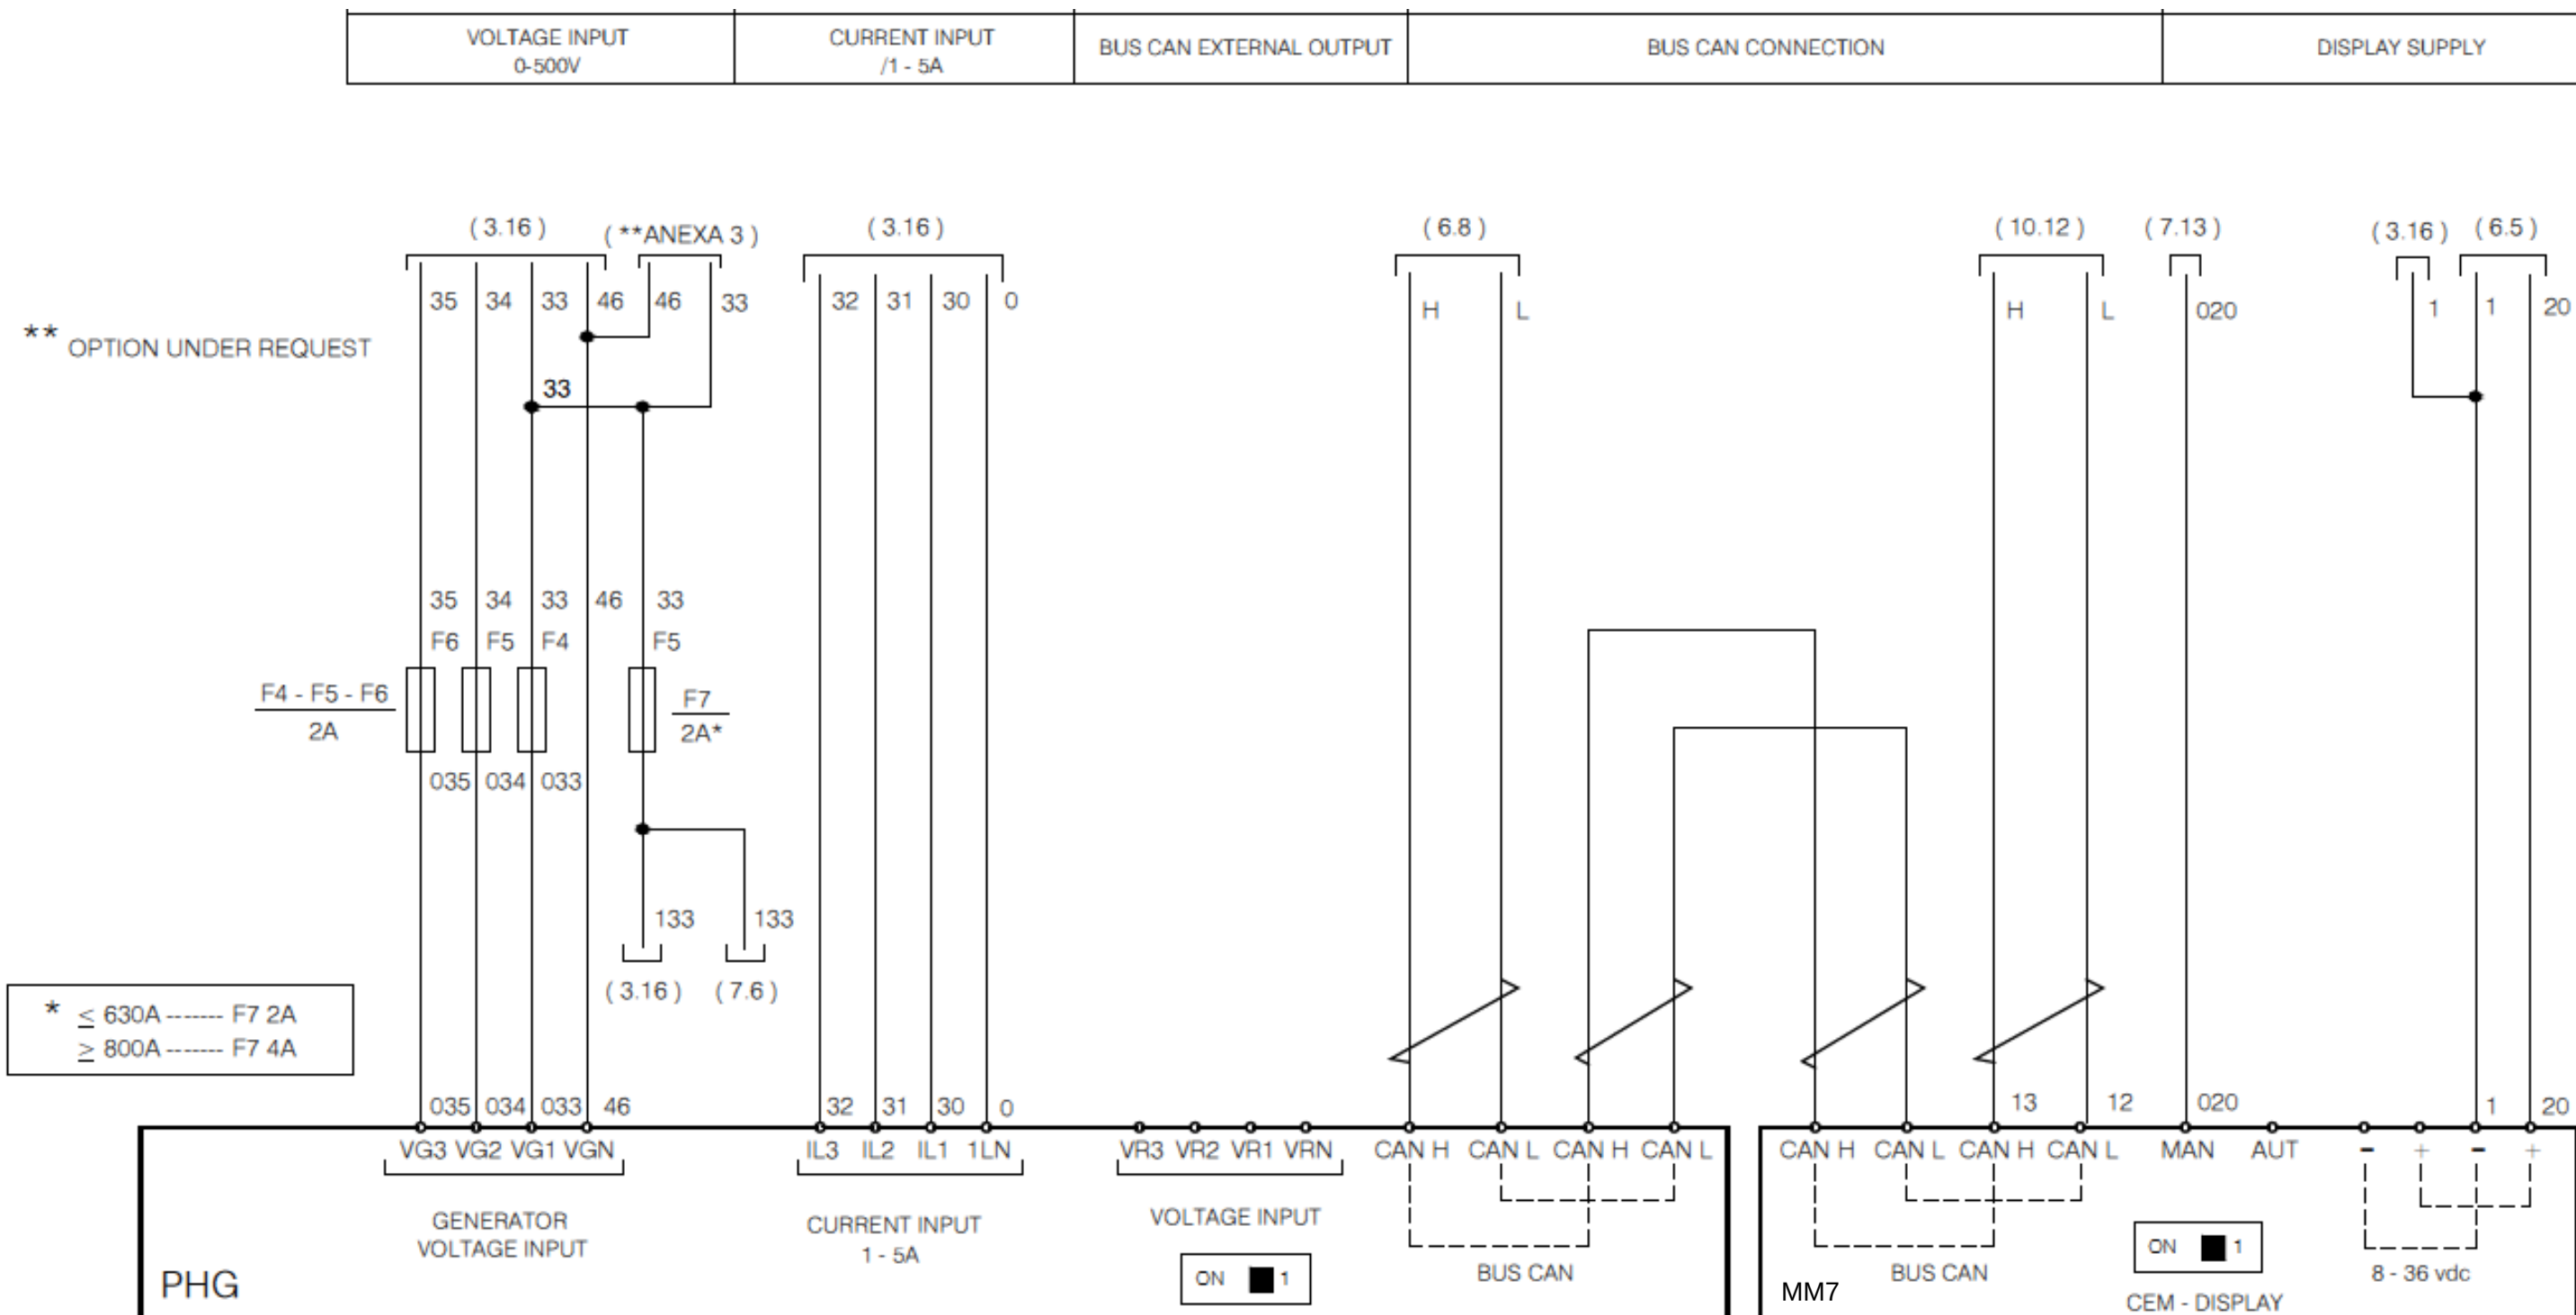


WATER TEMPERATURE	OIL PRESSURE	FUEL RESERVE	EMERGENCY STOP	RADIATOR WATER LEVEL	FUEL LEVEL GAUGE	OIL PRESSURE GAUGE	WATER TEMPERATURE GAUGE	ANALOGICAL INPUT CONF.	PICK-UP	BATTERY CHARGER EXCITATION	GENERAL ALARM	ENGINE WORKING
----------------------	-----------------	-----------------	-------------------	-------------------------	---------------------	--------------------------	-------------------------------	---------------------------	---------	-------------------------------	---------------	----------------

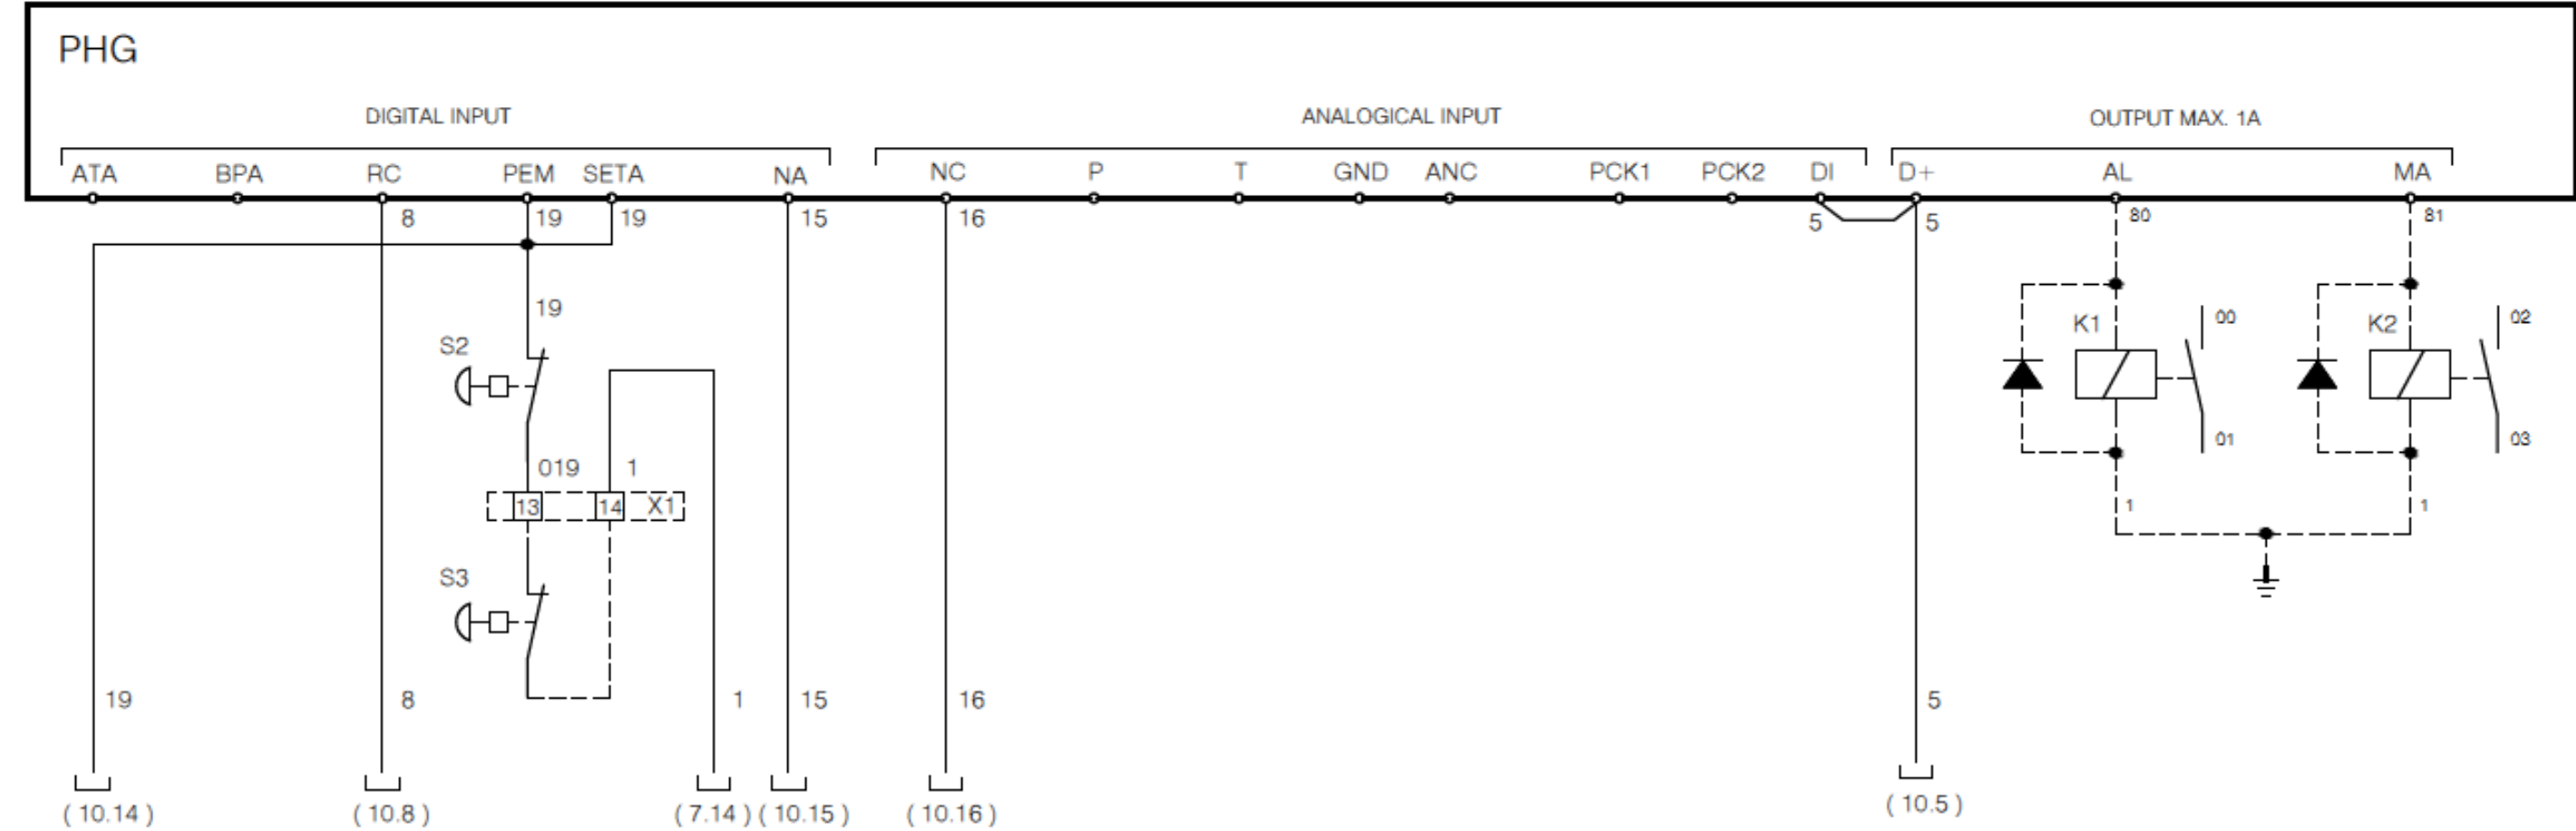

* S2 - EMERGENCY STOP
* S3 - EMERGENCY STOP EXTERNAL

SAFETY BREAKER	WATER IN FUEL ALARM	EXTERNAL SUPPLY OUTPUT	CAN BUS	EXTERNAL START	INHIBITION START	PROGRAMMABLE 1 INPUT	OUTPUT THAT CAN BE PROGRAMMABLE
-------------------	------------------------	---------------------------	---------	-------------------	---------------------	-------------------------	---------------------------------




PHG

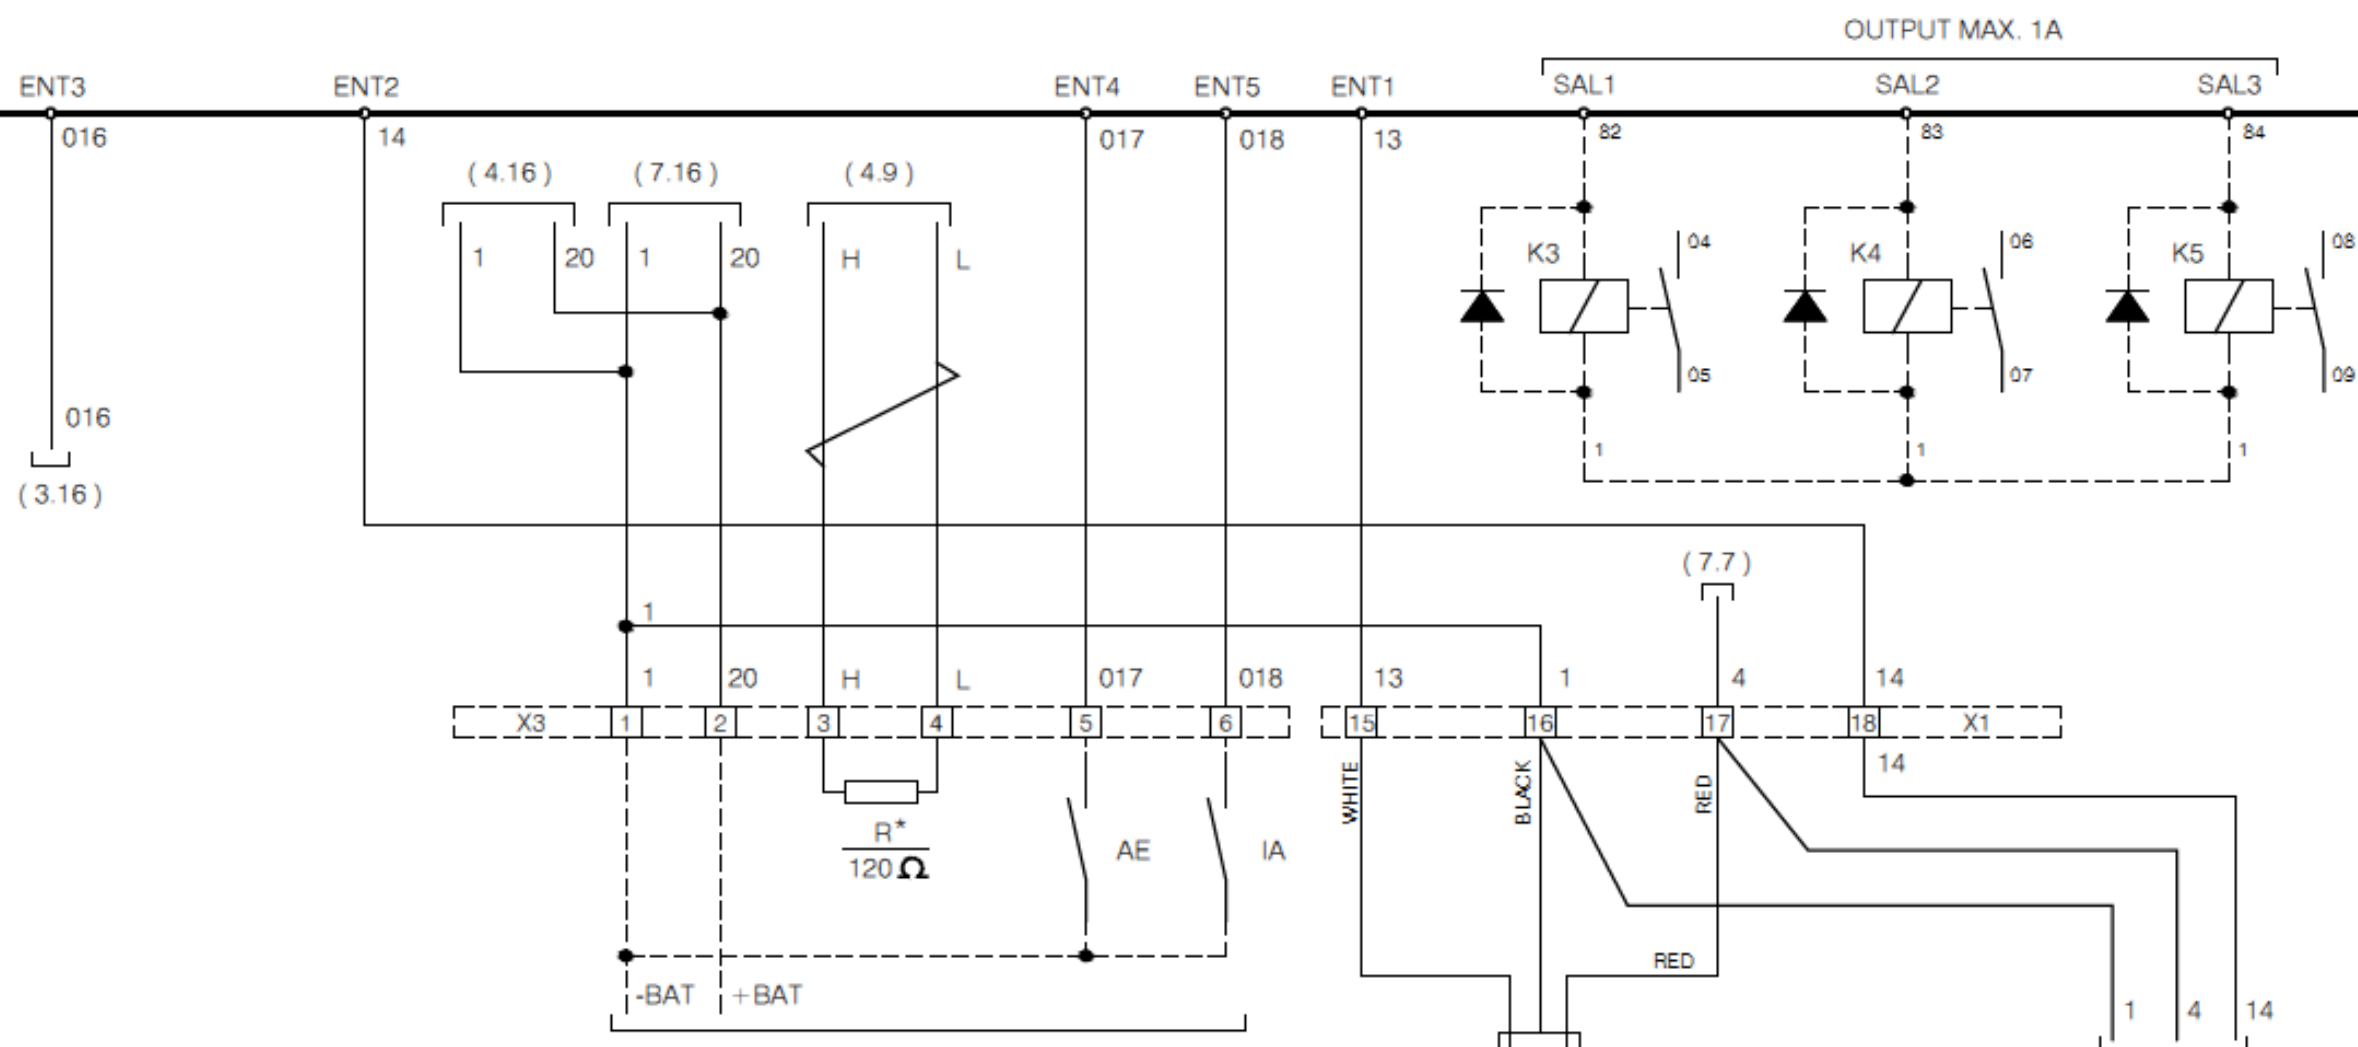


*
REMOVE FINAL RESISTANCE OF LINE IN CASE
CONNECT MODULE OF EXPANSION


*
LIQUID CONTROL LEVEL
(OPTION UNDER REQUEST)

DETECTION KIT WATER IN FUEL CONNECTION
OPTIONAL

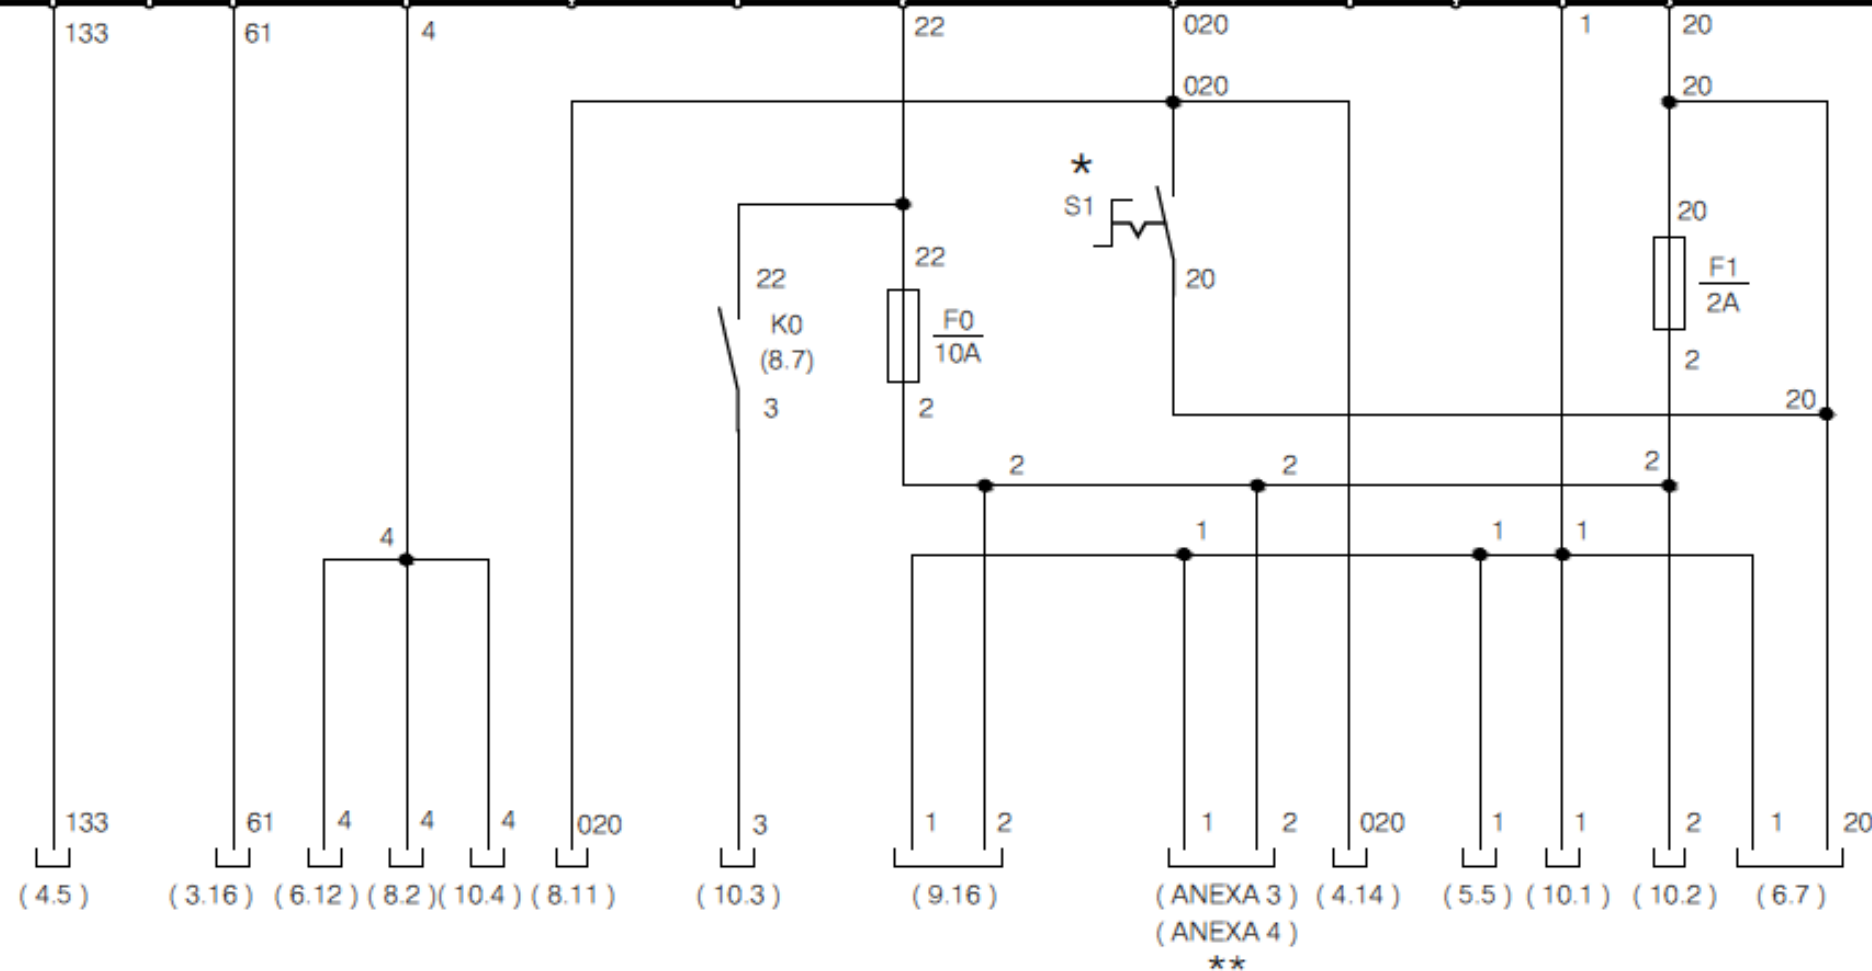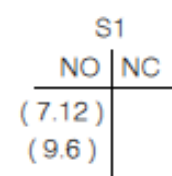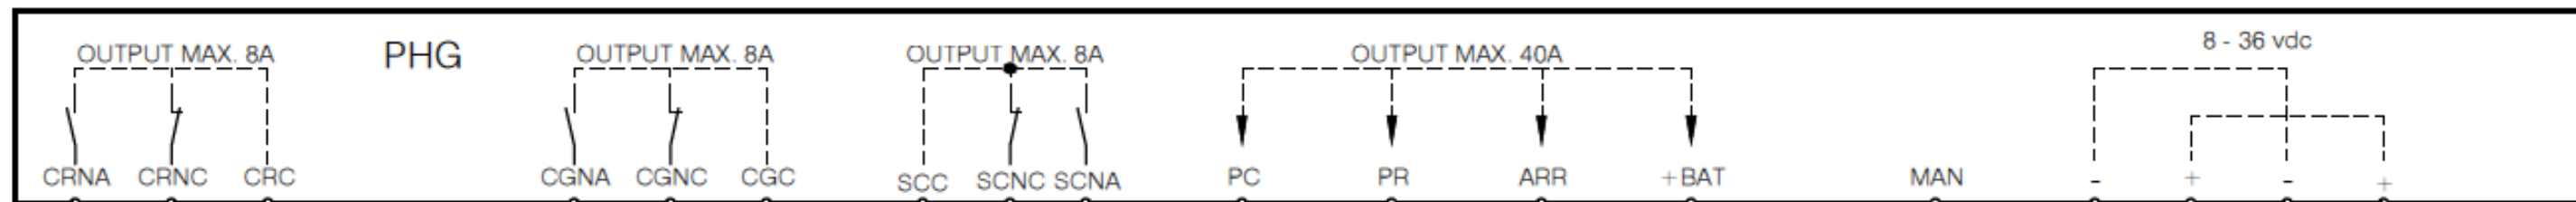


** OPTION UNDER REQUEST * S1 - SELECTOR TO CONTROL PANEL ACTIVATION

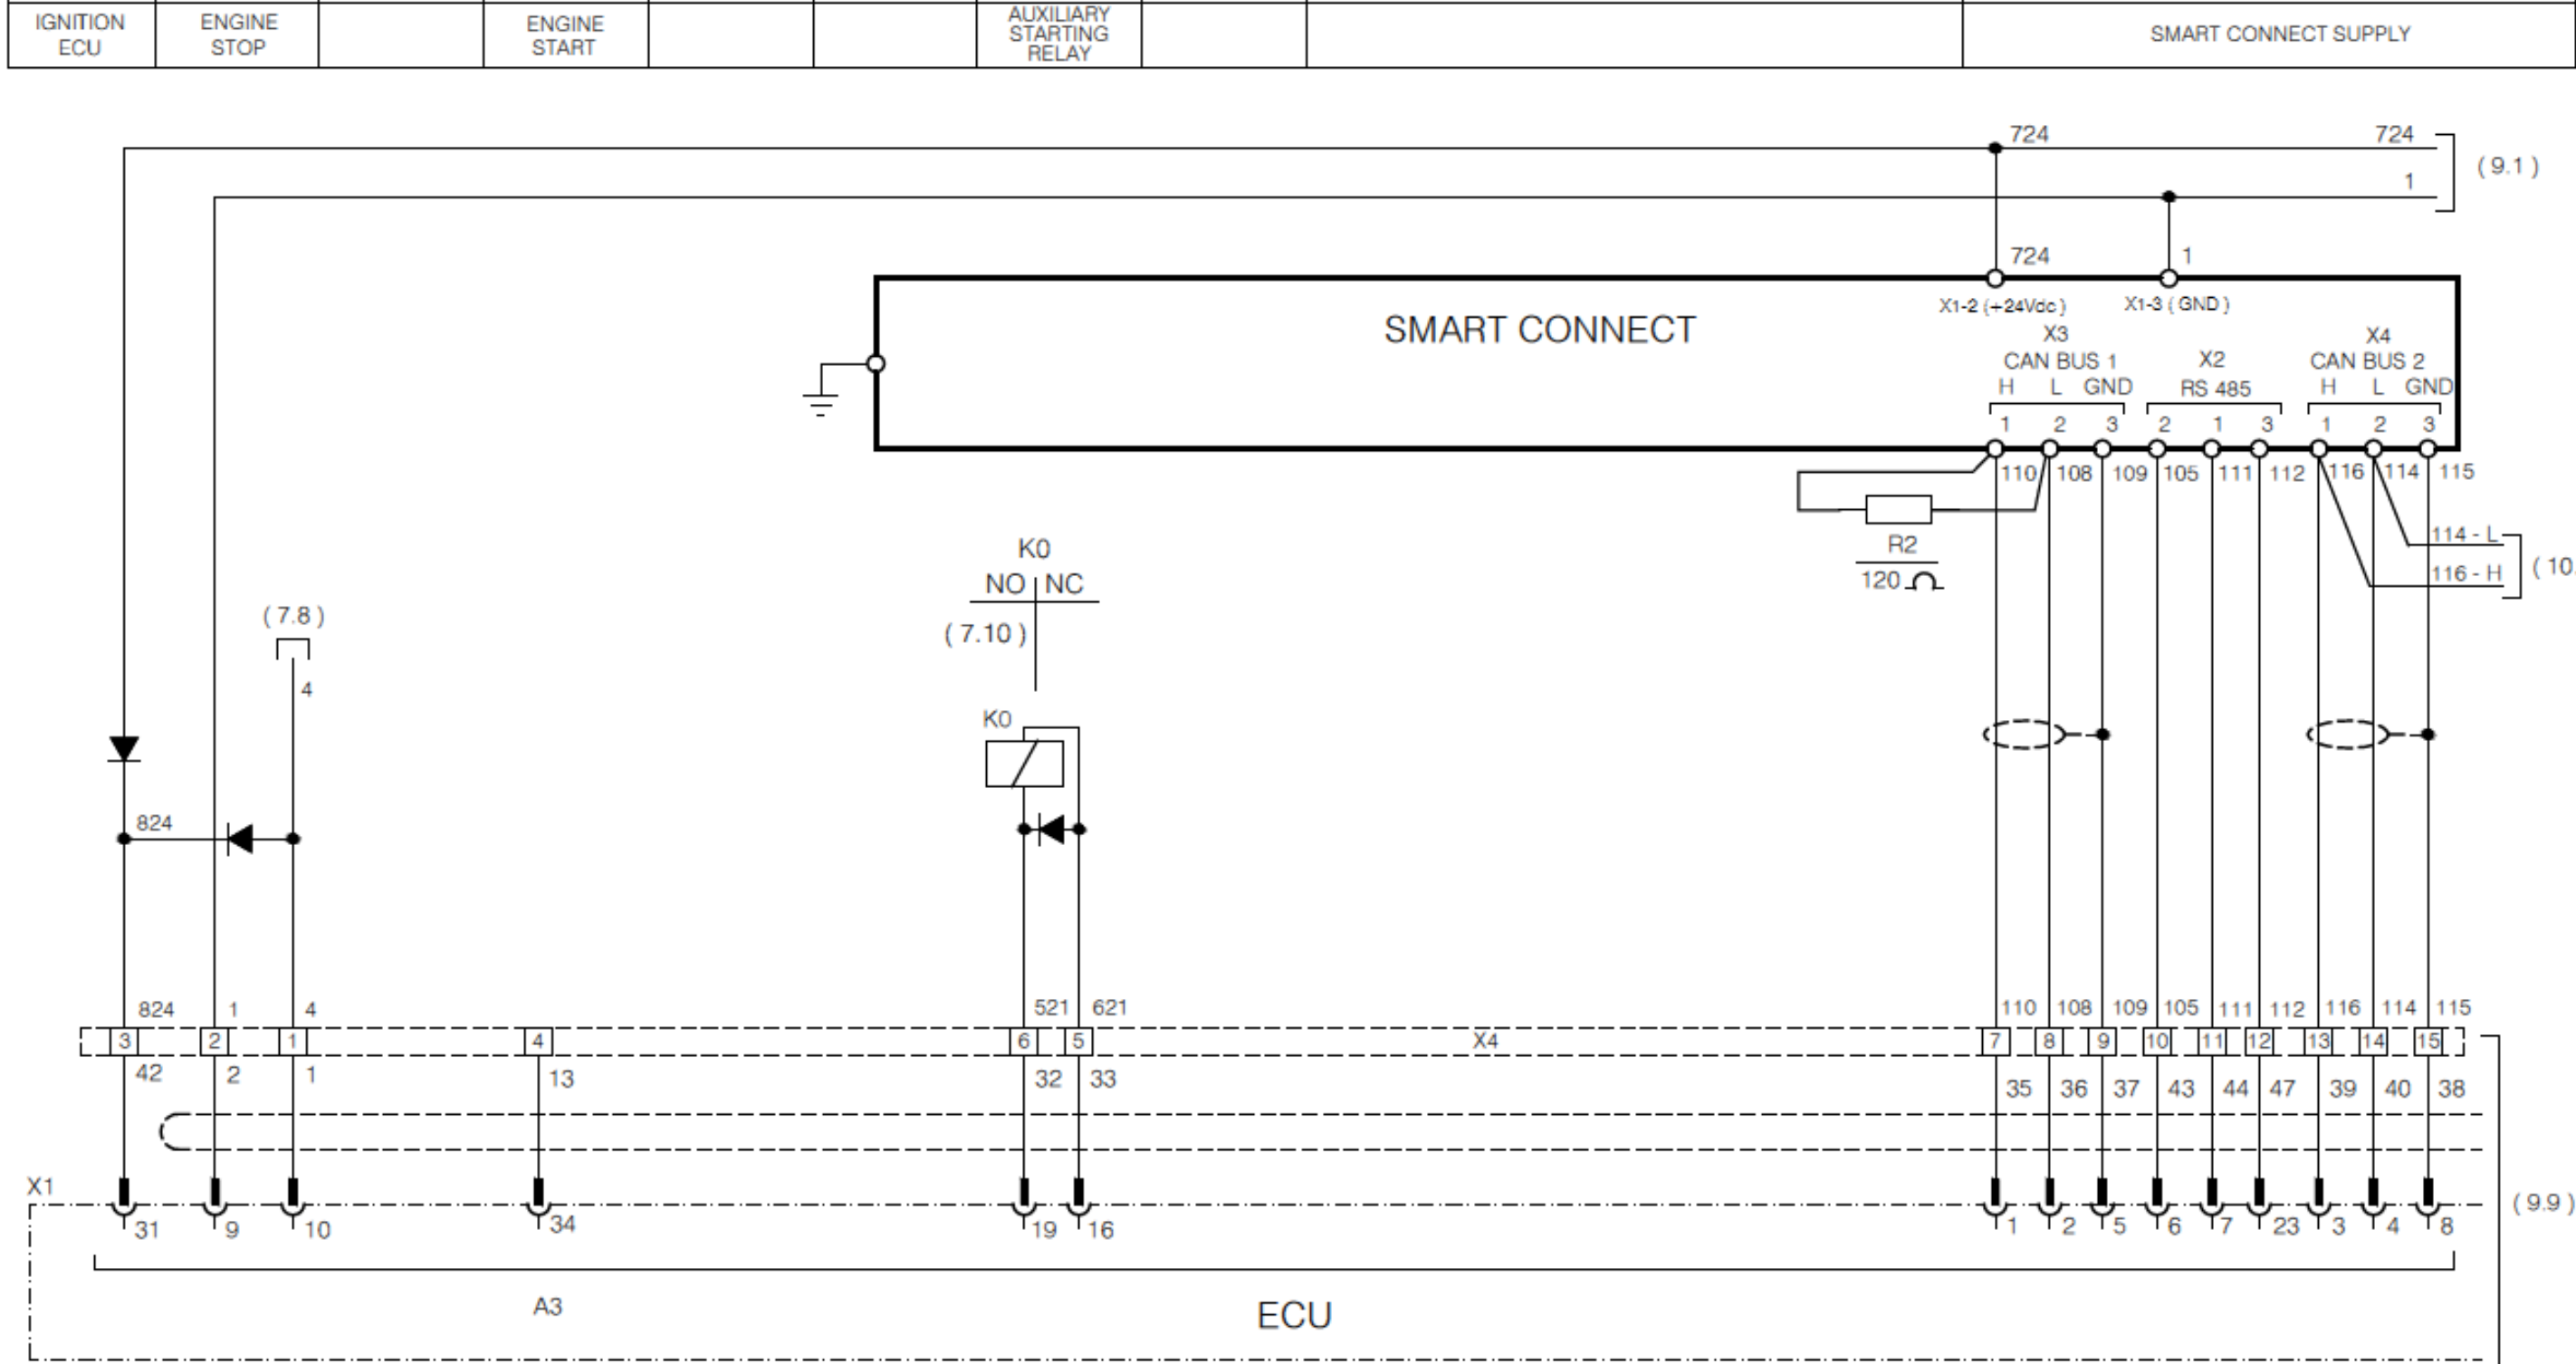

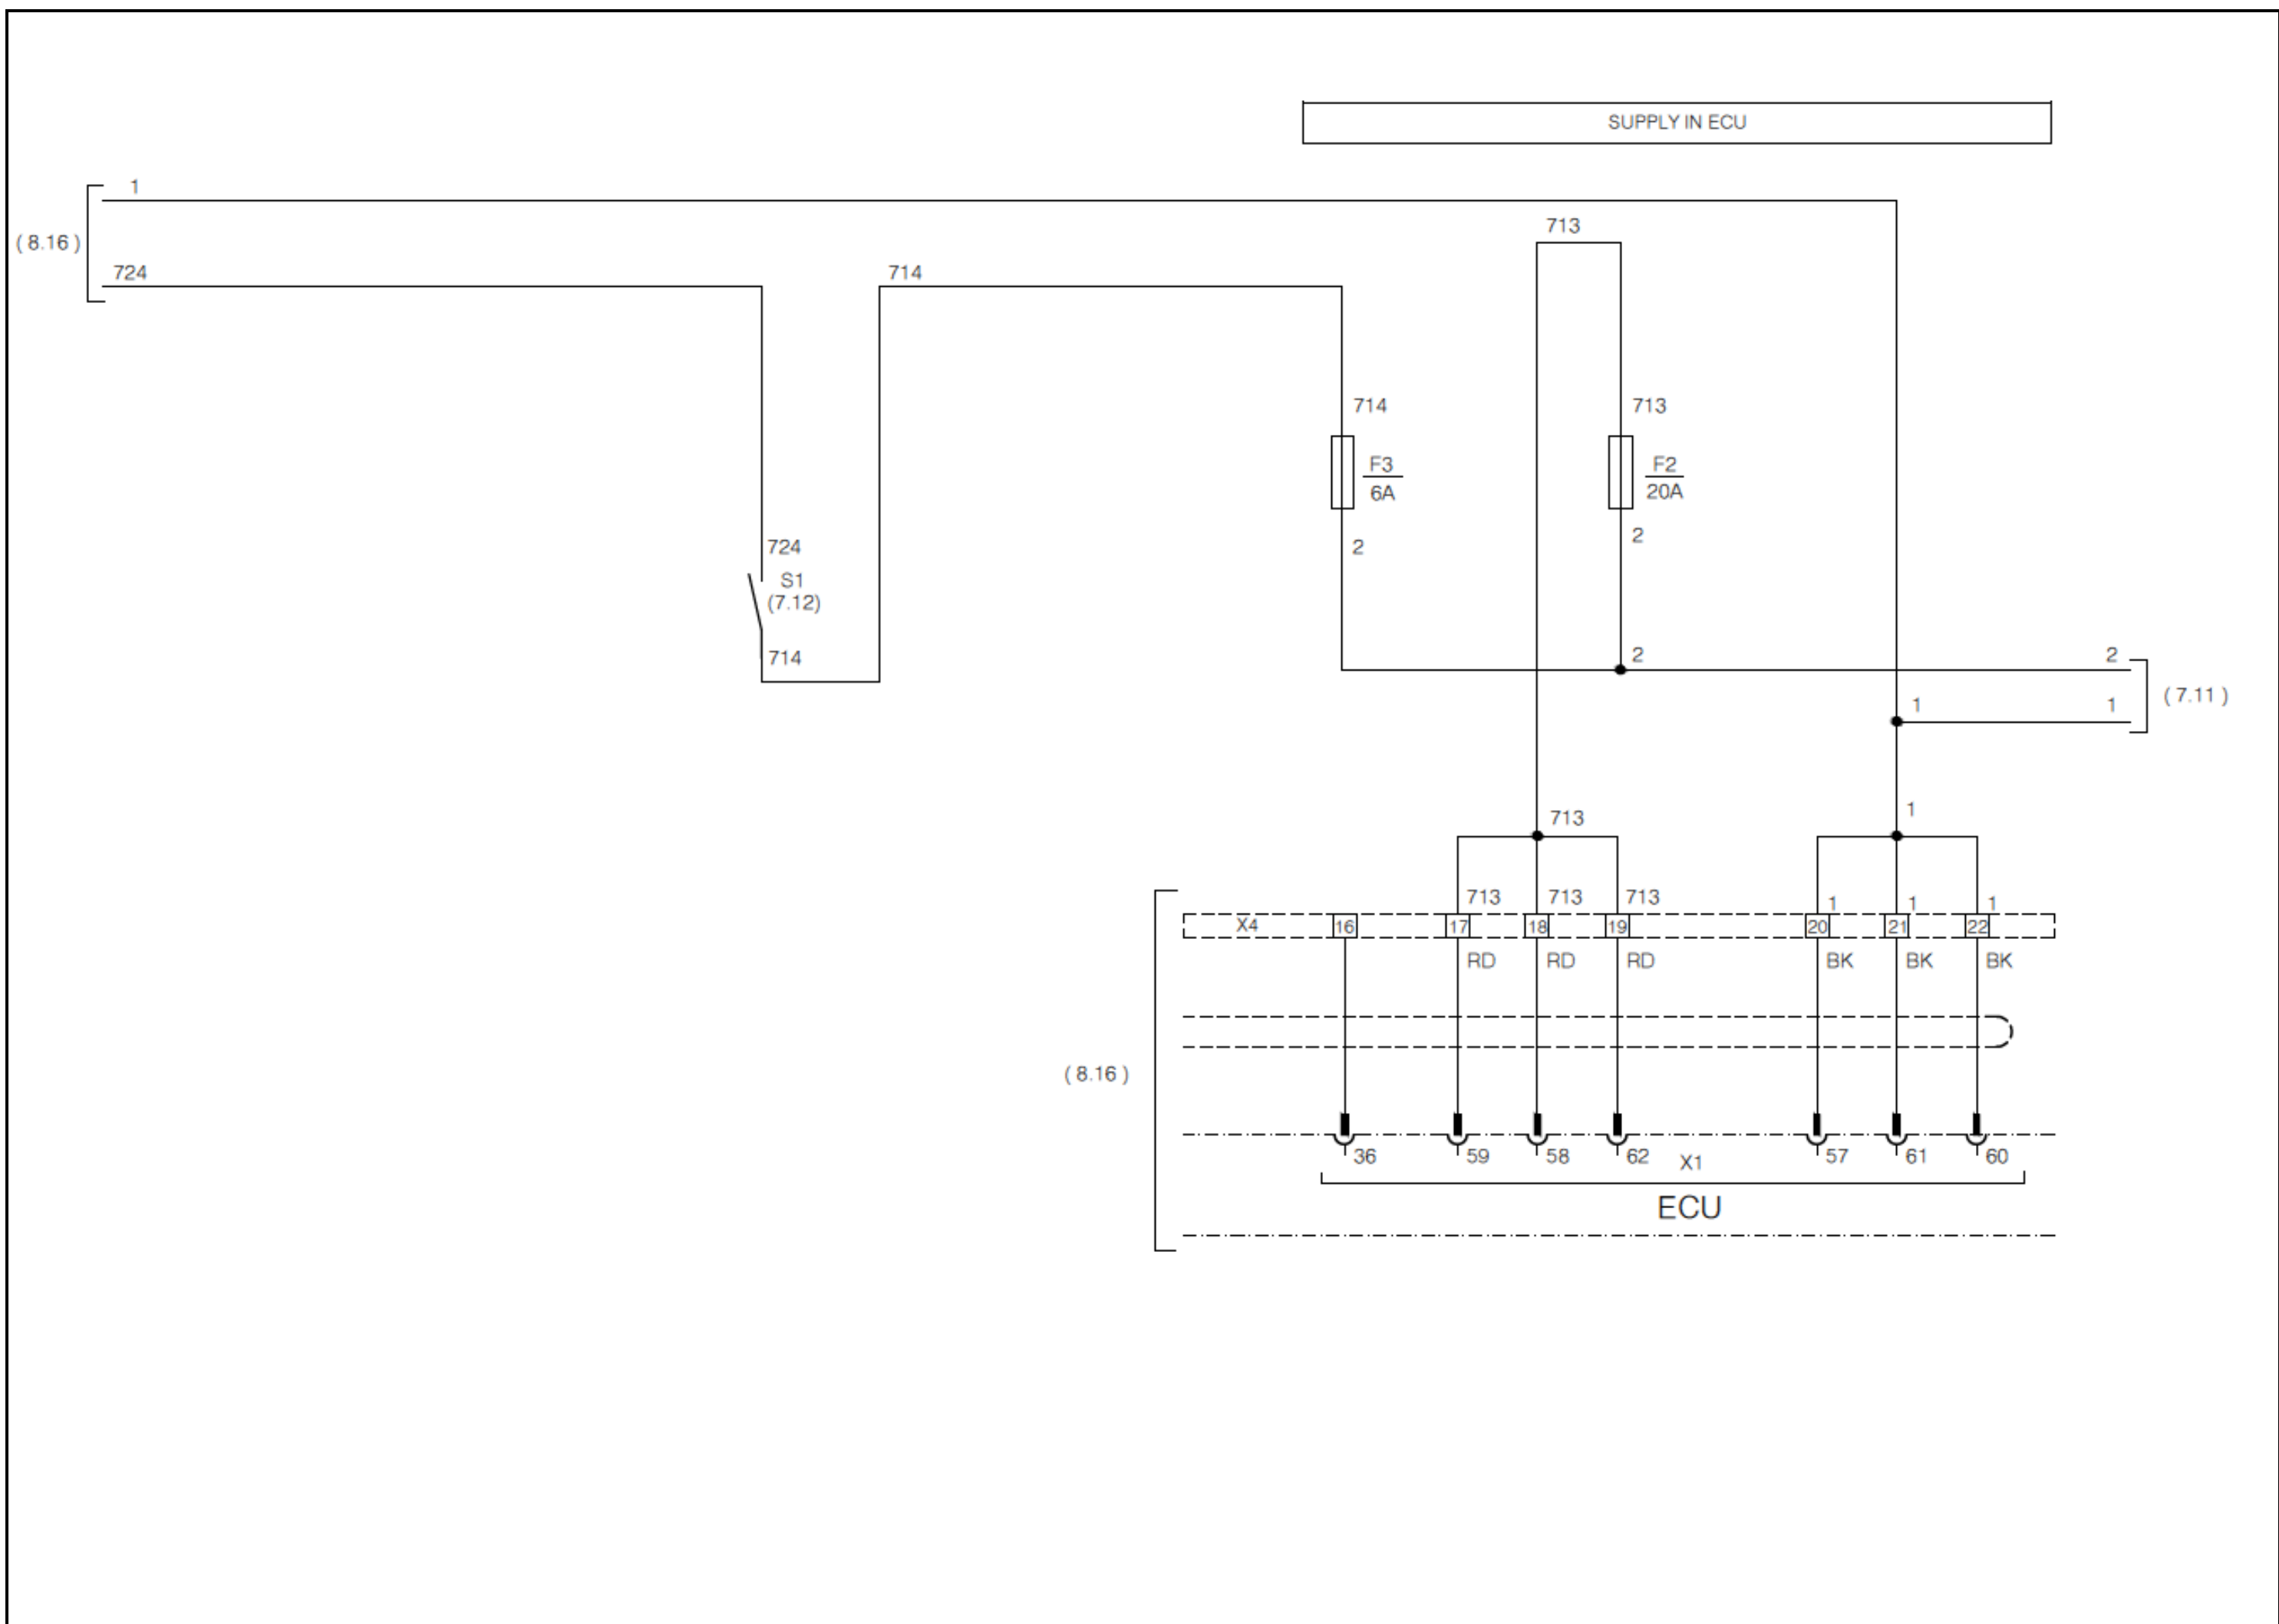


BATTERY NEGATIVE	BATTERY POSITIVE	START CONTROL	IGNITION POSITIVE	BATTERY CHARGER ACTIVATION	CAN BUS J1939	FUEL RESERVE	ANALOGICAL SPEED CONTROL	IGNITION INTERFACE	CAN BUS	EMERGENCY STOP	LOW WATER LEVEL	FUEL LEVEL GAUGE
---------------------	---------------------	------------------	----------------------	----------------------------------	------------------	-----------------	-----------------------------	-----------------------	---------	-------------------	-----------------------	------------------------

*
OPTIONAL, BATTERY CHARGER CONNECTION

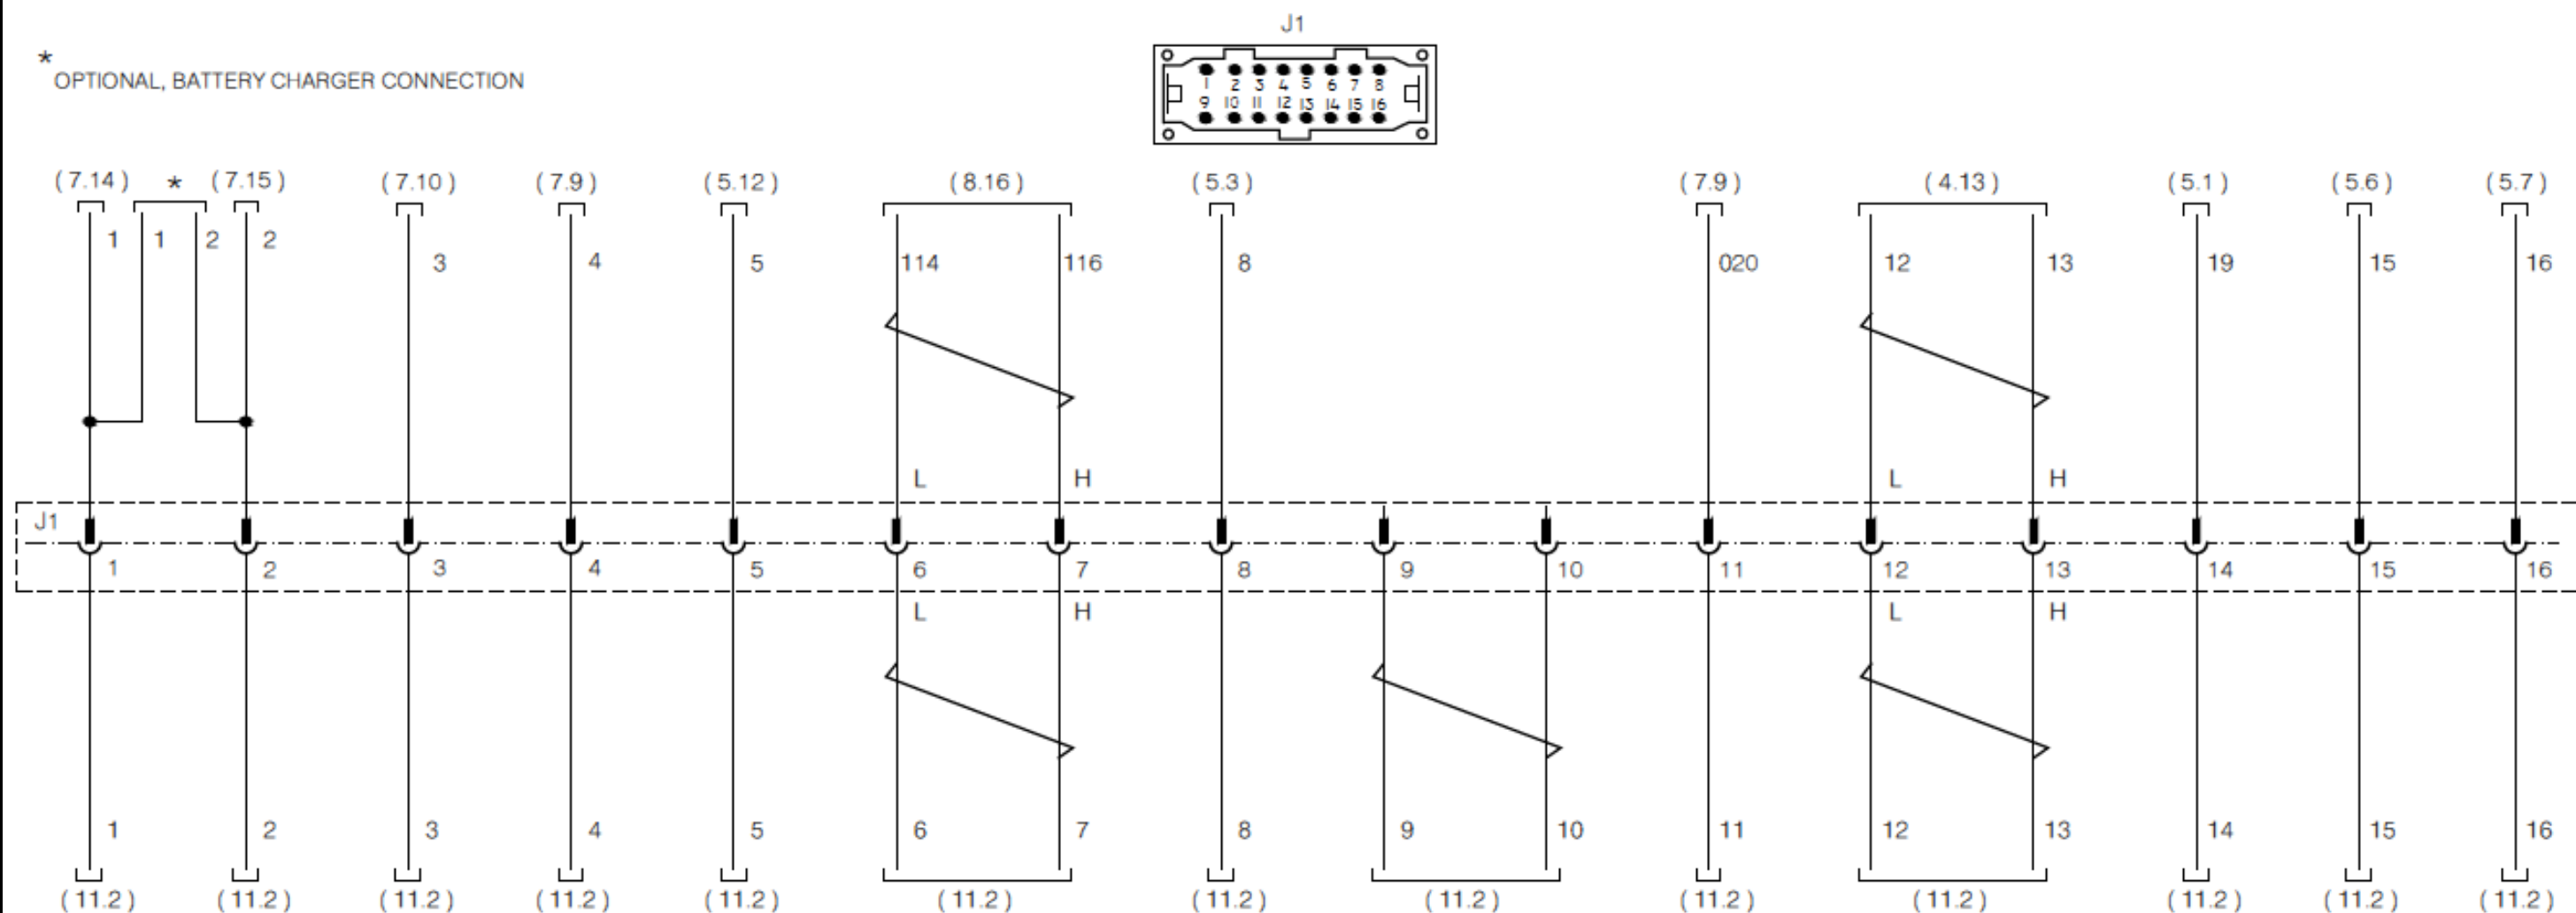

NOTE : THE CONNECTIONS OF ENGINE DEPENDS ON THE PANELS MODEL

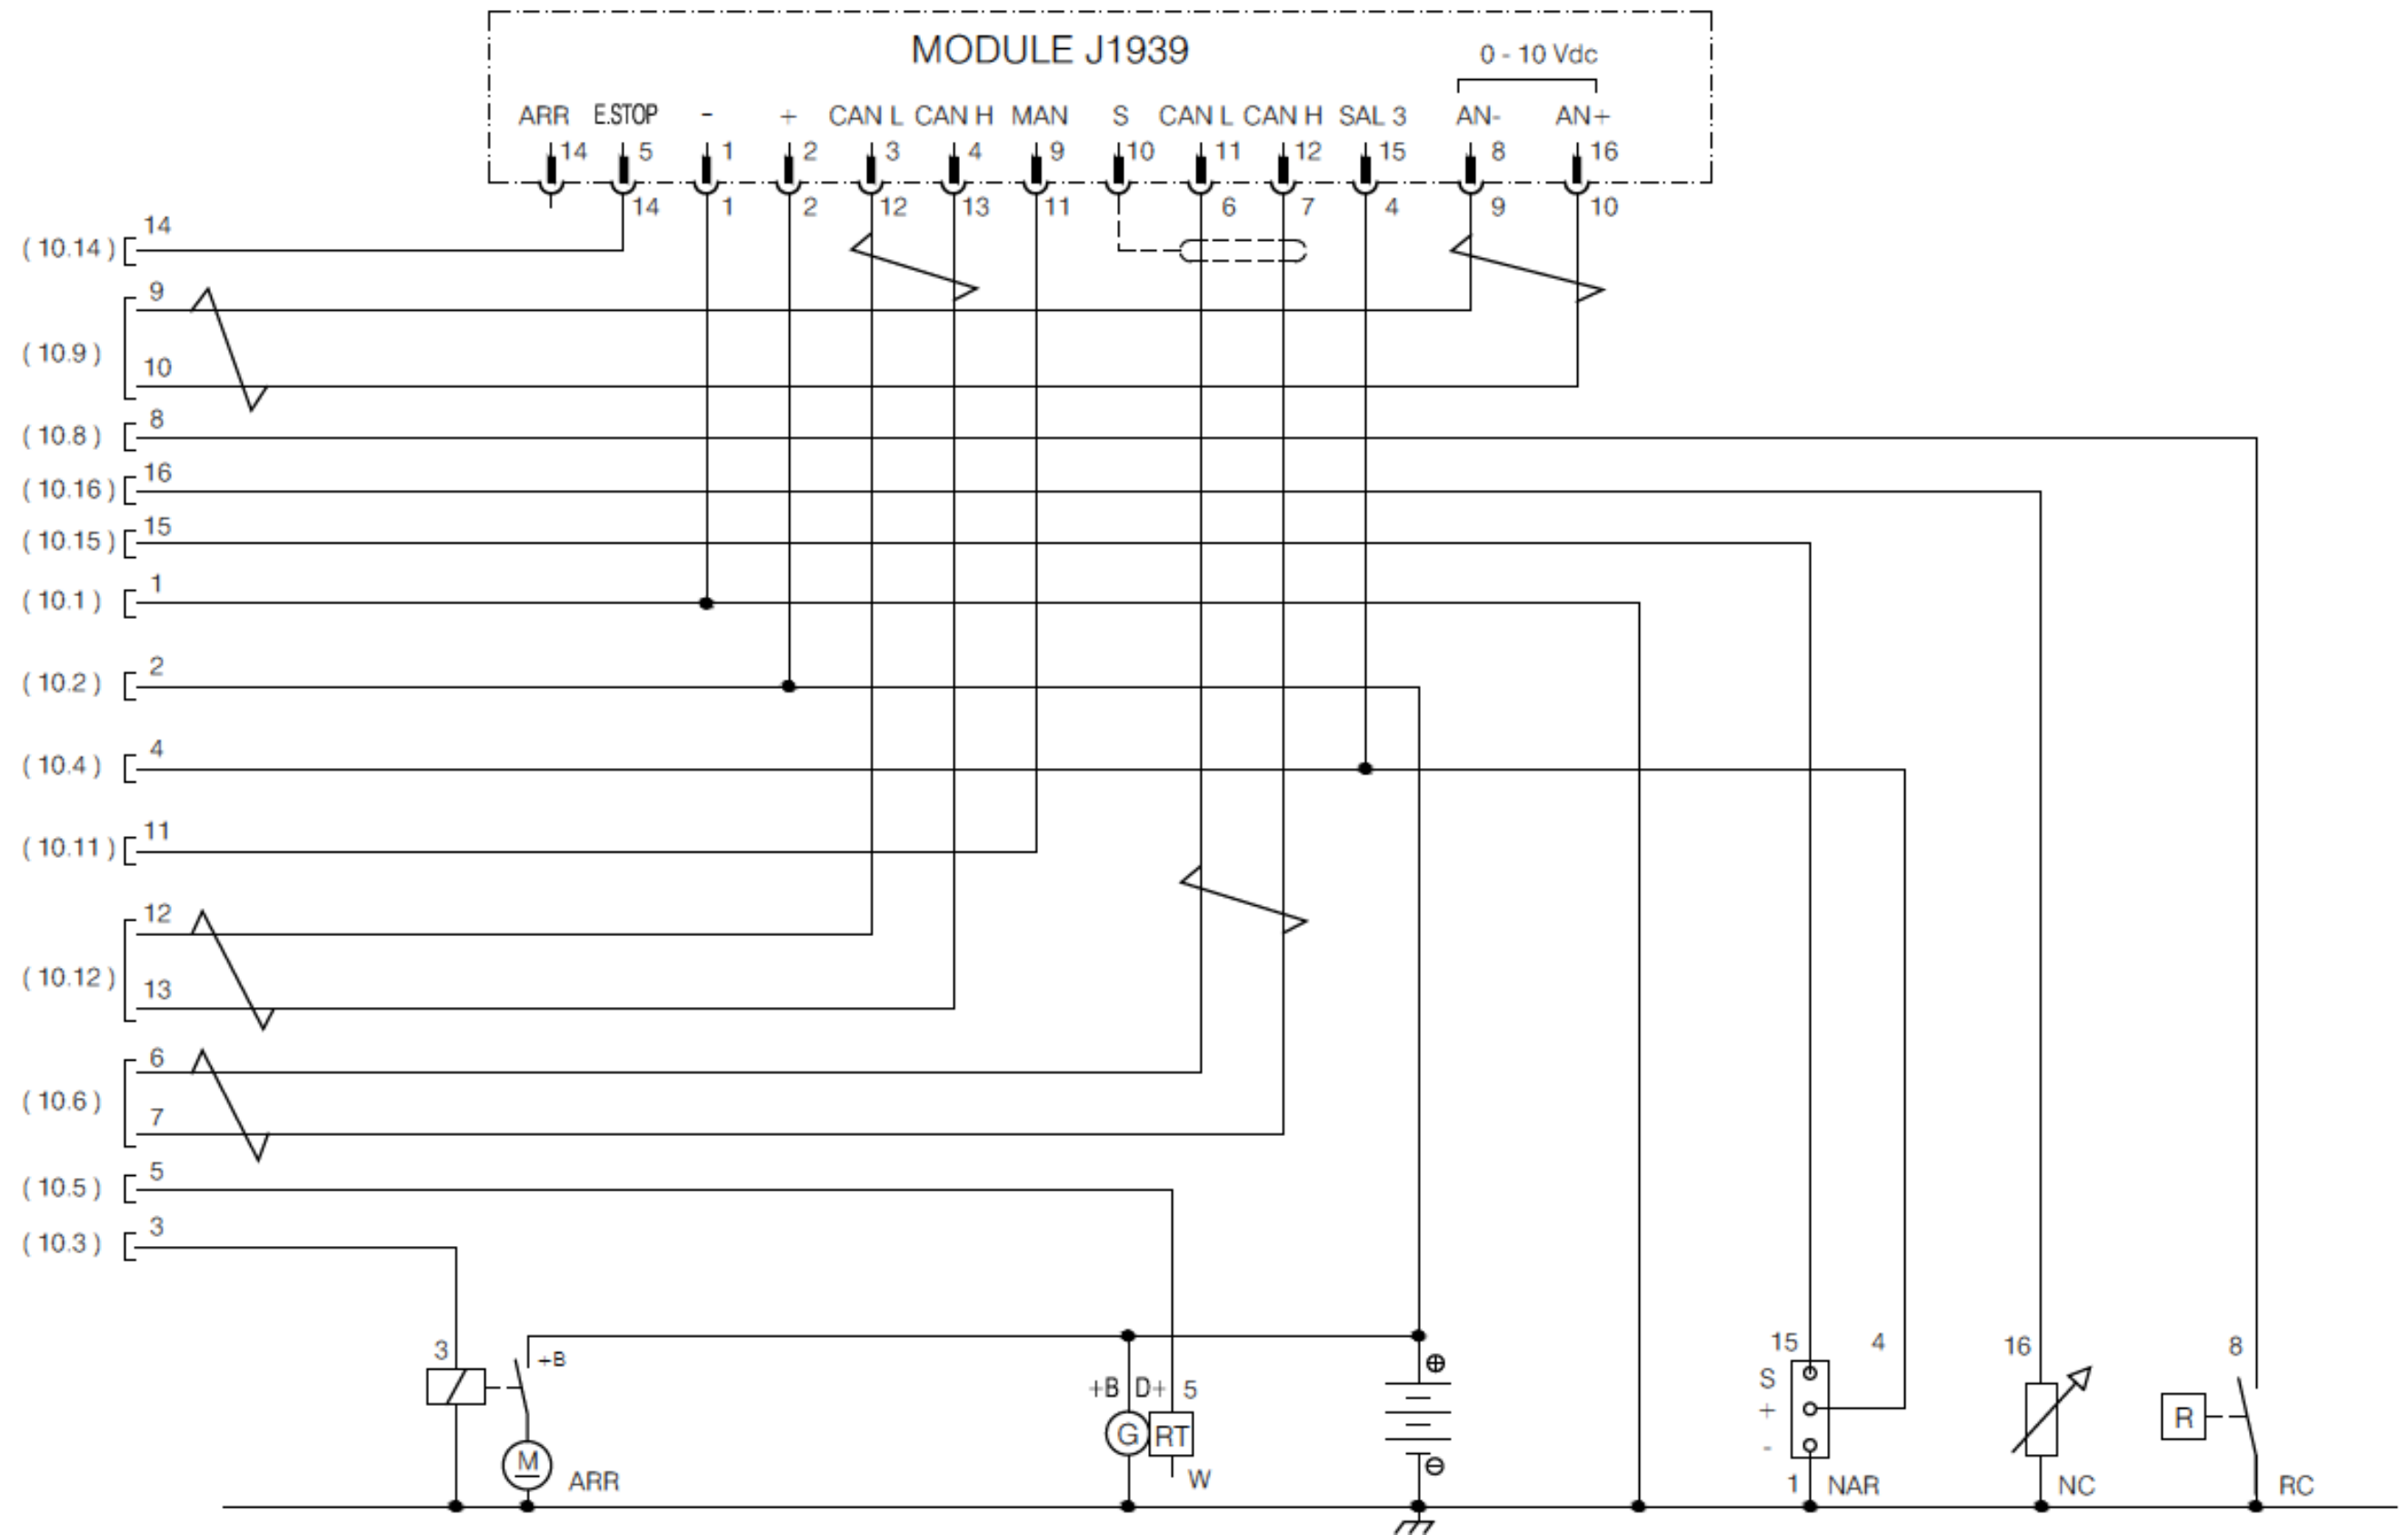

LEGEND	
CKR	MAINS CONTACTOR CONFIRMATION
CKG	GENSET CONTACTOR CONFIRMATION
EJP1	RATE CHANGE NOTICE (FRANCE)
EJP2	RATE CHANGE (FRANCE)
IA	START DISABLING
AE	EXTERNAL START
TEST	TEST EXTERNO EXTERNAL TEST
MFOR	FORCED MARCH
AL1	PROGRAMMABLE ALARM 1
AL2	PROGRAMMABLE ALARM 2
AL3	PROGRAMMABLE ALARM 3
RC	FUEL RESERVE
BP	LOW OIL PRESSURE
AT	HIGH TEMPERATURE OF WATER
NA	RADIATOR WATER LEVEL
ENT1	INPUT PROGRAMMABLE 1
ENT2	INPUT PROGRAMMABLE 2
ENT3	INPUT PROGRAMMABLE 3
ENT4	INPUT PROGRAMMABLE 4
ENT5	INPUT PROGRAMMABLE 5
PD	DESEXCITATION STOP
PE	EXCITATION STOP
PR	PRE-HEATING
S1	SELECTION OF PARAMETERS PLAY 1
S2	SELECTION OF PARAMETERS PLAY 2

PROGRAMMABLE INPUT CONFIGURATION				
PARAMETRES	PSW	DESCRIPTION	DEFAULT	RANGE
5	2	INPUT ASSOCIATED MODE CKR	0	0-NOT PROGRAMMED 5-ENT4 6-ENT5 8-ENT1 9-ENT2 10-ENT3
6	2	INPUT ASSOCIATED MODE CKG	0	
7	2	INPUT ASSOCIATED MODE EJP1	0	
8	2	INPUT ASSOCIATED MODE EJP2	0	
9	2	INPUT ASSOCIATED MODE IA	6	
10	2	INPUT ASSOCIATED MODE AE	5	0-NOT PROGRAMMED 5-IN4 6-IN5 8-IN1 9-IN2 10-IN3
11	2	INPUT ASSOCIATED MODE TEST	0	
12	2	INPUT ASSOCIATED MODE MFOR	0	
13	2	INPUT ASSOCIATED MODE AL1	8	
14	2	INPUT ASSOCIATED MODE AL2	9	
15	2	INPUT ASSOCIATED MODE AL3	0	
16	2	INPUT ASSOCIATED MODE S1	0	
17	2	INPUT ASSOCIATED MODE S2	0	

PROGRAMMABLE OUTPUT CONFIGURATION				
PARAMETRES	PSW	DESCRIPTION	DEFERACT	
1	2	MODE OUTPUT PROGRAMMABLE 1	0	
2	2	MODE OUTPUT PROGRAMMABLE 2	0	
3	2	MODE OUTPUT PROGRAMMABLE 3	0	
RANGO-RANGE				
	0-NO PROGRAMED	11	- PRE-HEATING RESISTANCE	
	1 - INPUT RC	12-	LOCKING MODE	
	2 - ALARM BP	13-	MANUAL MODE	
	3 - ALARM AT	14-	AUTOMATIC MODE	
	4 - INPUT NA	15-	TEST MODE	
	5 - INPUT ENT4	16-	ALARM ALTERNATOR	
	6 - INPUT ENT5	17	PROGRAMMABLE ALARM 1	
	7 - ALARM PE	18-	PROGRAMMABLE ALARM 2	
	8 - INPUT ENT1	19-	PROGRAMMABLE ALARM 3	
	9 - INPUT ENT2			
	10 - INPUT ENT3			

RELE BT CONFIGURATION AND POWER OUTPUT					
PARAMETRES	PSW	DESCRIPTION	DEFAULT		RANGE
4	2	Relé BT output configuration: Pre-heating resistance or fuel transiet	1		0 - INHIBITION RANGE 1 - FUEL TRANSIENT 2 - PRE-HEATING RESISTANCE
18	2	Output configuration pre-heating resistance and stop configuration	0		0-PD/PR 1-PE/PR 2-PD/PE

EXTERNAL AUXILIARY CIRCUITS SUPPLY INPUT

BATTERY CHARGER

ENGINE PRE-HEATING RESISTANCE

