


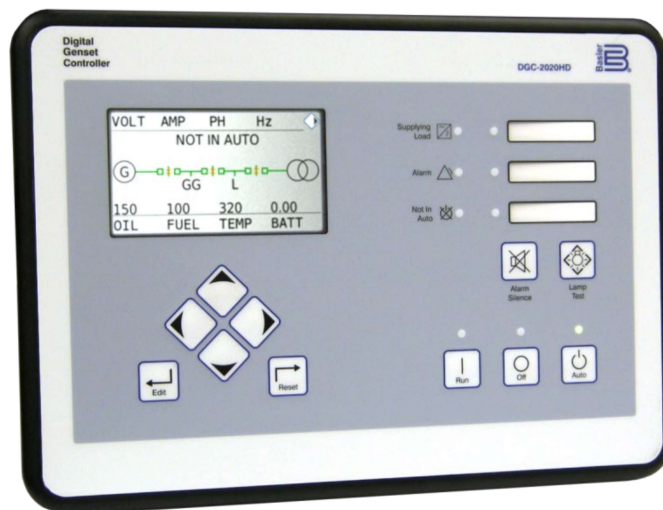

DGC-2020HD

Digital Genset Controller

Configuration Instruction Manual



 **WARNING:** California's Proposition 65 requires special warnings for products that may contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm. Please note that by posting this Proposition 65 warning, we are notifying you that one or more of the Proposition 65 listed chemicals may be present in products we sell to you. For more information about the specific chemicals found in this product, please visit <https://www.basler.com/Prop65>.

Preface

This instruction manual provides information about the configuration of the 0BDGC-2020HD Digital Genset Controller. To accomplish this, the following information is provided:

- Device information and security settings
- Configuration via BESTCOMSP^{Plus}® and the front panel
- Communication settings
- Timekeeping
- Inputs and outputs
- Breaker management, synchronizer, bias control, and multiple generator management
- Alarm configuration
- Protection settings
- BESTlogic™ *Plus* programmable logic
- Troubleshooting

Conventions Used in this Manual

Important safety and procedural information is emphasized and presented in this manual through Warning, Caution, and Note boxes. Each type is illustrated and defined as follows.

Warning!

Warning boxes call attention to conditions or actions that may cause personal injury or death.

Caution

Caution boxes call attention to operating conditions that may lead to equipment or property damage.

Note

Note boxes emphasize important information pertaining to Digital Genset Controller installation or operation.

DGC-2020HD Instruction Manual Catalog

Available instruction manuals for the 0BDGC-2020HD are listed in Table 1.

Table 1. Instruction Manuals

Part Number	Description
9469300993	Quick Start
9469300994	Installation
9469300995	Configuration (this manual)
9469300996	Operation
9469300997	Accessories
9469300998	Modbus® Protocol



12570 State Route 143
Highland IL 62249-1074 USA

www.basler.com

info@basler.com

Tel: +1 618.654.2341

Fax: +1 618.654.2351

© 2021 by Basler Electric

All rights reserved

First printing: October 2016

Warning!

READ THIS MANUAL. Read this manual before installing, operating, or maintaining the 0BDGC-2020HD. Note all warnings, cautions, and notes in this manual as well as on the product. Keep this manual with the product for reference. Only qualified personnel should install, operate, or service this system. Failure to follow warning and cautionary labels may result in personal injury or property damage. Exercise caution at all times.

Caution

Installing previous versions of firmware may result in compatibility issues causing the inability to operate properly and may not have the enhancements and resolutions to issues that more recent versions provide. Basler Electric highly recommends using the latest version of firmware at all times. Using previous versions of firmware is at the user's risk and may void the warranty of the unit.

Basler Electric does not assume any responsibility to compliance or noncompliance with national code, local code, or any other applicable code. This manual serves as reference material that must be well understood prior to installation, operation, or maintenance.

For terms of service relating to this product and software, see the *Commercial Terms of Products and Services* document available at www.basler.com/terms.

This publication contains confidential information of Basler Electric Company, an Illinois corporation. It is loaned for confidential use, subject to return on request, and with the mutual understanding that it will not be used in any manner detrimental to the interests of Basler Electric Company and used strictly for the purpose intended.

It is not the intention of this manual to cover all details and variations in equipment, nor does this manual provide data for every possible contingency regarding installation or operation. The availability and design of all features and options are subject to modification without notice. Over time, improvements and revisions may be made to this publication. Before performing any of the following procedures, contact Basler Electric for the latest revision of this manual.

The English-language version of this manual serves as the only approved manual version.

This product contains, in part, open source software (software licensed in a way that ensures freedom to run, copy, distribute, study, change, and improve the software) and you are granted a license to that software under the terms of either the GNU General Public License or GNU Lesser General Public License. The licenses, at the time of sale of the product, allow you to freely copy, modify, and redistribute that software and no other statement or documentation from us, including our End User License Agreement, places any additional restrictions on what you may do with that software.

For at least three (3) years from the date of distribution of this product, a machine-readable copy of the complete corresponding source code for the version of the programs distributed to you will be sent upon request (contact information is provided above). A fee of no more than our cost of physically performing the source code distribution is charged.

The source code is distributed in the hope that it will be useful, but WITHOUT ANY REPRESENTATION or WARRANTY or even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Refer to the source code distribution for additional restrictions regarding warranty and copyrights.

For a complete copy of GNU GENERAL PUBLIC LICENSE Version 2, June 1991 or GNU LESSER GENERAL PUBLIC LICENSE Version 2.1, February 1999 refer to www.gnu.org or contact Basler Electric. You, as a Basler Electric Company customer, agree to abide by the terms and conditions of GNU GENERAL PUBLIC LICENSE Version 2, June 1991 or GNU LESSER GENERAL PUBLIC LICENSE Version 2.1, February 1999, and as such hold Basler Electric Company harmless related to any open source software incorporated in this product. Basler Electric Company disclaims any and all liability associated with the open source software and the user agrees to defend and indemnify Basler Electric Company, its directors, officers, and employees from and against any and all losses, claims, attorneys' fees, and expenses arising from the use, sharing, or redistribution of the software. Review the software website for the latest version of the software documentation.

Portions of this software are copyright © 2014 The FreeType Project (www.freetype.org). All rights reserved.

The following statement applies only to the fontconfig library:

fontconfig/COPYING

Copyright © 2000,2001,2002,2003,2004,2006,2007 Keith Packard

Copyright © 2005 Patrick Lam

Copyright © 2009 Roozbeh Pournader

Copyright © 2008,2009 Red Hat, Inc.

Copyright © 2008 Danilo Šegan

Copyright © 2012 Google, Inc.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of the author(s) not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. The authors make no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

THE AUTHOR(S) DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL THE AUTHOR(S) BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.



Revision History

A historical summary of the changes made to this instruction manual is provided below. Revisions are listed in reverse chronological order.

Visit www.basler.com to download the latest hardware, firmware, and BESTCOMSPlus® revision histories.

Instruction Manual Revision History

Manual Revision and Date	Change
F, Aug-21	- Added support for firmware version 2.06.00 and BESTCOMSPlus version 4.05.00. - Added “Installing previous firmware versions” caution box to Preface. - Added descriptions for Cool Down settings in <i>Device Configuration</i> section. - Added examples for Preheat Before Crank setting in <i>Device Configuration</i> section. - Clarified ESTOP description in <i>Contact Inputs</i> section. - Clarified Mains Fail Transfer Type description in <i>Breaker Management</i> section. - Added missing text under Dead Bus Breaker Close Arbitration heading in <i>Breaker Management</i> section. - Clarified Base Load Control Mode description in <i>Bias Control</i> section. - Added maximum number of generators, tie breakers, and bus segments in <i>Multiple Generator Management</i> section. - Changed Torque Limit and Torque Limit Severe from Status Inputs to Pre-Alarms in <i>BESTlogicPlus</i> section. - Corrected descriptions of Zero Power Request logic elements in <i>BESTlogicPlus</i> section. - Added Block input to Configurable Protection logic elements in <i>BESTlogicPlus</i> section. - Added a line about disabling voltage trim in all machines in <i>Tuning PID Settings</i> section. - Added SPN 3701 in <i>Exhaust Treatment</i> section.
E, Oct-19	- Added support for BESTCOMSPlus version 4.00.00 - Removed Rev Letter from all pages - Changed sequential numbering to sectional numbering - Moved Instruction Manual Revision History into Preface - Removed standalone Revision History chapter
D2, Apr-19	Updated Proposition 65 statement
D1, Oct-18	Added Proposition 65 statement
D, Jul-18	- Added style options for DIN Rail and Rear Panel mounting configurations. - Added “RPM Checksum” setting. - Added description for “Voltage Sensing Fail” function. - Corrected descriptions for Dead Gen Close Enable settings. Dead bus close is not required for dead gen close. - Corrected descriptions for Mains fail status inputs: Power from Gens, Transferring to Mains, and Power from Mains. - Removed “LCD is blank and all LEDs are flashing...” from Troubleshooting chapter.
C, May-18	Maintenance release
B, May-17	- Added support for firmware version 2.04.00 and BESTCOMSPlus version 3.17.00 - Improved description of email setup

Manual Revision and Date	Change
A, Dec-16	• Added Group Start and Group Stop Requests to the Troubleshooting chapter • Expanded coverage of the Emergency Stop Programmable Function • Added caution statement about nonvolatile memory
—, Oct-16	• Initial release

Contents

Device Information	1-1
Security	2-1
Configuration through the Front Panel.....	3-1
BESTCOMS <i>Plus</i> ® Software	4-1
Communication	5-1
Device Configuration.....	6-1
Timekeeping.....	7-1
Engine Sender Inputs.....	8-1
Contact Inputs	9-1
Analog Inputs	10-1
Contact Outputs	11-1
Breaker Management.....	12-1
Synchronizer	13-1
Bias Control.....	14-1
Multiple Generator Management	15-1
Alarm Configuration	16-1
Protection	17-1
Time Curve Characteristics.....	18-1
Configurable Protection.....	19-1
Configurable J1939 Diagnostic Trouble Code (DTC) Detection	20-1
BESTlogic™ <i>Plus</i>	21-1
Tuning PID Settings	22-1
Exhaust Treatment.....	23-1
Troubleshooting	24-1
BESTCOMS <i>Plus</i> ® Settings Loader Tool.....	25-1

