



OPERATOR'S MANUAL



AGC-4



1. General information

1.1 About the Operator's manual.....	3
1.2 Warnings, safety and legal information.....	3
1.2.1 Warnings and notes.....	3
1.2.2 Factory settings.....	3
1.2.3 Legal information and disclaimer.....	3

2. DU-2 buttons and LEDs

2.1 Display layouts for AGC-4.....	5
2.2 Button functions.....	8
2.3 Modes.....	10
2.4 LED functions.....	11
2.4.1 LED colour schemes.....	12

3. LCD display and menus

3.1 LCD display.....	13
3.2 Menus.....	13
3.2.1 Entry window.....	13
3.3 Password management.....	14
3.3.1 Parameter access.....	15
3.4 Setup.....	15
3.5 Views.....	16
3.5.1 Configurable views V1 and V2.....	17
3.5.2 Dynamic view V3.....	17
3.5.3 View menu example.....	17
3.6 Status texts.....	18
3.7 Alarm handling.....	22
3.8 Log list.....	23

4. Maintenance and disposal

4.1 Maintenance.....	24
4.2 Disposal of waste electrical and electronic equipment.....	24

1. General information

1.1 About the Operator's manual

This AGC-4 Operator's Manual describes the DU-2 display unit buttons and LEDs, LCD display, alarm handling and the log list.

A TDU 107 can be used instead of a DU-2. This touch screen display unit has its own operator's manual.



CAUTION

Read this document before starting to work with the controller. Failure to do this could result in human injury or damage to the equipment.

1.2 Warnings, safety and legal information

1.2.1 Warnings and notes

Throughout this document, a number of warnings and notes with helpful user information will be presented. To ensure that these are noticed, they will be highlighted as follows in order to separate them from the general text.

Warnings



DANGER!

This highlights dangerous situations. If the guidelines are not followed, these situations could result in death, serious personal injury, and equipment damage or destruction.



CAUTION

This highlights potentially dangerous situations. If the guidelines are not followed, these situations could result in personal injury or damaged equipment.

Notes



INFO

Notes provide general information, which will be helpful for the reader to bear in mind.

1.2.2 Factory settings

The Multi-line 2 unit is delivered from factory with certain factory settings. These are based on average values and are not necessarily the correct settings for matching the engine/generator set in question. Precautions must be taken to check the settings before running the engine/generator set.

1.2.3 Legal information and disclaimer

DEIF takes no responsibility for installation or operation of the generator set or switchgear. If there is any doubt about how to install or operate the engine/generator or switchgear controlled by the Multi-line 2 unit, the company responsible for the installation or the operation of the equipment must be contacted.



INFO

The Multi-line 2 unit is not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.

Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

2. DU-2 buttons and LEDs


2.1 Display layouts for AGC-4




INFO

The display dimensions are H × W = 115 × 220 mm (4.528" × 8.661").


Engine and generator breaker control (island) (option Y1)

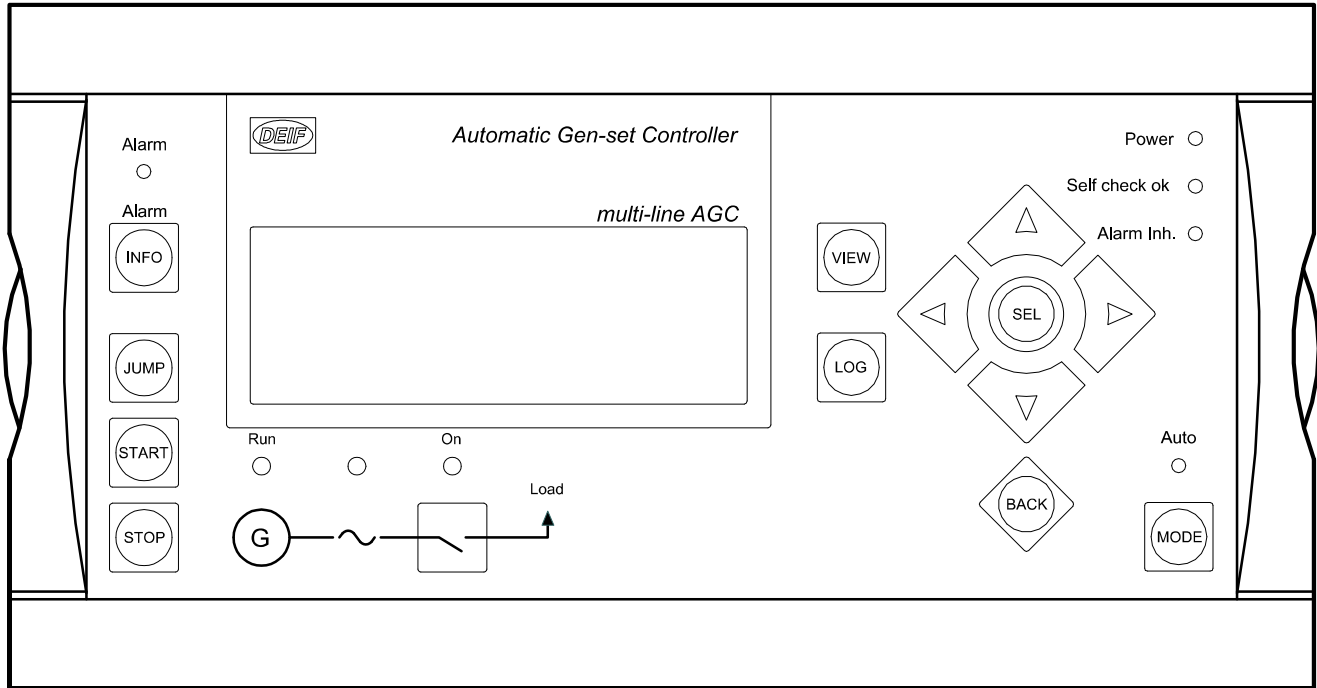


Generator breaker and mains breaker control (option Y3)

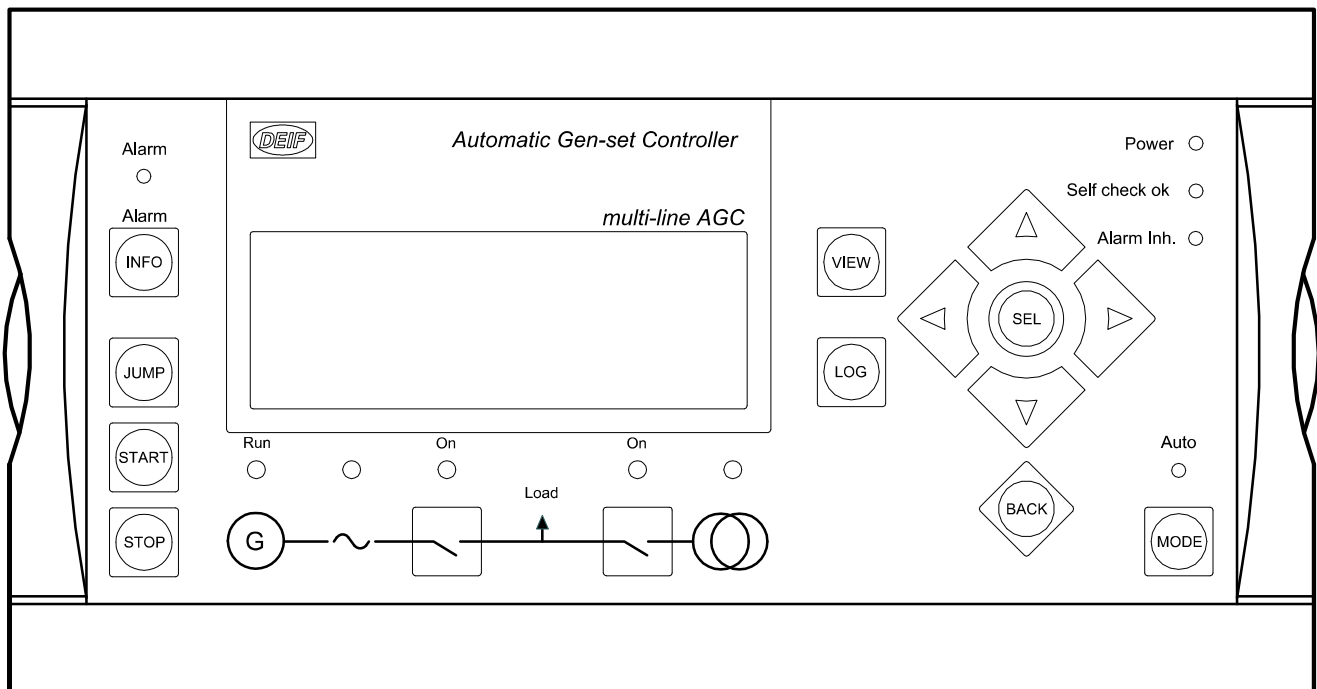


Tie breaker and mains breaker control (option Y4)

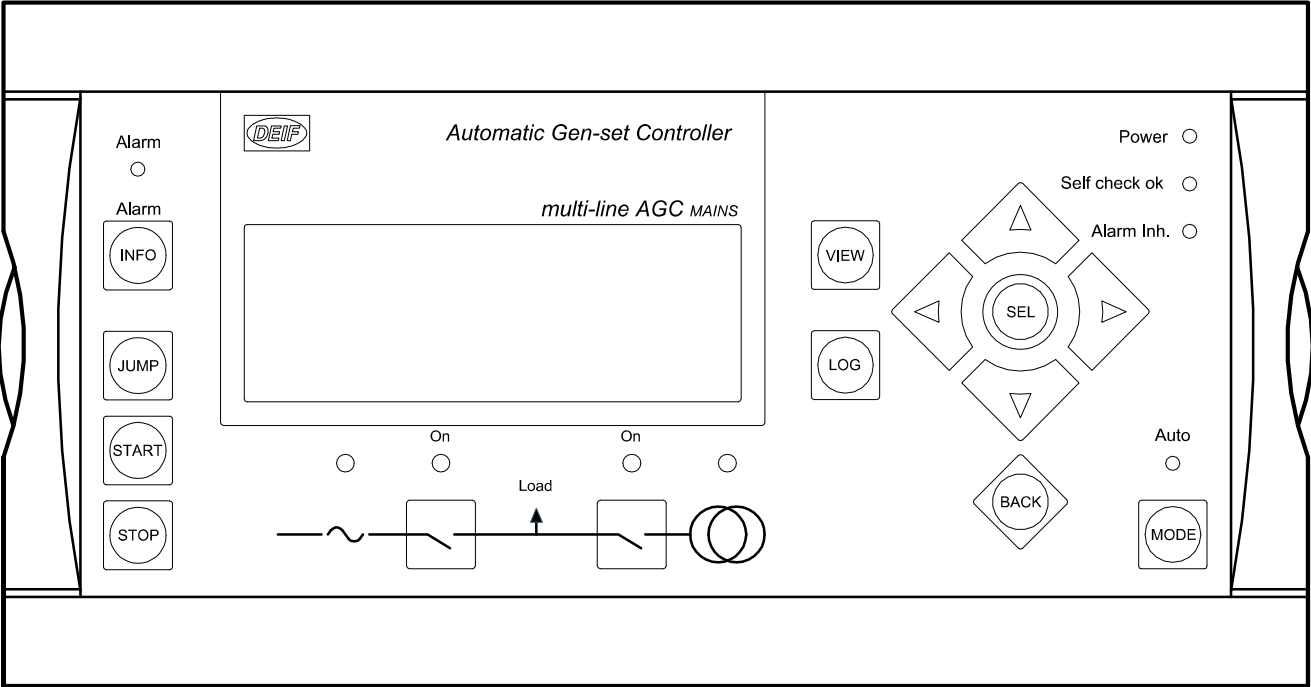


Bus tie breaker control (option Y5)

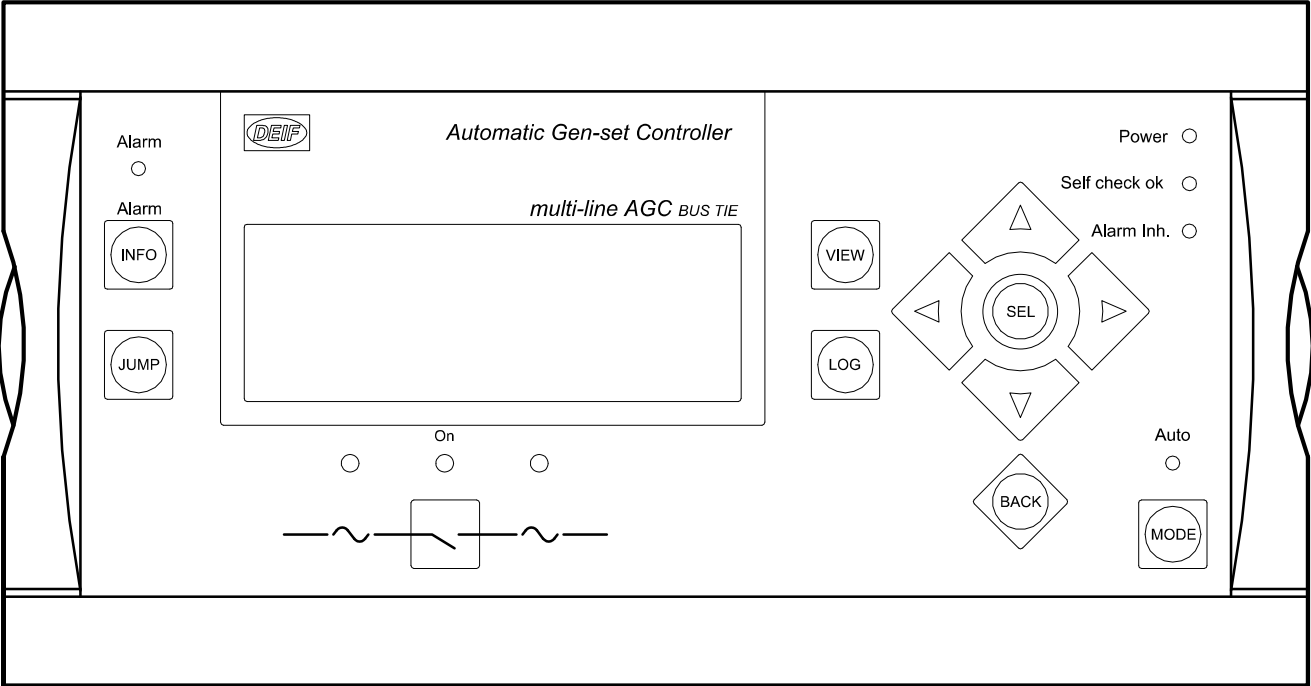

Group control (option Y8)

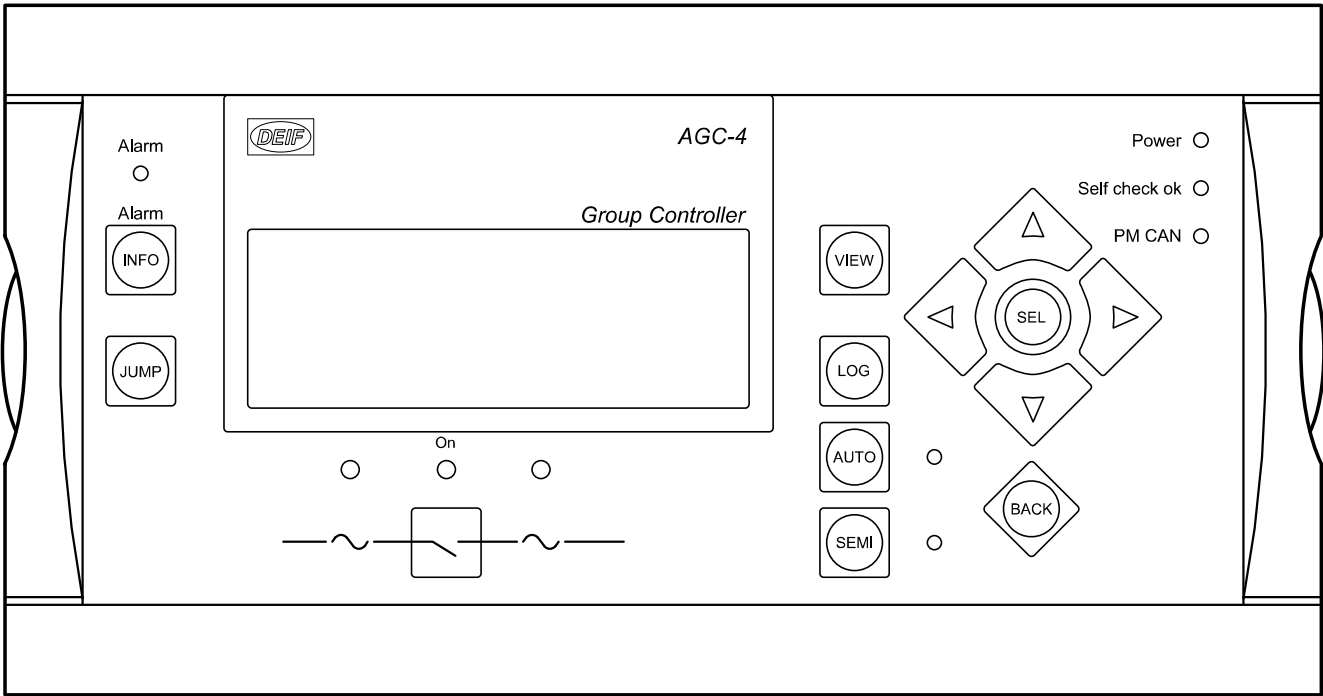


Plant control (option Y9)

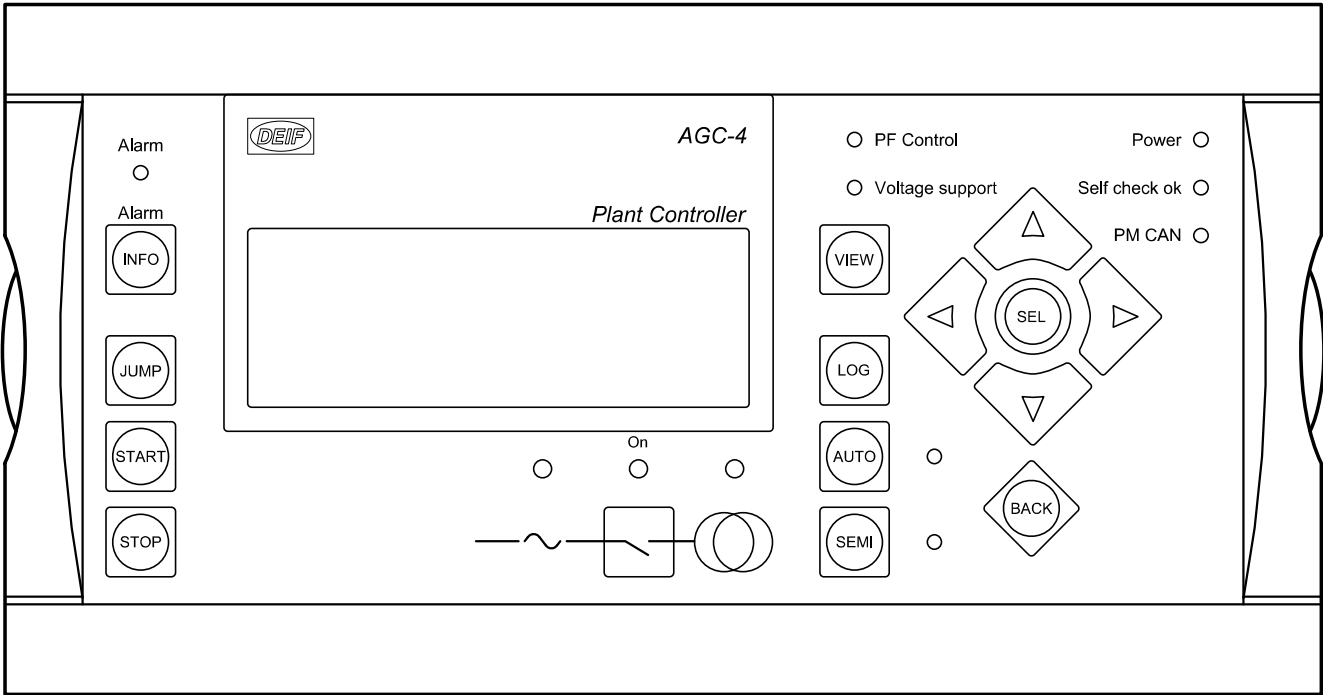


2.2 Button functions

Standard AGC-4 folio

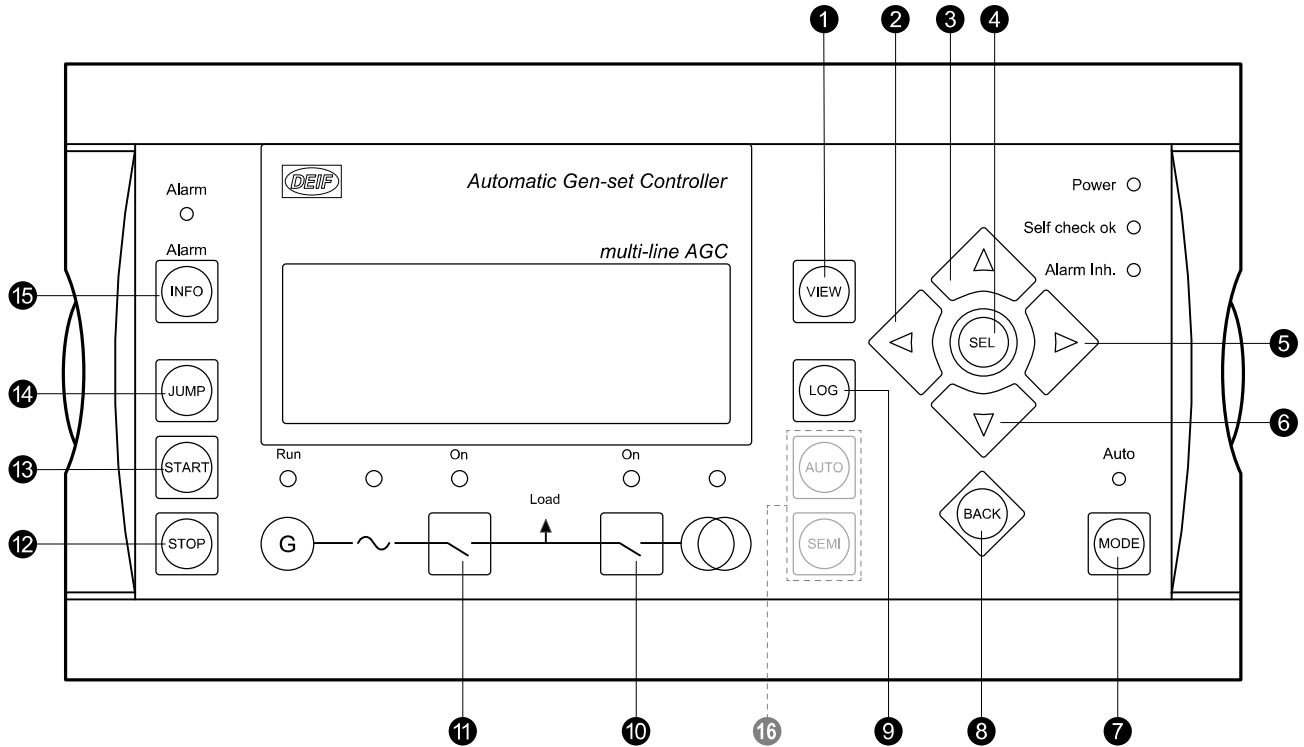

AGC - GER (German) folio

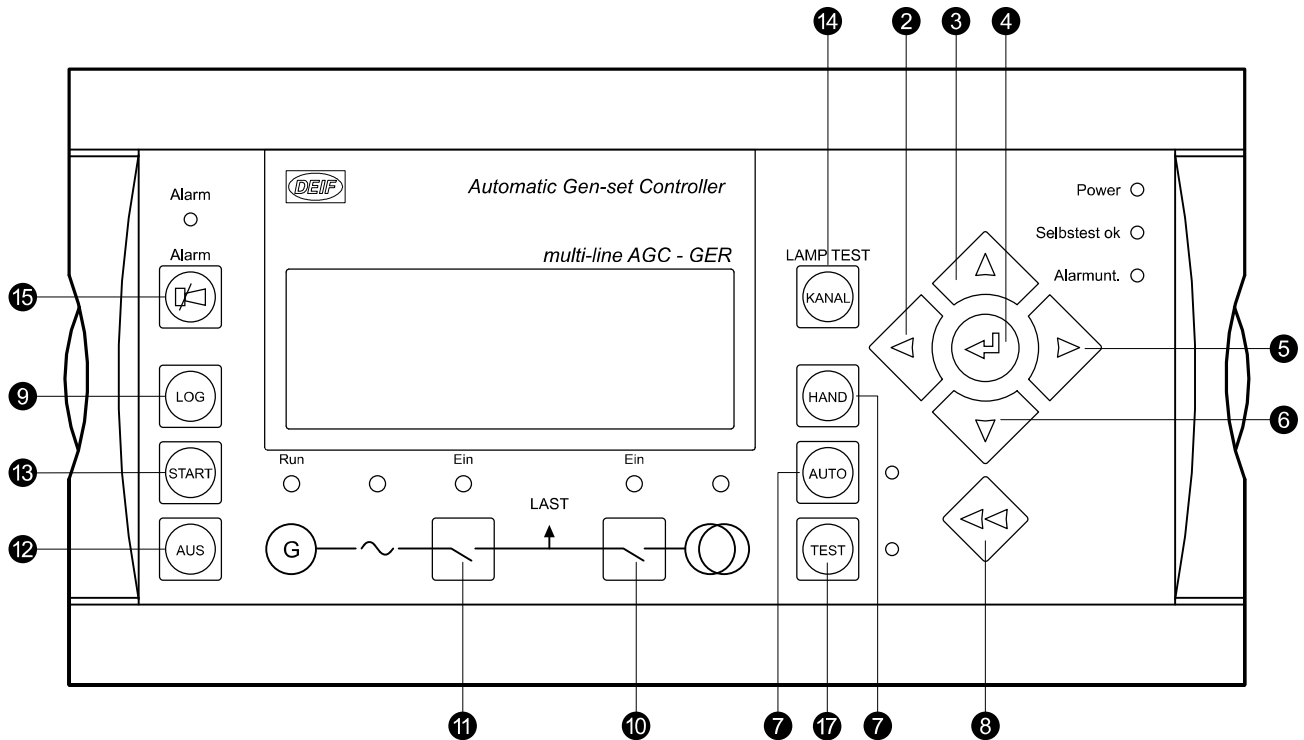

1. Shifts the first line displaying in the setup menus. If more than one DU-2 is connected to the controller, push for 2 seconds to make this DU-2 the master display.
2. Moves the cursor left.
3. Up button: Function depends on context.
 - V1: Scrolls the view lines.

- Setup menu: Displays a different value in the second line.
 - A parameter: Increases the set point.
4. Selects the underscored entry in the fourth line of the display.
 5. Moves the cursor right.
 6. Down button: Function depends on context.
 - V1: Scrolls the view lines.
 - Setup menu: Displays a different value in the second line.
 - A parameter: Decreases the set point.
 7. Changes the menu line (line four) in the display to mode selection.
 - Not present in group and plant controllers.
 8. Jumps one step backwards in the menu (to previous display or to the entry window).
 9. Displays the LOG SETUP window where you can choose between the Event, Alarm and Battery logs. The logs are not deleted when the auxiliary supply is switched off.
 10. Manual activation of close/open breaker sequence if SEMI is selected.
 11. Manual activation of close/open breaker sequence if SEMI is selected.
 12. Stops the genset/plant if SEMI or MANUAL* is selected.
 13. Starts the genset/plant if SEMI or MANUAL* is selected.
 14. Enables the user to use the menu number to select and display any setting.
 15. Shifts the display three lower lines to show the alarm list. By holding the button, all alarms will be acknowledged.
 16. Group and plant controllers: Select AUTO and SEMI mode.
 17. German AGC only: Test button.

*Note: MANUAL mode is not available in German controllers.

2.3 Modes

If the MODE button is pushed, a selection of possible running modes appears in the fourth display line.

Using the  and  buttons moves the cursor, and the appropriate mode can be selected by pressing the SEL button:

Mode	Description
SEMI	- The display buttons (START, STOP, GB ON, GB OFF) are active and can be used by the operator. - The regulators are also active, that is, the speed control will bring the generator to nominal speed upon start. - When pushing a breaker button for closing, the AGC will synchronise (if allowed) the breaker. When the breaker closes, the controls stop.
TEST	The controller will start the generator, carry out the test sequence (pre-defined time period) and stop the generator again. Subsequently, the generator will return to AUTO or SEMI-AUTO mode. The mains breaker will remain closed, and the generator breaker will remain open. NOTE: The test running can be: Simple test: starting the genset without closing the GB; Load test: parallel to the mains and take load to a pre-defined value; Full test: transfer the load to the genset and open the MB.
AUTO	- The controller will automatically carry out the control type selected (AMF, fixed power, and so on). - The display control buttons (START, STOP, GB ON, GB OFF) are disabled. - Mains controller in local (parameter 8021): If the selected running mode is fixed power, mains power export, load takeover or island, timer start/stop (week watch) or binary input, then start/stop can be used.
MAN*	- The display buttons (START, STOP) are active and can be used by the operator. - The regulators are not active, that is, speed (and voltage) control has to take place using binary inputs for UP and DOWN control. - The breakers will be able to open or close at any time. A synchronisation check will always be performed to ensure safe closing of the breakers.
BLOCK	The controller will not be able to start the equipment. BLOCK mode can be selected during standstill and the password is needed to exit BLOCK mode. If BLOCK mode is selected while the genset is running, the mode will have no effect until the genset is stopped. To select another mode after BLOCK mode, the password must be entered.

*Note: Manual mode is not available on the German controller.

To return to the other display functions from MODE selection, press the BACK button.