

MTU_Value*Service* **Technical Documentation**

Gas Engine

8 V 4000 L61

12 V 4000 L61

16 V 4000 L61

Electronics Phase II

Instructions for Exchange
of Assemblies

MS22014/00E



Printed in Germany

© 2008 Copyright MTU Friedrichshafen GmbH

This Publication is protected by copyright and may not be used in any way whether in whole or in part without the prior written permission of MTU Friedrichshafen GmbH. This restriction also applies to copyright, distribution, translation, microfilming and storage or processing on electronic systems including data bases and online services. This handbook is provided for use by maintenance and operating personnel in order to avoid malfunctions or damage during operation.

Subject to alterations and amendments.

1	General Information	05
1.1	Important Notes	05
1.1.1	Prerequisites for maintenance work and general assembly instructions	05
1.2	General Conditions	07
1.2.1	General Instructions	07
1.2.2	Personnel and organizational requirements	08
1.2.3	Safety requirements for maintenance and repair working on the engine	09
1.2.4	Auxiliary materials, fire prevention and environmental protection	12
1.2.5	Standards for warning notices in the publication	14
1.2.6	General information regarding the Tolerances and Wear Limits List	15
1.2.7	Engine side and cylinder designations	16
1.2.8	Tightening torques for screws, nuts and bolts	17
1.2.9	Settings	31
1.2.10	Conversion tables	33
1.2.11	Repairing threaded bores with threaded inserts (Heli-Coil)	39
1.2.12	Abbreviations	41
2	Task Descriptions	43
2.1	Engine Casing and Add-on Components	43
2.1.1	Inspection port cover – Overview	43
2.1.2	Inspection port cover – Preparatory steps	45
2.1.3	Inspection port cover – Removal	46
2.1.4	Inspection port cover – Cleaning sealing faces	47
2.1.5	Inspection port cover – Check	48
2.1.6	Inspection port cover – Installation	49
2.1.7	Inspection port cover – Final steps	50
2.1.8	Cylinder liner – Overview	51
2.1.9	Cylinder liner – Preparatory steps	53
2.1.10	Cylinder liner – Removal	54
2.1.11	Cylinder liner – Cleaning	56
2.1.12	Cylinder liner – Check	57
2.1.13	Cylinder liner – Tolerances	58
2.1.14	Cylinder liner – Installation	60
2.1.15	Cylinder liner – Final steps	63
2.2	Crank Drive	64
2.2.1	Crankshaft PTO, free end – Overview	64
2.2.2	Vibration damper, 16 V – Removal	66
2.2.3	Vibration damper, 16 V – Installation	69
2.2.4	Piston and conrod – Overview	73
2.2.5	Piston and conrod – Preparatory steps	76
2.2.6	Piston and conrod – Removal	77
2.2.7	Piston and conrod – Disassembly	80
2.2.8	Piston – Cleaning	82
2.2.9	Piston – Check	83
2.2.10	Piston – Tolerances	85
2.2.11	Conrod – Check	90
2.2.12	Conrod – Tolerances	92

2.2.13	Conrod – Assembly	96
2.2.14	Piston – Assembly	99
2.2.15	Piston and conrod – Installation	103
2.2.16	Piston and conrod – Final steps	108
2.3	Cylinder Head	109
2.3.1	Cylinder head and attachments – Overview	109
2.3.2	Cylinder head – Preparatory steps	111
2.3.3	Cylinder head – Removal	112
2.3.4	Cylinder head – Cleaning	115
2.3.5	Cylinder head – Installation	116
2.3.6	Cylinder head – Final steps	120
2.4	Control	121
2.4.1	Valve gear – Overview	121
2.4.2	Valve drive – Overview	122
2.4.3	Valve drive – Preparatory steps	125
2.4.4	Valve drive – Removal	126
2.4.5	Valve drive – Cleaning	127
2.4.6	Valve drive – Check	128
2.4.7	Valve drive – Installation	129
2.4.8	Valve drive – Final steps	131
2.5	Gas System	132
2.5.1	Gas system – Overview	132
2.5.2	Gas system, gas control valve (TecJet) – Preparatory steps	133
2.5.3	Gas system, gas regulator valve (TecJet) – Removal	134
2.5.4	Gas control valve – Check	135
2.5.5	Gas system, gas regulator valve (TecJet) – Installation	136
2.5.6	Gas system, gas control valve (TecJet) – Final steps	137
2.6	Exhaust Turbocharger	138
2.6.1	Exhaust turbochargers – Overview	138
2.6.2	Exhaust turbocharger – Preparatory steps	140
2.6.3	Exhaust turbocharger – Removal	141
2.6.4	Exhaust turbocharger – Cleaning	142
2.6.5	Exhaust turbocharger – Check	143
2.6.6	Exhaust turbocharger – Installation	144
2.6.7	Exhaust turbocharger – Final steps	146
2.7	Mixture Cooling	147
2.7.1	Mixture cooler – Overview	147
2.7.2	Mixture cooler – Preparatory steps	149
2.7.3	Mixture cooler – Removal	150
2.7.4	Mixture cooler – Installation	151
2.7.5	Mixture cooler – Final steps	152
2.8	Air Intake/Mixture Supply	153
2.8.1	Air intake/mixture supply – Overview	153
2.8.2	Air filter and air intake – Overview	154
2.8.3	Air filter and air intake – Removal	155
2.8.4	Air filter and air intake – Installation	156
2.8.5	Mixture system before mixture cooler – Overview	157

2.8.6	Mixture line upstream of mixture cooler – Preparatory steps	158
2.8.7	Mixture line upstream of mixture cooler – Removal	159
2.8.8	Mixture system before mixture cooler – Installation	160
2.8.9	Mixture line upstream of mixture cooler – Final steps	163
2.8.10	Mixture system after mixture cooler – Overview	164
2.8.11	Mixture system after mixture cooler – Preparatory steps	165
2.8.12	Mixture pipework downstream of mixture cooler – Removal	166
2.8.13	Mixture pipework downstream of mixture cooler – Installation	167
2.8.14	Mixture pipework downstream of mixture cooler – Final steps	168
2.8.15	Jacket for mixture line – Overview	169
2.8.16	Jacket for mixture line – Removal	170
2.8.17	Jacket for mixture line – Installation	171
2.9	Exhaust System	172
2.9.1	Exhaust system – Overview	172
2.9.2	Exhaust pipework after cylinder head – Overview	173
2.9.3	Exhaust system downstream of cylinder head – Preparatory steps	175
2.9.4	Removing exhaust system downstream of cylinder head – Removal	176
2.9.5	Exhaust pipework after cylinder head – Installation	177
2.9.6	Exhaust pipework after cylinder head – Final steps	179
2.9.7	Exhaust pipework after exhaust turbocharger – Overview	180
2.9.8	Exhaust pipework after exhaust turbocharger – Removal	184
2.9.9	Exhaust system downstream of exhaust turbocharger – Installation	185
2.10	Starting Equipment	186
2.10.1	Starter – Overview	186
2.10.2	Starter – Preparatory steps	187
2.10.3	Starter – Removal	188
2.10.4	Starter – Cleaning	189
2.10.5	Starter – Check	190
2.10.6	Starter – Installation	191
2.10.7	Starter – Final steps	193
2.11	Lube Oil System, Lube Oil Circuit	194
2.11.1	Oil heat exchanger – Overview	194
2.11.2	Oil heat exchanger – Preparatory steps	195
2.11.3	Oil heat exchanger – Removal	196
2.11.4	Oil heat exchanger – Cleaning	197
2.11.5	Oil heat exchanger – Installation	198
2.11.6	Oil heat exchanger – Final steps	199
2.11.7	Turbocharger oil supply, 16 V – Overview	200
2.11.8	Turbocharger oil supply, 16 V – Removal	201
2.11.9	Turbocharger oil supply – Cleaning	202
2.11.10	Turbocharger oil supply, 16 V – Installation	203
2.12	Cooling System	204
2.12.1	Coolant pipework after cylinder – Overview	204
2.12.2	Coolant system after cylinder – Preparatory steps	205
2.12.3	Coolant pipework after cylinder – Removal	206
2.12.4	Coolant pipework after cylinder – Installation	207
2.12.5	Coolant pipework after cylinder – Final steps	208
2.12.6	Coolant pipework from/to mixture cooler (HT-circuit) – Overview	209

2.12.7	Coolant pipework from/to mixture cooler (HT circuit) – Preparatory steps	210
2.12.8	Coolant pipework from/to mixture cooler (HT circuit) – Removal	211
2.12.9	Coolant pipework from/to mixture cooler (HT circuit) – Installation	212
2.12.10	Coolant pipework from/to mixture cooler (HT circuit) – Final steps	213
2.12.11	Coolant ventilation – Overview	214
2.12.12	Coolant vent line – Preparatory steps	216
2.12.13	Coolant vent line – Removal	217
2.12.14	Coolant vent line – Installation	218
2.12.15	Coolant vent line – Final steps	219
2.12.16	Coolant pipework from/to exhaust turbochargers – Overview	220
2.12.17	Coolant pipework from/to exhaust turbochargers – Preparatory steps	221
2.12.18	Coolant pipework from/to exhaust turbochargers – Removal	222
2.12.19	Coolant pipework from/to exhaust turbochargers – Installation	223
2.12.20	Coolant pipework from/to exhaust turbochargers – Final steps	224
2.12.21	Coolant pipework from/to mixture cooler (LT circuit) – Overview	225
2.12.22	Coolant pipework from/to mixture cooler (LT circuit) – Preparatory steps	226
2.12.23	Coolant pipework from/to mixture cooler (LT circuit) – Removal	227
2.12.24	Coolant pipework from/to mixture cooler (LT circuit) – Installation	228
2.12.25	Coolant pipework from/to mixture cooler (LT circuit) – Final steps	229
2.13	Mounting / Support	230
2.13.1	Engine mount – Overview	230
2.13.2	Engine mount – Removal	231
2.13.3	Engine mount – Installation	232
2.14	Monitoring and Control Devices	233
2.14.1	Sensors – Overview	233
2.14.2	Sensors – Preparatory steps	237
2.14.3	Sensors – Removal	238
2.14.4	Sensors – Check	242
2.14.5	Sensors – Installation	243
2.14.6	Sensors – Final steps	250
3	Special Tools	251
3.1	Standard tools – Overview	251
3.2	Special tools – Overview	252
3.3	General workshop equipment – Overview	277
4	Appendix	283
4.1	MTU contact/service partner	283
4.2	Index	285

1 General Information

1.1 Important Notes

1.1.1 Prerequisites for maintenance work and general assembly instructions

This maintenance manual is intended for the technical personnel assigned to exchange of assemblies.

Contents: Instructions on exchange of assemblies

Prerequisites for maintenance work

If maintenance work is carried out by the customer, the following needs to be ensured:

- Observance of safety regulations.
- Deployment of trained and qualified personnel.
- Suitable shop equipment and general tools.
- Suitable testing equipment.
- Approved special tools.

General assembly instructions

Always use new sealing and securing elements for assembly.

Components that come into contact with oil, fuel, engine coolant and combustion air must be clean. Prior to assembly, clean components with "Special cleanness" requirement (e.g. oil and fuel-carrying parts) using suitable cleaning methods and then check for cleanness. Remove any packaging from components immediately before assembly.

Do not wash elastomer components (e.g. rubber, etc.) using diesel fuel, solvent or cold cleaner.

- Remove any oil or fuel film. Wipe parts down with a dry cloth to clean them.
- Do not paint elastomer components, such as e.g. engine mounts, damping elements, clutches and V-belts. Only install them after painting the engine or cover them prior to painting.


Radial shaft seals that have been treated with oil by the manufacturer, have a defined moisture expansion on delivery. Prior to installation, they may only be cleaned using abrasion-proof paper (not washed).

If not otherwise specified, the surfaces of parts that slide on each other should be moistened with SAE 30 engine oil.

If not otherwise specified, O-rings and surfaces (bores or shafts) that slide along them during installation, should be coated with grease. During the assembly of O-rings with counterrings in coolant pumps, observe the assembly instructions. After assembling O-rings in the grooves on shafts, push a rounded scribe under the O-ring in circumferential direction, if the O-ring diameter is large enough. The O-ring may not be damaged.

Prior to assembling shaft seals:

- Coat shaft and sealing lip of shaft seal with grease and coat shaft running surface with thin-film lubricant or SAE 30 engine oil.
- If no other information is specified on the drawing, coat the outer surface of mounting bores on metal outer liners with surface sealant. Coat the outer surface of elastomer outer liners or combined metal/elastomer outer liners with ethanol.

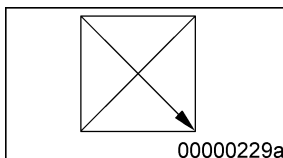

Graphical symbol applies to radial shaft seals and depends on the position. Dimension arrow indicates the position of the sealing lip.

Use sealing paste to fix the position of flat gaskets. Apply sealing paste thinly and in the form of dots on the flat gasket or opposite surface. Flat gaskets should be attached to a component shortly after applying the sealing paste and the sealing point should then be bolted (at the latest after 20 minutes)

Prior to installing antifriction bearings, lubricate the bearing seats. Only take bearings out of their original packaging immediately before installation. Do not remove corrosion inhibitor from bearings in original packaging. To clean the antifriction bearings, use denatured spirit or acid-free kerosene. After cleaning, lubricate bearings with SAE 30 engine oil.

- Do not apply assembly forces (axial) over rolling elements and do not knock bearing rings with hammers (use assembly aids).
- Do not use naked flames to heat inner bearing races!
- The temperature should be between 80°C and 100°C and may not exceed 120°C.
- Freezing as a method for the assembly of anti-friction bearings is not permitted (danger of cracks, rust formation due to condensate).

Do not lubricate dry bearings with oil.

When installing gears, use SAE 30 engine oil to moisten teeth.

Prior to assembly, mating and contact surfaces of components (e.g. contact surfaces for centering, flange and sealing faces, joint surfaces of interference fit assemblies) must be clean, bright or have the specified surface protection and also be free of surface irregularities and damage. Remove any corrosion inhibitor (e.g. oil, grease) from mating and contact surfaces.

After joining components that are chilled with liquid nitrogen, remove any condensate and preserve with SAE 30 engine oil.

Prior to installation in immersion sleeves, coat the sensor area of measuring sensors with long-life lubricant.

Preassemble line links with cutting ring union in the bench vise and tighten; coat thread with thin-film lubricant first.

If components need to be marked by means of etching, use neutralization agent to remove the marking solution afterwards. Preserve the relevant areas with SAE 30 engine oil.

The mating/contact surfaces of components used in the hot-component area (e.g. V-belt clamps, bellows, plug-in pipes), should be coated with assembly paste, if not otherwise specified.

The assembly surfaces of screws, nuts, washer components and parts to be tensioned must be clean, bright or have surface protection and also be free of surface irregularities and damage. Remove any corrosion inhibitors (e.g. oil, grease). Prior to assembly according to tightening specifications, coat threads and screw bearing surfaces with lubricant.

If not otherwise specified, use SAE 30 engine oil as lubricant and in the hot-component area assembly paste.

Screw connections without tightening specification can be tightened freely, i.e. machine-tightening with screwdriver or hand-tightening with open-end wrench or box wrench. For machine-tightening, take the torque specification for thread size and property class from the general tightening specifications.

Screw connections with tightening specification:

- Establish the screw connections by hand-tightening with snap wrench or torque indicator wrench. Apply tightening torque without taking the tolerance specified on the snap wrench into account. If a torque indicator wrench is used, the torque must be within the tightening torque limit range. Proceed in the same way for connections protected against torsion. This information also applies to test torques.
- If no tolerance is specified for the tightening torque, the tightening tolerance is +10 % of the specified torque.
- Rotation angle tightening:
The angles of further rotation specified in the torque specification must be established. They may be exceeded within the specified tolerance range. If no tightening torque is specified, maintain the following tolerances: +5 ° for angle of further rotation below/equal 90 ° +10 ° for angle of further rotation above 90 °. Prior to rotation angle tightening, apply a color line mark to each screw head to allow the inspection of the correct angle of rotation after tightening (exception: the color line mark is not required for tightening using self-monitoring NC screwdrivers).
- Elongation tightening:
Tighten according to tightening specification, taking the tightening tolerance into account.

1.2 General Conditions

1.2.1 General Instructions

General

In addition to the instructions in this publication, the applicable country-specific legislation and other compulsory regulations regarding accident prevention must be observed. This engine is a state-of-the art product and conforms with all applicable specifications and regulations. Nevertheless, persons and property may be at risk in the event of:

- Incorrect use
- Operation, maintenance and repair by unqualified personnel
- Modifications or conversions
- Non-compliance with the Safety Instructions

Correct use

The engine is intended exclusively for the application specified in the contract or defined at the time of delivery. Any other use is considered improper use. The manufacturer will accept no liability for any resultant damage. The responsibility is borne by the user alone.

Correct use also includes observation of and compliance with the maintenance specifications.

Modifications or conversions

Unauthorized engine modifications compromise safety.

MTU will accept no liability or warranty claims for any damage caused by unauthorized modifications or conversions.

Spare parts

Only genuine MTU spare parts must be used to replace components or assemblies. In the event of any damage caused by the use of other spare parts, no liability nor warranty claims vis-à-vis the engine manufacturer will be accepted.

Reworking components

During repair or engine overhaul reworking can be carried out in workshops authorized by MTU.

However, no generally valid instructions can be issued for the reworking of components as the machining tools available on site may differ.

1.2.2 Personnel and organizational requirements

Personnel requirements

Work on the engine must only be carried out by properly qualified and instructed personnel.

The specified legal minimum age must be observed.

Responsibilities of the operating, maintenance and repair personnel must be specified.

Organizational measures

This publication must be issued to all personnel involved in operation, maintenance, repair or transportation.

It must be kept at hand near the engine and accessible at any time to all personnel involved in operation, maintenance, repair or transportation.

The personnel must be instructed on engine operation and repair by means of this publication, and in particular the safety instructions must be explained.

This is especially important for personnel who work on the engine only on an occasional basis. Such personnel must be given instructions repeatedly.

Working clothes and protective equipment

Wear proper work clothing for all work.

Depending on the kind of work, use additional protective equipment, e.g. protective goggles, gloves, helmet, apron.

Work clothing must be tight fitting so that it does not catch on rotating or projecting components.

Do not wear jewelry (e.g. rings, chains etc.).