



Documentation

Fire extinguishing system with Novec™ 1230
for Battery Energy Storage System
mtu EnergyPack QL
Version 2.0

EPS60000/01E



A Rolls-Royce
solution

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to § 15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of Contents

1	Preface		
1.1	Preface	4	
2	Manufacturer's Documentation		
2.1	User Manual Novec™1230 - Fire Extinguishing System	7	
2.2	Fire detection and extinguishing control - reset instructions		45
2.3	Fire detection and extinguishing control - detector switch-off		47
3	Appendix		
3.1	Contact person/Service partner		49

1 Preface

1.1 Preface

This documentation applies solely to the optional fire extinguishing system in your Battery Energy Storage System (BESS) as supplied by Rolls-Royce Solutions.

This documentation includes the following manufacturer's documents:

- User Manual Novec™1230 - Fire Extinguishing System
- Fire detection and extinguishing control – reset Instructions
- Fire detection and extinguishing control – detector switch-off

Keep this documentation where it can be accessed by all persons entrusted with operating or servicing this fire extinguishing system.

Read this documentation carefully before starting any work. Follow all the safety and handling instructions to assure safe operation of the fire extinguishing system. Observe additional safety instructions provided in the BESS Operating Instructions.

Local accident prevention regulations and general safety regulations for the field of application of the BESS also apply.

This documentation forms part of the BESS and refers to the latest design version of the product at the time of publication. It is subject to modification to reflect technical enhancements. Actual product may vary from figures shown.

2 Manufacturer's Documentation

2.1	User Manual Novec™1230 - Fire Extinguishing System	7
2.2	Fire detection and extinguishing control - reset instructions	45
2.3	Fire detection and extinguishing control - detector switch-off	47


2.1 User Manual Novec™1230 - Fire Extinguishing System

Novec™ 1230

User manual

User Manual

Novec™ 1230 – Fire Extinguishing System

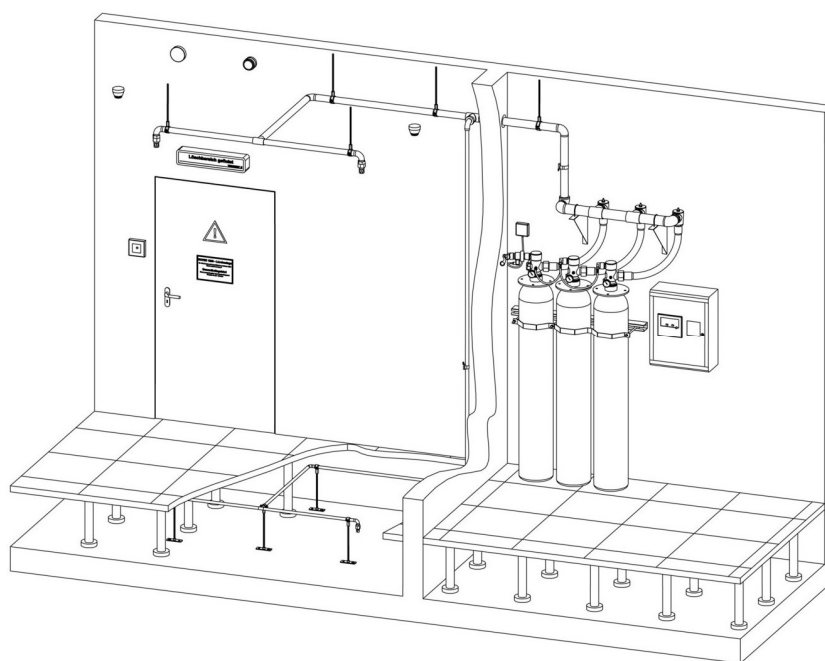

TIM-ID: 0000129944 - 001

WAGNER®



Fire protection system

Novec™ 1230

User manual

WAGNER Group GmbH

Schleswigstrasse 1 - 5

D-30853 Langenhagen

Tel. +49 (0) 511 97383-0

Fax +49 (0) 511 97383-140

e-mail support@wagner.de

Internet www.wagner.de

Item number:

Edition: 02/09

Replaces: --/--

TIM-ID: 0000129444 - 001



Content

0.	General	6
0.1.	Introduction	6
0.2.	Safety instructions	7
0.2.1.	Handling of pressure tanks	7
0.2.2.	Note to the operator	8
0.3.	Warranty	8
0.4.	Copyright	8
0.5.	Registered trademark	8
0.6.	Hazard assessment	9
1.	System description	9
1.1.	General Information	9
1.2.	Extinguishing agent	10
1.2.1.	Novec™ 1230 substance data	11
1.3.	Description of components	12
1.3.1.	Tank valve assembly	13
1.3.1.1.	Dimensions of the Novec™ 1230 -tank/valve assemblies	13
1.3.1.2.	Filling ranges of the Novec™ 1230 tank/valve assemblies	13
1.3.2.	Fixing accessories	13
1.3.3.	Release mechanisms	14
1.3.3.1.	Electrical release mechanism	14
1.3.3.2.	Manual release mechanism	15
1.3.3.3.	Pneumatic release mechanism	15
1.3.4.	Installation accessories for control lines	15
1.3.4.1.	Flexible release hoses	15
1.3.4.2.	Screw-in nipples, elbows and connectors	16
1.3.4.3.	Safety bleed valve	16
1.3.4.4.	Adapters	17
1.3.5.	Installation accessories for extinguishing agent lines	17
1.3.5.1.	Flexible extinguisher hoses	17
1.3.5.2.	Valve outlet adapter	18
1.3.5.3.	Non-return valve for manifold	18
1.3.5.4.	Contact pressure gauge	19
1.3.5.5.	Pressure gauge	19
1.3.5.6.	Inhibition monitoring switch	19
1.3.6.	Extinguishing nozzles	20
1.3.7.	Extinguishing pipework system	20
1.3.8.	Fire detection, control and alarm sounding	21
1.3.8.1.	Extinguishing control panel	21
1.3.8.2.	Smoke detectors	22
1.3.8.3.	Push button detector as manual release mechanism	22
1.3.8.4.	Strobe light	23
1.3.8.5.	Horn	23
1.3.9.	Display	23
1.3.9.1.	Display panel	23
1.3.9.2.	Warning sign	24
1.3.9.3.	Warning triangle	24
1.3.10.	Accessories	24
1.3.10.1.	Tensioner for electrical release button	24
2.	Operation	26

