



SPARE PART CATALOG

RPSUG12V1600-1B0/9110100065



A Rolls-Royce
solution

© Copyright Rolls-Royce Solutions GmbH

© Copyright Rolls-Royce Solutions Augsburg GmbH

© Copyright Rolls-Royce Solutions America Inc.

This Publication is protected by copyright and may not be used in any way whether in whole or in part without the prior written permission of Rolls-Royce Solutions. This restriction also applies to copyright, distribution, translation, microfilming and storage or processing on electronic systems including data bases and online services.

This handbook is provided for use by maintenance and operating personnel in order to avoid malfunctions or damage during operation.

Subject to alterations and amendments

Business Portal Online Print 11-06-2023

Preface

This catalog is the basic reference document for ordering spare parts. Illustrations are provided for extensive assembly operations to assist trained personal in conducting such operations but do not claim to be complete. For better overview, even product components that are not available as spare parts are shown.

The individual components were taken from the assembly list.

Catalog Arrangement

The catalog is subdivided into functional groups to aid in locating the individual parts.

The headings of the illustration pages contain the following information:

- **MODEL:** (Engine model)
- **SERIAL NO.**
- **FG/FGS DESIGNATION**
- **FG/FGS NO.**
- **BOM NO.**

Explanation of Columns

- **ITEM:** Provides a cross-reference from illustration to text section.
- **PART NO.:** This is the valid number for ordering the associated part.
- **DESIGNATION:** The precise part name.
- **QTY. (Quantity in Unit):** This column indicates the quantity of this part required for the functional group. Quantities not stated are available on request.
- **UNIT:** The 2-character codes indicate: EA=each, KG= Kilogramm, MR= Meter, RL= Roll, SE= Set
- **FN. (Footnote):** Provides additional parts information. For clarification of footnote symbols, see Page 2.
- **DIMENSIONS:** This column contains standard-part dimensions or manufacturer designations for purchased parts.
- **STANDARD**

Amendments Service

Part No. changes and amendments which occur after publication of the catalog will not be published. We therefore recommend updating of the catalog part numbers by the end user. This information is provided, for instance, in order confirmations and/or on equipment labels.

Footnote Symbols Identification

AB	Only available complete. Repair by manufacturer only.
AC	Not scheduled as a spare part. Availability must be checked.
ACN	Not scheduled as a spare part. Availability must be checked. Component only available complete.
EM	Emission-relevant part. In the case of all marine engines with IMO certification it should be noted that the identification numbers of the emission-relevant parts on the engine must match the details given in the technical file. When ordering, quote EM code with order no. E.g: 535 030 10 17 EM.
EMN	Emission-relevant parts. Component only available complete.
KD	Group balancing required
KE	Individual part; not scheduled as a spare part.
KF	Adjusted spare part.
KFN	Adjusted spare part. Component only available complete.
M	Spares-related components or parts with different repair sizes. Dimensions are listed in the Tolerances and Wear Limits List.
MN	Spares-related components or parts with different repair sizes. Components only available complete.
MUB	Spares-related components or parts with different repair sizes. Available only as complete set.
NN	Component is not broken down into further sub-components.
P	List of bought-in components
SB	Group of parts which are welded or brazed together
UA	Indicate dimensions when ordering
UB	Only supplied complete or as a complete set.

Ordering Procedure

The following information is essential for spare-part order processing:

- Serial type
- Serial number (see engine name plate)
- FG/FGS
- ITEM
- Order number
- Designation
- Quantity
- Page

When ordering replacement parts for ancillary equipment such as injection pumps, fuel pumps, etc., give both model and part number of the part.

Phone orders should be confirmed in writing to prevent errors.

Ordering Example:

Engine model	Serial number	FG/FGS	Pos	Order number	Designation	Quantity	Page
6H1800R82P	MA30016/00DE	031 88	5	5270300701	Crankshaft	1	33
6H1800R82P	MA30016/00DE	083 05	10	0020922801	Easy-Cange Filter	2	92

Factory Repairs

Parts shipped to Rolls-Royce Solutions for repair should have an engine serial-number identification (tag or label, for example).

Exchange Components (Reman)

Exchange components are parts overhauled by the manufacturer, providing the same properties with regard to service life and quality as new parts.

Components which are included in the Reman exchange procedure, are marked by the following letters added before the item number:


For instance: **E 524 010 3520 = New component in exchange procedure**
 R 524 010 3520 = Reman component in exchange procedure

Exchange Procedure

With the introduction of exchange components, the so-called core deposit will also be charged for new parts. The core deposit will be indicated separately on the invoice and the respective value will be credited upon return of reusable components.

Further information upon request.

Engine Side And Cylinder Designations

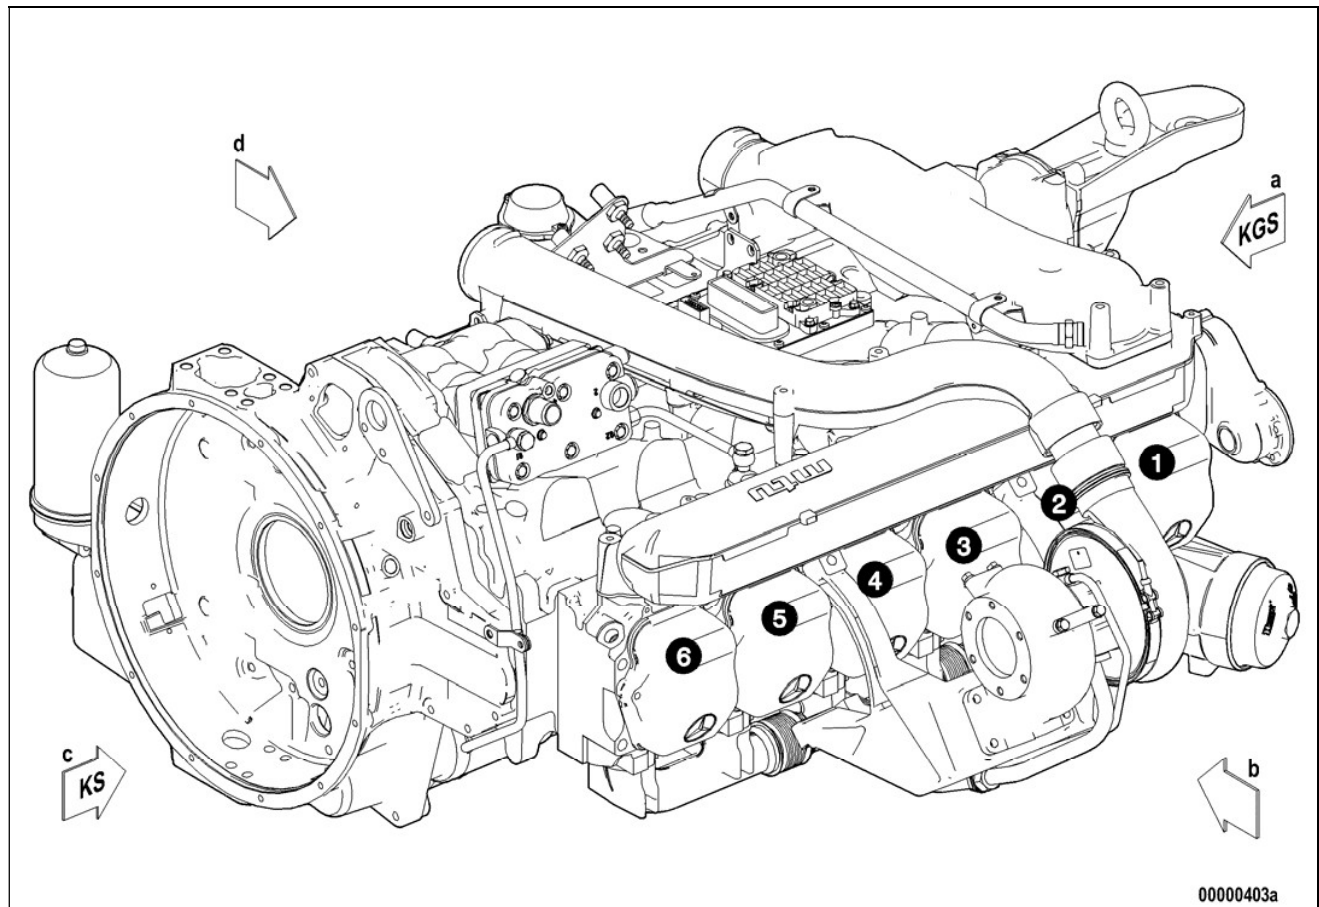

Engine sides are always designated as viewed from the driving end (according to DIN standard No. 73021).

Designations and Abbreviations

Driving end	= KS
Free end	= KGS
Left side	d
Right side	b
Upper side	
Lower side	
Turbocharger	= ATL

EQUIPMENT TYPE
PRODUCT TYPE
SERIAL NUMBER

Engine
12V1600R70L
16701004837

System
RPSUG12V1600-1B0
9110100065

EQUIPMENT TYPE
PRODUCT TYPE
SERIAL NUMBER

Engine
12V1600R70L
16701004837

FG FG DESIGNATION

004 LABELS AND MISCELLANEOUS MATERIALS

011 CRANKCASE

014 CRANKCASE BOTTOM PART

015 ENGINE MOUNTING

016 END HOUSING, DRIVING END AND FREE END

018 CRANKCASE VENTILATION

021 GEAR CASE, DRIVING END

022 GEAR TRAIN, DRIVING END

025 GEAR TRAIN, AUX PTO END

027 AUXILIARY POWER TAKE-OFF

028 BELT DRIVE

031 CRANKSHAFT WITH BEARING

032 CRANKSHAFT, PTO DRIVING END

035 CRANKSHAFT PTO FREE END

037 PISTON

038 CONROD

041 CYLINDER HEAD

073 INJECTION PUMP / HP PUMP

075 INJECTION VALVE / INJECTOR

077 HP FUEL LINE / HP LINE

083 FUEL FILTER

096 ELECTRONIC ENGINE GOVERNOR (ON-ENGINE SCOPE OF SUPPLY)

101 EXHAUST TURBOCHARGER, GENERAL OR HP TURBOCHARGER

124 AIR PIPING TO CYLINDERS

141 EXHAUST LINES AFTER CYLINDER HEAD

172 ELECTRIC STARTING

181 LUBE OIL PUMP WITH DRIVE

183 OIL FILTRATION/COOLING

184 CRANKCASE-INTERNAL OIL SUPPLY

185 OIL SUPPLY OF EXHAUST TURBOCHARGERS

188 CONNECTIONS FOR ENGINE OIL SUPPLY

202 COOLANT CIRCUIT GENERAL, IF APPLICABLE, HT CIRCUIT

203 LOW-TEMPERATURE CIRCUIT


231 ENGINE MOUNTING

507 GENERAL CABLING, FOR ENGINE / GEARBOX / GENSET


508 ACCESSORIES F. ENGINE GOVERNOR (ELECTRONIC) / CONTROL SYSTEM

ZZ loose accessories

GROUP SEGMENT (FGS)
GROUP NAME
BOM-No.

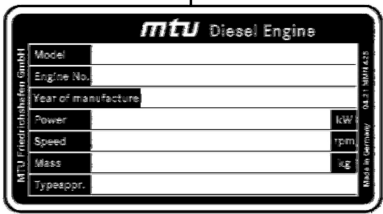

05
EU TYPE PLATE ENGLISH
XS524000.00093

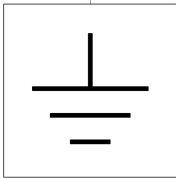

05
PLACARD FOR GROUND CONNECT.
XS575000.00129