

SMCS - 4251, 4267

i06222523

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	FT-1411	Lifting Bracket	2
B	138-7575	Link Bracket	2
C	1P-0510	Driver Group	1
D	138-7574	Link Bracket	2

Start By:

- a. Remove the rear service and parking brake. Refer to Disassembly and Assembly, "Service and Parking Brake (Rear) - Remove".

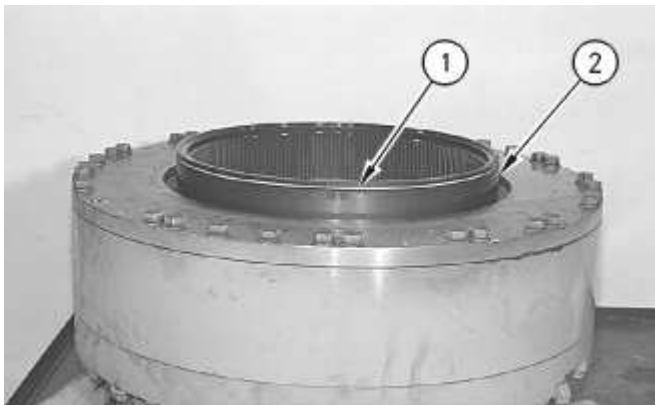


Illustration 1

g00648729

- 1. Remove ring seal (1) from brake hub (2).



Illustration 2

g00648734

2. Remove seal ring (3) from brake hub (2).



Illustration 3

g00648737

3. Position the rear service and parking brake on wood blocks, as shown. The weight of the service and parking brake is 630 kg (1390 lb).
4. Remove bolts (4) and the hard washers that hold the anchor assembly to the ring.



WARNING

Sudden release of spring force can cause injury.

To prevent the possibility of injury, follow the procedure to relieve the spring pressure.

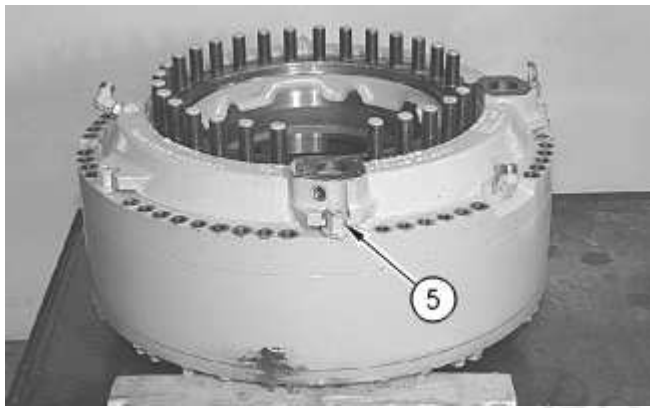


Illustration 4

g00648740

5. Slowly loosen nuts (5) evenly until the spring force on the anchor assembly is released.

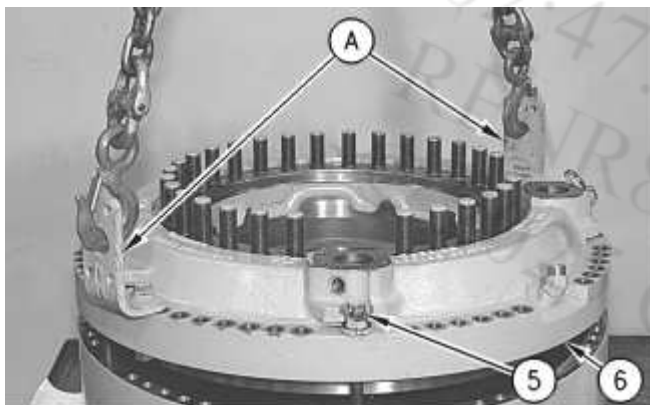


Illustration 5

g00648745

6. Attach Tooling (A) and a suitable lifting device to anchor assembly (6). Remove five nuts (5) from the studs. Remove anchor assembly (6) from the ring. The weight of the anchor assembly is approximately 259 kg (571 lb).

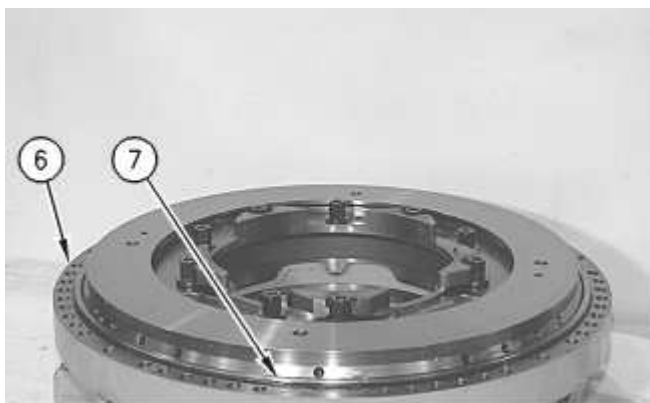


Illustration 6

g00648747

7. Turn over anchor assembly (6), as shown. Remove O-ring seal (7) from anchor assembly (6).

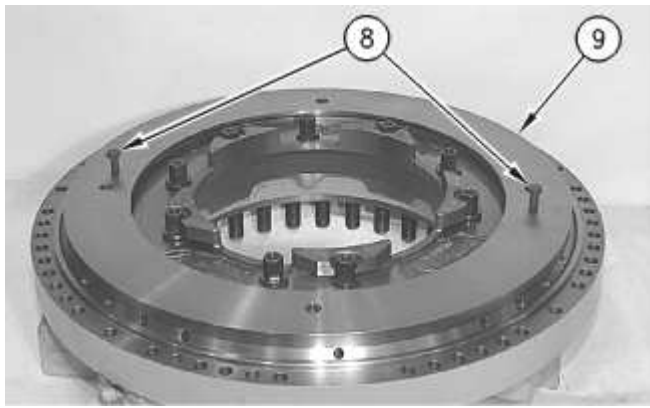


Illustration 7

g00648749

8. Install two 1/2 in - 13 NC forcing screws (8) in piston (9), as shown. Tighten the forcing screws evenly until there is approximately 25 mm (1 inch) between the two pistons.

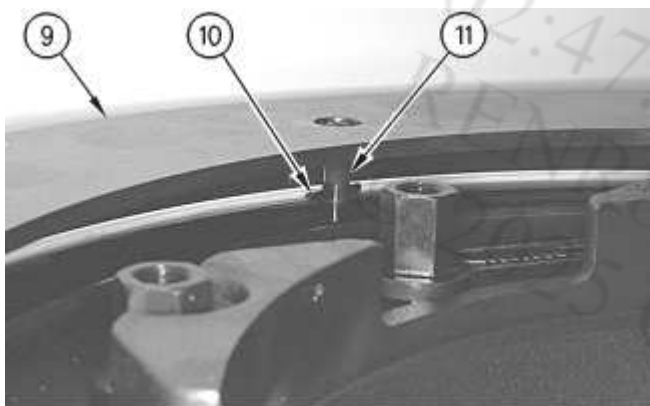


Illustration 8

g00648750

9. Install four 1/8 in x 1 in pins (10) in the holes of four spring guides (11) beneath piston (9).
Note: Pins (10) are used to hold the springs under compression so that piston (9) can be removed from the anchor assembly without releasing the springs.

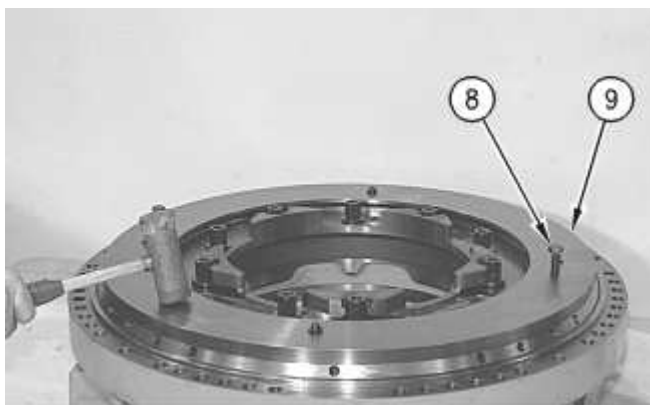


Illustration 9

g00648753

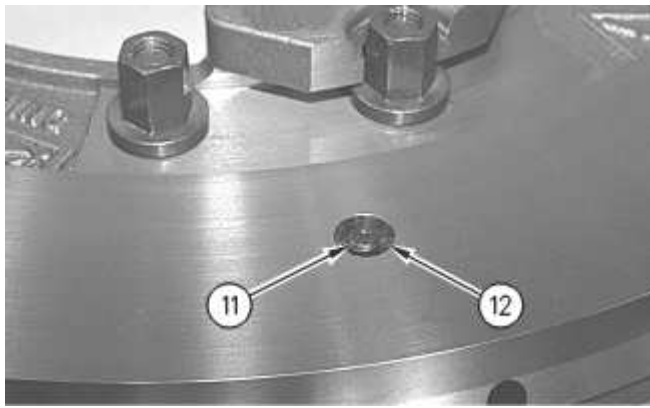


Illustration 10

g00648754

10. Loosen two forcing screws (8). Use a soft faced hammer in order to push piston (9) downward until four pins (12) can be removed from four spring guides (11).



Illustration 11

g01033778

11. Install Tooling (B) and a suitable lifting device in piston (9). Remove piston (9) from anchor assembly (6). The weight of piston (9) is approximately 45 kg (100 lb).

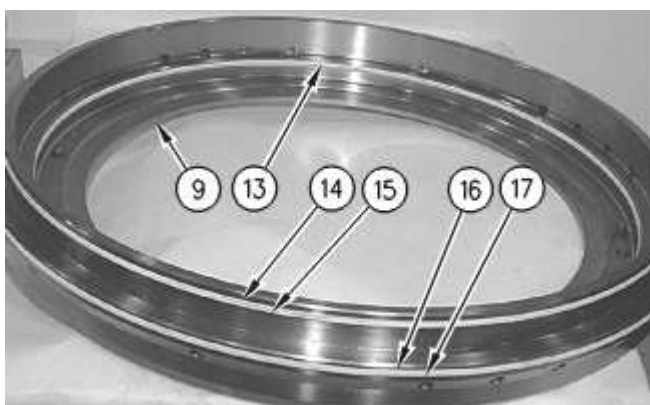


Illustration 12

g00648759

12. Turn over piston (9), as shown. Remove seal ring (13) from piston (9).
13. Remove seal (14) and ring seal (15) from piston (9).

14. Remove ring seal (16) and ring seal (17) from piston (9).

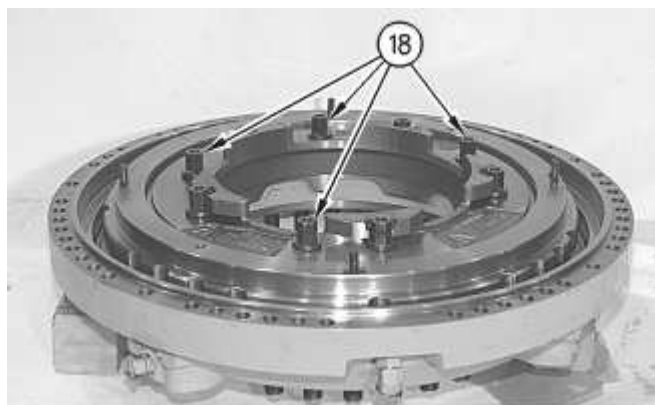


Illustration 13

g00648760

15. Remove nuts (18).

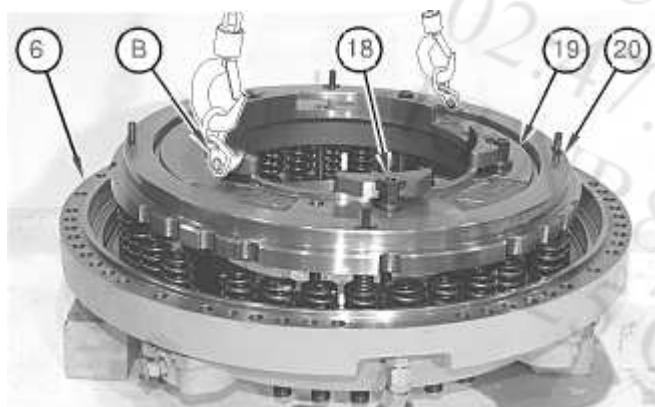


Illustration 14

g01033779

16. Install Tooling (B) and a suitable lifting device in piston (20).



WARNING

Sudden release of spring force can cause injury.

To prevent the possibility of injury, follow the procedure to relieve the spring pressure.

17. Slowly loosen the five remaining nuts (18) evenly until the spring force is released. Remove five nuts (18). Remove housing (19) and piston (20) as an assembly from anchor (6). The weight of the assembly is 70 kg (154 lb).

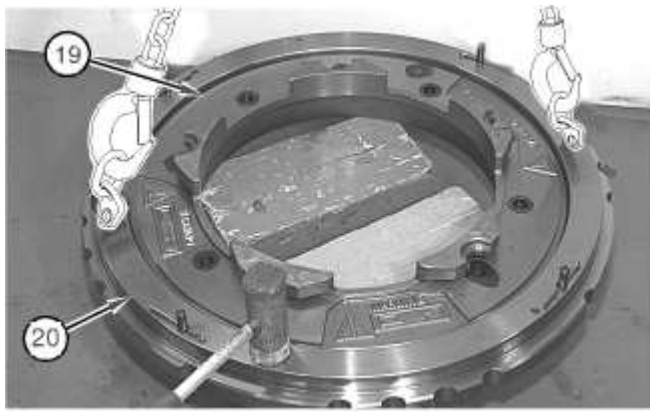


Illustration 15

g01033781

18. Position housing (19) and piston (20) on wood blocks, as shown. Use a soft faced hammer in order to separate piston (20) from housing (19). The weight of the housing is approximately 30 kg (66 lb). The weight of the piston is 40 kg (88 lb).



Illustration 16

g00648766

19. Remove seal (21) and ring seal (22) from housing (19). Remove seal (23) and ring seal (24) from housing (19).



Sudden release of spring force can cause injury.

To prevent the possibility of injury, follow the procedure to relieve the spring pressure.

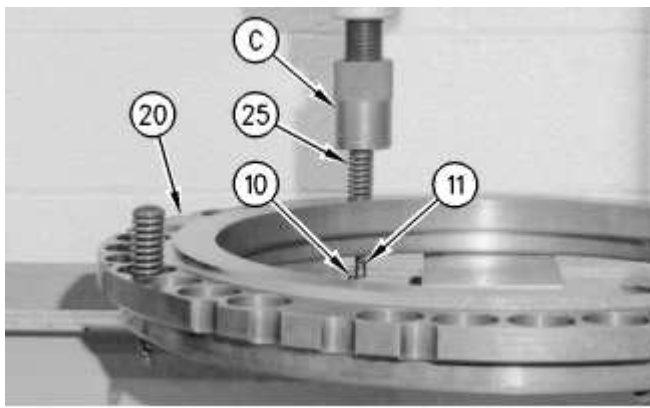


Illustration 17

g00648767

20. Position piston (20) and Tooling (C) in a suitable press, as shown. Use the press and Tooling (C) in order to compress spring (25) until pin (10) can be removed from spring guide (11). Slowly release the pressure on spring (25). Remove spring (25) and spring guide (11) from piston (20).

21. Repeat Step 20 for the remaining three springs (25), spring guides (11), and pins (10).

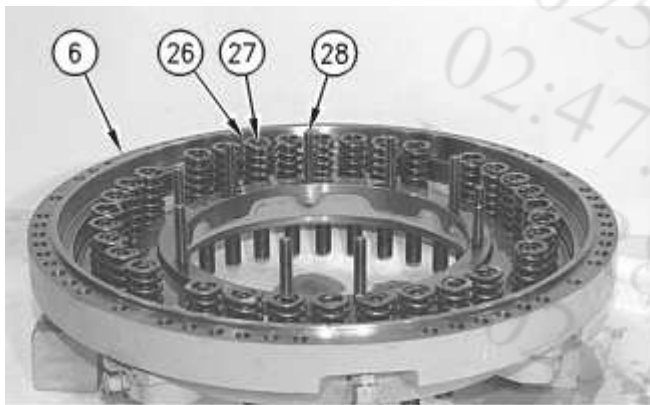


Illustration 18

g00648768

Note: Label the location of the four missing inner springs for assembly purposes.

22. Remove outer springs (26) and inner springs (27) from anchor assembly (6).

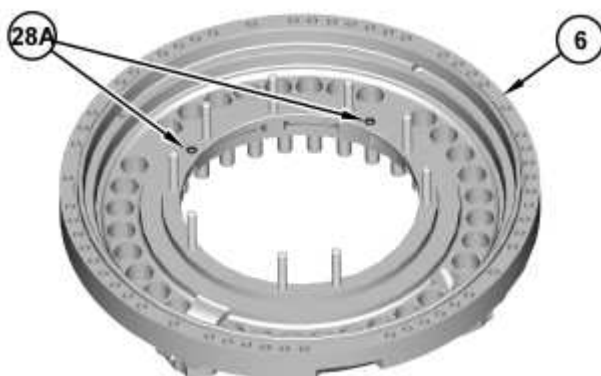


Illustration 19

g03861180

23. Remove two seals (28A) from anchor assembly (6).



Illustration 20

g00697448



Illustration 21

g00697462

24. Use two people in order to remove brake hub (2) from location (X). The weight of the brake hub is 45 kg (100 lb).

25. Remove top damper assembly (29).

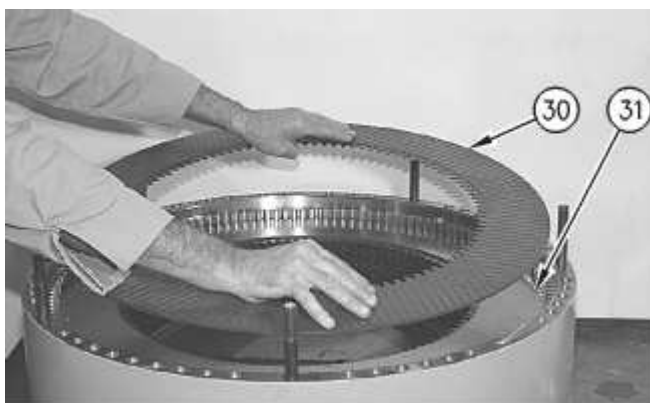


Illustration 22

g00648775

26. Remove 15 friction discs (30) and 14 outer plates (31) in alternating order. Remove the bottom damper assembly (not shown).

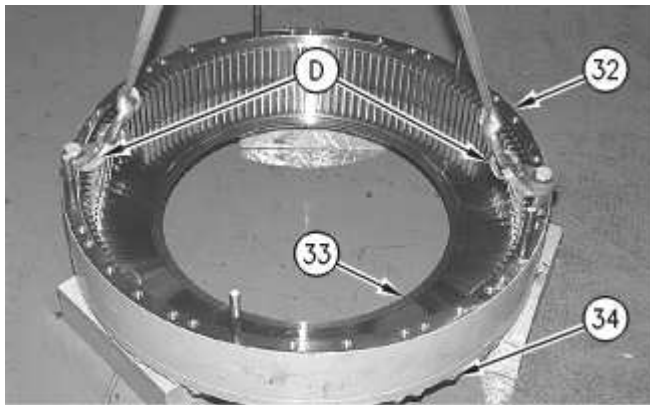


Illustration 23

g00648777

27. Attach Tooling (D) and a suitable lifting device to ring (32). Remove bolts (34) and the hard washers that hold plate (33) to ring (32). Remove ring (32) from plate (33). The weight of ring (32) is approximately 100 kg (220 lb).

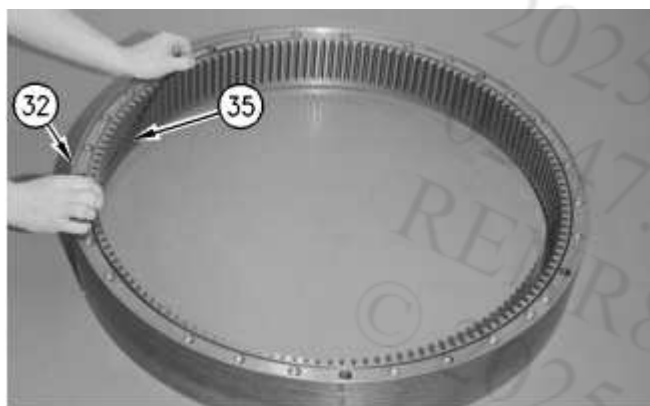


Illustration 24

g00648788

28. Turn over ring (32). Remove O-ring seal (35) from ring (32).

PSP-0007BF75

2025/01/17

02:47:16+07:00

i01317044

© 2025 Caterpillar Inc.