


JETSON 40-PIN HEADER

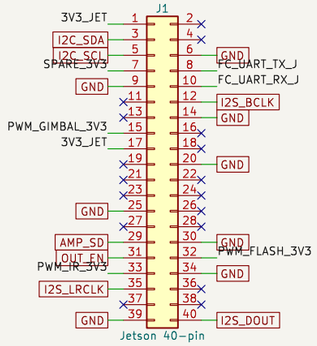


POWER INPUTS




I2S SPEAKER AMPLIFIER

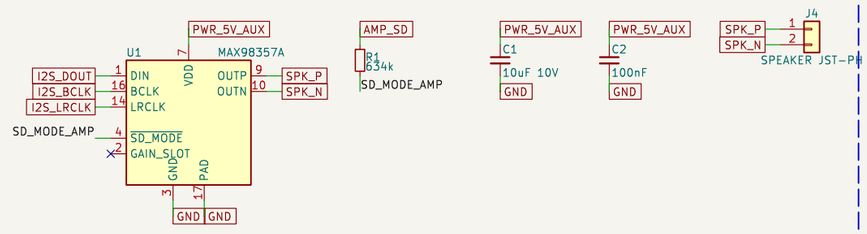

PWM BUFFER & ENABLE

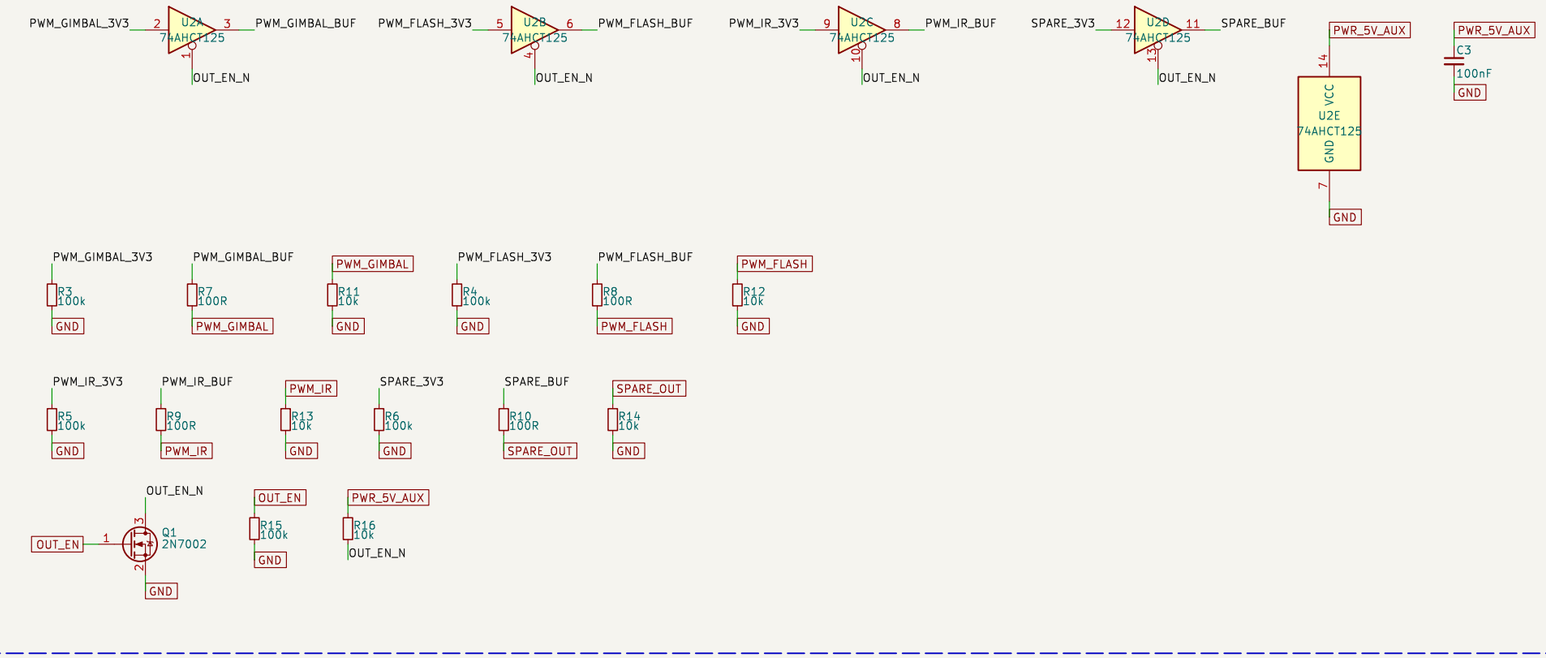

OUTPUT CONNECTORS

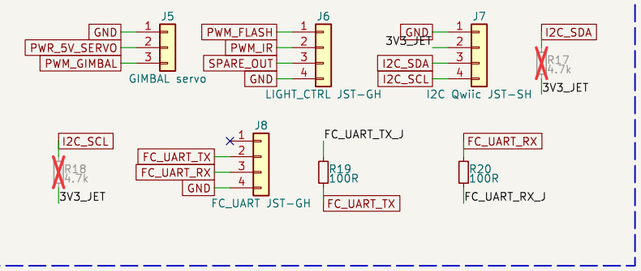

MECHANICAL



POWER FLAGS (ERC)



NOTES

1. Header pins 2 and 4 (Jetson 5 V) are intentionally unconnected: the HAT runs from PWR_5V_AUX on J2.
2. R1 sets the MAX98357A SD_MODE level with the amp's internal pull-down; 634k from 3.3 V targets (L+R)/2. Verify against the SD_MODE table.
3. U2 uses the 74LVC125 symbol (same pinout); fit a 74AHCT125 so 3.3 V inputs give 5 V outputs.
4. OUT_EN low (boot/reset): Q1 off, OUT_EN_N high, U2 outputs Hi-Z and pulled low. Lights off, no servo pulses.
5. R17/R18 I2C pull-ups are DNP. Fit only if the carrier has none on pins 3/5.

Rev A bootstrap
Bootstrapped by hardware/tools/gen_kicad.py; edit in KiCad from here on
Enable PWM and I2S pins with jetson-io.py before use
Jetson 40-pin header: I2S amp, buffered PWM (3.3 V to 5 V), safe-at-boot enable

Jetson drone electronics

Sheet: /
File: hat.kicad_sch

Title: HAT — Jetson I/O HAT

Size: A3	Date: 2026-11-06	**Rev: A**
KiCad E.D.A. kicad-cli 7.0.11+dfsg-1build4		Id: 1/1