


alfanar Cloud Video Door Intercom User Manual

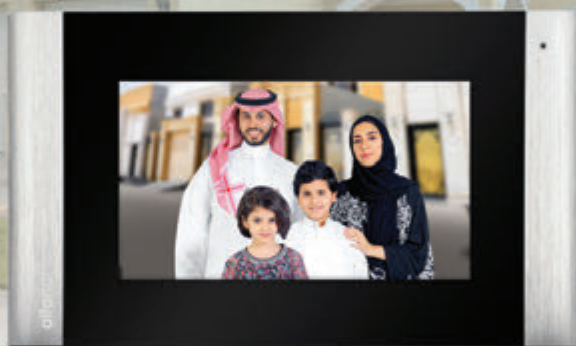

Model alfanar Villaset	ODU	IDU	PS-18E	SWITCH8-POE
Version	IoT-VIP02C-A - Version 1.0			

Thank you for purchasing **alfanar** product
Please read these User Instructions before using the product and keep for future reference

Table of Contents

1. Main Screen	3
2. Doors & Rooms Screen	4
3. Recent Calls & Photos	5
4. IP Cameras	5
5. Smart Home	6
6. Settings	6
7. General	7
8. Mobile Application	9
8.1. Registration	9
8.2. Adding Doors	10
8.3. CALL SCREENS	13
8.4. CALL AND MEDIA RECORDINGS	14
8.5. Settings	15
9. Technical Specifications	17
9.1. Technical Specifications of Outdoor Unit	17
9.2. Technical Specifications of Indoor Unit	18
9.3. Adapter User Manual	19
9.4. PoE Switch User Manual	20

1. Main Screen

Icons in the main screen have the following functions:

a) HISTORY CALLS:

Checking incoming/outgoing/unanswered calls. It is also used to save the pictures of unanswered calls and the picture taken during calls.

b) CAMERAS:

Monitoring IP cameras connected to the network.

c) ROOMS & DOORS:

Making connection/calls to rooms and door panels.

d) SMART HOME:

Activating smart home related features. Type of smart home is selected from SETTINGS/Smart Home

e) GALLERY:

Viewing all saved photos and videos from calls

f) SETTINGS:

SETTINGS icon is located on the right upper corner to control all settings of the device and functionalities

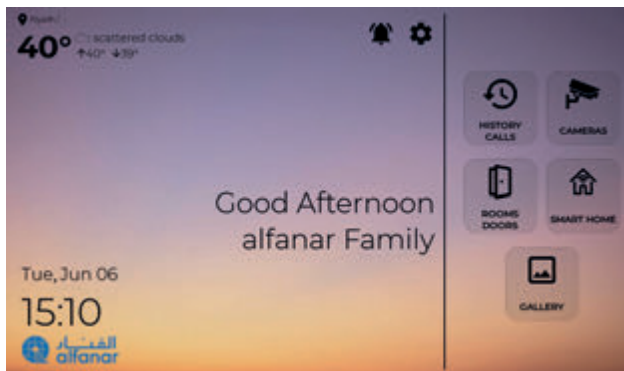


Figure 1: Main Screen

2. Doors & Rooms Screen

It is used to call the other rooms and connect to the door panels. Call/ connection is initiated by touching the related icon.

Up to 4 doors and 4 rooms can be connected in a single network. Non-connected devices disappear from the screen.



Figure 2: Doors and Rooms

- a) If parallel monitors are connected, they (4 of them) all ring at the same time.
- b) Rooms: All room devices can make calls between each other.
- c) Doors: Up to four door panels can be connected to the network. By touching the related door icon, connection to the door panel is established. It is possible to see the camera of the panel, talk and open the door.

3. Recent Calls & Photos

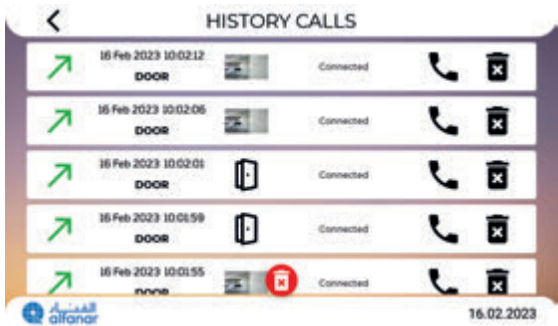


Figure 3: Recent Calls & Photos

- a) All incoming, outgoing and unanswered calls can be tracked from Recent Calls & Photos page.
- b) New missed or unanswered calls will shake once opened for the first time.
- c) To call the number back, telephone icon 📞 located on the right is tapped.
- d) By tapping the delete icon 🗑️ entries can be deleted one by one.
- e) If the red delete icon 🛑 on the bottom is pressed, all entries are deleted. A snapshot of the outdoor camera view is captured and saved for all answered and unanswered calls by the indoor monitor.

4. IP Cameras

IP cameras can be monitored from each indoor unit. To add a Camera, choose the top right plus icon, then enter the name and the live/Sub Video Stream link of the camera with username and password, link form: `rtsp://<user>:<pass>@<cameraIP>:<port>/suffix`
Link e.g.: `rtsp://admin:123456@192.168.1.15:554/live1.sdp`



Figure 4: Cameras

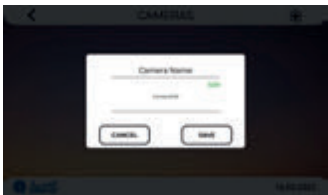


Figure 5: New Camera Addition

5. Smart Home

User can use the SMART HOME tab in the main screen (Figure 1), to control the smart home appliances.

6. Settings

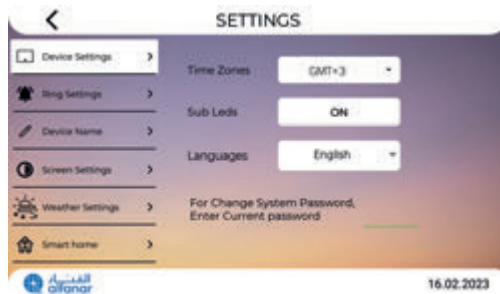


Figure 6: Settings

a) Device Settings

- Sub LEDs: Night leds located on the bottom of the monitor can be controlled ON/OFF.
- Language: For selecting optional language preferences.
- Change settings password

b) Ring Settings

- Update ringtone, volume, and duration of the calls to each function.
- Silent mode: for muting the device so it will not ring.

c) Device Name

Update room name

d) Themes

- Sleep options: time to deactivation.
- Choose a theme to the graphic user interface.

e) Weather Settings:

Change region

f) Smart Home:

Preferred smart home application is selected.

g) Manual

User manual of the device

h) About

Technical and software information of the monitor.

i) Factory Reset

Return the device to factory parameters. Only user dependent parameters are set to factory values.

7. General

a) Calling room monitor from outdoor unit:

The outdoor unit has a blue color touch button for calling room monitors. When a visitor touches the blue colored button, color of the button turns to yellow instantly. Monitor starts ringing and the screen shows the visitor, taking video image from the outdoor unit camera.

When the outdoor unit calls the room monitor, icons appear on the video image:

-  icon is used to start conversation between door and monitor
-  icon is used to open the door
-  icon is used to reject the call
-  icon is used to take a snapshot of the video
-  icon is used to outdoor unit LED

If parallel monitors are connected, they all ring at the same time. When one of the monitors answers the call, conversation starts, and all the other monitors stop ringing. During the ringing period, the assigned monitors show the video of the outdoor camera. All the other monitors show a calling message on them. If one of the non-assigned monitors' answer the call, it gets the video immediately.

Duration of door to room conversation is 180 seconds after the conversation starts. Tapping  icon on the monitor ends connection immediately.

b) Calling outdoor panels from room monitor:

Four door units and four room monitors can be connected to each system. Connected rooms and doors can be seen from "Doors & Rooms" in the main page.



Figure 7: Change room name




Figure 8: Change door name

Connection Setup

A 4-wire data connection is required between the PoE switch and the router.

A CAT6 connection is required between the PoE switch and each unit.

The system needs to be connected to home router internet connection with DHCP enabled for plug & play operation. (Refer to the Installation Manual for detailed information)

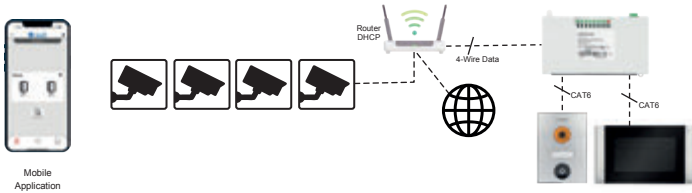

After connecting the VDI to a router you will be able to:

1. Monitor IP cameras connected on the same network from the intercom screen.
2. Have all intercom features on the mobile application.
3. Able to upgrade the system to have your smart home controls from the VDI screen.

4-wire data cable termination

A- Cut the jacket of your CAT6 cable with enough length.

B- Untwist and straighten the wires.

C- Arrange the wires into the right order.

D- Cut the wires into an even line.

E- Insert the wires into the RJ-45 connector.

F- Stick the connector into the crimping part of the tool and squeeze twice.

G- Test RJ45 termination with the network tester.



8. Mobile Application

alfanar Cloud Video Door Intercom Mobile Application runs on iOS and Android. You can download the application by typing "alfanar Cloud Intercom" in the application center.

Scan the QR code to download the app quickly:



After you download "alfanar Cloud Intercom" mobile application follow the next steps to register with a new account.

8.1. Registration

Select "Sign up" and create an alfanar account.

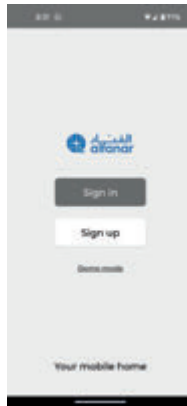


Figure 9:
Registration Screen

While setting up the password, the following should be fulfilled:

- Password length must be between 8 and 20 characters
- Must contain uppercase and lowercase letters
- Must contain at least 1 number
- Name, surname, or e-mail username must not be in the password

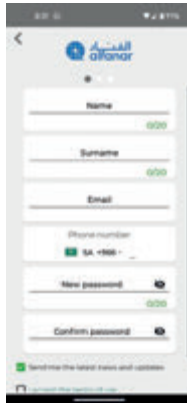


Figure 10:
Registration from Screen

- When the registration is completed, a confirmation e-mail is sent to the e-mail address. Complete the registration by entering the activation code in the mail within 300 seconds.

8.2. Adding Doors

- alfanar Cloud Video Door Intercom works with at least one door panel that can be connected to the system.
- Connect your door panel via alfanar PoE switch to the router, before starting the door adding process.
- After connecting your door panel to the router, tap the "Add Door" icon on the mobile application.
- Power up the system.

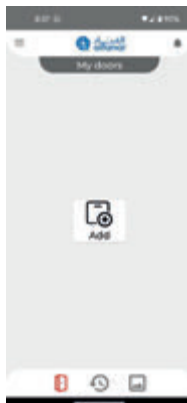


Figure 11:
Registration from Screen

"New Location" screen contains the information of the location where the door panel is used. Location is used for grouping doors in the same physical location. Multiple door panels can be located in one location.

For example, when your location is "Home", you can name your door panels "Door 1" and "Door 2".

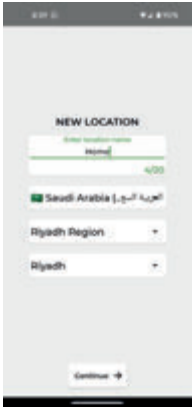


Figure 12:
Add Location Screen

After the location is defined, the door scanning process will start automatically, allowing you to scan the door's QR code and the door will show immediately. (Figure 13)



Figure 13:
Naming the doors

Warning: Please keep your QR card safe and protected as it is considered as a proof of ownership for outdoor units. Also, please note that each outdoor unit has a unique QR code.

On this screen, you can give your doors the name you want. (Figure 14)
However, each user can change the location and door name that they use as they want, the names changed after the first installation will not be matched to the other users. Everyone can see different names. Everyone can see different names.



Figure 14:
Naming the doors

As a result of this process, the Door(s) is connected to the mobile phone.

8.3. CALL SCREENS

- The doors you add will be on the main page as shown in the figure below (Figure 15). You can reach your other locations by swiping right & left.



Figure 15:
Main Screen

- When you touch the door icon or answer a call, you see the Call Screen. (Figure 16)
- You can monitor the camera of the door panel on the screen, make calls, take photos and videos, turn on and off the LED light of the door panel, and open the door.

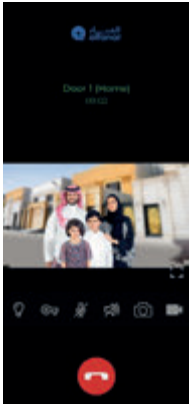


Figure 16:
Call Settings

8.4. CALL AND MEDIA RECORDINGS

- Calls and photos can be reached from the second icon on the bottom bar "Call history".
- You can see Incoming, Outgoing and Missed calls on this screen.
- You can call back or delete calls.
- "Photos" tab is the third icon on the bottom bar. From the Photos tab, you can view or delete the photos and videos.
- Photos and videos recorded in the Call Screen are saved in this area.
- In order to save photos and videos to the phone memory, enter the Application Settings from the Settings menu, tick the "Photos will be saved to device gallery" box and press the "ok" icon at the bottom right. (Figure 19)



Figure 17:
Recent Call



Figure 18:
Photos

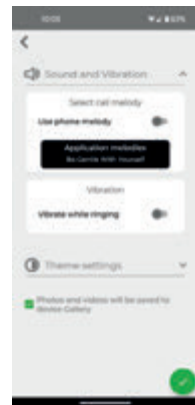


Figure 19:
Show photos and videos
in phone gallery

New Users To The Door

Inviting new users to the door is only performed by the owner of the door. Users that are not admins cannot invite or remove users from a Location.

To add a user to the door, enter My Locations from the Settings menu. Select the Users tab and tap the Add User button.

Enter the e-mail address of the user you want to add on the page that appears and tap the Submit button.

(Note: The e-mail address entered must be the same with the users alfanar Cloud account email) Invited user receives a message on the Notifications page. If the user selects Accept the user is added to the project.

8.5. Settings

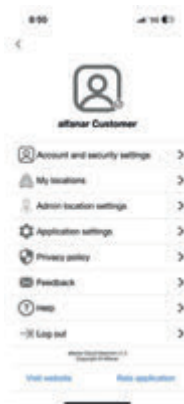


Figure 20:
Settings

Profile photo

In this section you can add or update your profile photo.

Account and Security Settings:

- You can edit your credentials and phone information in account settings
- You can do your password operations in the security settings
- You can view incorrect logins and mobile devices connected to your account

My Locations:

- You can edit your door name information from this menu
- You can “Remove” or “Make admin” for the registered users
- You can send invitations to new users

Admin location settings

- You can edit your location information from this menu.
- You can delete your location information.

Application Settings:

- You can adjust the sound and vibration settings of the application
- You can change the application melody in this section
- You can change vibration settings
- You can change the theme between Dark & Light theme
- You can view the captured photos and videos in the phone gallery.

Privacy Policy: You can access the confidentiality agreement.

Feedback: You can send a message from the comment and suggestion box. Your mail will reach the alfanar customer support team.

Help: You can access the user manual.

9. Technical Specifications

9.1. Technical Specifications of Outdoor Unit

Camera	2 MP Camera (120 degree angle), night view with 6 pieces of LEDs
CPU Speed	1.8 GHz
RAM	1GB
FLASH	4GB
OS	Android
Transmission	TCP/IP
Connection Protocol	SIP 2.0
Voice Codec	G.711
Video Codec	H.264
Network Connection	Ethernet (PoE)
Working Voltage	12-18VDC (PoE)
Working Current	190mA stand-by, 250mA active
Button Type	Capacitive touch
Button Color	RGB
Working Temperature	-10, +70°C
Humidity	%20-95 non-condensed
Installation	Surface mount
Color	Natural Light Gray
Dimensions	120x171x20 mm
Protection	IP65 (rain, water and dust protection)

9.2. Technical Specifications of Indoor Unit

Screen	7" TFT LCD Touch Screen
Resolution	1024x600
TFT Card	Yes
CPU Speed	1.8GHz
RAM	1GB
FLASH	4GB
OS	Android
Transmission	TCP/IP
Connection Protocol	SIP 2.0
Voice Codec	G.711
Video Codec	H.264
Network Connection	Ethernet (PoE)
Working Voltage	12-24VDC (PoE)
Working Current	250mA stand-by, 300mA active
Working Temperature	-10, +55°C
Humidity	%20-95 non-condensed
Installation	Wall mount
Color	Natural Light Gray
Dimensions	256x147x19 mm

9.3. Adapter User Manual

Name	PS-18E ADAPTOR
Working Voltage	100-240V AC
Working Current	1.5A (Max)
Output Voltage	+18VDV
Current	3.3A(Max)
Ripple and noise	Output voltage (Max). %1
Working Temperature	-5°C +55°C
Humidity	%90 non-condensed



Figure 21:
Power Supply

Description

- Green LED light turns on when energy source (220 VAC) is connected
- Red cable indicates (+), black cable GND indicates (-)
- Adaptor is short circuit protected

Remarks:

- 1- Installation area should be distanced from heat, humidity, and liquid.
- 2- In case of short circuit or high current in the output (18VDC), short circuit protection is activated. When short circuit situation is removed, the device resumes working.
- 3- Device might break down if current level passing from ports exceeds the stated amount.
- 4- Device's +18VDC feeding ends should be connected correctly.

9.4. PoE Switch User Manual

Feeds up to 8 passive Power over Ethernet (PoE) devices and connects them.

Features:

Name	SWITCH8-POE (8 PORT POE SWITCH)
Voltage	+18V DC nominal (± 6 VDC)
Current	0,7A (max), 0,2A (standby)
Working Temperature	-5°C +55°C
Humidity	%90 non-condensed



Figure 22:
PoE Switch

Description:

- 1- Device is connected to 18VDC adaptor by paying attention to feeding connector and +/- polarity.
- 2- RJ45 sockets of CAT6 (AWG23) cables coming from passive PoE's other end (i.e. monitor, door panel, etc.) are inserted to the device one by one.
- 3- If the port's LED is on, it means that is working.
- 4- If there are multiple switches in the project, it is not advised to connect more than 6 SWITCH8-POE's consecutively.

