

QuNeo Quickstart Guide

QuNeo Version 1.2.4

December 2013

QuNeo is a 3D multi-touch pad controller. QuNeo is a different species of pad controller for electronic musicians, DJs, VJs and DIY hackers. While it covers all of the functionality of other pad controllers, QuNeo adds the power of touch recognition in other dimensions.


Each of the 27 pads, sliders and rotary sensors are pressure, velocity, and location sensitive. The 17 buttons also respond to pressure and velocity. The 16 square pads provide 128 levels of velocity response, X-Y location, and continuous pressure for each pad. Each rotary sensor measures direction, pressure and location.

QuNeo is the size of an iPad and can fit in iPad accessories such as mic clips, stands and more. QuNeo works with USB, MIDI or OSC and will communicate with your favorite music software environments right out of the box.

Connect QuNeo to a computer

This image shows QuNeo set up to send MIDI data to a computer.


Use a USB A-to-Micro cable to connect the QuNeo micro port to a USB port on a computer. QuNeo will receive power from the computer.

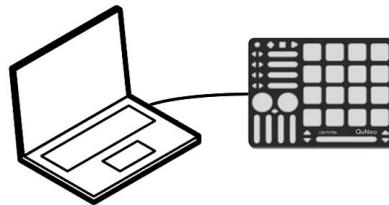

Connect QuNeo to MIDI hardware

The image to the right shows QuNeo connected to a hardware synth via our MIDI Expander (sold separately):

1. Use a USB A-to-Micro cable to connect the QuNeo micro port to the USB "Expand" port on the MIDI Expander.
2. Connect the power supply to the MIDI Expander USB "Power" port.
3. Connect the MIDI Out on the Expander to the MIDI In on a synth or other hardware.
4. Put QuNeo into MIDI Expander Detection mode by holding down the mode button and the bottom-right down arrow simultaneously. The LEDs will swipe from right to left to indicate this action was successful.

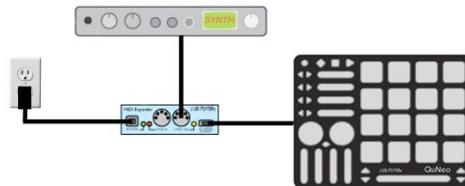


Connect QuNeo to an iPad

The QuNeo LEDs typically draw more power than the iPad can power alone, though you can put QuNeo into iPad mode and the LEDs will draw less power. So the iPad can be connected in 2 ways; one way that allows the LEDs their full brightness, and one way that does not require a wall wart.


QuNeo to iPad with Remote Power Kit (full LED brightness)

The image to the right shows QuNeo connected to an iPad using the QuNeo Remote Power Kit (sold separately through our online store: <http://store.keithmcmillen.com/>). This includes a Y USB cable and a power supply. You will also need the iPad Camera Connection Kit (sold by Apple: <http://store.apple.com/us/product/MC531ZM/A>).

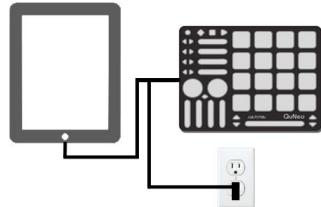

QuNeo to iPad (lower LED brightness)


The image to the right shows QuNeo connected to the iPad without a remote power kit. You will need to put the QuNeo into iPad mode (see below). You will also need the iPad Camera Connection Kit (sold by Apple: <http://store.apple.com/us/product/MC531ZM/A>).

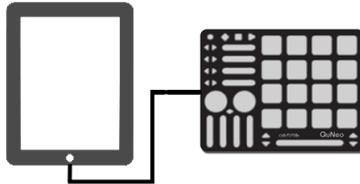

Put QuNeo into iPad Mode:

To put QuNeo into iPad Mode, hold down the four central pads (shown to the right) while plugging the QuNeo into the iPad. The LEDs should swipe a little dimmer than usual.

iPad Mode will persist between plug-ins. So if you set QuNeo to iPad mode once, you won't have to do it again the next time. If you would like to take it out of iPad Mode, hold down the same four central pads while plugging the QuNeo in again.

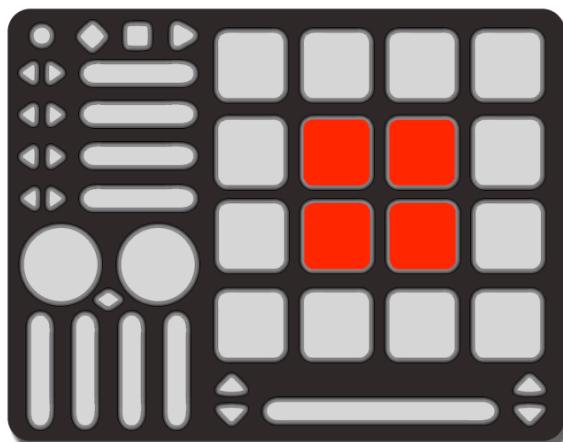

The Newer iPad (iPad 4) provides more current to peripheral devices, enabling more LEDs simultaneously to be illuminated. Previous versions of iPad and iPads with older batteries will support fewer LEDs simultaneously.

QuNeo Software Installer

Download our free QuNeo Editor Installer from: <http://www.keithmcmillen.com/QuNeo/downloads/>

The Editor Installer contains the QuNeo Editor, which allows you to edit and create your own QuNeo Presets. Our new QuNeo Demo Lab is also included and will open automatically after installation. The Demo Lab is a fun app that allows you to trigger samples with the Pads. It's a great introduction to using the QuNeo and will likely help generate ideas for ways you can use it.

After Installation, a QuNeo folder containing the QuNeo Editor and Demo Lab will appear in the Applications folder (Mac) or the C: drive directory (Windows) on your computer (unless you specify an alternate location during installation).

The QuNeo Software Templates Installer can also be download this from <http://www.keithmcmillen.com/QuNeo/downloads/>. This Installer includes template files that go with QuNeo presets for Ableton Live, Traktor, Battery, Logic, Reason, Mixxx, Serato, djay, BeatMaker 2 (iPad), and iMS-20 (iPad).

Once installed keep everything in the "QuNeo Editor" and "QuNeo DemoLab" folders as is so the applications can access everything they need to run.

We recommend the following minimum system requirements to run the QuNeo Editor:

MAC:

- An Intel Core 2 Duo 2.3GHz or greater
- Mac OS 10.5 or later
- 100 MB free hard disk space

WINDOWS:

- Windows XP, or Windows 7
- Intel Core 2 processor or greater
- 1GB of RAM with 100 MB free hard disk space

The "Documentation" folder will contain a manual for the QuNeo Editor along with other useful documents for obtaining more detailed information.


The Mode Button

The Mode button is a small circular button that can be found in the upper left corner of the QuNeo. When illuminated, the button is blue. The Mode button serves as the gateway to selecting presets and entering CoMA mode (our Controller Mapping Assistant).

Selecting Presets

After plugging in the QuNeo, it will automatically load the last preset you used. The first time, it will load Preset 1.

To enter preset mode, quickly tap the Mode button so that it begins to flash blue.

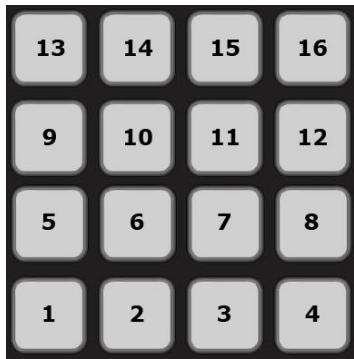

After entering Preset mode, the pad for the current preset will be illuminated in red. Select a preset by pressing one of the pads. The selected pad will briefly blink green and QuNeo will exit Preset mode and go to the selected preset.

The image to the left shows how the pads are numbered and which pad to select for which preset number.

Tapping the Mode button again will put QuNeo back into Preset mode at any time.


CoMA Mode

Many DAWs and performance software tools like Ableton Live and Apple's Logic have MIDI Mapping modes that will recognize MIDI data from a controller and map it to whatever you choose. Since the QuNeo can have multiple data sources for one control, it is often necessary to use the Controller Mapping Assistant (CoMA). CoMA mode allows quick mapping of each available data source one at a time, enabling rapid and efficient software/controller pairings.

To enter CoMA Mode using the Mode Button, hold down on the Mode Button for 1 second until all the LEDs flash. When in CoMA mode it is necessary to be familiar with how each data source from QuNeo is mapped. Here is how to do this for each sensor type:

- **Pads -**

- When in **Drum Mode** each corner outputs a different data source. Pressing the NW (North-West) corner outputs the Note, the NE corner outputs the Pressure CC#, the SW corner outputs the X-Axis CC#, and the SE corner outputs the Y-Axis CC#.
 - For your convenience the red LEDs for each corner will illuminate after the note or CC# is sent out.
- When Pads are in **Grid Mode** a Note and Pressure CC# are in each corner. Quickly tap the corner to output the Note. Press and hold for 1 second to output the Pressure CC#.
 - A red LED will illuminate for each Note sent out and a green LED will illuminate for each Pressure CC#.

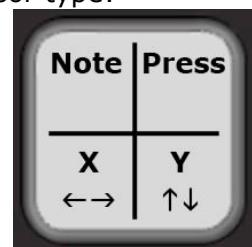


- **Sliders -** to output the Note quickly tap the slider, press and hold for 1 second to output the Pressure CC#, and press and drag a finger to output the Location CC#.

To output the Width CC# for the Long Slider press and hold with 2 fingers.

- The red LEDs will illuminate when the Note is sent out, the green LEDs will illuminate for the Pressure CC#, and the yellow LEDs will illuminate for the Location CC#. The blue LED on the Long Slider will illuminate when the Width CC# is sent out.

- **Rotaries -**


- Note - Press and hold the rotary in the top left sector.
 - The LEDs in the top left will illuminate as soon as the note is sent out. (As shown in image to the right).

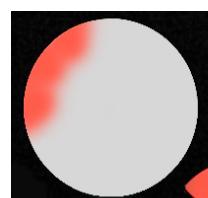

- Pressure CC# - Press and hold the rotary in the top right sector.
 - The LEDs in the top right will illuminate. (As shown in image to the right).

- Location CC# or Direction CC# - Press and hold the bottom sector of the rotary.
 - The LEDs along the bottom will illuminate. (As shown in image to the right).

- **Buttons** - To output the Note quickly tap the button. Press and hold for 1 second to output the Pressure CC#. If buttons are assigned to bank switching they will not output their own data in CoMA mode, but instead control the banks for the Sliders or Rotaries they are assigned to. Use the bank buttons to shift through banks, and then map the MIDI data for each of the Slider or Rotary banks.

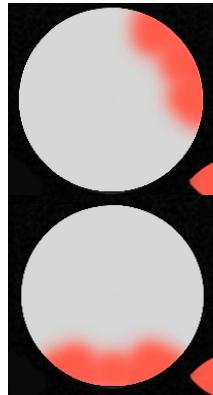

Tip: Before using CoMA mode to map presets, consult the Factory Preset Guides document to check whether the Pads are in Grid Mode or Drum Mode for the preset you are mapping. Pad mapping works differently for Drum and Grid mode. Also check which data sources are enabled. There may be presets with Notes or Pressure turned off. When data sources are turned off, they will not output in CoMA mode.

Factory Preset Guides

Most of the Factory Presets can be used with various Software Templates we have created. The following guides outline the MIDI data each preset sends out as well as the basic behavior of each Software Template. The Software Template Installer can be found as a separate package, downloadable from <http://www.keithmcmillen.com/QuNeo/downloads/>.

Notes about the Preset Guide images:

- If a data source is not accounted for in the preset guide image, this means it is disabled. For Example: If one of the Pads only shows note names and not pressure CC#s, assume that the pressure data is turned off and will not output as MIDI data, even in CoMA mode.
- Assume that all notes and pressure sources use Normal mode (as opposed to Toggle mode) unless otherwise indicated in the following preset descriptions.

Preset 1: (Drum C1-D#2 / Serato & djay)


Preset 2: (Drum E2-G3)

Preset 3: (Drum G#3-B4)

Preset 4: (Drum C5-D#6)

Presets 1-4 are the same except the pad notes increment up as the preset number increases. So the pad notes on preset 1 are shown below from C1-D#2, preset 2 are from E2-G3, preset 3 are from G#3-B4, and preset 4 are from C5-D#6.

These presets are in Drum Mode and don't use banks. Rotaries are set to use Location instead of Direction. Pass Thru Widths for the rotaries are set to 127. The Pad X/Y Return values are set to 63. Velocity is variable and pressure is continuous on the Pads; velocity is fixed at 127 for notes on other sensors.

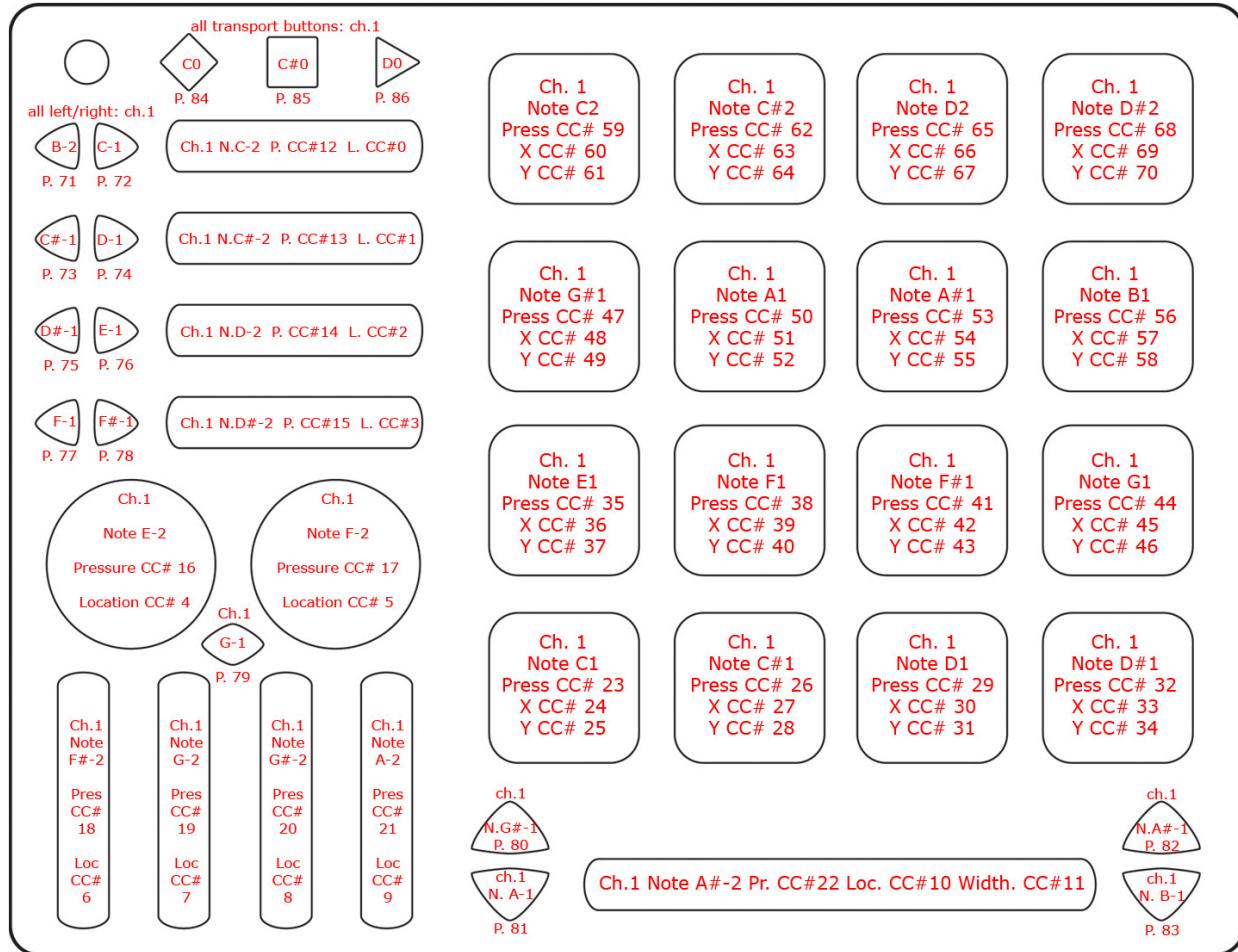

Our Serato Template uses Presets 1-3. Our djay Template uses Presets 1-2. Both templates are included in the QuNeo Software Template Installer.

Scratch Live (Serato) Mappings for Preset 1, 2, & 3:

Global:


- 1. LOAD Deck 1** - loads the selected track from the main track library or crate to Deck 1
- 2. LOAD Deck 2** - loads the selected track from the main track library or crate to Deck 2
- 3. Track Library Browse** - Browse Up and Down a crate or the main Track Library.

SERATO CUE / LOOP PAGE - PRESET 1


- A. Left Deck** - Represents Deck 1
B. Right Deck - Represents Deck 2

QuNeo Preset 1:


- A1/B1** - Trigger Cue Point 1
- A2/B2** - Trigger Cue Point 2
- A3/B3** - Trigger Cue Point 3
- A4/B4** - Trigger Cue Point 4
- A5/B5** - Play
- A6/B6** - Loop In
- A7/B7** - Loop Out
- A8/B8** - Loop On/Off
- A9/B9** - DJ/FX Select
- A10/B10** - DJ/FX Amount

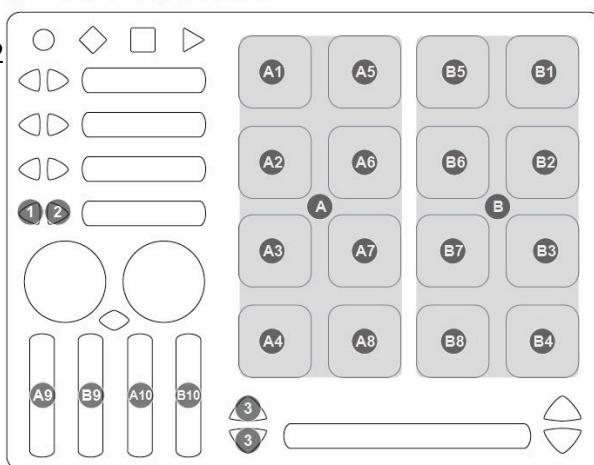

SERATO SET CUE POINTS - PRESET 2

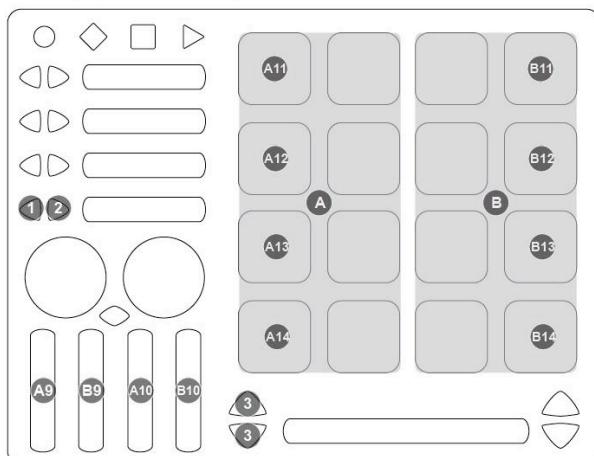

SERATO DJ-FX PAGE - PRESET 3

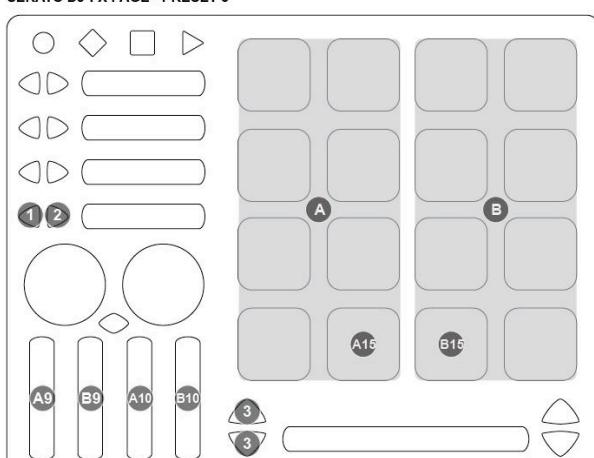

QuNeo Preset 2:


- A11/B11** - Set Cue Point 1
- A12/B12** - Set Cue Point 2
- A13/B13** - Set Cue Point 3
- A14/B14** - Set Cue Point 4

- QuNeo Preset 3:**
A15/B15 - DJ/FX On/Off


For more information read Serato's Quickstart document included in the QuNeo Software Template Installer.

Algoriddm's djay MIDI Mappings for Preset 1 & 2:

Preset 1

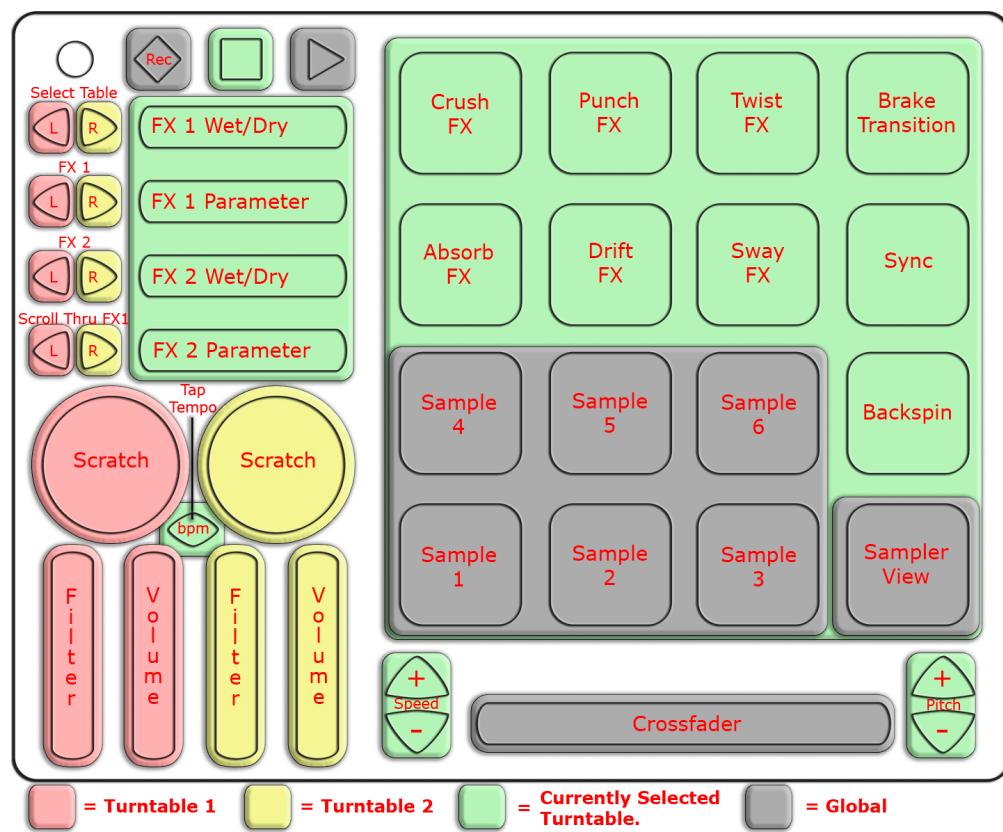

Preset 2

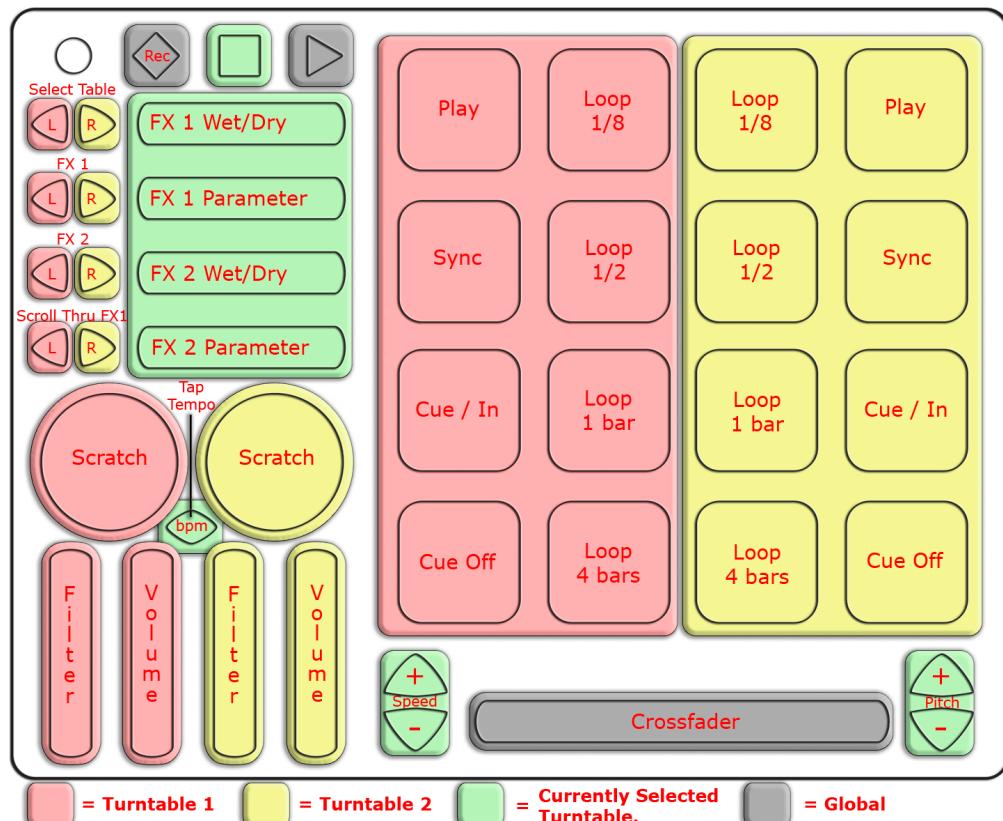


For more information read djay's Quickstart document included in the QuNeo Software Template Installer.

Preset 5, 6, 7, & 8 (Grid Mode):

Presets 5-8 are the same except the Pad channels increment as the preset number increases.

These presets are in Grid Mode and don't use banks. Rotaries are set to use Direction instead of Location. Pass Thru Widths for the rotaries are set to 127. Velocity response is fixed at 127 for all notes. All Pressure sources send out continuous CC values.

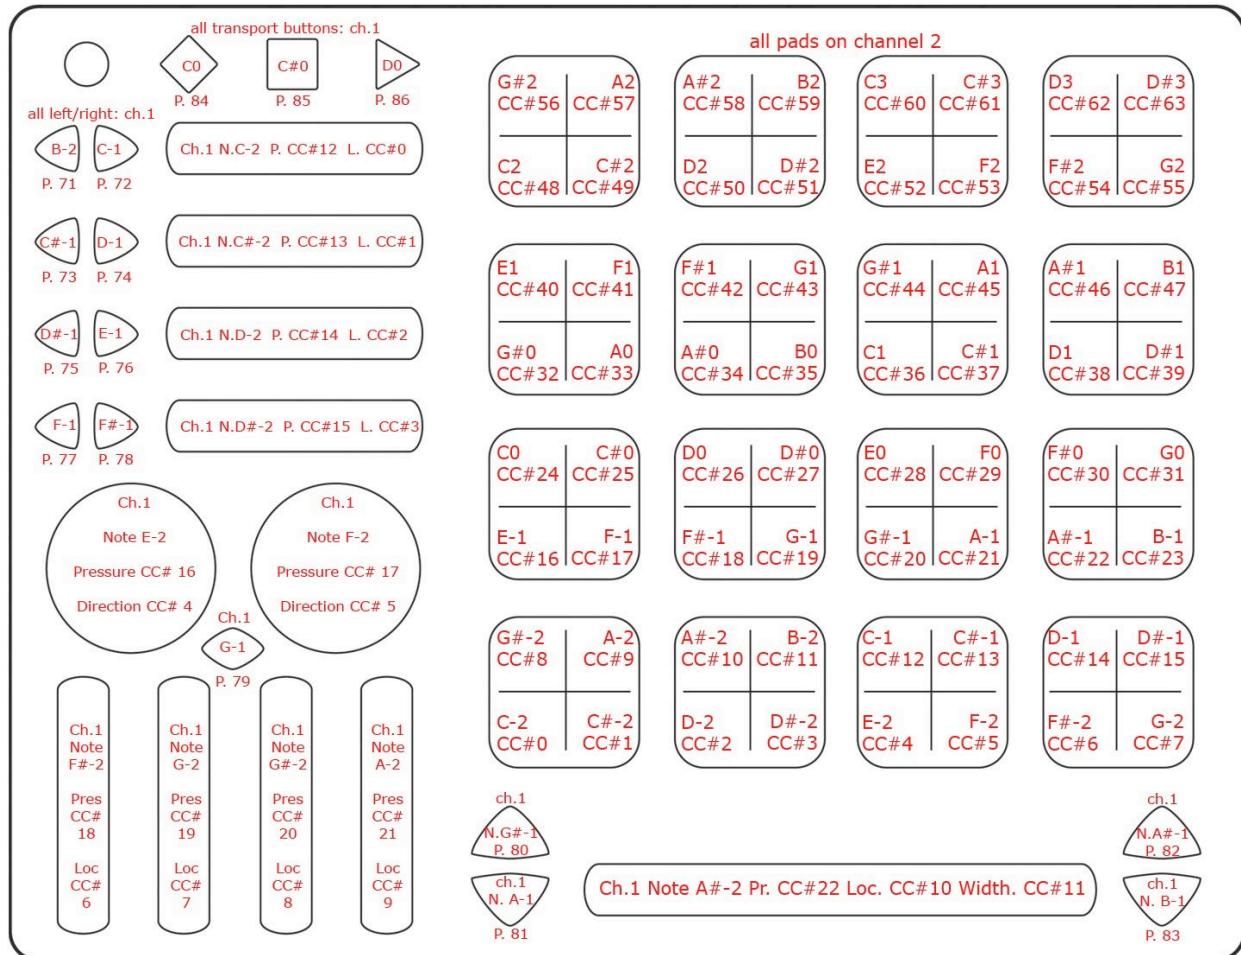


Preset 9 (Ableton Live Clip Launching):

The QuNeo Ableton Live Remote Control Surface contains a variety of Modes. Modes remap the 8x8 Grid and non Global Buttons into various functions for Ableton Live. Modes include Clip Launch, Step Sequencer, and Note Mode. When the Ableton Live Remote Control Surface is loaded it initializes Mode 1 (M1 - Clip Launch Mode). The image and corresponding text below summarizes Clip Launch Mode.

M1. CLIP LAUNCH MODE

GLOBAL CONTROLS:

1. Transport Controls
2. Tempo
3. Metronome
4. MIDI Overdub
5. Track Navigation
6. Scene Navigation
7. Selected Track Send A
8. Selected Track Send B
9. Selected Track Pan
10. Selected Track Volume
11. Selected Clip Loop
12. Selected Clip Loop End
13. Volume Faders
14. Crossfader

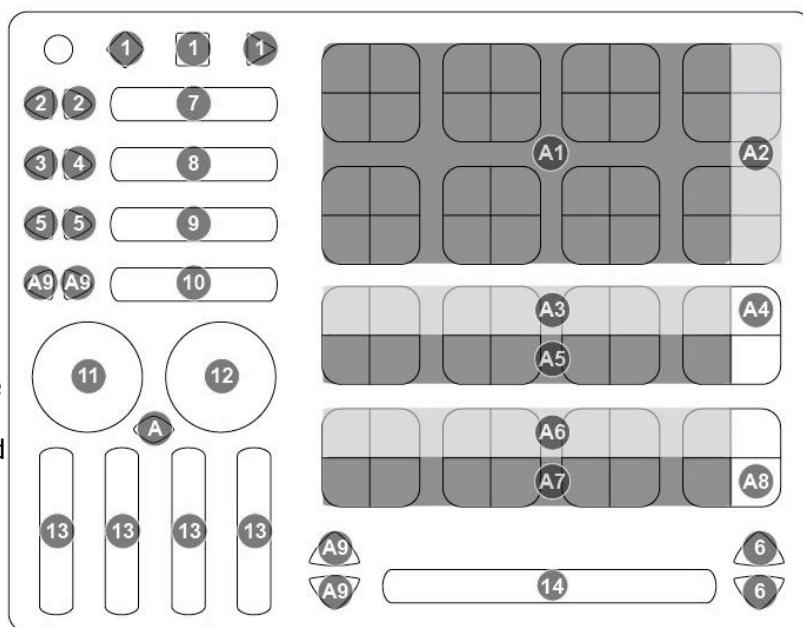

M1. CLIP LAUNCH MODE Controls:

Clip Launch Mode represents an overview of the current Ableton Live Session. Clip Launch Mode enables the QuNeo to launch clips within Ableton's clip slots and control volume parameters assigned to the first 4 volume Sliders within Ableton's highlighted red box. Other controls include: overdub - on/off, metronome - on/off, tempo - up/down, and transport functionality including: play, stop, and record.

A1. CLIP LAUNCH - These Pads launch clips within Ableton's clip slots.

A2. SCENE LAUNCH - Rows in the Session View are called scenes. All clips in a scene can be launched simultaneously by clicking the corresponding SCENE LAUNCH button in the column. These buttons trigger a row of clips within the session. A row is known as a "SCENE". When triggered, all of the clips in the selected scene will play.

A3. CLIP STOP - Push to stop the currently playing or recording clip corresponding to the correct track.

A4. STOP ALL CLIPS - Push to stop all playing and recording clips in the session.

A5. TRACK ACTIVATOR - Activate this button to hear the track, or deactivate it to mute the track.

A6. SOLO / CUE - Activate this button to solo the track, or deactivate it to unsolo the track.

A7. RECORD ARM - Active this button to Arm the track, or deactivate it to unarm the track.


A8. SELECTED CLIP LAUNCH - Push to launch the currently selected clip.

A9. BANK SELECT - These allow the user to move the highlighted 7 x 4 red box around the session LEFT/RIGHT/UP/DOWN

Preset 10 (Ableton Live Drum Rack):

GLOBAL CONTROLS:

1. Transport Controls
2. Tempo
3. Metronome
4. MIDI Overdub
5. Track Navigation
6. Scene Navigation
7. Selected Track Send A
8. Selected Track Send B
9. Selected Track Pan
10. Selected Track Volume
11. Selected Clip Loop
12. Selected Clip Loop End
13. Volume Faders
14. Crossfader

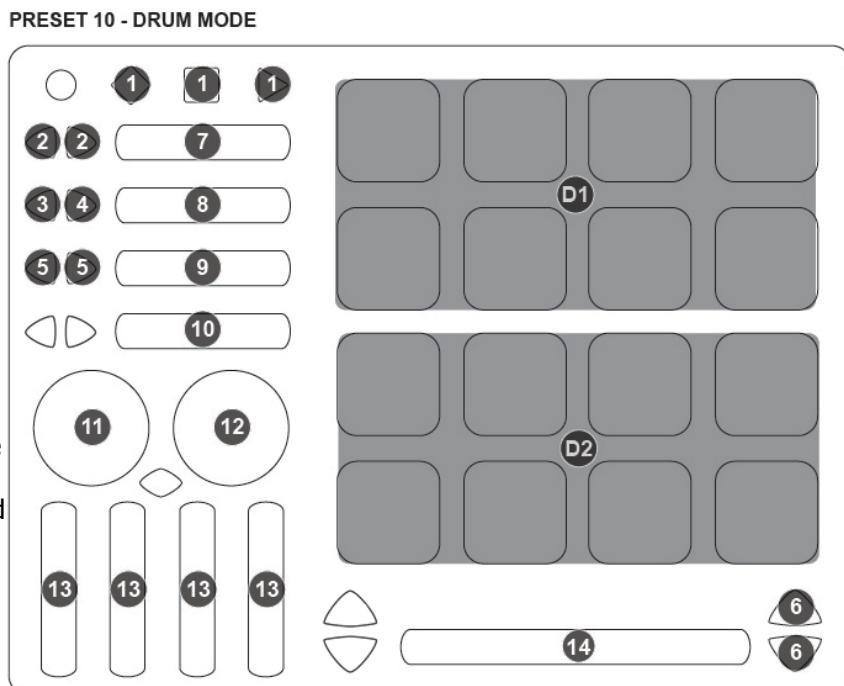

Preset 10

D1. Drum Rack - These Pads are Assigned to Drum Rack's C1-G8 Cell slots.


D2. Impulse - These Pads are Assigned to Impulses 8 Sample cells.

For more information about using the Ableton Live Templates, read its Quickstart document included in the QuNeo Software Template Installer.

Preset 9 (LaunchPadEmulator):


Our Novation LaunchPad Emulator for QuNeo consists of an Ableton Live Remote Control Surface map created with Python. This allows you to use all of the familiar features that the LaunchPad provides on QuNeo. The image and corresponding text below summarizes what the buttons and sliders of the QuNeo do in all modes. The Pads behavior is determined by the selected mode. See the QuNeo_LaunchPad_Quickstart document (included in the QuNeo Software Template Installer) for more information about the Pad behavior.

1. **Transport controls** - The Record, Stop, and Play buttons correspond to the Transport Controls within Live.
2. **Tempo** - LEFT ARROW steps the tempo down 1.0 BPM. RIGHT ARROW steps the tempo up 1.0 BPM.
3. **Metronome** - Enables Metronome On/Off.
4. **MIDI Overdub** - Enables MIDI Overdub On/Off.
5. **Track Navigation** - Move left or right from the current selected track to the next or last track.
6. **Red Box Track Navigation** - Move the location of the highlighted bounding box left or right (this box may or may not be red).
7. **Selected Track Send A** - Control the selected track Send A.
8. **Selected Track Send B** - Control the selected track Send B.
9. **Selected Track Pan** - Control the selected track Pan.
10. **Selected Track Volume** - Control the selected track Volume.
11. **Shift Button** - Holding down the **SHIFT (Rhombus)** button enables you to access various **Modes** from the **Shift Page**. When the **SHIFT (Rhombus)** button is released it returns the controls to the currently selected **MODE**.
12. **Volume Faders** - This controls Live's first four volume faders within the highlighted bounding box.
13. **Red Box Scene Navigation** - Move the location of the highlighted bounding box up or down (this box may or may not be red).
14. **Scene Navigation** - Move up or down from the selected scene to the next within a selected track.
15. **Crossfader** - This controls Live's crossfader.

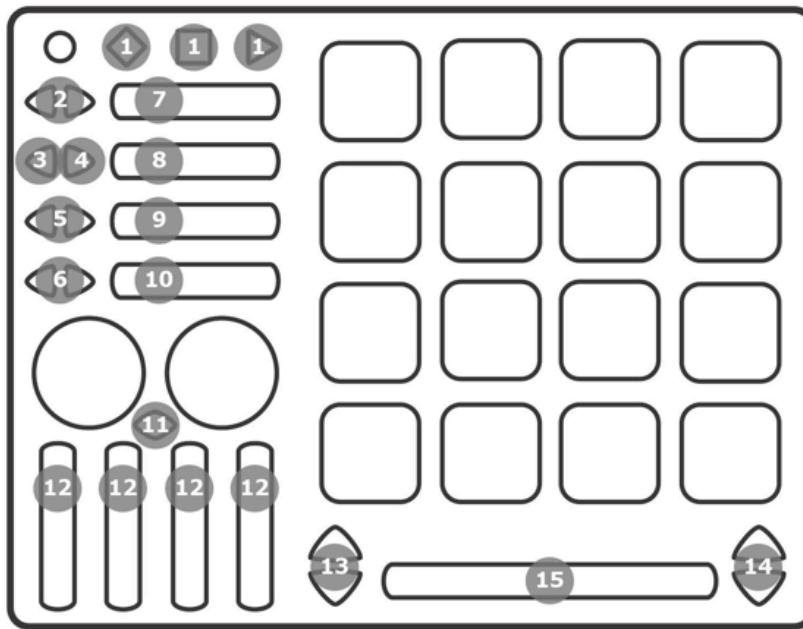

Preset 11 (Logic):

This turns QuNeo into a drum synth controller using the Ultrabeat software instrument that comes with Apple's Logic Pro. Below is an image showing how this preset is mapped to the Logic Template (included in the QuNeo Software Template Installer):

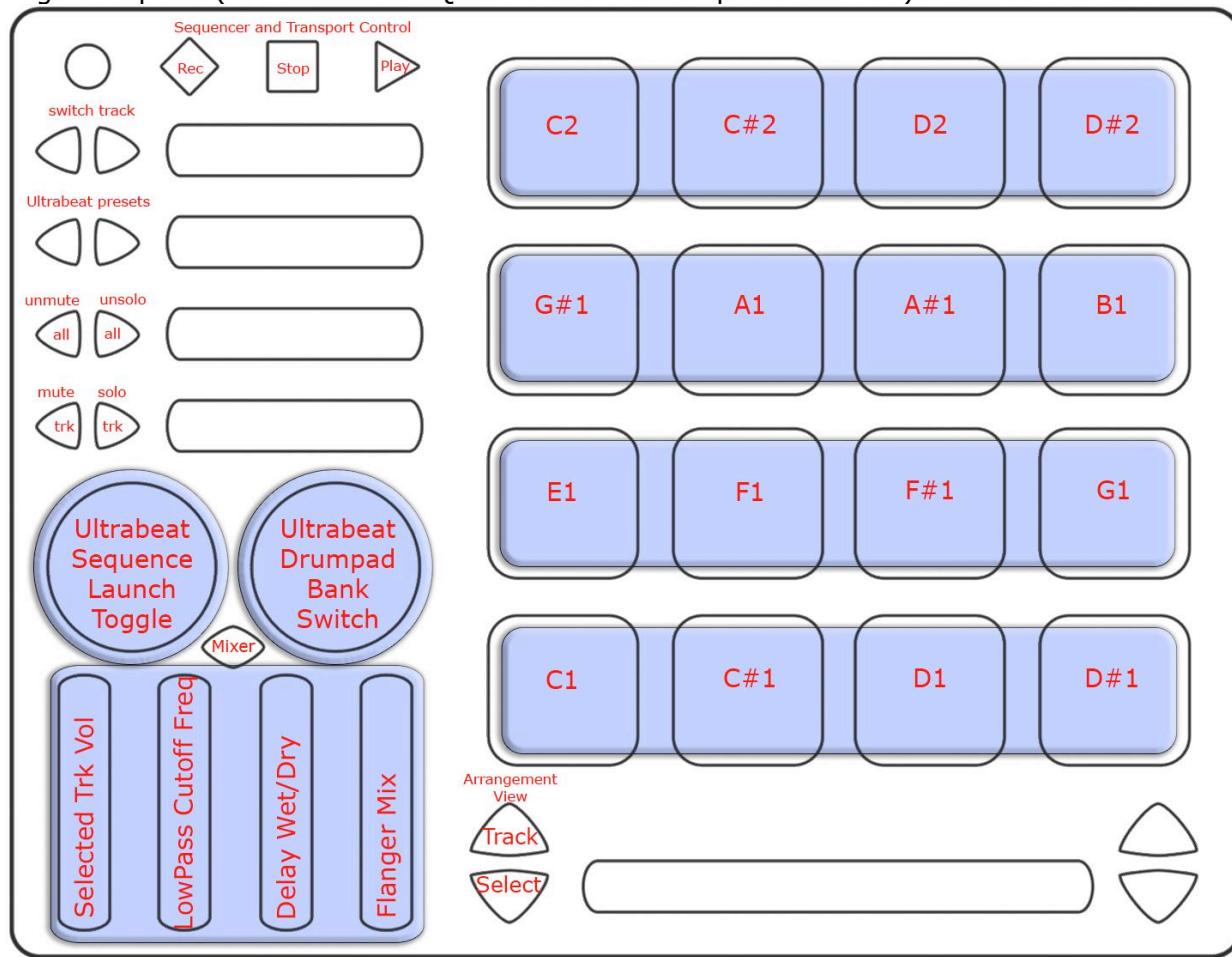


For more information about using the Ableton Live Template, read its Quickstart document included in the QuNeo Software Template Installer.

Preset 12 (Traktor - DJ / Mixxx):

The Traktor DJ Preset turns QuNeo into a full fledged DJ controller for Native Instruments' Traktor. This preset is designed with a more traditional approach to digital DJing in mind, with play, sync, cue, monitor, fx, filter, loop points, cue points, crossfading, deck control, and various volume controls accessible from QuNeo. In addition, this preset takes advantage of the modifier functions, creating a Shift button on QuNeo that allows for sample playback, extended mixing, and more in depth FX control.


The image below shows what each sensor controls in our Traktor DJ Template (included in the QuNeo Software Template Installer):

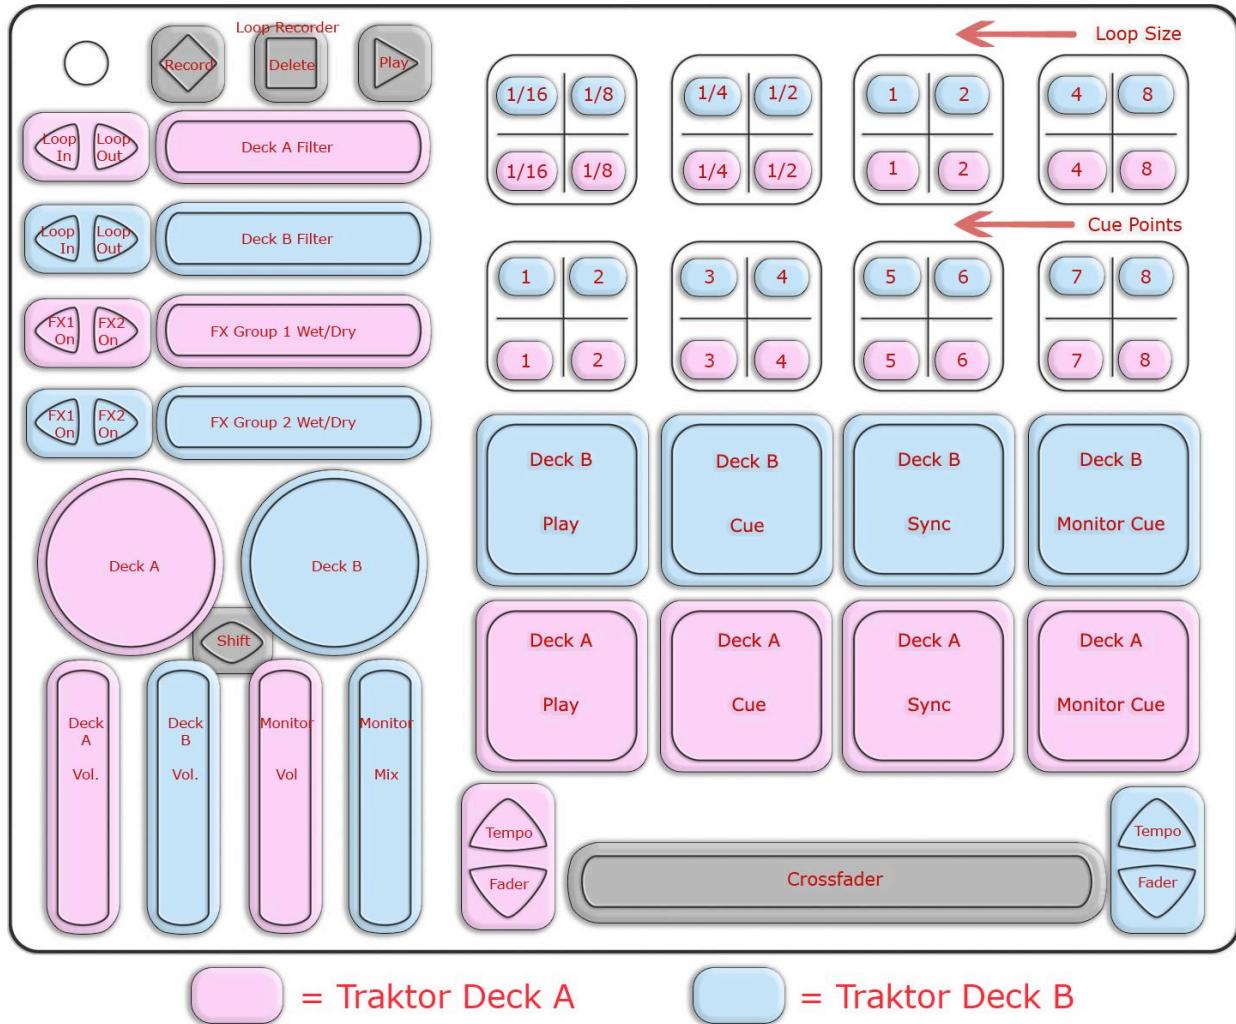

For more information about using the Traktor Template read its Quickstart document included in the QuNeo Software Template Installer.

This preset turns QuNeo into a full fledged DJ controller using Mixxx as well. It includes controls for 2 players: play, sync, cue, tempo controls, crossfading, scratching, and various volume controls accessible from QuNeo.

The image below shows what each sensor controls in our Mixxx Template (included in the QuNeo Software Template Installer):

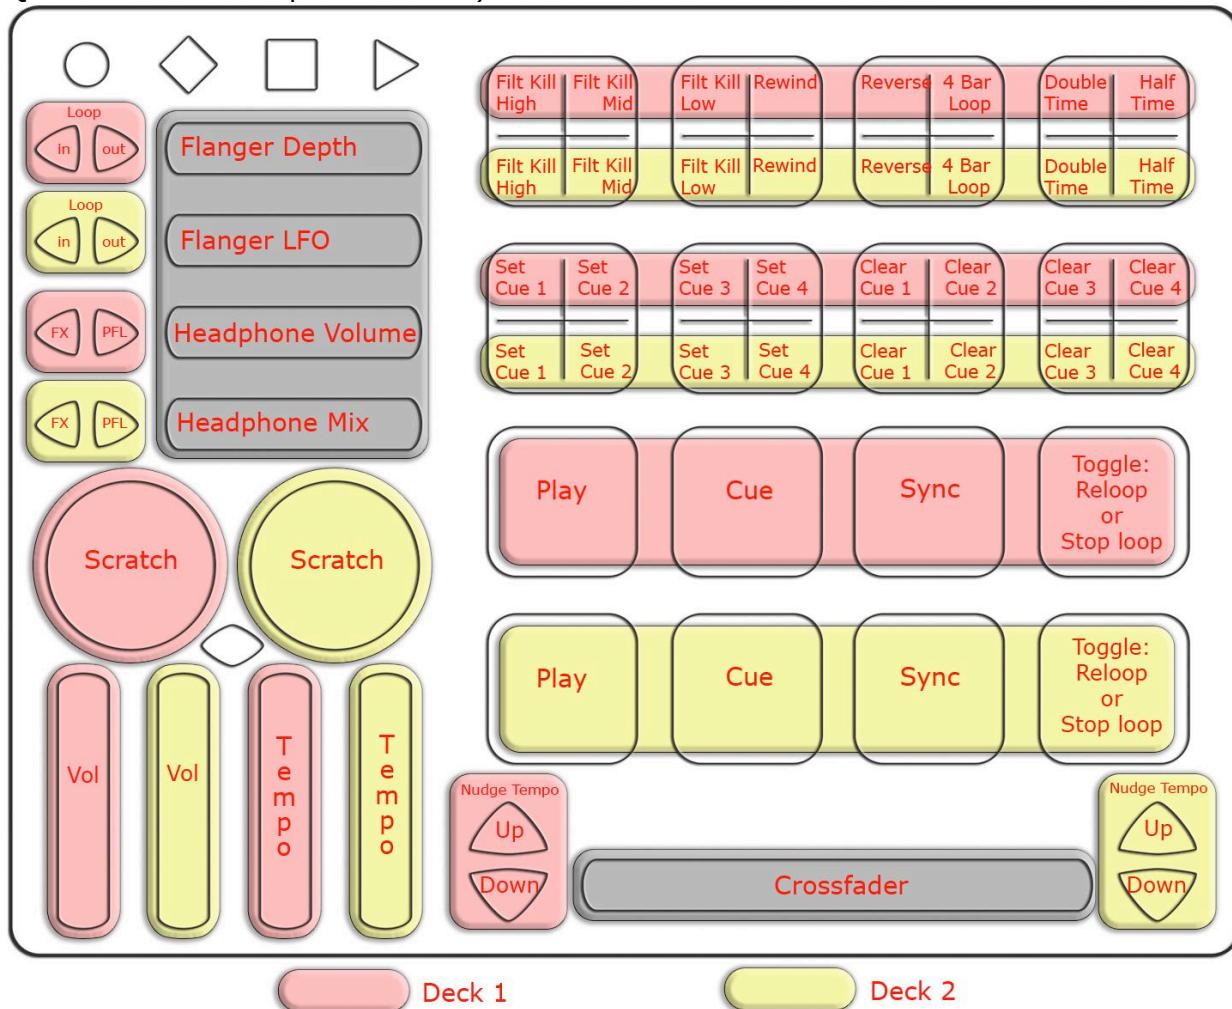


For more information about using the Mixxx Template read its Quickstart document included in the QuNeo Software Template Installer.

Preset 13 (Reason):

The Reason Preset turns QuNeo into a full fledged master keyboard controller for Propellerhead's Reason. The pads give one octave of notes while sliders control an ADSR envelope and various effects parameters.

The image below shows what each sensor controls in our Reason Template (included in the QuNeo Software Template Installer):

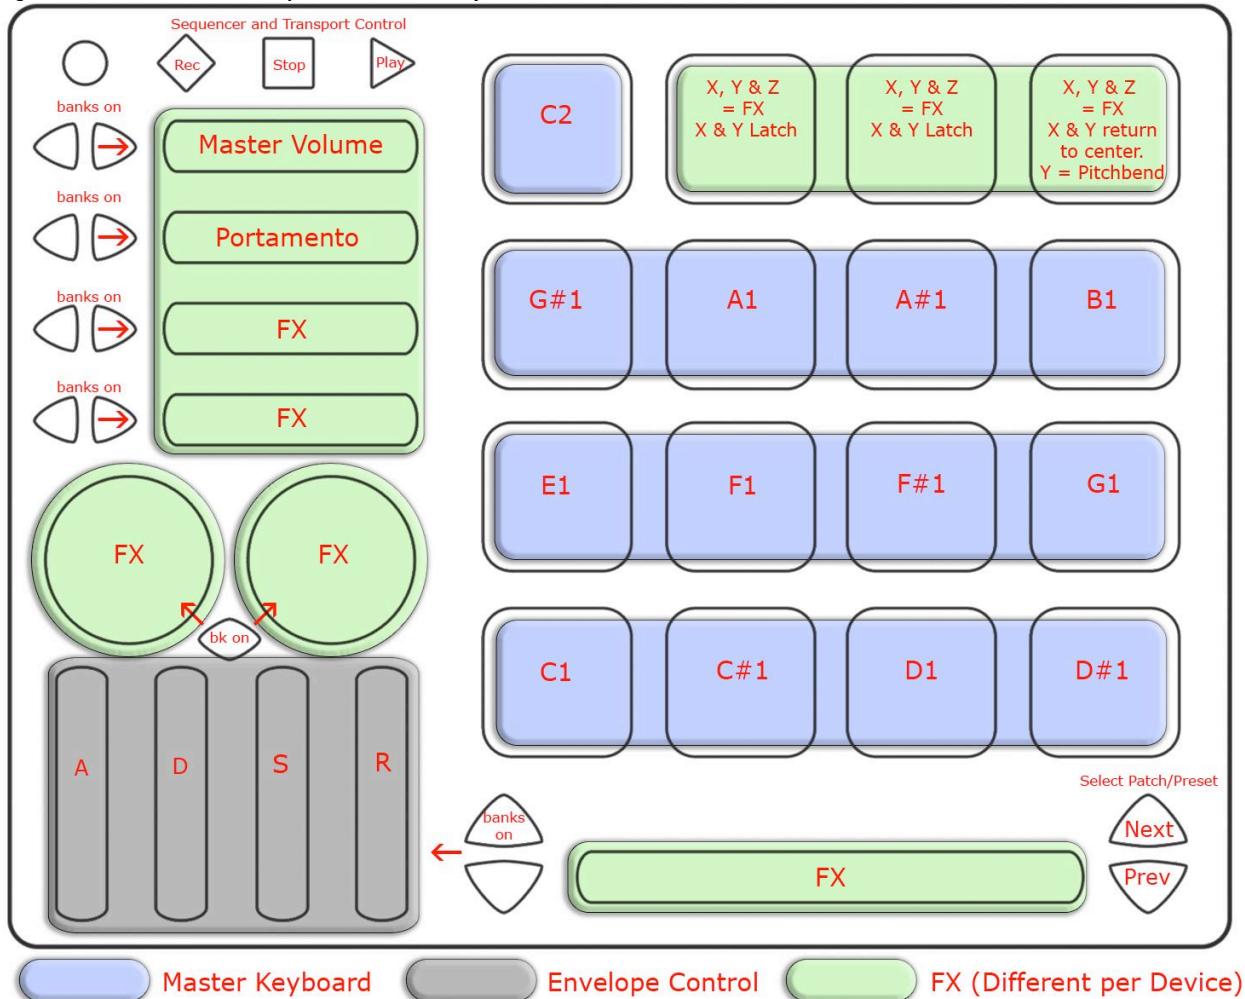


For more information about using the Reason Template read the Reason Template Quickstart document included in the QuNeo Software Template Installer.

Preset 14 (Battery):

This preset is for use with our Native Instrument's Battery 3 template file. This template will turn the QuNeo into a sampler with loops on the left 8 pads and both rotaries and quick drum hit samples on the right 8 pads. The sliders provide additional control and effects.

The image below shows what each sensor controls in our Battery Template (included in the QuNeo Software Template Installer):

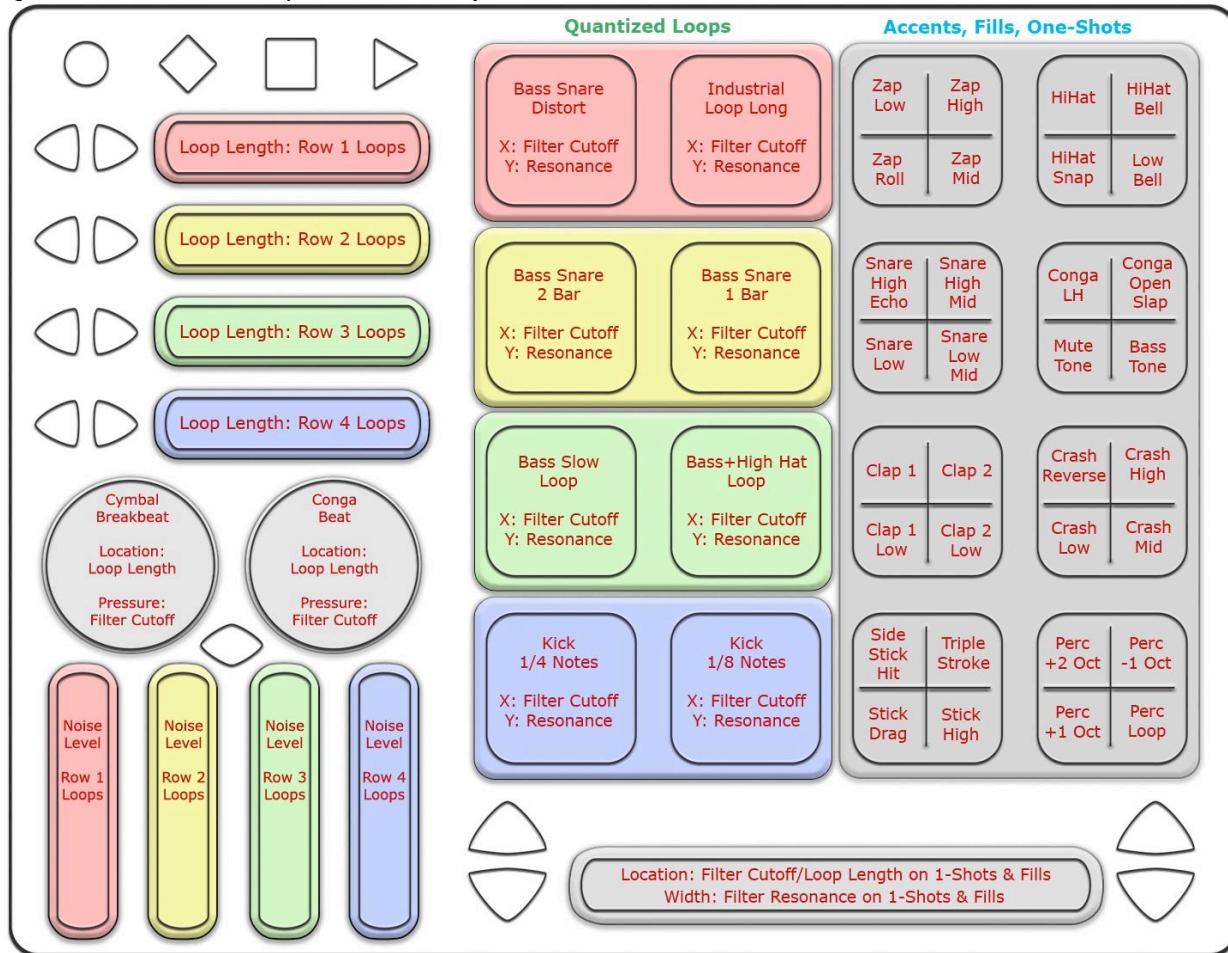


For more information about using the Battery Template read the Battery Template Quickstart document included in the QuNeo Software Template Installer.

Presets 15 (iMS-20 - iPad):

This preset is for use with Korg's iMS-20 synthesizer for iPad. This allows the QuNeo to play minor pentatonic notes from the iMS-20 and adjust voltage controlled oscillators and effects. Each pad will send out the same pressure CC# to control a low pass filter cutoff frequency. The X axis of each pad will control the first voltage control oscillator. The Y axis of each pad will control the second voltage control oscillator. The Horizontal Sliders and the Long Slider control effects. Use the Rotaries to control the mod wheel and the tuning. The Vertical Sliders control the VCO waveforms and pulse width.


The image below shows what each sensor controls in the iMS-20 synthesizer:

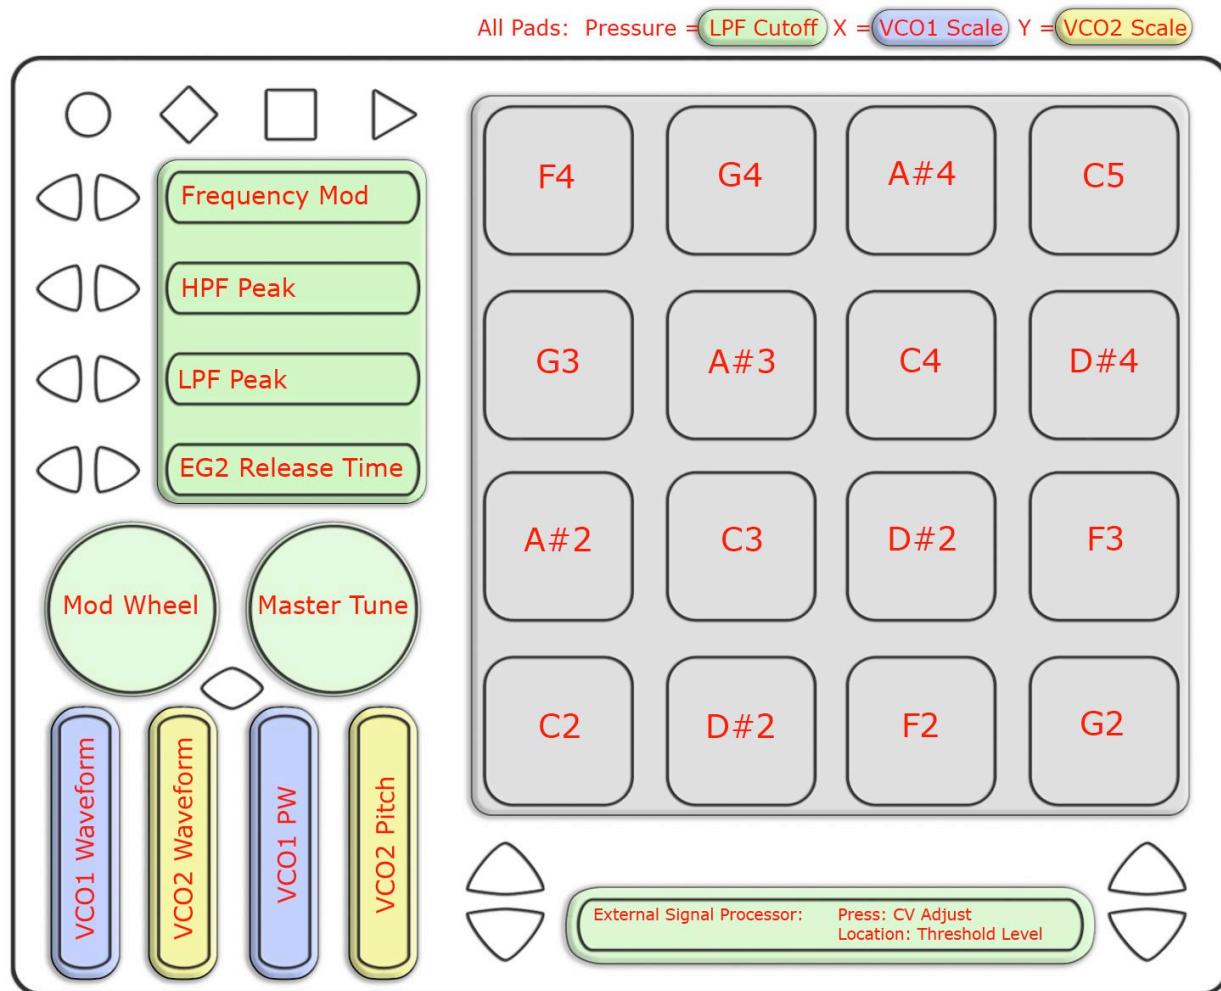

For more information about using the iMS-20 Template read the iMS-20 Template Quickstart document included in the QuNeo Software Template Installer.

Preset 16 (BeatMaker - iPad):

Below is an image showing how the QuNeo is mapped to BeatMaker's controls in factory preset #16. Each pad is in Drum Mode and outputs a MIDI note to trigger one of BeatMaker's drum pads. The vertical sliders each output a location CC to control the volume for tracks 1-4 in BeatMaker. The horizontal sliders are set up to control the first four sliders on the currently selected track's effects. Using the bank buttons next to the horizontal sliders you can access control for all three of a track's effects (bank four has nothing set as there are a maximum of three effects per track). The left rotary is mapped to filter cutoff frequency and the right rotary is mapped to filter resonance. The long slider controls a track's filter key.

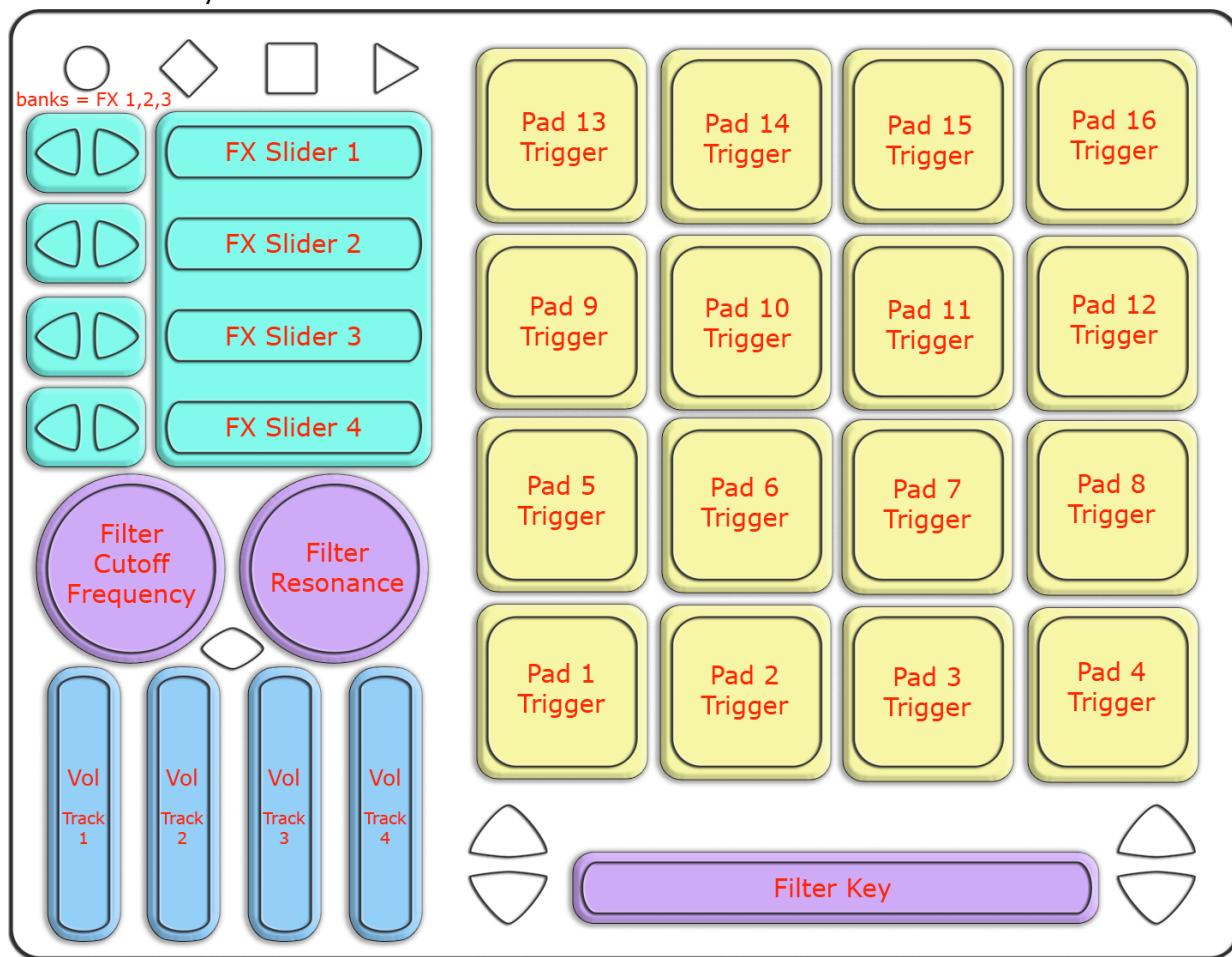

For more information about using the BeatMaker Template read the BeatMaker Template Quickstart document included in the QuNeo Software Template Installer.

QuNeo LED Behavior


QuNeo's LEDs provide many great ways to visualize interactions with the QuNeo. Local or Remote control is available. **Local LED Control** means the action on sensors will determine the LED behavior. **Remote LED Control** means note or CC Data being sent to the QuNeo will determine LED behavior. Local and Remote control can be used simultaneously as well.


Local LED Control - Without sending LED messages to the QuNeo from another application or device, the QuNeo's LEDs will automatically respond to touch. Local LED Control is the QuNeo's built-in LED behavior and will override any currently incoming Remote messages.

Remote LED Control - The LEDs on the QuNeo can be sent MIDI messages to control their behavior. When the QuNeo receives the proper MIDI data for a pad, slider, button, etc., the LEDs will respond accordingly. If you are touching the QuNeo, the Local LED control will momentarily override the Remote LED Control for as long as a finger is pressed down. When released, Remote LED Control will take over again. You can disable Local LED control using the editor.


Here are the guides that show what MIDI data the QuNeo will accept to control LEDs remotely. The LEDs on the pads will respond to the velocity of the notes to determine the brightness. All presets use **Channel 1** as the default LED channel for Pads in drum mode and all other sensor types:

QuNeo Drum Mode LED Map. All factory presets default to Channel 1

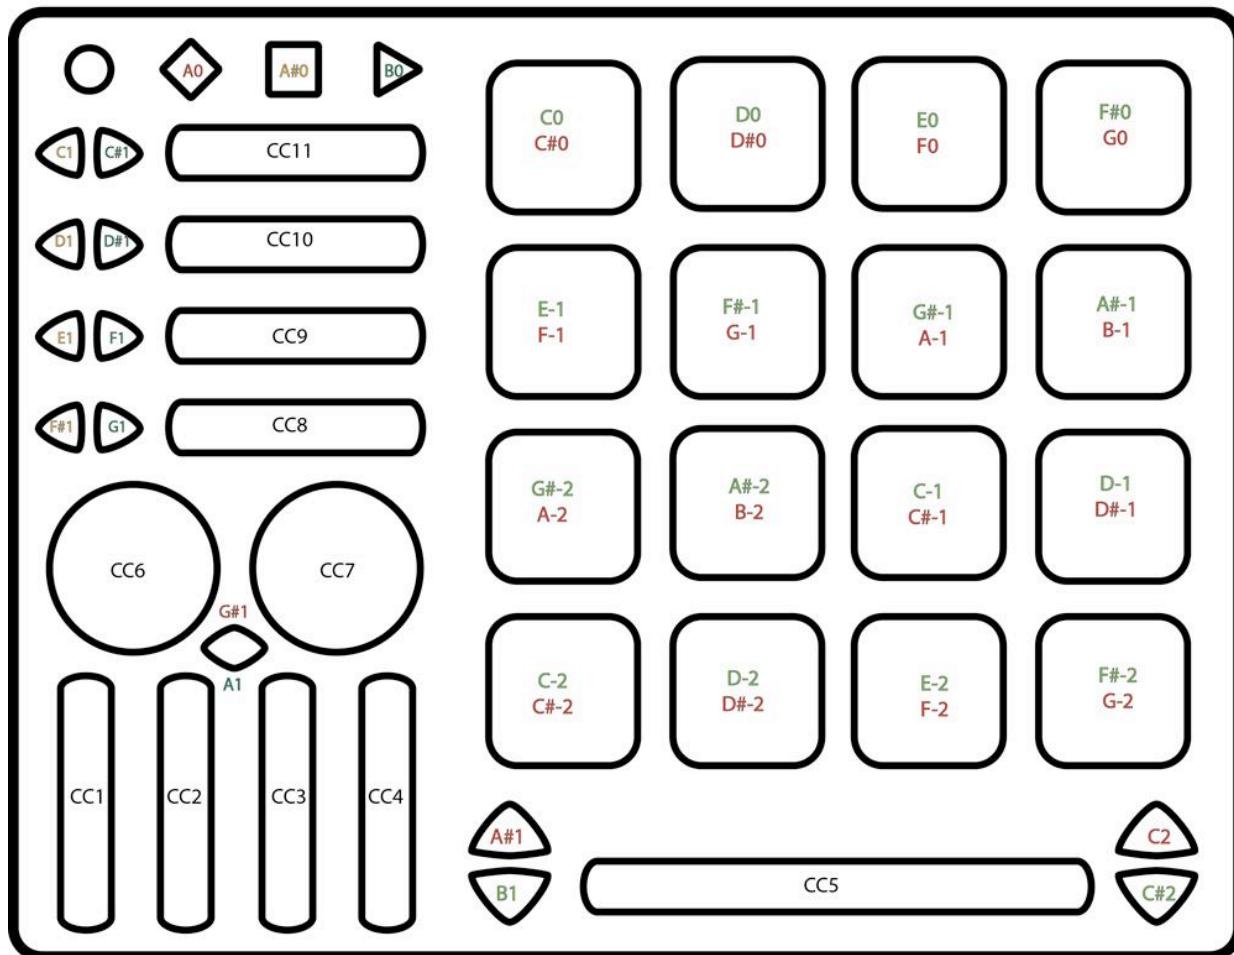

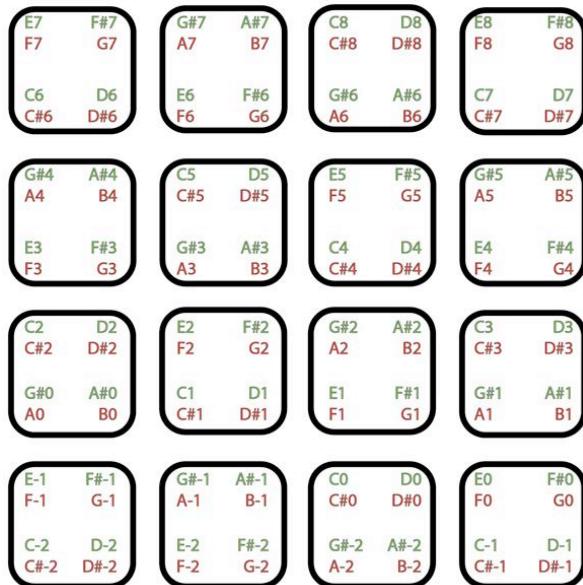

All presets use **Channel 2** as the default LED channel for Pads in grid mode. The Image to the left shows which note numbers control each individual LED.

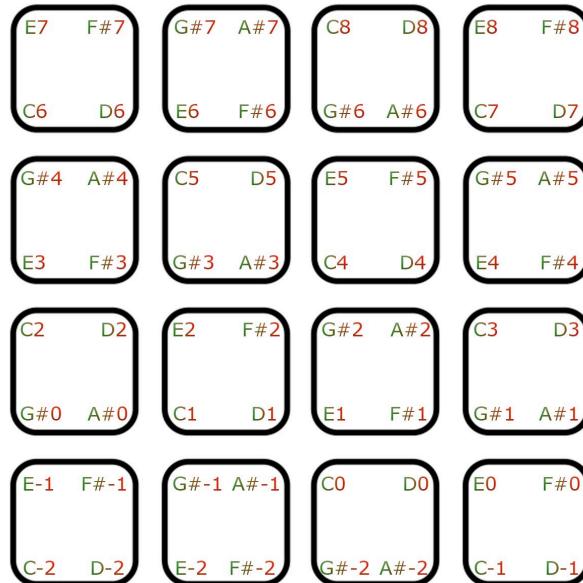


It is also possible to use 1 note per corner. In this case the velocity of the note will fade the LEDs from green to red. All presets use **Channel 3** for this behavior.

QuNeo Data Sources and Sensor Output

There are many useful types of sensors that can be found on the QuNeo. Each sensor type has the ability to send out multiple MIDI messages at once for several different kinds of sources.

- **Pad** sources in Drum Mode include Note, Pressure, X-Axis, and Y-Axis. Grid mode includes a note and a pressure CC# in the corners of each pad. X and Y are not available in Grid Mode.
- **Horizontal and Vertical Sliders** use Note, Pressure, and Location.
- The **Long Slider** uses Note, Pressure, Location, and Width.
- The **Rotaries** use Note, Pressure, Location, and Direction. Location and Direction may not be enabled simultaneously.

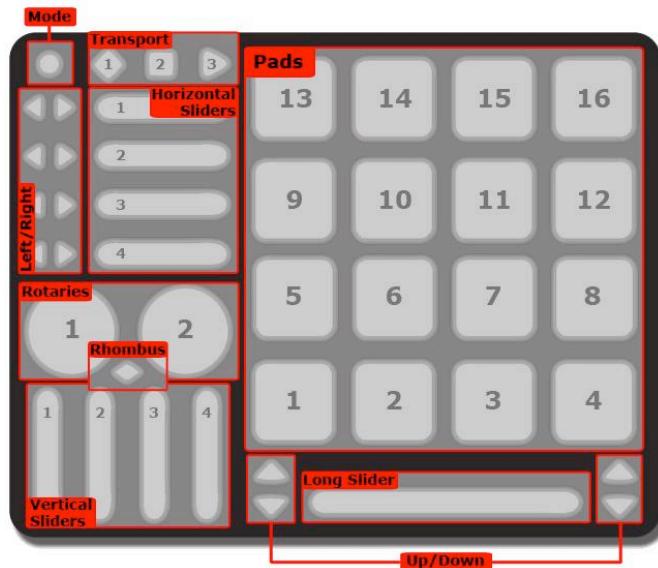

- **Transport Buttons** use Note and Pressure.
- **Left/Right and Up/Down Buttons** use Note and Pressure (unless they are assigned as bank switches).
- The **Rhombus** button uses Note and Pressure (unless it is assigned as a bank switch).

Source Definitions

Note - Tapping on the sensor causes 1 note to output along with a velocity value relative to how hard it is hit. Velocity sensitivity can be turned off if unwanted.

Pressure - Pressing on the sensor will cause the pressure CC# value to output from low to high (soft to hard).

X-Axis (horizontal/side to side) - Pads only. Tilting a finger from side to side across the surface of a pad will cause the X-Axis CC# value to output going from low to high (left to right). Setting the X-Axis to -2 ("bend") using the QuNeo Editor can activate pitch bend.

Y-Axis (vertical/top to bottom) - Pads only. Tilting a finger up and down across the surface of a pad will cause the Y-Axis CC# value to output going from low to high (bottom to top). Setting the X-Axis to -2 ("bend") using the QuNeo Editor can activate pitch bend.

Tip: Using the QuNeo Editor, it is possible to set the X and Y axis to stay where you leave them instead of snapping back to the return value. Do this by setting the return value field to -1 ("latch").

Location - Pressing down and moving a finger along a slider or rotary will cause the location CC# value (0-127) to output going from low to high (left to right/bottom to top).

Width - Long Slider only. Pressing with two fingers on the Long Slider sends a width CC# value that represents the distance between the two fingers. The wider the gap, the higher the value. When the second finger leaves the slider, the width will not change again until the second finger returns to the slider.

Direction - Rotaries only. Moving a finger around a rotary will cause the direction CC# value to output. If finger movement is clockwise, the CC# will repetitively send out a 127. If finger movement is counterclockwise, the CC# will repetitively send out a 0. The faster a finger is moved, the faster the repeated value will output.

Consult the Factory Preset Guides document to determine which of the sources for each sensor are enabled in a given preset.


Banks

Banks can be used for the Pad notes, Sliders, and Rotaries if enabled. If banks are enabled for the Sliders or Rotaries, a different note, pressure CC#, and location CC# can be assigned for each bank so that each slider or rotary can control 4 different things. These banks can be selectable using the Left/Right Buttons, the Up/Down Buttons, or the Rhombus Button.


Pads can also be set to different notes per bank. This is accomplished by setting transpose intervals for the notes in each bank. The Pad banks will not affect the CCs of the other sources (X, Y, Pressure, etc.). The note banks can be selectable using either the Up/Down Buttons or the Rhombus Button.

The presets determine whether the Pads, Sliders, and Rotaries have banks enabled and which buttons are assigned as bank switches. Consult the Factory Preset Guide document for this information.

Left/Right arrow buttons control their neighboring **Horizontal Slider** banks. The images below show how the **Left/Right Button** LEDs indicate which bank the **Horizontal Sliders** are in:

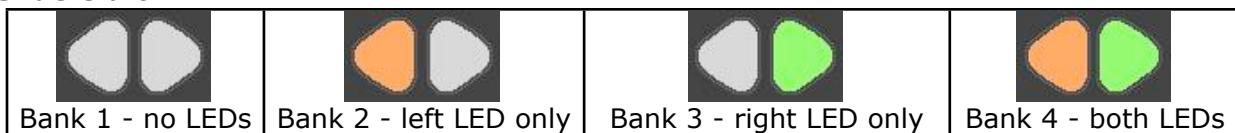

In our presets, when the **Vertical Slider** banks are used, the banks are controlled using the nearest **Up/Down Button** pair. The **Long Slider** banks are controlled using the **Up/Down Button** pair on the right side of the Long Slider. The images below show how the **Up/Down Button** LEDs indicate which bank is active:

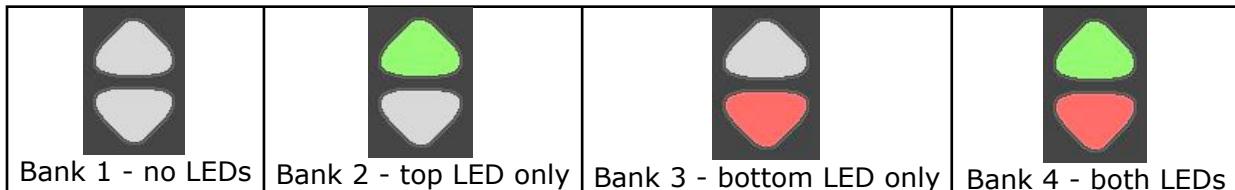

In our presets, when the **Rotary** banks are used, the banks are controlled using the **Rhombus** Button. The images below show how the **Rhombus Button** LEDs indicate which bank is active:



Using the QuNeo Editor, the bank controls for the Pad notes, Vertical Sliders, the Long Slider, and the Rotaries can be chosen. Both Up/Down Button Pairs and the Rhombus Button can be assigned to one of these sensors if editing presets in the Editor. See the "QuNeo Editor Manual" for more information about editing presets.

If you experience any problems or have questions regarding the QuNeo install process submit a support request (<http://www.keithmcmillen.com/support>) outlining the problems you're experiencing. The more detailed you are in describing your problem (information about your computer, the software you're running, the circumstances around the issue), the more easily we will be able to help you.

Safety Precautions



This product may contain chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

Medical Devices

QuNeo may emit electromagnetic fields. These electromagnetic fields may interfere with pacemakers or other medical devices. If you wear a pacemaker, maintain at least 6 inches (approximately 15 cm) of separation between your pacemaker and QuNeo. If you suspect QuNeo is interfering with your pacemaker or any other medical device, stop using QuNeo and consult your physician for information specific to your medical device.

Medical Conditions

If you have any medical condition that you believe could be affected by QuNeo (for example, seizures, blackouts, eyestrain, or headaches), consult with your physician prior to using QuNeo.

Explosive Atmospheres

Do not use QuNeo in any area with a potentially explosive atmosphere, such as at a fueling area, or in areas where the air contains chemicals or particles (such as grain, dust, or metal powders). Obey all signs and instructions.

Repetitive Motion

When you perform repetitive activities such as playing the keyboard on QuNeo, you may experience occasional discomfort in your hands, arms, wrists, shoulders, neck, or other parts of your body. If you experience discomfort, stop using QuNeo and consult a physician.

High-Consequence Activities

QuNeo is not intended for use where the failure of the device could lead to death, personal injury, or severe environmental damage.

Choking Hazard

Some QuNeo accessories may present a choking hazard to small children. Keep these accessories away from small children.