






Power Supply

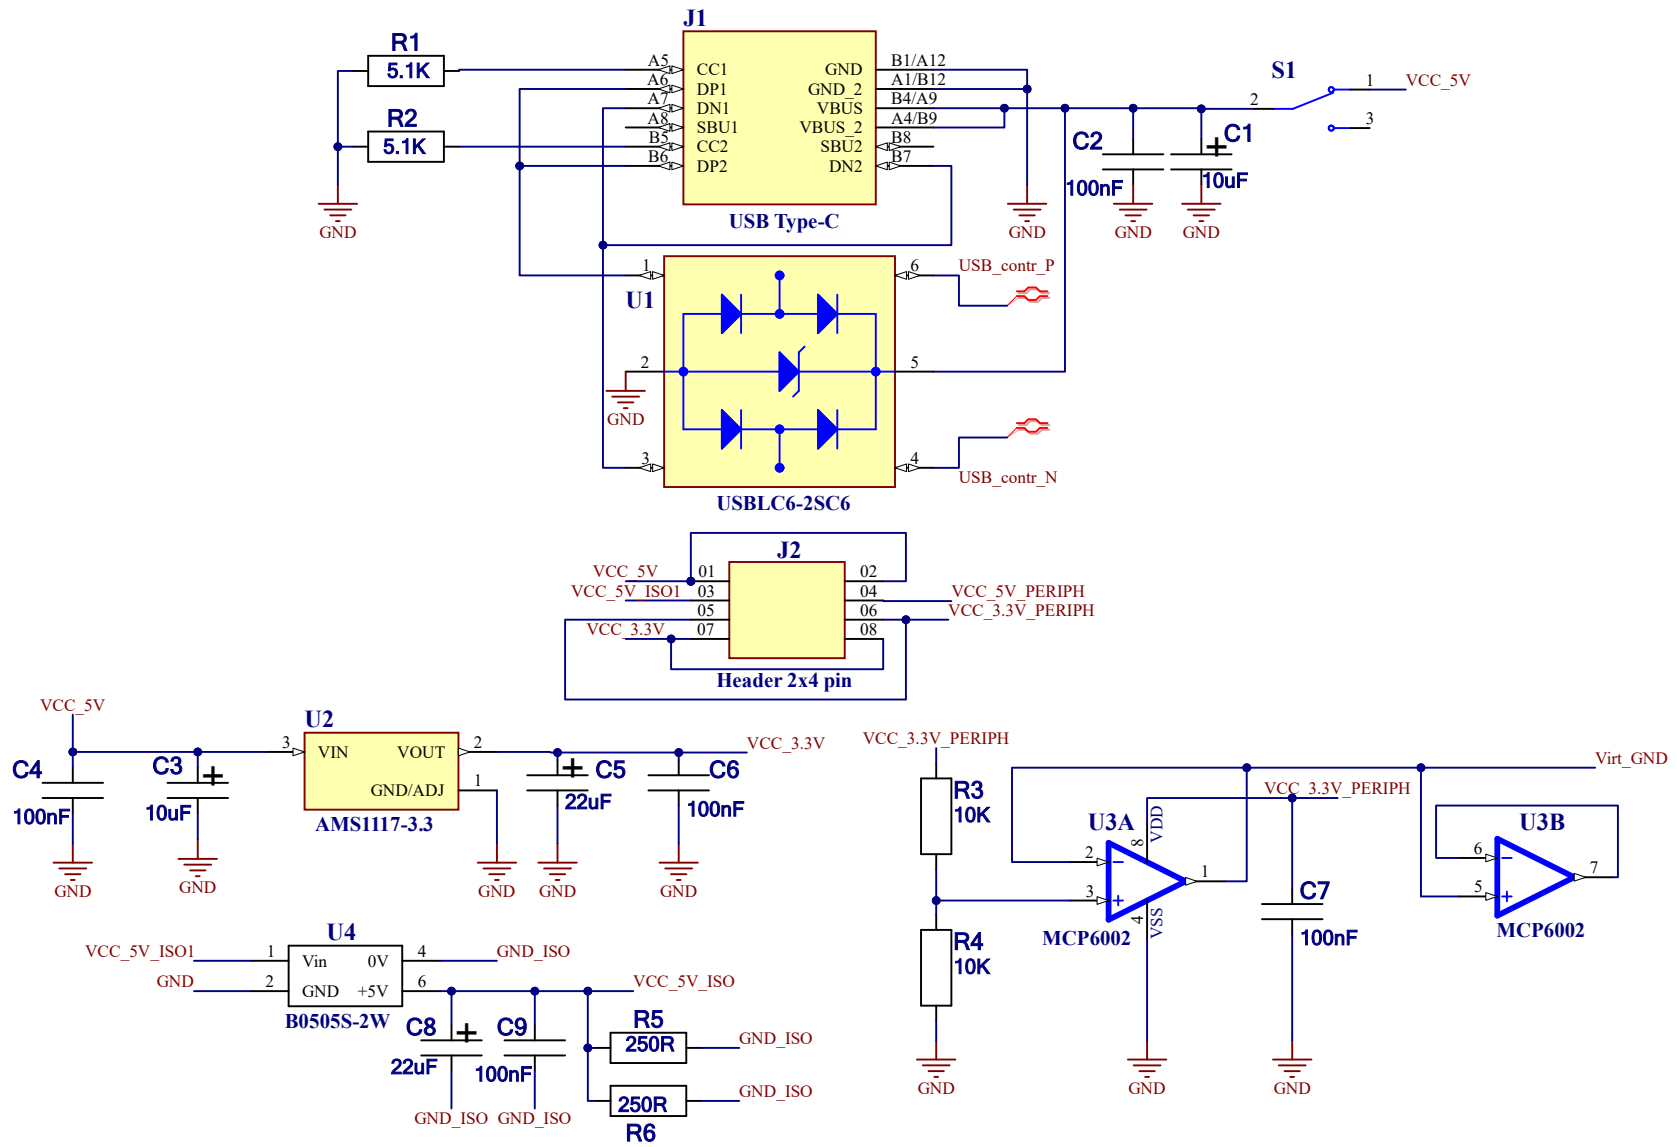


Input + Attenuators

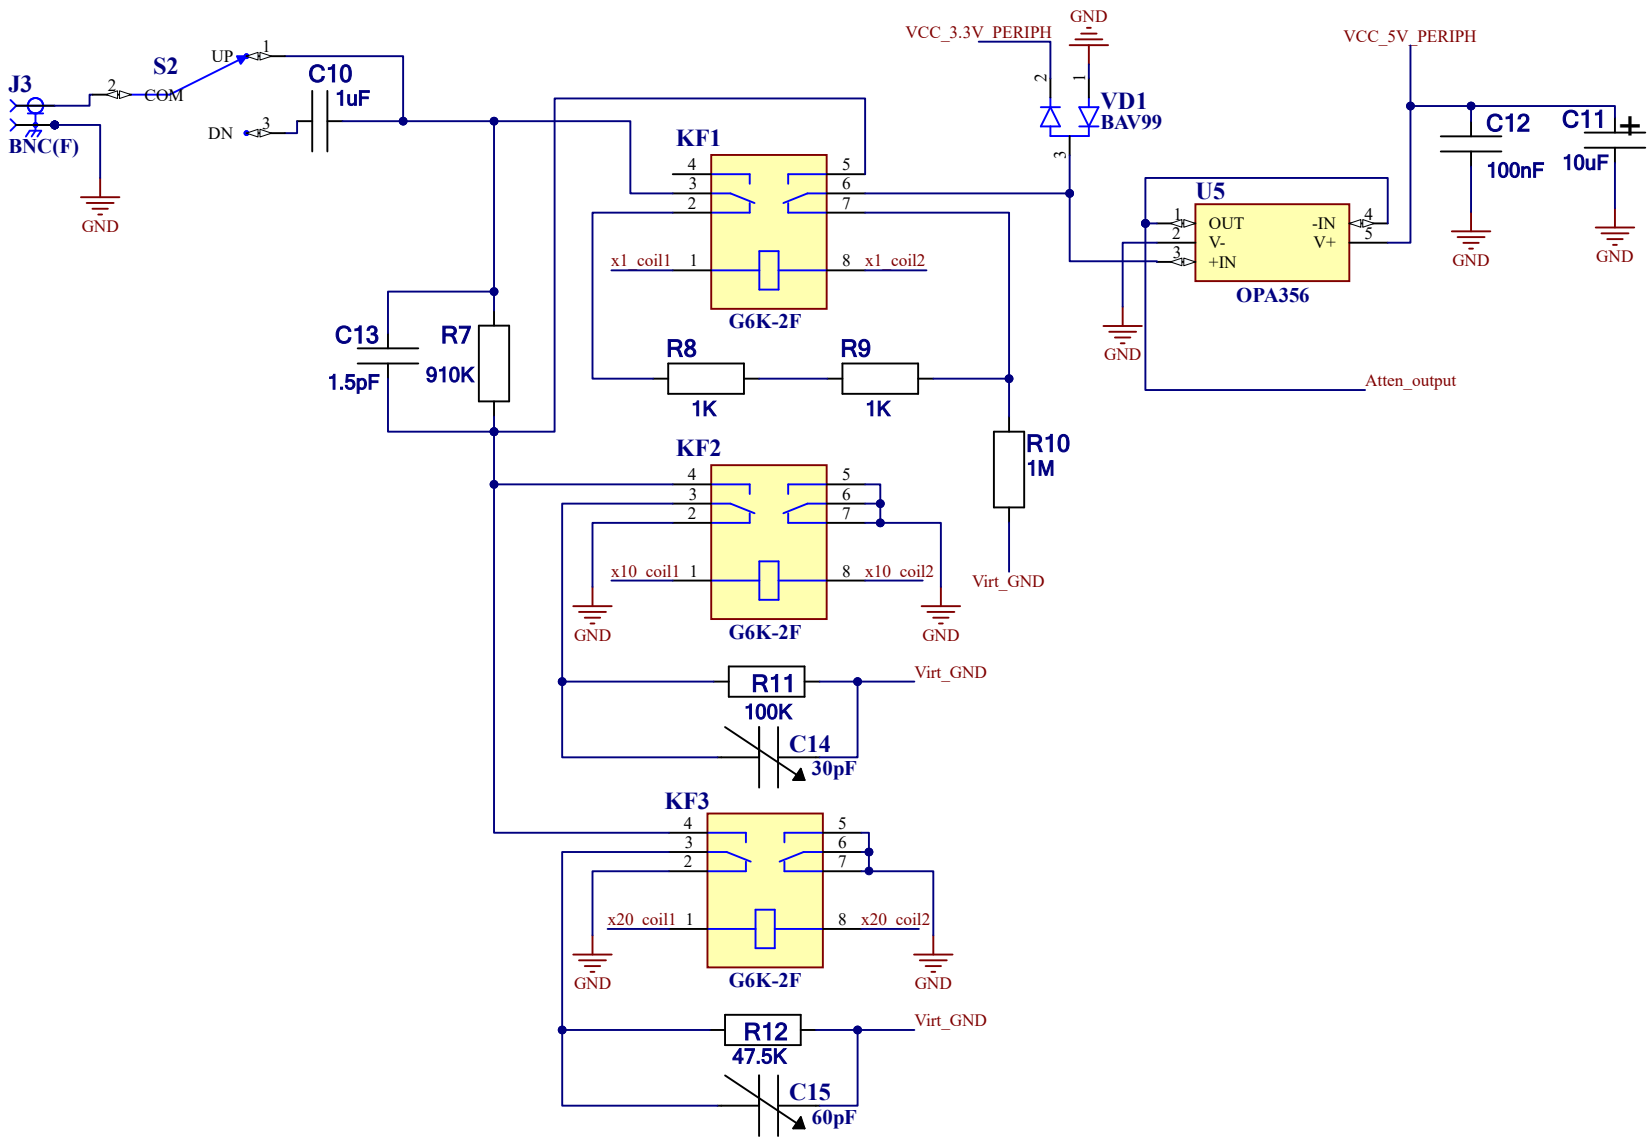

Relay switcher

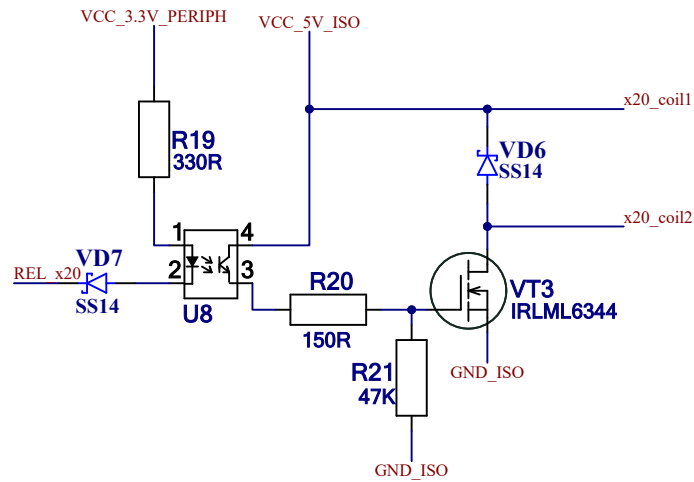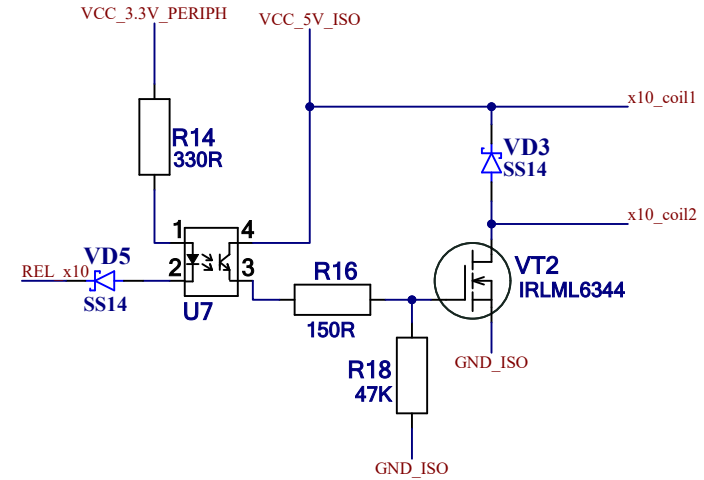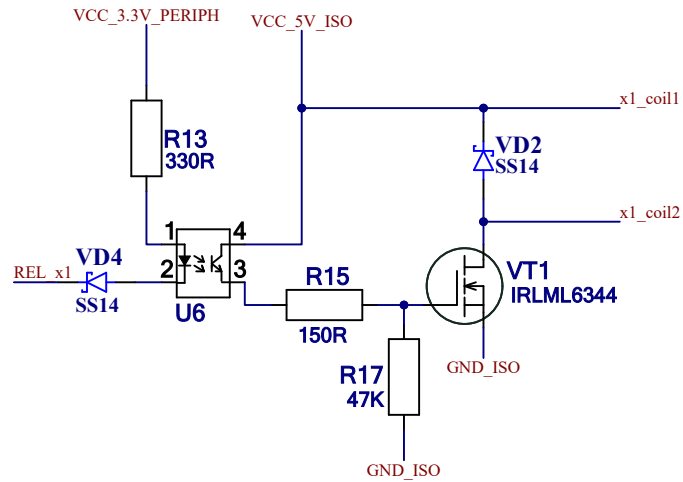

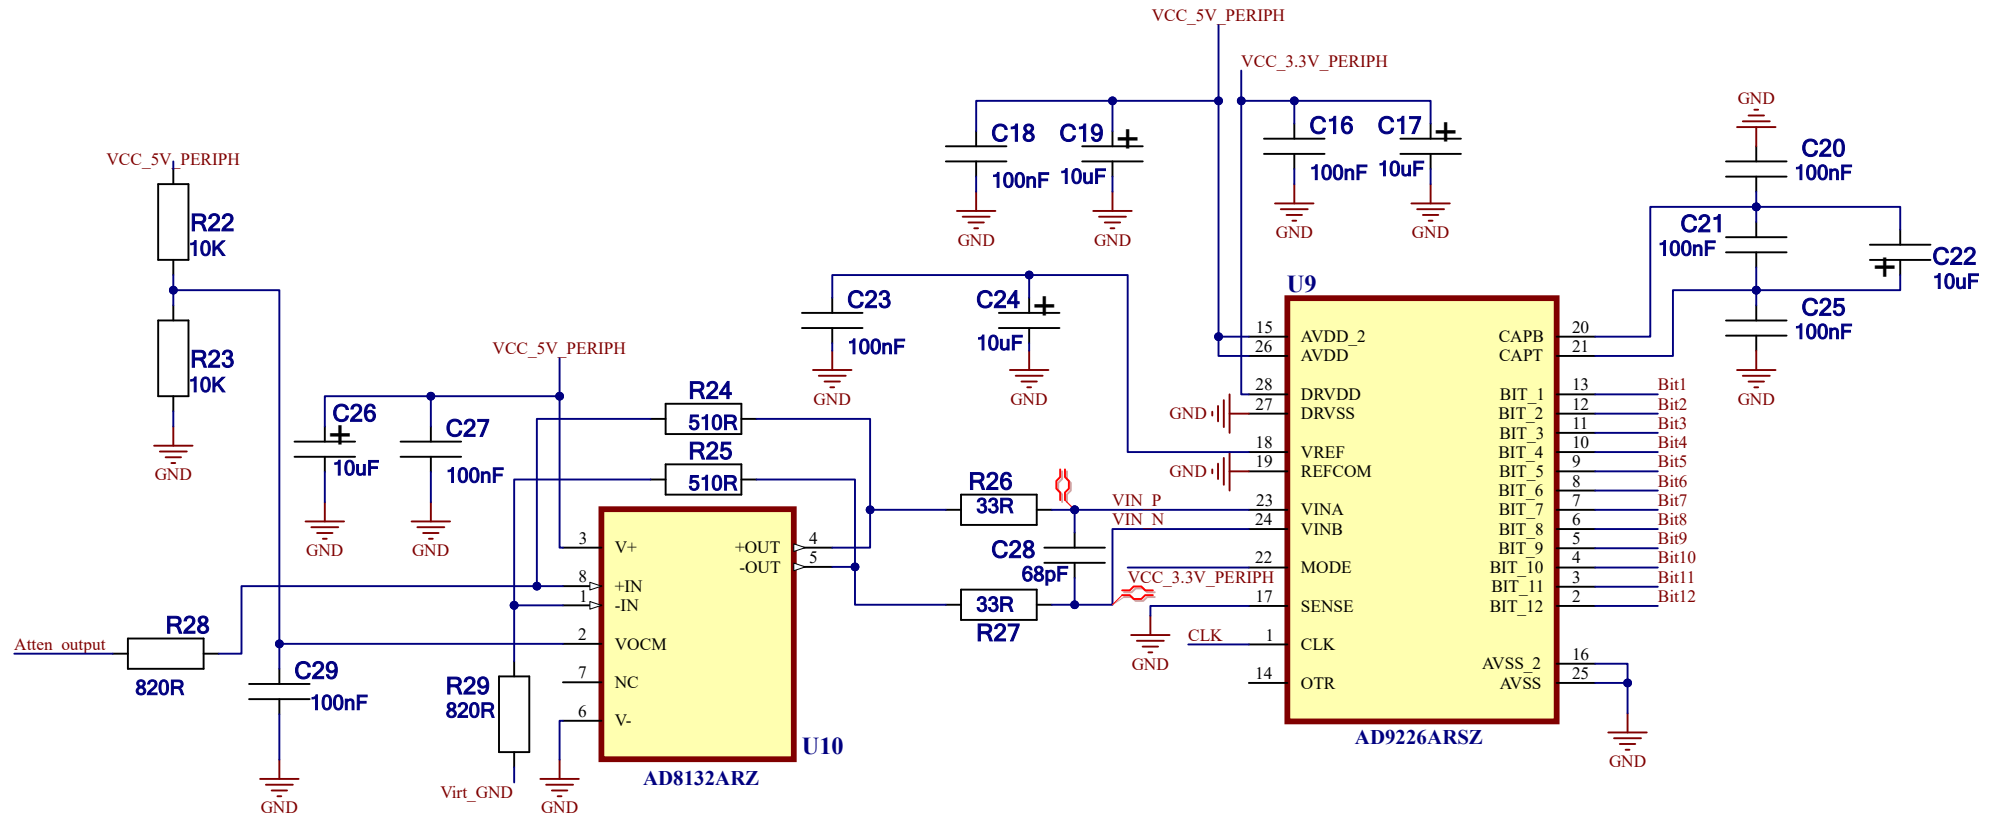


VDD decoupling capacitors

VCC 3.3V

C30 C31 C32 C33 C34 C35 C36 C37 C38 C39 C40 C41

GND

C30-C40 0603 100nF C41 0805 4.7uF

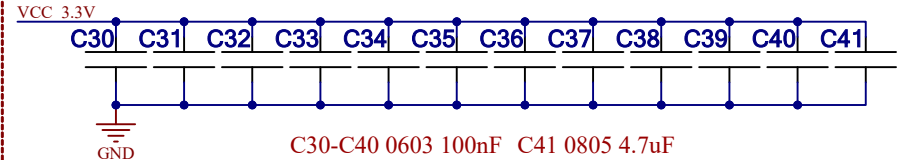

01/VCC	01	VCC_3.3V_PERIPH
02/GND	02	
03/CS	03	SPI_CS
04/RESET	04	SPI_RES
05/DC	05	SPI_DC
06/MOSI	06	SPI_MOSI
07/SCK	07	SPI_SCK
08/LED	08	VCC_3.3V_PERIPH
09/MISO	09	
10	10	
11	11	
12	12	
13	13	
14	14	

The diagram shows the pin connections for the SPI Display to the J5 header. The connections are as follows:

Header Pin	Display Pin	Signal
01	01	VCC_3.3V_PERIPH
02	02	GND
03	03	SPI_CS
04	04	SPI_RES
05	05	SPI_DC
06	06	SPI_MOSI
07	07	SPI_SCK
08	08	VCC_3.3V_PERIPH
09	09	MISO
10	10	
11	11	
12	12	
13	13	
14	14	

Buttons

The image displays four circuit diagrams for buttons, arranged in two rows. Each diagram shows a button connected to a 3.3V supply (VCC_3.3V_PERIPH) through a 10K resistor (R35, R36, R38, R39) and to ground (GND) through a pull-down resistor. The buttons are labeled S4, S5, S6, and S7. The output signals are labeled BTN_AUTO, BTN_MODE, BTN_UP, and BTN_DOWN.

Top Row:

- Left Button (S4):** Connected to VCC_3.3V_PERIPH through resistor R35 (10K). The button is labeled S4. The output is labeled BTN_AUTO.
- Right Button (S5):** Connected to VCC_3.3V_PERIPH through resistor R36 (10K). The button is labeled S5. The output is labeled BTN_MODE.

Bottom Row:

- Left Button (S6):** Connected to VCC_3.3V_PERIPH through resistor R38 (10K). The button is labeled S6. The output is labeled BTN_UP.
- Right Button (S7):** Connected to VCC_3.3V_PERIPH through resistor R39 (10K). The button is labeled S7. The output is labeled BTN_DOWN.

