

USER MANUAL

INDEX

Chapter 1 Safe Operation Regulations	2
Chapter 2 Main Technical Data and Functions	3
Chapter 3 General Information	4
1. Working Process of Automatic Lifting Unit	4
2. Adjustment of Auto Lifting Unit	4
3. Hydraulic Diagram	5
Chapter 4 Control Switches	6
Chapter 5 Electrical Diagram	7
Chapter 6 Daily Maintenance	12

Chapter 1 Safe Operation Regulations

Warning: Please read this user manual carefully before operation
If any doubt, please contact the nearby dealer to get more information

Safe Operation Regulations:

- Please clean up all the mess on the machine before start.
- Please remind the people around the machine before start.
- When any fault occurs during operation, press down the emergency stop switch immediately.
- Please maintain and repair the machine when power off.
- Only qualified workers are allowed to open control box and electrical cabinet.
- Please ensure the power isolating switch is shut off before replacing any electric parts.
- Inspect the function of safety devices periodically, and immediately solve any malfunction.
- Open sequence: Power on→Switch on from the control board→Enable all the functions→Start loading
- Close sequence: Disable all the functions→Switch off→Power off

Notice:

1. Do not change the machine without any prove!
2. To purchase and use the original parts from factory!
3. For any the information not included in this user manual, please contact to the nearby dealers!
4. This user manual only suits for 2 series feeder!
5. Please take real products as criterion, if any change in technology. No further inform will be made.

1/12

2/12


Chapter 2 Main Technical Data and Functions

1. Main Technical Data

Technical Data	2408	2510	2710	2713
Table Size(mm)	2400*1200	3000*1500	3000*2100	3650*2100
Outline Size(mm)	2400*1660	3000*1920	3000*2530	3650*2530
	*1020	*1025	*1025	*1025
Panel Length(mm)	2440	3050	3050	3965
Panel Width(mm)	1220	1525	2100	2100
Panel Thickness(mm)	10-25	10-25	10-25	10-25
Stack Height(mm)	500	500	500	500
Total Power(kW)	2.2	2.2	2.2	2.2
Weight(Kg)	3000	3000	3500	3500

Chapter 3 General Information

1. Working Process of Automatic Lifting Unit

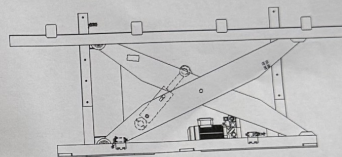

As shown in above figure, after workpiece is placed on the platform, switch on AUTO knob, it rises up with lifting unit (controlled by hydraulic system). The workpiece stops rising when triggers the sensor. When the panel is picked up by CNC center, i.e. the sensor is deactivated for a certain time, the unit continues to rise and goes into feeding cycle. When all the workpieces are conveyed, the unit will rise until touch the upper limit switch and stops. In 5 seconds, the unit will be reset and fall down to touch the lower limit switch and stop, then a cycle of auto feeding ends up. After all the panels are loaded, turn on AUTO knob again to enter next cycle.

2. Adjustment of Auto Lifting Unit


No-load lifting: if the lowest position where the unit can reach is too low or has collided with limit block, adjust the lower limit plate to a proper position. Adjust the upper limit switch according to the height of CNC table and panel thickness.

3/12


4/12

3. Hydraulic Diagram

2408/2510

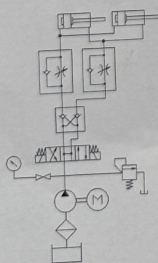

2710/2713

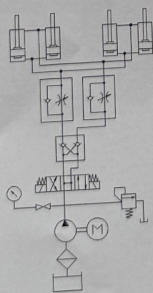

5/12


Chapter 4 Control Switches




- ON/OFF—Power switch of machine
- AUTO/MANUAL— Switch between Auto and Manual modes
- RISE— Lifting platform rises up manually (MANUAL)
- FALL—Lifting platform falls down manually (MANUAL)
- EMG—Press this button when failure occurs.

6/12


Chapter 5 Electrical Diagram

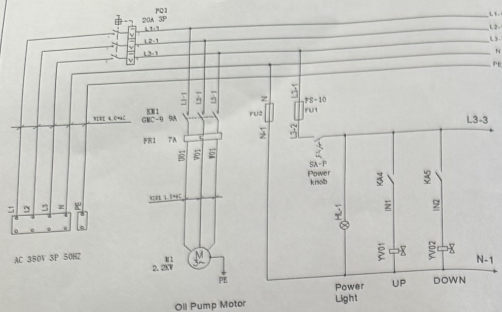


7/12

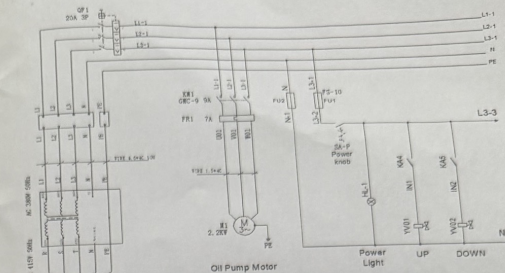

8/12

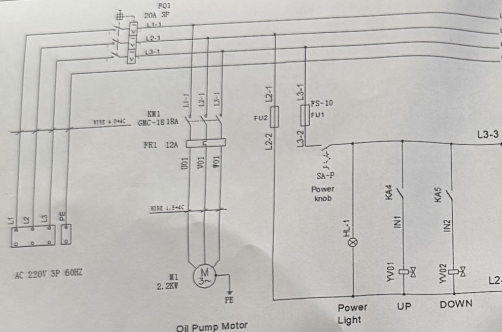

9/12

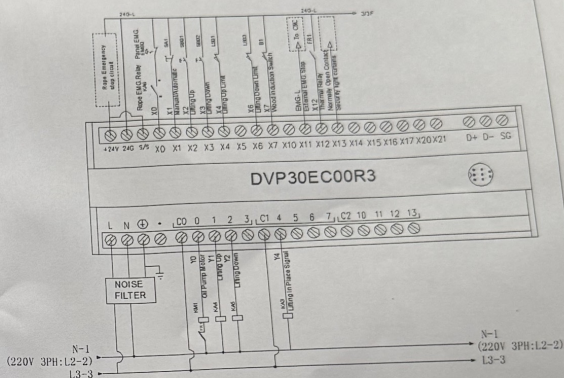

10/12

Chapter 6 Daily Maintenance


Warning: All maintenance should be done under on load when machine stops and power is off.

- Keep the environment clean and dry.
- Lubricate each moving joint of machine once a month (equipped with grease nozzle)
- Periodically check if the hydraulic oil level of oil tank is below the required scale mark, if yes, add hydraulic oil immediately.
- Regularly change the hydraulic oil in oil tank to keep the oil clean and avoid damage to hydraulic system.
- The oil tank is filled with 32# anti-wear hydraulic oil when machine exits factory. Please choose appropriate hydraulic oil according to local routines and service condition of machine.

PS: The maintenance period should depend on the frequency of operation.

12/12

Connection diagram

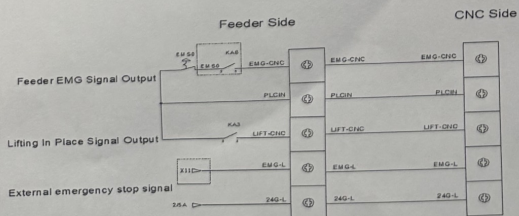

11/12