

USER MANUAL

INDEX

Chapter 1 Safe Operation Regulations	2
Chapter 2 Main Technical Data	3
Chapter 3 General Information	4
Chapter 4 Pneumatic Lubrication Diagram	6
Chapter 5 Electrical Diagram	7
Chapter 6 Daily Maintenance	12

4. This user manual only suits for 9 series stacker!
5. Please take real products as criterion, if any change in technology. No further inform will be made.

Chapter 2 Main Technical Data

Technical Data	9409	9510	9612	9710	9713
Table Size(mm)	3060*1230	3370*1540	4000*1805	3210*2120	4185*2120
Outline Size(mm)	3420*1570 *920	3725*1875* 920	4375*2150* 920	3535*2370 *920	4510*2370 *920
Panel Length(mm)	2745	3050	3660	3050	3965
Panel Width(mm)	1220	1525	1800	2100	2100
Panel Thickness(mm)	10-25	10-25	10-25	10-25	10-25
Total Power(kW)	0.75	0.75	1.5	1.5	1.5

3/12

The working process of stacker is as follows:

When power on, CNC center executes the command of unloading, conveying belt runs and the pusher of CNC center pushes the panel onto stacking platform. When belt starts to run, dust suction device is switched on to start work.

The panel moves forwards in feeding direction, when sensor senses the board, belt stops, then operator can paste the label and remove the panel. During the stop of belt, dust suction system is switched off automatically.

When panel gets away from sensor, belt continues to run.

When sensor does not sense the board within a set time, machine will stop running automatically and wait for the next unloading instruction of CNC center.

When belt stops, pressing jog button manually can run the belt.

Note: the action of jog button is not subject to photoelectrical sensor.
When using this button, please pay particular attention to the materials on the belt to avoid falling, collision, crushing and so on.

5/12

Chapter 1 Safe Operation Regulations

Warning: Please read this user manual carefully before operation
If any doubt, please contact the nearby dealer to get more information
Safe Operation Regulations:


- Please clean up all the mess on the machine before start.
- Please remind the people around the machine before start.
- When any fault occurs during operation, press down the emergency stop switch immediately.
- Please maintain and repair the machine when power off.
- Only qualified workers are allowed to open control box and electrical cabinet.
- Please ensure the power isolating switch is shut off before replacing any electric parts.
- Inspect the function of safety devices periodically, and immediately solve any malfunction.
- Open sequence: Power on → Power switch on
- Close sequence: Power switch off → Power off

Notice:

1. Do not change the machine without any prove!
2. To purchase and use original parts from factory!
3. For any the information not included in this user manual, please contact to the nearby dealers!

2/12

Chapter 3 General Information

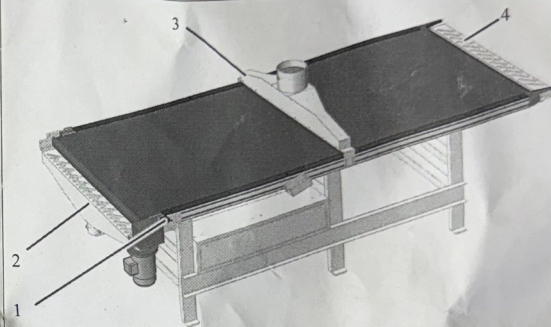


1. Photoelectric sensor
2. Rear dust hood
3. Upper dust hood(optional)
4. Front dust hood

4/12


Chapter 4 Pneumatic Lubrication Diagram

Drawing NO./Specification	Name	Qty
008 MF20X25-S-CA	Mini cylinder valve	2
007 FSL6-01	Electric solenoid valve	4
008 EP8	1/4" pipe joint	2
005 ZGP1.8-D2	L-type thread pipe joint	2
004 V521-08E2	Standard valve	1
003 BSLM-01	Shower	2
002 ZGP1.8-D2	L-type thread pipe joint	1
001 EP10	1/4" pipe joint	1

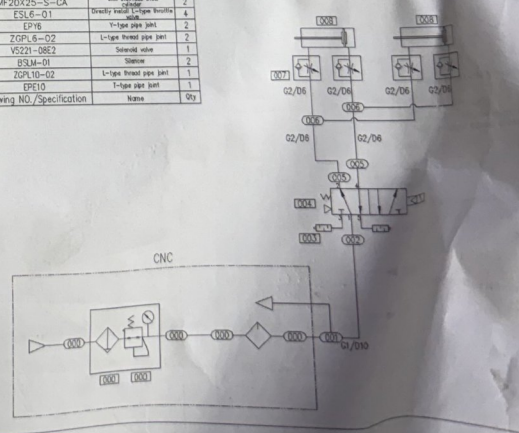


6/12

Chapter 5 Electrical Diagram

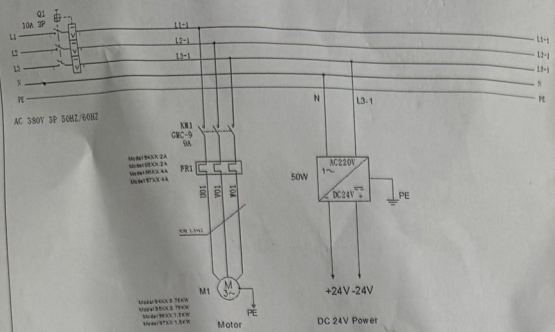


7/12

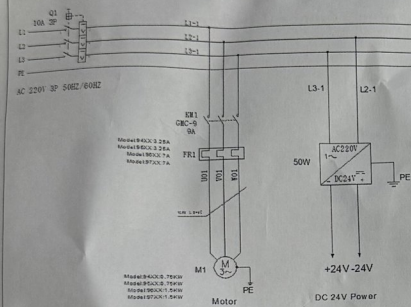


9/12


Connection diagram

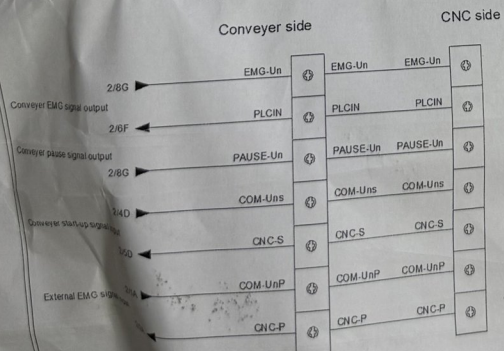


11/12

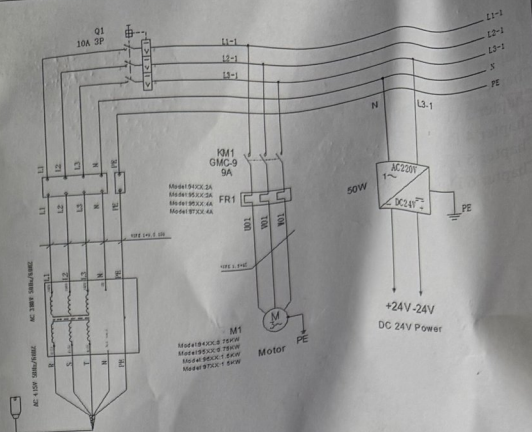

8/12

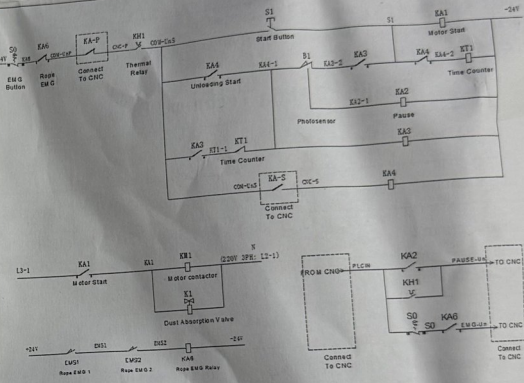

10/12

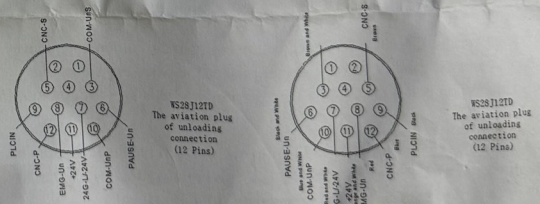

Chapter 6 Daily Maintenance

Warning: All of the maintenance should be done during the power is off.

- Keep the environment clean and dry.
- Lubricate every bearing block once every one week.
- Check the abrasion situation of cylinder pusher periodically, should be any erosion or damage, change them immediately.

PS: The Maintenance period should depend on the frequency of operation.

12/12

USER MANUAL

INDEX

Chapter 1 Safe Operation Regulations -----	2
Chapter 2 Main Technical Data -----	3
Chapter 3 General Information -----	4
Chapter 4 Pneumatic Lubrication Diagram -----	6
Chapter 5 Electrical Diagram -----	7
Chapter 6 Daily Maintenance -----	12

Chapter

Warning: Please read the

If any doubt, please consult

Safe Operation Regulations

- Please clean up all the
- Please remind the person
- When any fault occurs, stop the machine and switch immediately.
- Please maintain and
- Only qualified workers can open the cabinet.
- Please ensure the person is wearing protective electric parts.
- Inspect the function of the machine after any malfunction.
- Open sequence: Please
- Close sequence: Please

Notice:

1. Do not change the
2. To purchase and use
3. For any information, please contact the nearby dealers!

4. This user manual only suits for 9 series stacker!
5. Please take real products as criterion, if any change in technology. No further inform will be made.

Chapter 2 Main Technical Data

Technical Data	9409	9510	9612	9710	9713
----------------	------	------	------	------	------

USER MANUAL

Chapter 1 Safe Operation Regulations

Warning: Please read this user manual carefully before operation

If any doubt, please contact the nearby dealer to get more information

Safe Operation Regulations:

- Please clean up all the mess on the machine before start.
- Please remind the people around the machine before start.
- When any fault occurs during operation, press down the emergency stop switch immediately.
- Please maintain and repair the machine when power off.
- Only qualified workers are allowed to open control box and electrical cabinet.
- Please ensure the power isolating switch is shut off before replacing any electric parts.
- Inspect the function of safety devices periodically, and immediately solve any malfunction.
- Open sequence: Power on → → Power switch on
- Close sequence: Power switch off → → Power off

Notice:

1. Do not change the machine without any prove!
2. To purchase and use original parts from factory!
3. For any the information not included in this user manual, please contact to the nearby dealers!

2/12

Chapter 3 General Information

3

4

No

- Only qua
cabinet.
- Please e
 - electric
 - Inspect
 - any mal
 - Open se
 - Close se
- Notice:
1. Do not ch
 2. To purcha
 3. For any th
- the nearby c

4. This user manual only suits for 9 series stacker!
5. Please take real products as criterion, if any change in technology. No further inform will be made.

Chapter 2 Main Technical Data

Technical Data	9409	9510	9612	9710	9713
Table Size(mm)	3060*1230	3370*1540	4000*1805	3210*2120	4185*2120
Outline Size(mm)	3420*1570 *920	3725*1875* 920	4375*2150* 920	3535*2370 *920	4510*2370 *920
Panel Length(mm)	2745	3050	3660	3050	3965
Panel Width(mm)	1220	1525	1800	2100	2100
Panel Thickness(mm)	10-25	10-25	10-25	10-25	10-25
Total Power(kW)	0.75	0.75	1.5	1.5	1.5

3/12

The working process of stacker is as follows:

When power on, CNC center executes the command of unloading, conveying belt runs and the pusher of CNC center pushes the panel onto stacking

1. Photo
2. Rear
3. Upper
4. Front

008	MF20X
007	ES
006	ZGF
005	V52


- Please ensure the power isolating switch is shut off before replacing electric parts.
- Inspect the function of safety devices periodically, and immediately solve any malfunction.
- Open sequence: Power on → → Power switch on
- Close sequence: Power switch off → → Power off

Notice:

1. Do not change the machine without any prove!
2. To purchase and use original parts from factory!
3. For any the information not included in this user manual, please contact to the nearby dealers!

2/12

Chapter 3 General Information

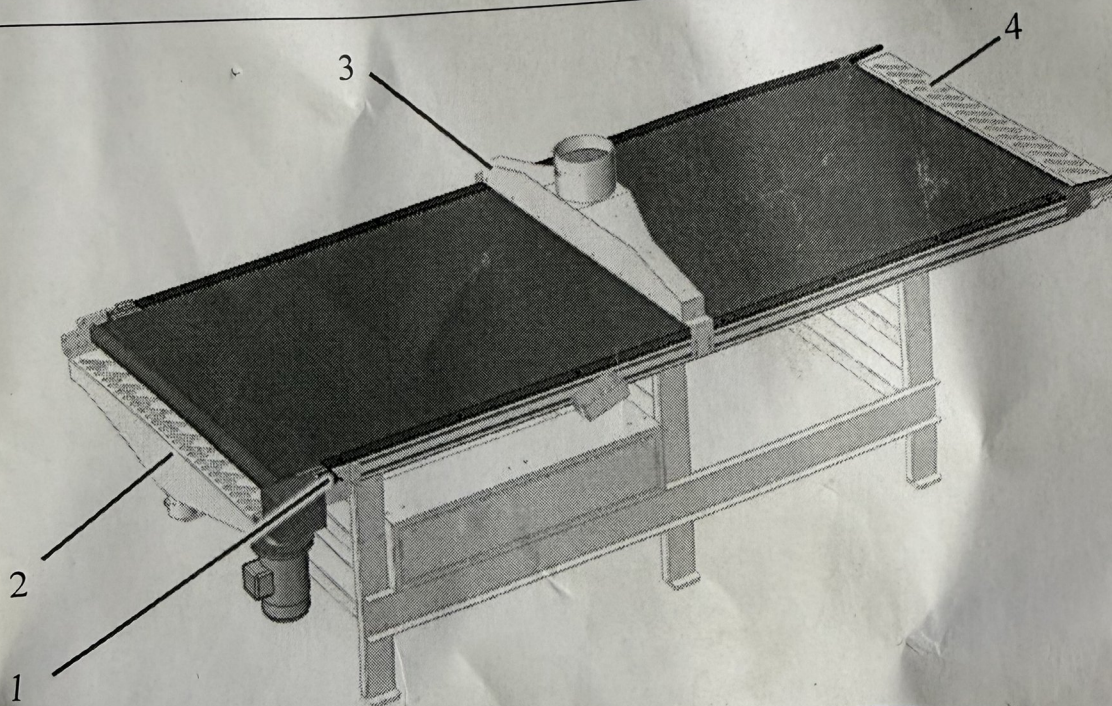


1. Photoelectric sensor
2. Rear dust hood
3. Upper dust hood(optional)
4. Front dust hood

4/12

Chapter 4 Pneumatic Lubrication Diagram

008	MF20X25-S-CA	Mini stainless steel cylinder	2
007	ESL6-01	Directly install L-type throttle valve	4
006	EPY6	Y-type pipe joint	2
005	ZGPL6-02	L-type thread pipe joint	2
004	V5221-08E2	Solenoid valve	1
003	BSLM-01	Silencer	2
002	ZGPL10-02	L-type thread pipe joint	1
	EPE10	T-type pipe joint	1
		Name	Qty

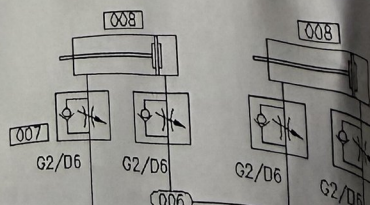

	720	920	920	720	720
Panel Length(mm)	2745	3050	3660	3050	3965
Panel Width(mm)	1220	1525	1800	2100	2100
Panel Thickness(mm)	10-25	10-25	10-25	10-25	10-25
Total Power(kW)	0.75	0.75	1.5	1.5	1.5

2

1

1. Photo
2. Rear d
3. Upper
4. Front

3/12

The working process of stacker is as follows:

When power on, CNC center executes the command of unloading, conveying belt runs and the pusher of CNC center pushes the panel onto stacking platform. When belt starts to run, dust suction device is switched on to start work.

The panel moves forwards in feeding direction, when sensor senses the board, belt stops, then operator can paste the label and remove the panel. During the stop of belt, dust suction system is switched off automatically.

When panel gets away from sensor, belt continues to run.

When sensor does not sense the board within a set time, machine will stop running automatically and wait for the next unloading instruction of CNC center.

When belt stops, pressing jog button manually can run the belt.

Note: the action of jog button is not subject to photoelectrical sensor. When using this button, please pay particular attention to the materials on the belt to avoid falling, collision, crushing and so on.

5/12


008	MF20X25
007	ESL6
006	EPY
005	ZGPL6
004	V5221-
003	BSJM
002	ZGPL1
001	EPE
000	Drawing NO./

1. Photoelectric sensor
2. Rear dust hood
3. Upper dust hood(optional)
4. Front dust hood

4/12

Chapter 4 Pneumatic Lubrication Diagram

008	MF20X25-S-CA	Mini stainless steel cylinder	2
007	ESL6-01	Directly install L-type throttle valve	4
006	EPY6	Y-type pipe joint	2
005	ZGPL6-02	L-type thread pipe joint	2
004	V5221-08E2	Solenoid valve	1
003	BSLM-01	Silencer	2
002	ZGPL10-02	L-type thread pipe joint	1
001	EPE10	T-type pipe joint	1
Serial No.	Drawing NO./Specification	Name	Qty

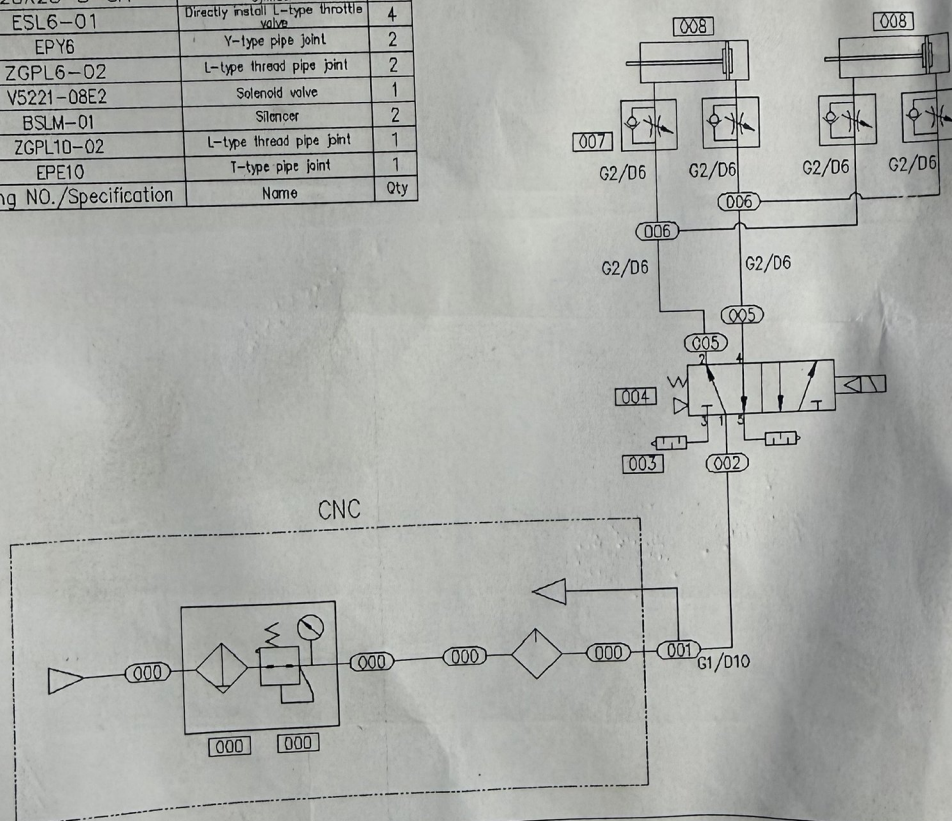


6/12


Chapter 4 Pneumatic


008	MF20X25-S-CA	Mini stainless steel cylinder	2
007	ESL6-01	Directly install L-type throttle valve	4
006	EPY6	Y-type pipe joint	2
005	ZGPL6-02	L-type thread pipe joint	2
004	V5221-08E2	Solenoid valve	1
003	BSLM-01	Silencer	2
002	ZGPL10-02	L-type thread pipe joint	1
001	EPE10	T-type pipe joint	1
Serial NO.	Drawing NO./Specification	Name	Qty

Chapter 5 Electrical Diagram

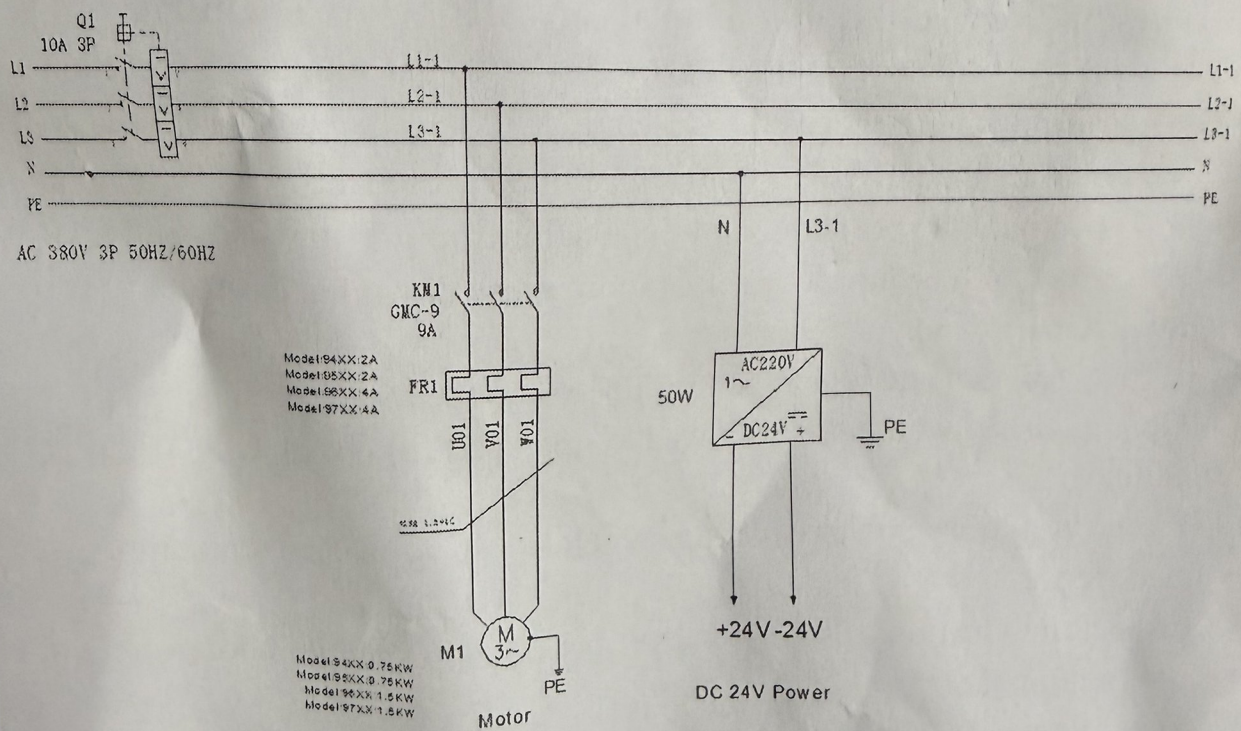

7/12

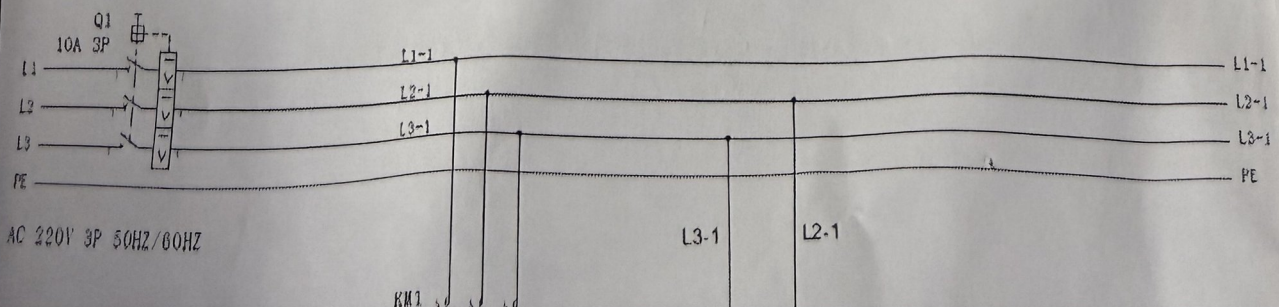

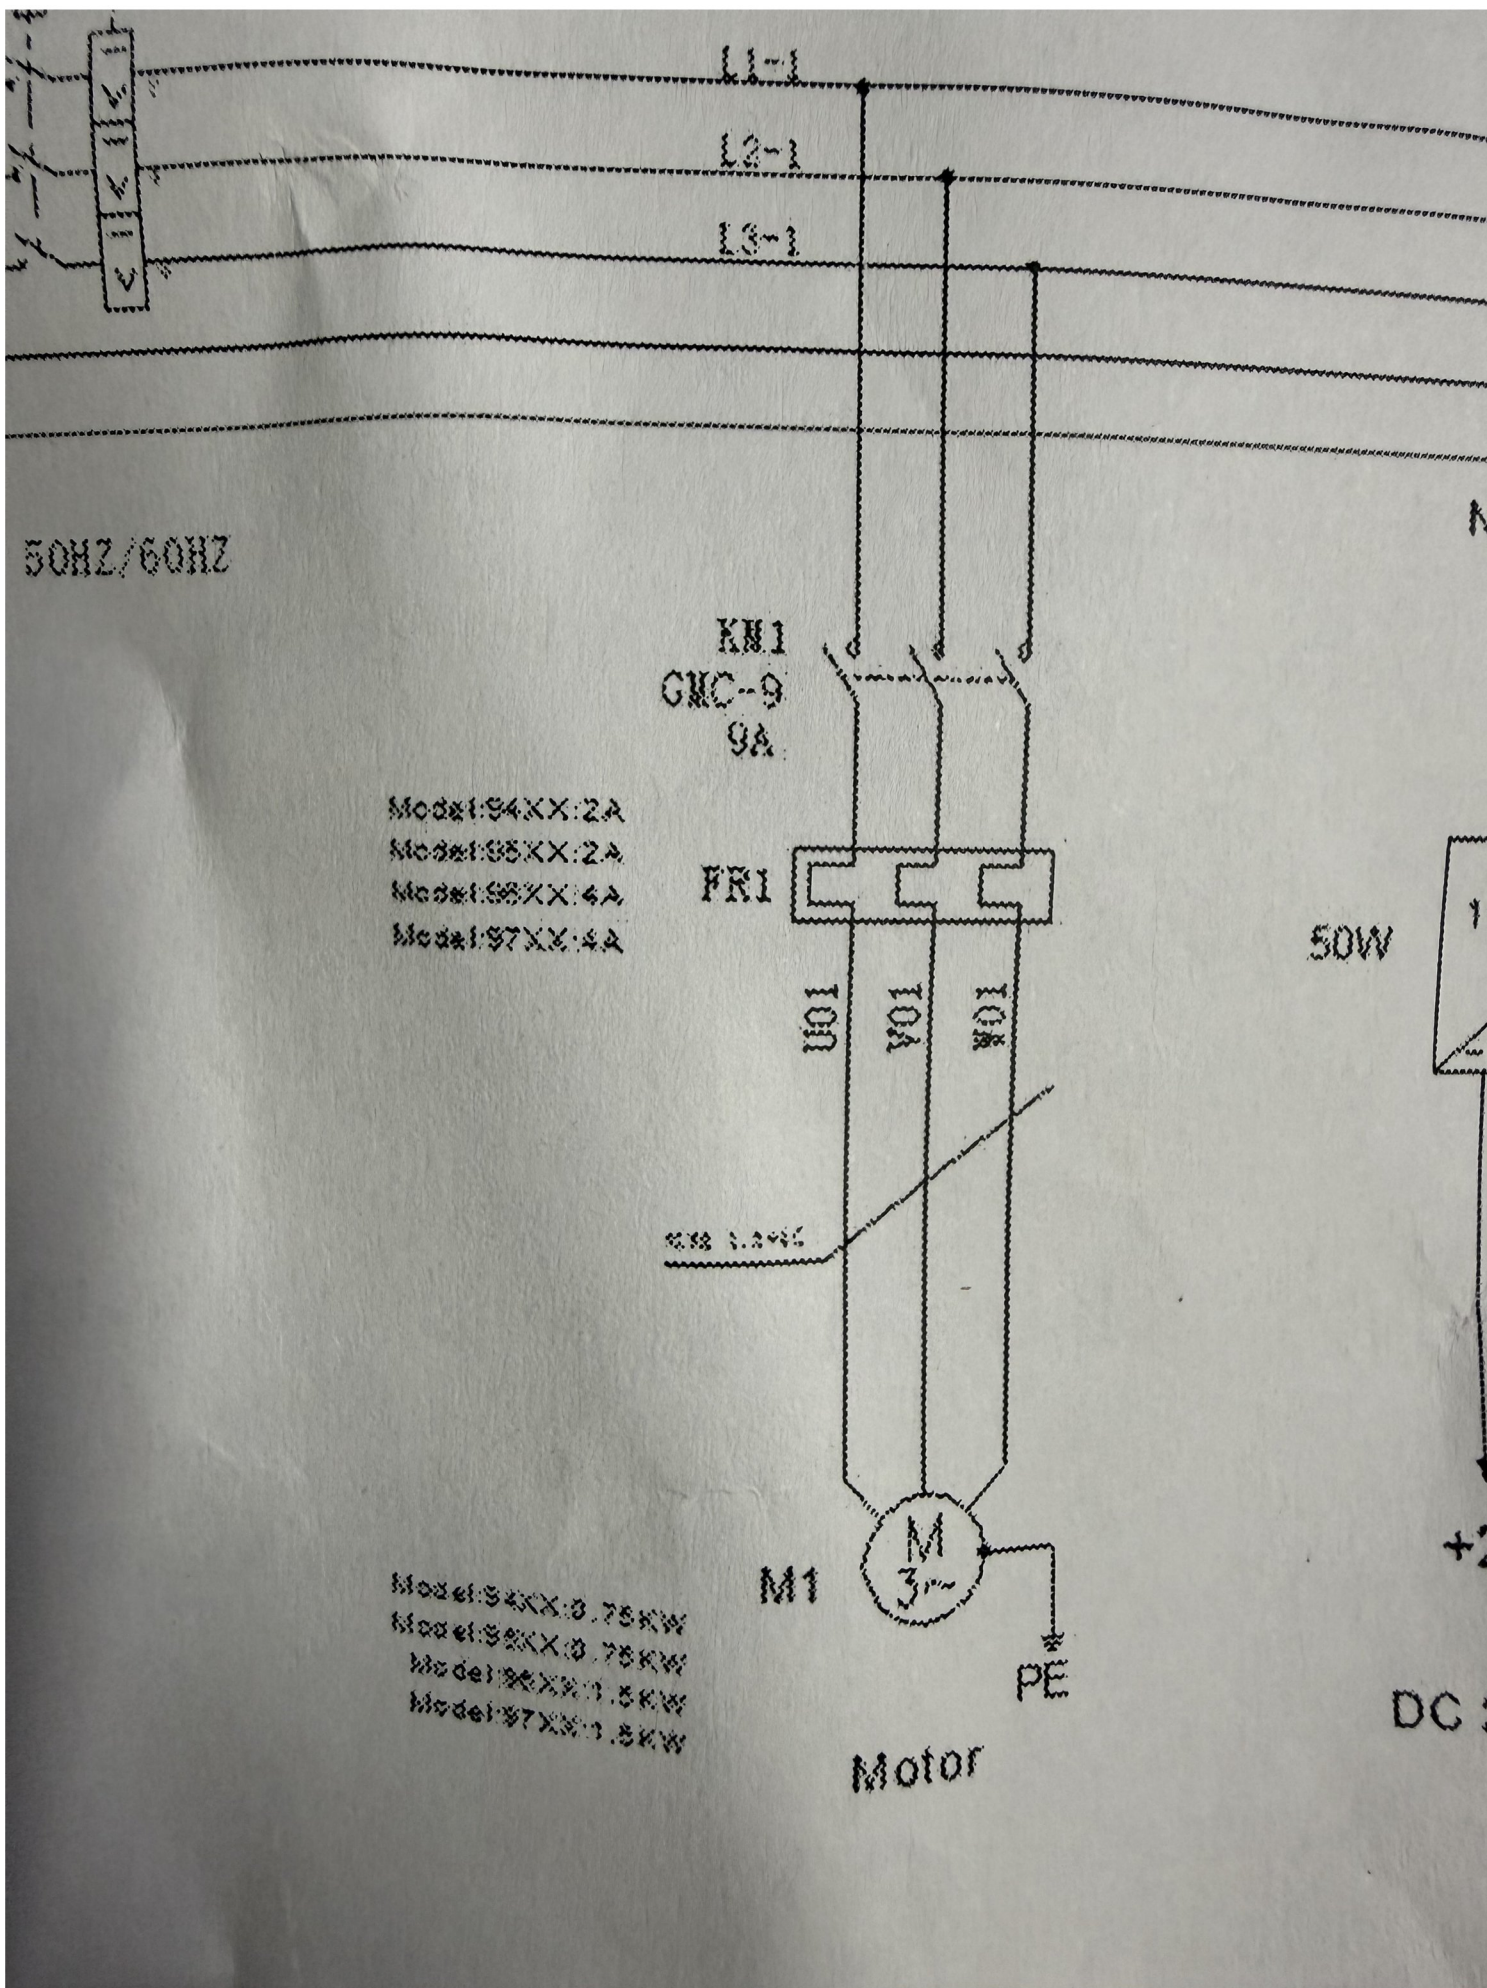

50HZ/60HZ

KN1
GMC-9
9A


Model: 94XX: 2A
Model: 95XX: 2A
Model: 96XX: 4A
Model: 97XX: 4A

FR1

U01
V01
W01

size 1.25W

M1

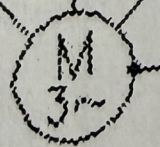


PE

Motor


50W

Model: 94XX: 0.75KW
Model: 95XX: 0.75KW
Model: 96XX: 1.5KW
Model: 97XX: 1.5KW

DC 3

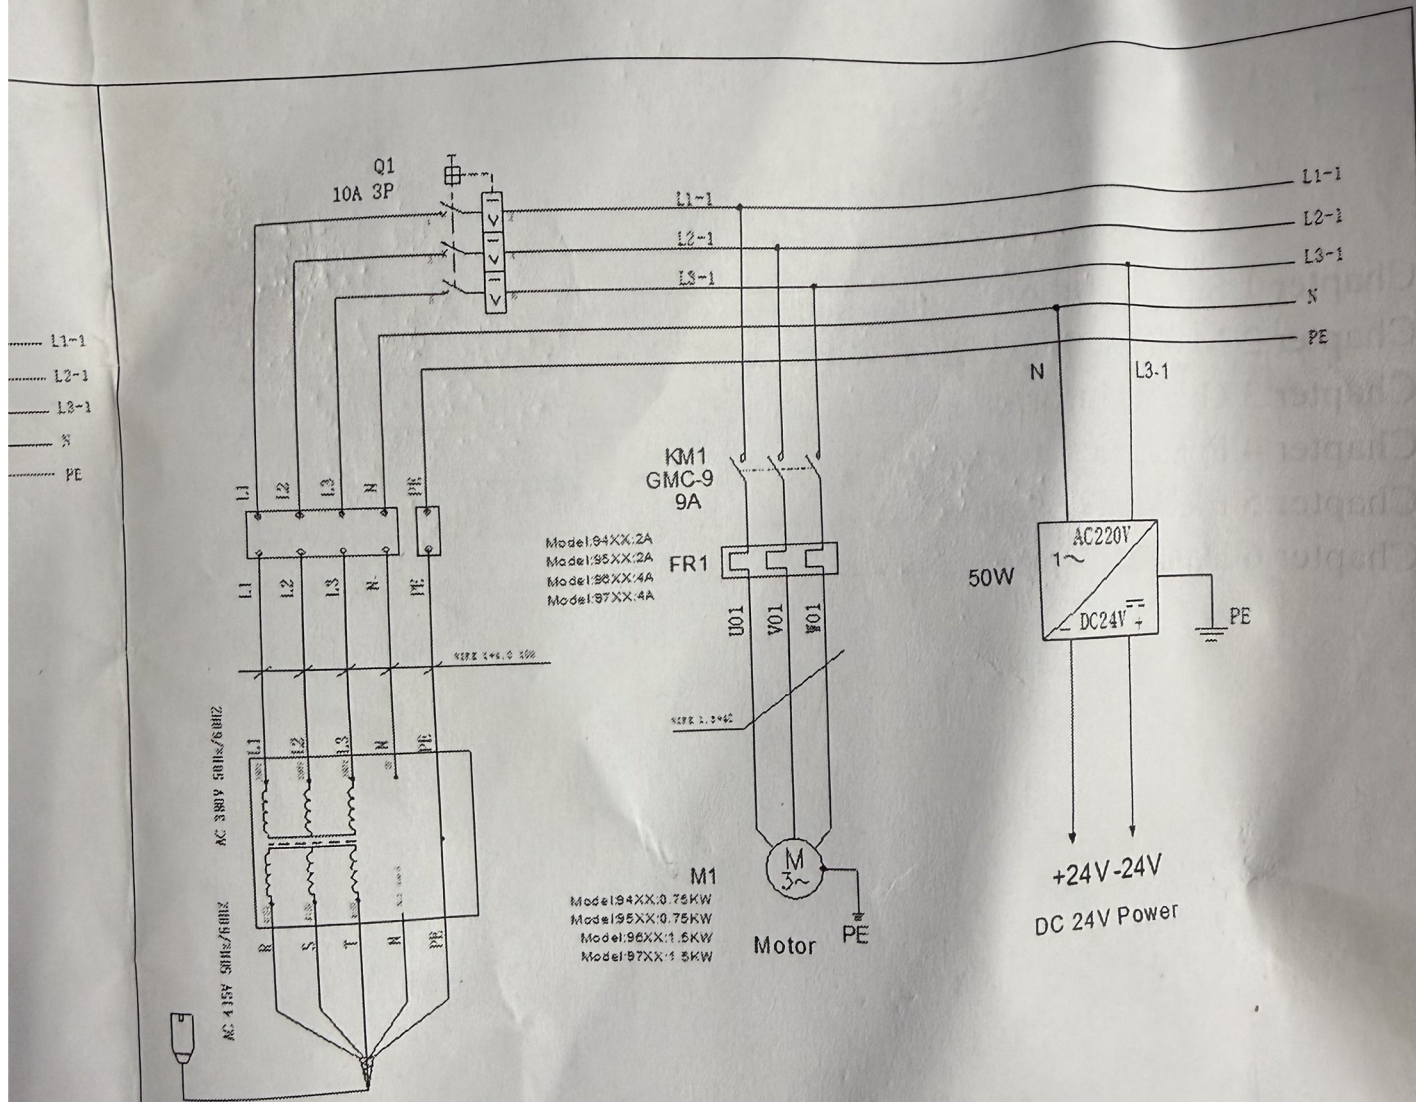

8/12

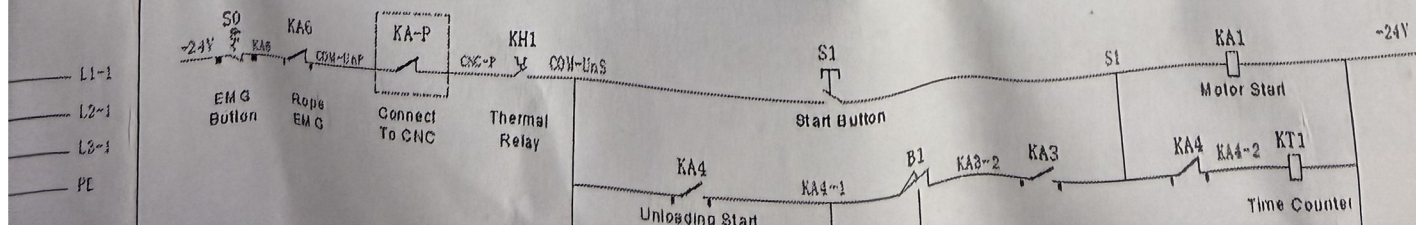

10A 3P

L1-1


L2-1

L3-1

KM1
GMC-9
9A

FR1

Model:94XX:2A
Model:95XX:2A
Model:96XX:4A
Model:97XX:4A



U01
V01
W01

M1

Model:94XX:0.75KW
Model:95XX:0.75KW
Model:96XX:1.5KW
Model:97XX:1.5KW




Motor

PE

SIZE 1+1.0 100


SIZE 1.0+1.0 100

Model:84XX:0.75KW
 Model:85XX:0.75KW
 Model:90XX:1.5KW
 Model:97XX:1.5KW

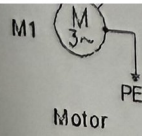

+24V -24V
 DC 24V Power

7/12

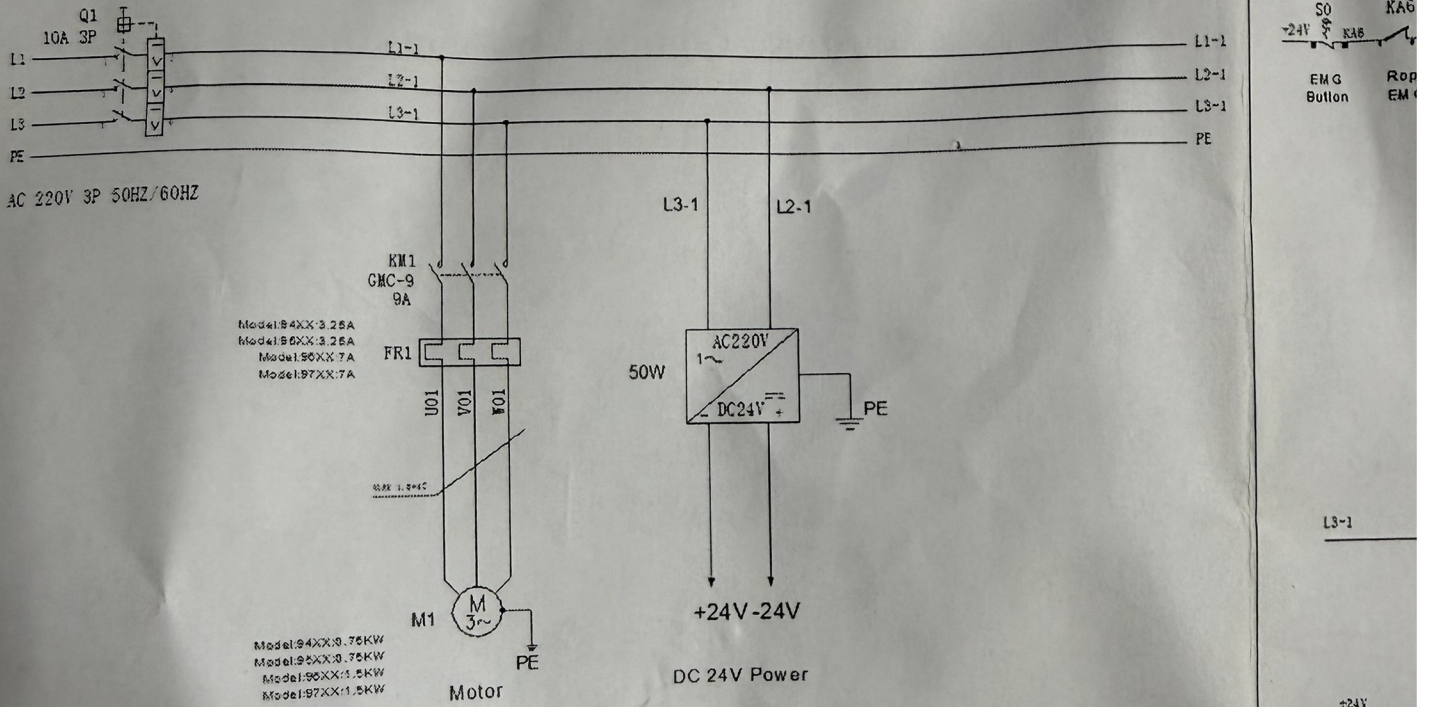


9/12

Connection diagram

Conveyer side

CNC side



0HZ/60HZ

Model: 84XX/3.25A
Model: 86XX/3.25A
Model: 96XX/7A
Model: 97XX/7A

KM1
GMC-9
9A

FR1


UOI

V01

W01

max 1.340


M1

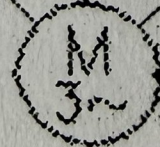


PE

Model: 84XX/3.75KW
Model: 86XX/3.75KW
Model: 96XX/1.5KW
Model: 97XX/1.5KW

Motor



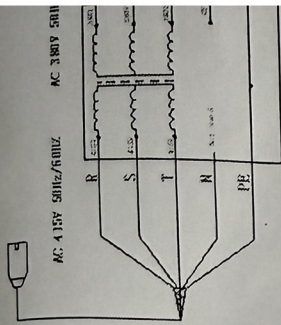


M1
Model 194XX: 0.75KW
Model 195XX: 0.75KW
Model 196XX: 1.5KW
Model 197XX: 1.5KW






+24V -24V
DC 24V Power




8/12

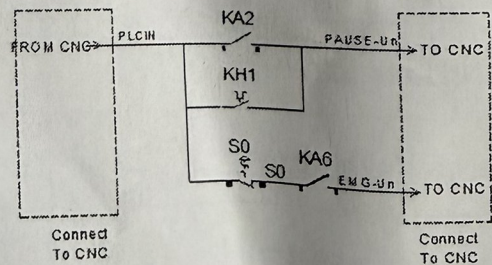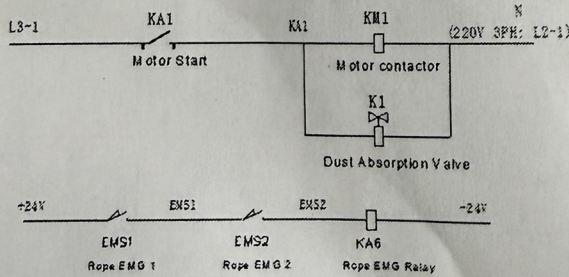
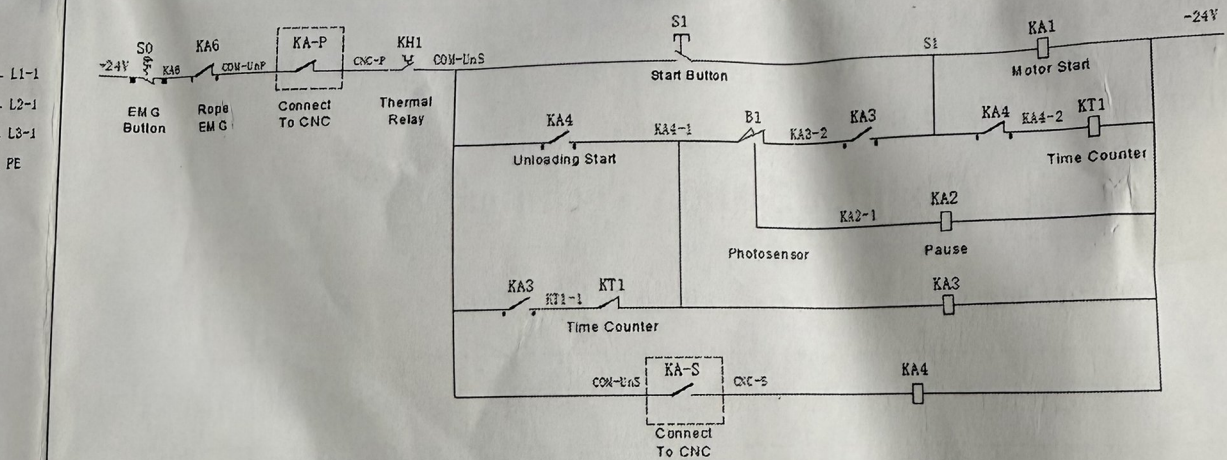


10/12

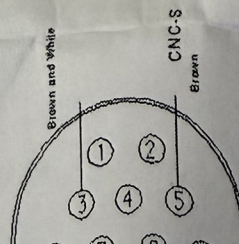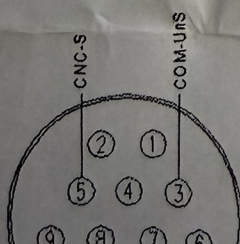





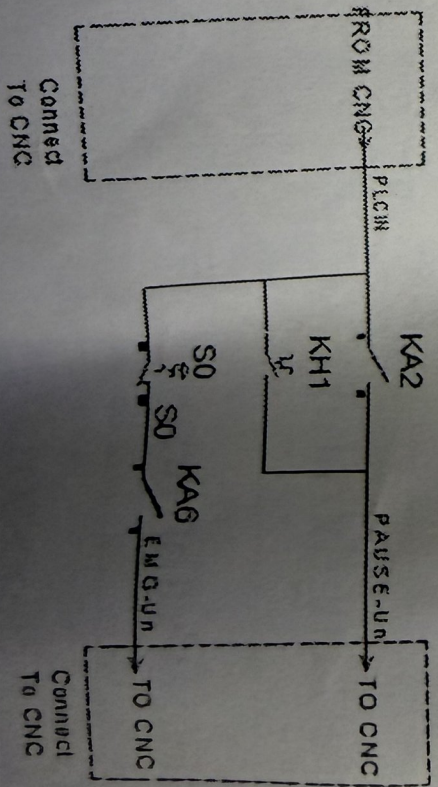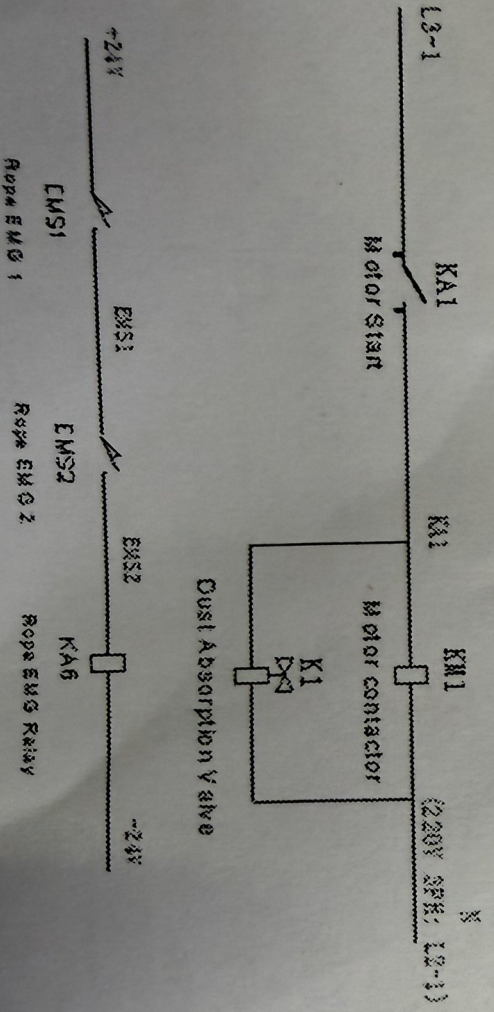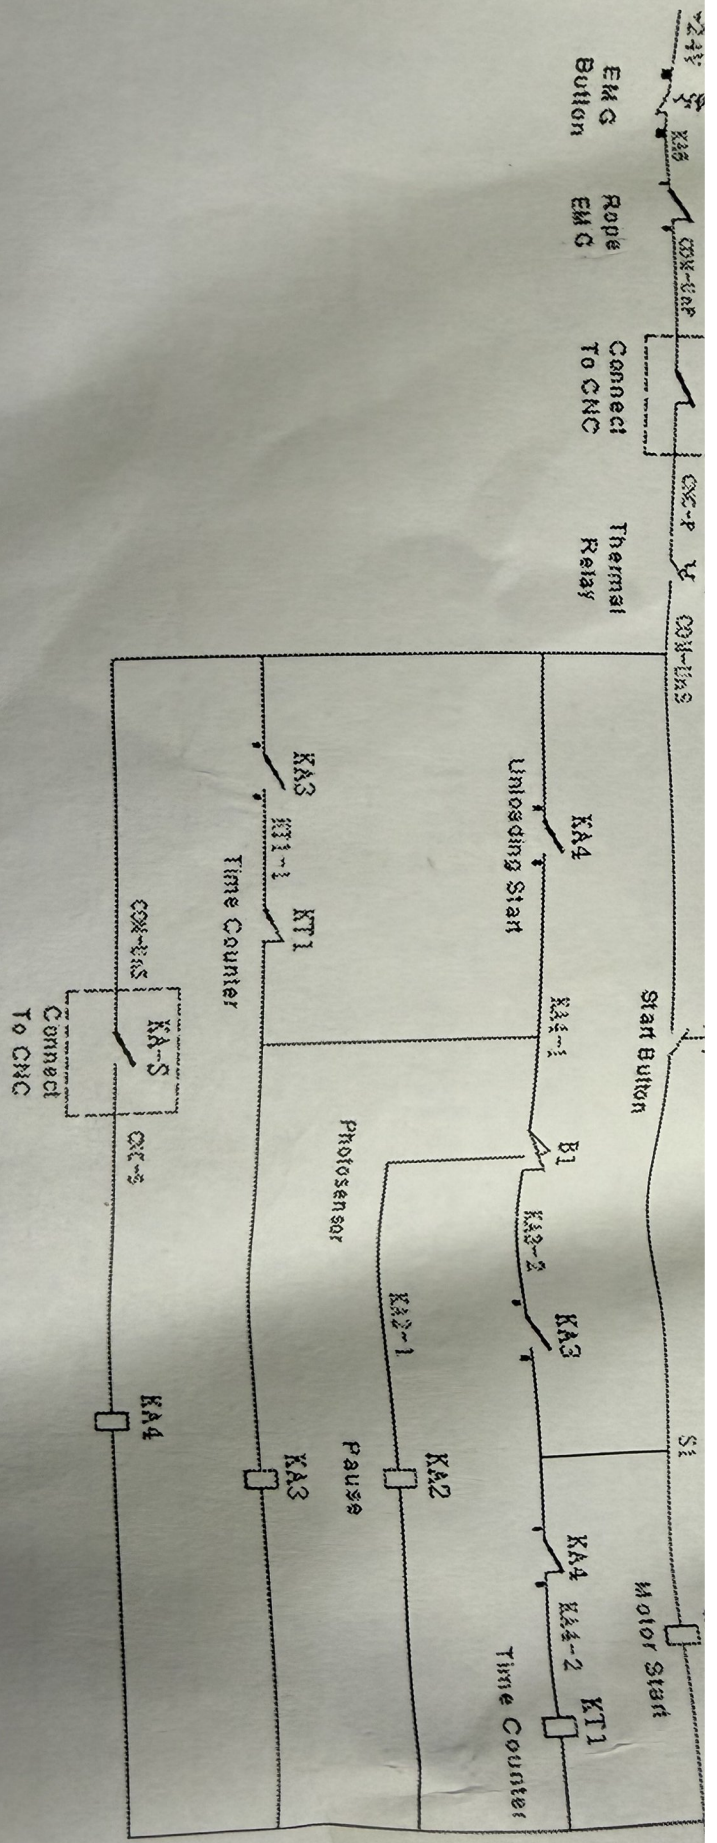

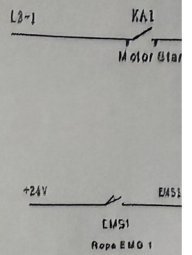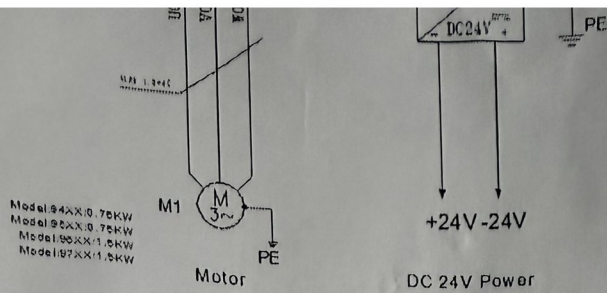

9/12

Connection diagram

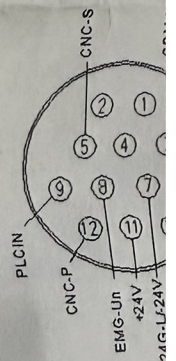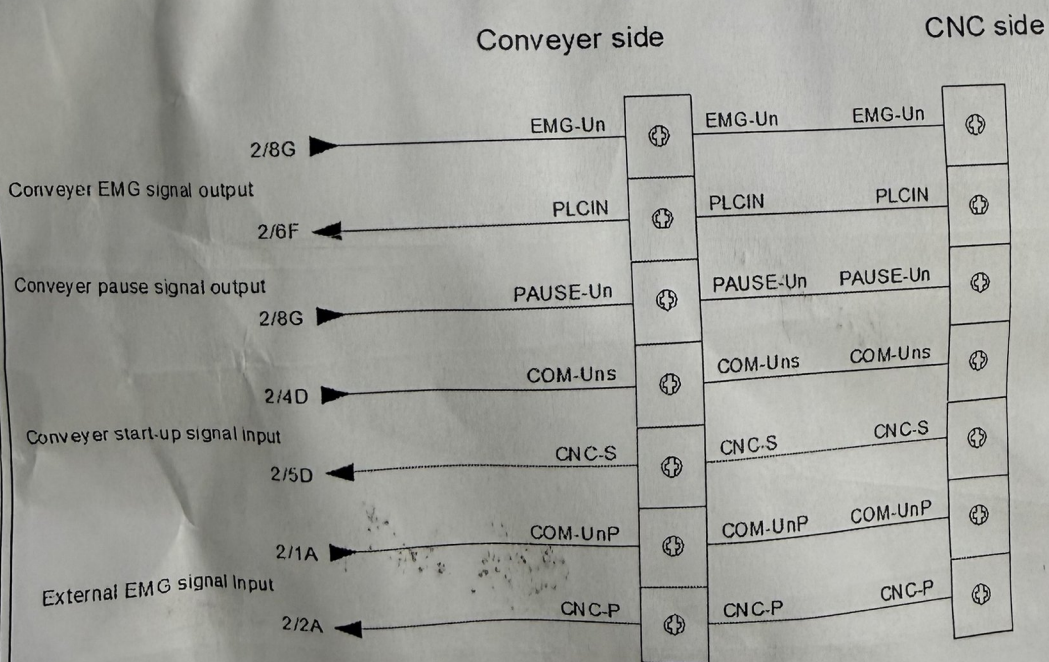


Warning: All

- Keep the
- Lubricat
- Check t


any ero

PS: The Ma

11/12

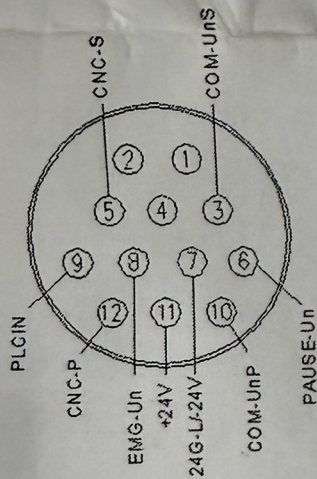

WS28J12TD
The aviation plug
of unloading
connection
(12 Pins)

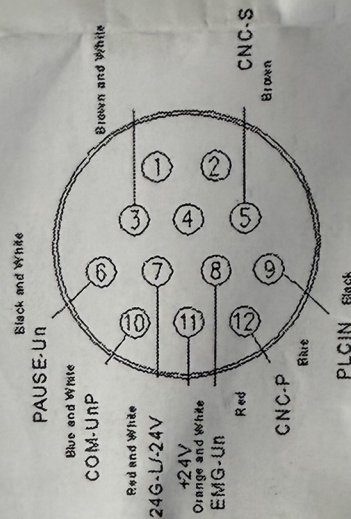

WS28J12TD
The aviation plug
of unloading
connection
(12 Pins)

Chapter 6 Daily Maintenance

Warning: All of the maintenance should be done during the power is off.

- Keep the environment clean and dry.
- Lubricate every bearing block once every one week.
- Check the abrasion situation of cylinder pusher periodically, should be any erosion or damage, change them immediately.

PS: The Maintenance period should depend on the frequency of operation.