Aero-HSD⁺ Quick Guide

Important

Please ensure that the Aero-HSD' system is POWERED UP and LOGGED ON to both the Aero-H+ and Swift64 services (as confirmed by the two green LEDs on any one of the Full Feature handsets) and that the handset displays "READY". The left green LED confirms Aero-H+ service and the right green LED confirms Swift64 service.

Voice Call

00 + country code + area code + phone number + # or 6

E.g. Thrane & Thrane inc., USA **00** 1 757 463 9557 #

To route a Voice call to the High Speed channel, dial: 20 + country code + area code + phone number + # or /

E.g. Thrane & Thrane inc., USA 20 1 757 463 9557 #

Fax Call

<u>01</u> + country code + area code + fax number + # Press START/SEND on fax machine

E.g. Thrane & Thrane in Copenhagen, Denmark 01 45 39 558888 #

To route a fax call to the High Speed channel, dial: 21 + country code + area code + phone number + # Press START/SEND on the fax machine

E.g. Thrane & Thrane in Copenhagen, Denmark 21 45 39 558888 #

PC Modem Data Call (Global Aero-H+ Data @ 2400 bps) 02 + country code + area code + phone number for server + #

High-Speed Data Select the desired service (ISDN/MPDS) from your PC/laptop using the appropriate dial-up connection (as described in the User Manual).

Launch application (e.g. Microsoft® Outlook™, Internet Explorer™).

Redialling Recall last number dialled

Quick Dial (Speed Dialling)

Hold down one of the numeric keys [** to 9.** for 1 sec. to dial the user determined phone book entry (as described in the User Manual).

Conference Calling

With a call established, place call on hold
Dial the desired handset (e. g. handset #2)
Establish handset- to- handset connection
Press
Dial three calls
Repeat the entire sequence to connect more handsets.

Call Transfer

Intercom Calling (Handset-to-handset Calling)
Simply dial handset number + # (e.g. handset #2)

Simply dial handset humber + # (e. g. handset #2)			Press Zibi #
To dial	Press	To dial	Press
Handset #1	(Mess # ^{RO)}	Auxiliary phone #1	5 _{ikl} #***
Handset #2	2 sbc # (***)	Auxiliary phone #2	6 # ³⁰
Handset #3	3 _{def} # ^{sco}	All handsets	@ @ 0 <u>~</u> #
Handset #4	(4 _{gai}) # ⁽⁶⁰⁾		

For easy reference, please enter your Inmarsat Service Provider details here:

Your Aero-HSD* phone number: (from your Inmarsat Service Provider)

Support Phone Numbers: USA: +1(866) SATCOMS or +1 757 463 9557. Denmark: +45 39 558800

List of Country Codes


Argentina

Australia	61 43
Austria Bahamas 1-	242
Rahrain	973 32 441
Belgium Bermuda	32
Bermuda	441
Bolivia	591
Br. Virgin Islands Brazil	284 55
Canada	1
Chile	56
China	86
Colombia	57
Costa Rica	506 53
Cuba Cyprus	357
Denmark	45
Denmark Ecuador	593
Egypt Finland	20
Finland	358
France	33
Germany Greece	49 30
Guatemala	502
Honduras	504
Hong Kong	852
Hong Kong Hungary Iceland	36 354
India	91
Indonesia	62
Iran	98
Iraq	964
Israel	972
Israel Italy Japan	39 81
Jordan Jordan	962
Kenya	254
Libya Mexico	218
Mexico	52
Morocco	212
Netherlands New Zealand	31 64
Nigeria	234
Norway Pakistan	47 92 507
Pakistan	92
Panama	507 595
Paraguay Peru	555 51
Peru Poland	48
Ireland	353
Portugal	351
Romania	40
Russia Saudi Arabia	7 966
Singapore	65
South Africa	27 34
South Africa Spain	34
Sri Lanka	94
Sweden Switzerland	46 41
Taiwan	886
Turkey	90
Turkey UAE	90 971
United Kingdom	44
USA	1
Uruguay Venezuela	598 58
	- 00

Press CC



■ Worldwide Coverage Maps

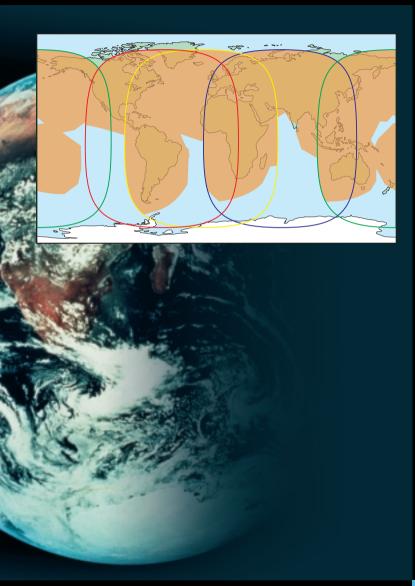

Spot beam coverage

(voice, fax, e-mail)

Pacific Ocean Region

Atlantic Ocean Region-West

Atlantic Ocean

Region-East

Indian Ocean Region

The map depicts Inmarsat's expectations of coverage but does not represent a guarantee of service. The availability of service at the edge of coverage areas fluctuates depending upon a variety of conditions.

TT-99-119960-C

