
F4T/D4T Flex Module

Quick Start Guide



Mixed Input / Output Modules Control, Limit, Auxiliary and CT FM [M or L] A-_ _ _ A-A _ _ _







1241 Bundy Boulevard., Winona, Minnesota USA 55987 Phone: +1 (507) 454-5300, Fax: +1 (507) 452-4507 http://www.watlow.com

0600-0097-0000 Rev. D

Made in the U.S.A.

November 2016

Available F4T/D4T Literature and Resources

All of the user documents listed below can be found on the Watlow website: http://www.watlow.com The Watlow Support Tools DVD can be acquired by contacting Watlow customer service (507-494-5300).

Document Title and Part Number	Description
F4T Installation and Troubleshooting User Guide, part number: 0600-0092-0000	Provides detailed specifications and information regarding mounting the base, flex module wiring and troubleshooting.
F4T Setup and Operations User Guide, part number: 0600-0093-0000	Explains how to configure and operate the device for an application using Composer software as well as the user interface (touch screen). Includes detailed descriptions of all device features and parameter settings.
D4T Installation and Troubleshooting User Guide, part number: 0600-0107-0000	Provides detailed specifications and information regarding mounting the base, flex module wiring and troubleshooting.
D4T Setup and Operations User Guide, part number: 0600-106-0000	Explains how to configure the datalogger for an application using the user interface and Composer software. Includes detailed descriptions of all data logger features and parameter settings.

Installation and Wiring

To install the flex module:

- 1. Note the part number to determine the types of inputs and outputs available to be connected in step 7.
- 2. Turn off power to the controller.
- 3. Select a slot for the module. If replacing a module, remove the old module.
- 4. Affix corresponding slot number labels (provided) to the module and to the removable screw terminal block.

Safety Information

We use caution symbols where needed within this document to draw your attention to important operational and safety information.

A "CAUTION" safety alert appears with information that is important for protecting your equipment and performance. Be especially careful to read and follow all cautions that apply to your application.

A "WARNING" safety alert appears with information that is important for protecting you, others and equipment from damage. Pay very close attention to all warnings that apply to your application.

The electrical hazard symbol, (a lightning bolt in a triangle) precedes an electric shock hazard CAUTION or WARNING safety statement. Further explanations follow:

Symbol	Explanation		
CAUTION or Electrical Shock Hazard	CAUTION - Warning or Hazard that needs further explanation than label on unit can provide. Consult QSG for further information. AVERTISSEMENT: mise en garde ou danger qui demande plus de précisions que l'information sur l'étiquette de l'unité. Consultez le manuel de l'utilisateur pour plus d'informations.		

Document Overview

The purpose of this Quick Start Guide (QSG) is to acquaint the user with the F4T Flex Modules and associated wiring.

Product Overview

Flex modules add functionality, inputs and outputs to an F4T system. The flex modules described in this document offer various input and output options as well as a safety over/under temperature limit. Each module can include one analog input and up to two outputs. All of these modules can be placed in any available slot.

- 1 2
 - 5. With the component side of the module facing right (viewing the controller from the rear) insert the module in to the slot until it latches.
 - 6. Remove the screw terminal block from the module.
 - 7. Wire field devices to the appropriate terminals. Wiring details for each input and output are provided in the following sections.
 - 8. Reconnect the wired screw terminal block to the module. Be sure to reconnect the terminal block to the correct module.
 - 9. Restore power to the controller.

Note:

If the flex module is a replacement with the same part number and slot position, the controller uses it immediately when powered up. Otherwise, use Composer software to configure the F4T/D4T to expect and use the module.


Module Characteristics

Description and Identification

Many of the modules appear to look alike at first glance, therefore, it is always recommended that the module part number be verified prior to plugging it into any of the available slots in a base. Each module is identified with a part number located on the back side of the assembly next to the screw terminal block, as displayed in the graphic above. $FM[M, L]A - __A - A__$

Wiring

Prior to wiring any of the I/O modules described in this document it is recommended that the warnings and notes listed below be reviewed.



CAUTION: 1

To prevent damage to the controller, do not connect wires to unused terminals.

AVERTISSEMENT: Pour prévenir tout endommagement du régulateur, ne pas faire de raccordements à des bornes inutilisées.

Note:

Maintain electrical isolation between the analog input, digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Wiring (cont.)

Note:

Modules IP10 when properly installed in base enclosure with slot caps in

CAUTION: /!\ Quencharc Note:

Switching pilot duty inductive loads (relay coils, solenoids, etc.) with the mechanical relay, solid-state relay or open collector output options requires use of an R.C. suppressor for AC load or a diode for a DC load.

AVERTISSEMENT: les charges inductives de commutation de lampes témoins (bobines de relais, solénoïdes, etc.) avec des options de sortie à relais mécanique, de relais statique ou collecteur ouvert requièrent un dispositif antiparasite R.C.


Note:

Wire size and torque for screw terminations:

- 0.0507 to 3.30 mm² (30 to 12 AWG) single-wire termination or two 1.31 mm2 (16 AWG)
- 0.57 Nm (5.0 lb.-in.) torque

Input Connections

Thermocouple




FM [M, L] A - [L, U, Y] _ _ A - A _ _ _

- Grounded or ungrounded sensors, greater than $20M\Omega$ input impedance, $2k\Omega$ source resistance max.
- 3µA open-sensor detection
- · Thermocouples are polarity sensitive. The negative lead (usually red) must be connected to S
- · To reduce errors, the extension wire for thermocouples must be of the same alloy as the thermocouple.

Input Connections (cont.)

RTD



Note:

Use of 2-wire RTDs adds error to the measurement based on wire lead length (see table). 3-wire auto compensates for wire resistance.


FM [M, L] A - [L, U, Y*]

- · 2- or 3-wire pla 100 and $1k\Omega$ @ (0°C) calibration DIN curve (0.00385 $\Omega/\Omega/^{\circ}C)$
- RTD excitation current of 0.09 mA typical. Each ohm of lead resistance may affect the reading by 2.55°C for a 100Ω platinum sensor or 0.25°C for a $1k\Omega$ sensor.
- For 3-wire RTDs, the S1 lead (usually white) must be connected to R1.
- This option does not support 3-wire RTDs

14	n
itinum,	Lead Wire Resistance
32°F	Each Wire for 2-Wire
n to	RTDs

AWG	Ohms/1000ft				
14	2.575				
16	4.094				
18	6.510				
20	10.35				
22	16.46				
24	26.17				
26	41.62				
28	66.17				


FMMA - **C** _ _ A - A _ _ _ **Current Transformer**



- Input range is 0 to 50mA (ac).
- Current transformer part number: 16-0246
- 100Ω input impedance
- · Response time: 1 second maximum
- Accuracy +/-1mA typical

Input Connections (cont.)

Process



FM [**M**, **L**] A - [**L**, **U**] _ _ A - A _ _ _

- 0 to $20mA @ 100\Omega$ input impedance
- 0 to $10V\hat{I}$ (dc) @ $20k\Omega$ input impedance
- 0 to 50mVÎ (dc) @ 20MΩ input impedance
- Scalable

Potentiometer

FM [M, L] A - [L, U] _ _ A - A _ _ _



Potentiometer: 0 to 1.2kΩ

FM [M, L] A - [M, T] _ _ A - A _ _ _ **Thermistor**




- > $20M\Omega$ input impedance
- 0 to $40k\Omega$, 0 to $20k\Omega$, 0 to $10k\Omega$, 0 to $5k\Omega$
- $2.252k\Omega$ and $10k\Omega$ base at $77^{\circ}F$ ($25^{\circ}C$)
- User-selectable curves for Alpha Technics, Beta THERM and YSI
- · User-scaling support for Steinhart-Hart coefficients

Thermistor Curve Setting	Base R @ 25 °C	Alpha Technics	Beta Therm	YSI	
Curve A	2.252k	Curve A	2.2k3A	004	
Curve B	10k	Curve A	10k3A	016	
Curve C	10k	Curve C	10k4A	006	
Custom	Use Steinhart-Hart equation coefficients (A, B and C) from thermistor manufacturer corresponding to the terms of the Steinhart-Hart equation: 1 / T = A + Bln(R) + C (ln(R)) ³				


8 Input Connections (cont.)

5 6 7


Digital Input FMLA - Y E B A - A _ _ _



- · Update rate 10Hz
- Dry Contact
 - Input inactive when ≥ 500Ω
 - Input active when ≤ 100Ω
 - Max. short circuit 13mA
- Voltage
- Max. input 36V at 3mA
- Input inactive when ≤ 2V
- Input active when ≥ 3V at 0.25mA



Voltage Input

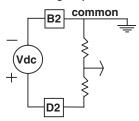

Output Connections

Mechanical Relay, Form C

FM [**M**, **L***] A - _ [**E**] _ A - A _ _ _



- 5A at 240V~ (ac) or 30V → (dc) maximum resistive load
- Requires a minimum load of 20mA at 24V
- 125 VA pilot duty at 120/240V~ (ac), 25 VA at 24V~ (ac)
- 100,000 cycles at rated load
- Output does not supply power.
- For use with ac or dc
- See Quencharc note (page 4).




For part number FMLA-_EBA-A _ _ _ output 1 is fixed as the limit output. * Not available in the D4T.

NO-ARC Relay, Form A FMMA - _ _ H A - A _ _ _



- 12A at 122°F (50°C), 85 to 264V~ (ac) resistive load only
- 2,000,000 cycle rating for rated load
- 100mA minimum load
- 2mA maximum off state leakage
- Do not use on dc loads.
- Output does not supply power
- Do not drive another relay or solenoid with this output type

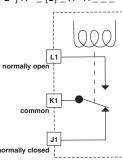

Output Connections (cont.)

Switched DC / Open Collector



Switched DC

- 30mA dc maximum supply current
- Short circuit limited to < 50mA
- 22 to 32V
 — (dc) open circuit voltage
- Use dc- and dc+ to drive external solid-state relay.
- DIN-A-MITE compatible


Open Collector




- 100mA maximum output current sink
- 30V= (dc) maximum supply voltage
- Any switched dc output can use the common terminal.
- Use an external class 2 or Safety Extra Low Voltage (SELV) power supply to control a dc load, with the load positive to the positive of the power supply, the load negative to the open collector and common to the power supply negative.

FM [**M**, **L**] A - $_{-}$ [**C**] [**C**] A - A $_{--}$

Switched DC



Open Collector



Output Connections (cont.)

Mechanical Relay, Form A



- 5A at 240V~ (ac) or 30V= (dc) maximum resistive
- load
 20mA at 24V minimum inductive load
- 125 VA pilot duty at 120/240V ~(ac), 25 VA at 24V ~(ac)
- 100,000 cycles at rated load
- Output does not supply power.
- For use with ac or dc
- See Quencharc note (page 4).


L2 K2


FM [**M**, **L**] A - _ _ **J** A - A _ _ _

Note:


For part number FMLA-_
_ J A-A _ _ _ output 2 is fixed as the limit output.

Solid-State Relay, Form A





- 0.5A at 149°F (65°C) to 1A at 50°F (10°C), 24 to 264V~ (ac) maximum resistive load
- 20 VA 120/240V~ (ac) pilot duty
- Opto-isolated, without contact suppression
- Maximum off state leakage of 105µA
- Output does not supply power
- Do not use on dc loads
- See Quencharc note (page 4)



10 12

<u>11</u>


Output Connections (cont.)

Universal Process

FMMA - _ **F** _ A - A _ _ _



- 0 to 20mA $\pm 30\mu A$ into 800Ω maximum load with $5\mu A$ nominal resolution
- 0 to 10V= (dc) \pm 15mV into 1 k Ω minimum load with 2.5mV nominal resolution
- Scalable
- Output supplies power
- Cannot use voltage and current outputs at same time
- Output may be used as retransmit or control
- Temperature stability 100ppm/°C



Warranty

F4T/D4T Flex modules are manufactured by ISO 9001 registered processes and are backed by a three-year warranty to the first purchaser for use, providing that the modules have not been misapplied.

Technical Assistance

To get assistance from Watlow:

- · Contact a local representative: see last page
- Email: wintechsupport@watlow.com
- Call: +1 (507) 494-5656 from 7 a.m. to 5 p.m. Central Standard Time (CST)

This F4T/D4T Quick Start Guide (QSG) is copyrighted by Watlow Electric Manufacturing Company, © November 2016 with all rights reserved.

Symbol	Explanation
CE	Unit is compliant with European Union directives. See Declaration of Conformity for further details on directives and standards used for compliance.
FM	Unit has been reviewed and approved by Factory Mutual as a Temperature Limit Device per FM Class 3545 standard. See: www.fmglobal.com
⊕ ®	Unit has been reviewed and approved by CSA International for use as Temperature Indicating-Regulating Equipment per CSA C22.2 No. 24. See: www.csa-international.org
c 911 ° us	Recognized component UL Files E185611 Process Control Equipment and E43684 Automatic Temperature Sensing Control Integrated Equipment, see conditions of acceptability.

Specifications

Input Type	Max Error @	Accuracy Range		Operating Range		Units
input Type	25 Deg C	Low	High	Low	High	UIIIIS
*J	±1.75	0	750	-210	1200	Deg C
*K	±2.45	-200	1250	-270	1371	Deg C
*T (-200 to 350)	±1.55	-200	350	-270	400	Deg C
N	±2.25	0	1250	-270	1300	Deg C
*E	±2.10	-200	900	-270	1000	Deg C
R	±3.9	0	1450	-50	1767	Deg C
S	±3.9	0	1450	-50	1767	Deg C
В	±2.66	870	1700	-50	1816	Deg C
С	±3.32	0	2315	0	2315	Deg C
D	±3.32	0	2315	0	2315	Deg C

Specifications (cont.)

opcomounione (com.)						
Input Type	put Type Max Error @ Low High	Accuracy Range		Operating Range		
		Laur	Uiah	Operating name		Units
		Low	High			
*RTD, 100Ω	±2.00	-200	800	-200	800	Deg C
RTD, 1kΩ	±2.00	-200	800	-200	800	Deg C
mV	±0.05	0	50			mV
Volts	±0.01	0	10			Volts
mAdc	±0.02	2	20			mA DC
mAac	±5	-50	50			mA AC
Potenti- ometer 1k range	±1	0	1000			Ohms

*NSF approved inputs

Thermistor Input						
Resistance	Max Error @ 25	Accurac	Units			
Range	Deg C	Low	High	Omito		
5k range	±5	0	5000	Ohms		
10k range	±10	0	10000	Ohms		
20k range	±20	0	20000	Ohms		
40k range	±40	0	40000	Ohms		

13 | 14

ISO 9001since 1996. **(**

Series EZ-ZONE® Flex Modules

WATLOW Electric Manufacturing Company

1241 Bundy Blvd. Winona, MN 55987 USA

Declares that the following products:

Designation: Series EZ-ZONE® Flex Modules

Model Numbers: FMLA-(LAJ, LCJ, LEJ, MAJ, MCJ, MEJ, YEB 1)A 1 -A 1 (A 1 ,F 1 ,B 1 ,G 1)X 1 X 1

FMMA-X'(A',C',E,F',K)(A',C',H,J,K)A'-A'(A',F',B',G')X'X' FMHA-(R',P',C',F',B',J,K,L')A'A'A'-A'(A',F',B',G') X'X' ¹FMCA-XAAA-A(A,F,B,G)XX; Note: X¹ = Any letter or number

FMLA, FMMA and FMHA are Process Control modules, FMCA are Communication modules; Modules are Integrated Controls in either EZ-ZONE® CC, F4T or D4T Bases; Modules are IP10 when properly installed. Classification:

Relay, SSR or No-Arc Control outputs 24 to 240 V~ (ac) 50/60 Hz. Rated Voltage and Frequency: Switched DC, Process and communications; low voltage SELV

Rated Power Consumption:

See manual for de-rating at increased temperatures.

No-arc relays 15A 1.C, Dual SSR module 1.C 10A each output, Mechanical relay 5A 125 VA, 25 VA at 24 V-(ac) 1.B, Discreet SSR 1/2A 1.C 20VA, Quad SSR 1.C 1.5A 50 VA, Hex I/O ELV 1.5A, all

others SELV limited energy.

Flex Modules are considered components and have no function in and of themselves, it is only when installed in a Watlow EZ-ZONE® CC, Series F4T or Series D4T Base enclosure that they have useful function. Modules were tested as parts of these systems for compliance with the following directives.

2014/30/EU Electromagnetic Compatibility Directive

FN 61326-1-2013 Electrical equipment for measurement, control and laboratory use - EMC requirements

(Industrial Immunity, Class B Emissions).

2014/35/EU Low-Voltage Directive

Safety Requirements of electrical equipment for measurement, control and laboratory use. Part 1: General requirements EN 61010-1:2010

EN 60730-1:2011 Automatic electrical controls for household and similar use - Particular requirements for

EN 60730-2-9:2010 ¹Food Service

temperature sensing controls.

Only certain output options comply with 60730 spacing and dielectric requirements, see Compliant options. order information for compatible models.

Compliant with 2011/65/EU RoHS2 Directive Per 2012/19/EU W.E.E.E Directive Please Recycle Properly.

See the Declarations of Conformity for Watlow EZ-ZONE® CC, Series F4T and Series D4T models for further details on standards used for compliance

Joe Millanes Name of Authorized Representative

Directory of Operations
Title of Authorized Representative

Signature of Authorized Representative

Winona, Minnesota, USA Place of Issue April 20, 2016

How to Reach Us

Corporate Headquarters
Watlow Electric Manufacturing Watlow Electric Manufact 12001 Lackland Road St. Louis, MO 63146 Sales: 1-800-WATLOW2

Manufacturing Support: 1-800-4WATLOW Email: info@watlow.com Website: www.watlow.com From outside the USA and Canada: Tel: +1 (314) 878-4600

Fax: +1 (314) 878-6814

Latin America Latin America
Watlow de México S.A. de C.V.
Av. Fundición No. 5
Col. Parques Industriales
Querétaro, Qro. CP-76130
Mexico
Tel: +52 442 217-6235
Fax: +52 442 217-6403

Europe Watlow France Tour d'Asnières. 4 Avenue Laurent Cély 92600 Asnières sur Seine France Tél: + 33 (0)1 41 32 79 70

Télécopie: + 33(0)1 47 33 36 57 Email: info@watlow.fr

Watlow GmbH
Postfach 11 65, Lauchwasenstr. 1
D-76709 Kronau
Germany
Tel: +49 (0) 7253 9400-0
Fax: +49 (0) 7253 9400-900
Email: info@watlow.de
Website: www.watlow.de

Watlow Italy S.r.I.
Viale Italia 52/54
20094 Corsico MI
Italy
Tel: +39 024588841
Fax: +39 0245889954
Email: italyinfo@watlow.com
Website: www.watlow.it

Watlow Ibérica, S.L.U C/Marte 12, Posterior, Local 9 E-28850 Torrejón de Ardoz E-2655 forejoin de A Madrid - Spain T. +34 91 675 12 92 F. +34 91 648 73 80 Email: info@watlow.es Website: www.watlow.es

Watlow LIK Ltd Watlow UK Ltd. Linby Industrial Estate Linby, Nottingham, NG15 8AA United Kingdom Telephone: (0) 115 964 0777 Fax: (0) 115 964 0071 Email: info@watlow.co.uk

Asia and Pacific

Nation and rectific Wattow Singapore Pte Ltd. 20 Kian Tech Lane 4th Floor Singapore - 627854 Tel: +65 6778 0323 Email: info@wattow.com.sg Website: www.wattow.com.sg Website: www.wattow.com.sg

Watlow Australia Pty., Ltd. 4/57 Sharps Road Tullamarine, VIC 3043 Tel: +61 3 9335 6449 Fax: +61 3 9330 3566 Website: www.watlow.com

Watlow Electric Manufacturing (Shanghai) Company 1118 Fangyuan Road, Anting Industrial Park, Jiading, Shanghai, PRC 201203

PRC 201203
People's Republic of China
Tel: +86 21 39509510
Fax: +86 21 5080-0906
Email: info@watlow.cn
Website: www.watlow.cn

ワトロー・ジャパン株式会社 〒101-0047 東京都千代田区内神田1-14-4 四国ビル別館9階 四国ビル別館9階 Tel: 03-3518-6630 Fax: 03-3518-6632

Email: infoj@watlow.com

Watlow Japan Ltd. 1-14-4 Uchikanda, Chiyoda-Ku Tokyo 101-0047

Watlow Korea Co., Ltd. #2208, Hyundia KIC Building B, 70 Doosan-ro Geumcheon-gu, Seoul Republic of Korea Tel: +82 (2) 2169-2600 Fax: +82 (2) 2169-2601

Watlow Malaysia Sdn Bhd No. 14-3 Jalan 2/114 Kuchai Business Centre Jalan Kuchai Lama 58200 Kuala Lumpur

Malaysia Tel: +60 3 7980 7741 Fax: +60 3 7980 7739

Tel: +886-7-2885168 Fax: +886-7-2885568

Your Authorized Watlow Distributor

