


ACS Flow user guide

Connect to the ACS server application

Launch the ACS server on the PC or target device. Make sure Flow is on the same network and use the scan button (the two round arrows) to find any ACS server applications which are running a uPnP service.

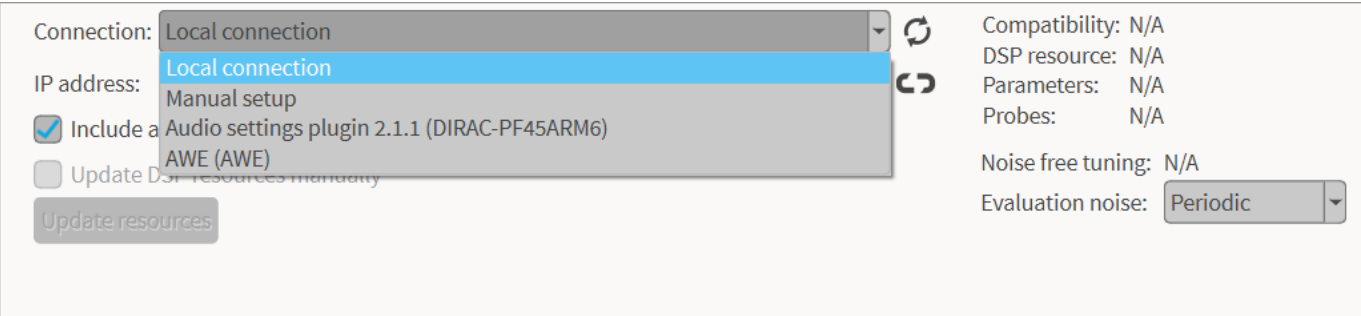


In the figure above there is a AWE implementation of the ACS server running. By selecting it, the IP address and port number will automatically be populated with the correct values. Press "connect" to connect to the ACS server.

Once connected configurations can be switched and parameters updated in Flow.

Note that if uPnP is not supported over the network because of firewall issues the IP address and port number can be entered manually by using the manual setup option.

DAR file

The DAR will automatically be sent from Flow to the ACS server application during connection. If this feature is not supported by the current implementation of the dapctl then the DAR can be manually exported from Flow using **Export->Export tuning resources**.

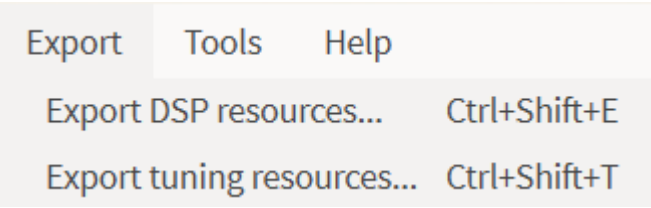

Note that this has to be done before connecting to the server and uploading the exported DAR to the target implementation DAP might require the DAP to restart.