

[Manuals+](#)[Q & A](#) | [Deep Search](#) | [Upload](#)[manuals.plus](#) / › [OGUNKE](#) / › [Flysky FS-iA6B Receiver User Manual](#)**OGUNKE FS-iA6B**

Flysky FS-iA6B Receiver User Manual

6-Channel 2.4G PPM Output with iBus Port

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Flysky FS-iA6B 6-Channel 2.4G Receiver. Designed for use with various Flysky transmitters including FS-i4, FS-i6, FS-i6X, and FS-i10, this receiver offers reliable performance for airplane, glider, and helicopter models. It features PPM output and an iBus port for expanded functionality.



Figure 1: Flysky FS-iA6B 6-Channel 2.4G Receiver.

FEATURES

- **Compatibility:** Compatible with Flysky FS-i4, FS-i6, FS-i6S, FS-i10, FS-GT2E, FS-GT2G, and QX7 transmitters.
- **Anti-interference:** Utilizes 2.4GHz AFHDS2A signal operation for quick, stable, and reliable performance with enhanced anti-interference capabilities.
- **Multi-port & Wide Range:** Supports PPM output for single-wire connection to flight control systems. Includes an iBus interface for channel expansion. Offers a range of 500 to 1500 meters.
- **Lightweight Design:** Ultra-lightweight, suitable for most RC cars, trucks, airplanes, gliders, and helicopters.
- **Dual Antennas:** Equipped with 26mm dual antennas for optimal radio-frequency signal reception.
- **Real-time Indicator:** An indicator light provides real-time feedback on power supply and receiver working status.

- **Enhanced Digital System:** Features the second generation of an enhanced automatic FM digital system (AFHDS 2A).



Figure 2: The FS-IA6B receiver highlighting its 2.4Ghz 6-channel capability with PPM output.

SPECIFICATIONS

Parameter	Value
Channels	6 Channels

Parameter	Value
Model Type	Airplane / Glider / Helicopter
Frequency Range	2.4 - 2.48 GHz
Bandwidth Number	140
Transmitting Power	< 20dBm
RF Receiver Sensitivity	-105dbm
2.4G Mode	Second generation enhanced automatic FM digital system (AFHDS 2A)
Encoding	GFSK
Antenna Length	26mm * 2 (Dual Antenna)
Input Power	4.0 - 8.4V DC
Dimensions	47 * 26.2 * 15mm
Weight	14.9g
i-Bus Interface	Yes
Data Acquisition Interface	Yes

PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x Flysky FS-iA6B Receiver
- 1 x Bind Plug



Figure 3: The Flysky FS-iA6B receiver shown with its included bind plug.

SETUP

1. Connecting the Receiver

Connect the receiver to your flight controller or servos using the appropriate channels. The FS-iA6B features standard servo ports (CH1-CH6), a PPM/CH1 port, an iBus port, and a B/VCC port for power/binding.

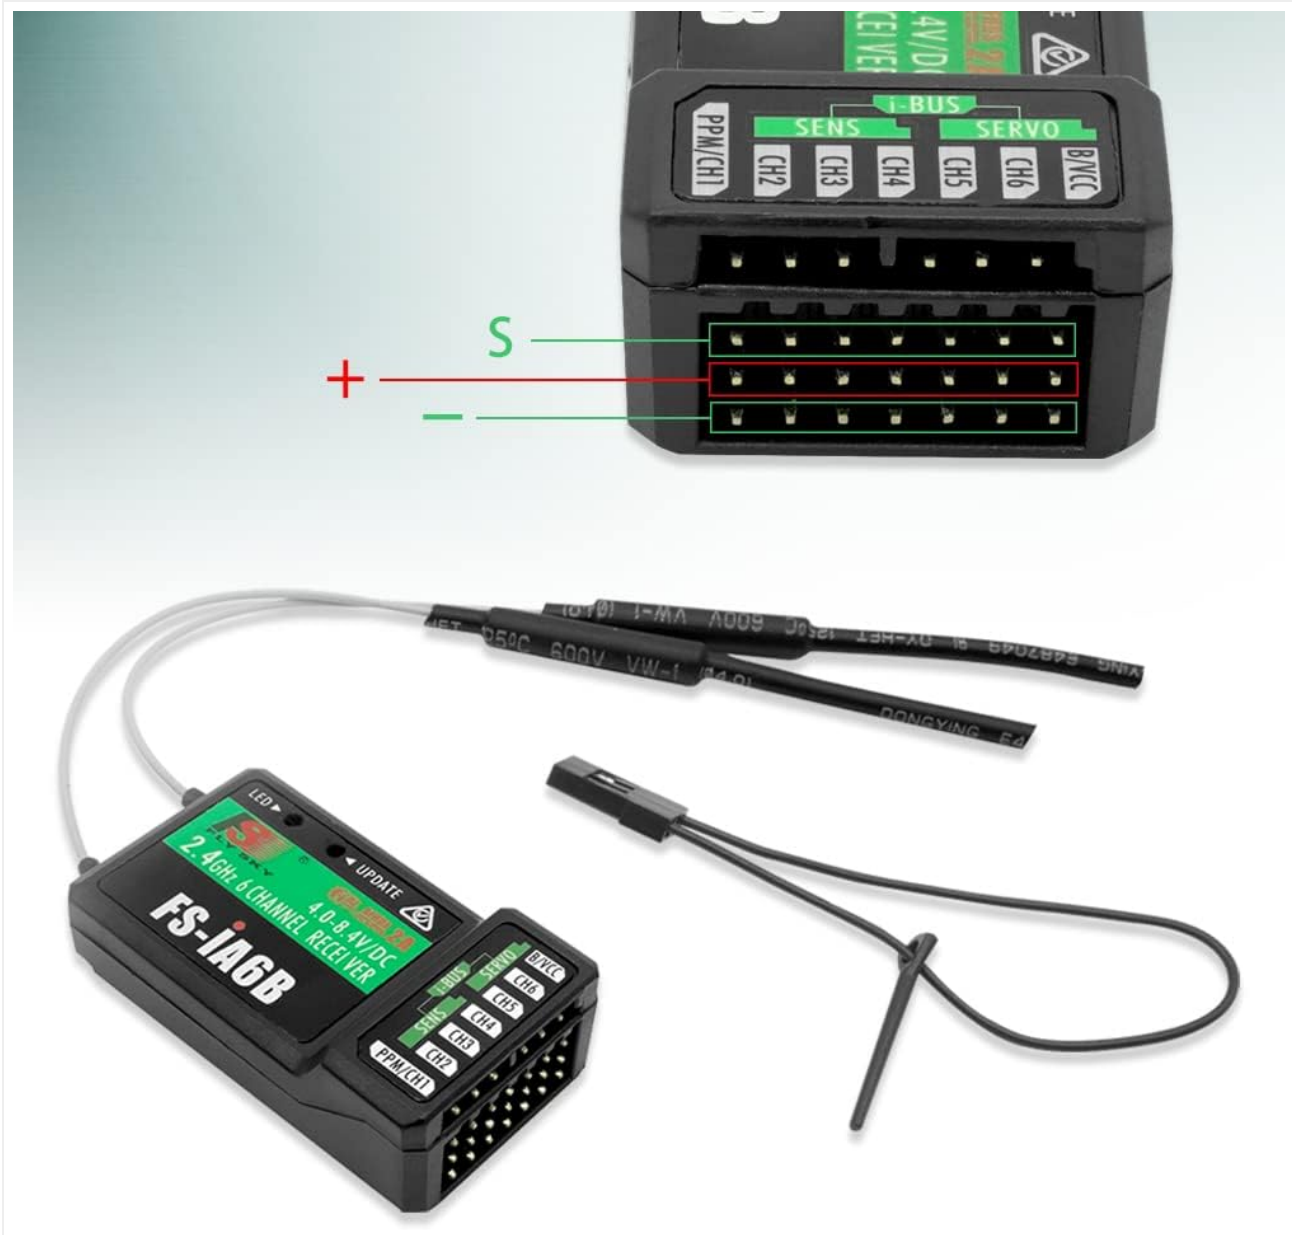


Figure 4: Detailed view of the FS-iA6B receiver's pinout, showing servo channels, iBus, SENS, and B/VCC ports.

2. Binding the Receiver to Your Transmitter

Binding is the process of linking the receiver to your Flysky transmitter. This ensures secure communication between the two devices.

1. Ensure your transmitter is powered off.
2. Insert the bind plug into the B/VCC port on the FS-iA6B receiver.
3. Apply power to the receiver (4.0-8.4V DC). The LED on the receiver should start flashing rapidly, indicating it is in binding mode.
4. While holding the "Bind" button (or equivalent) on your Flysky transmitter, power on

the transmitter.

5. The LED on the receiver should stop flashing and become solid, indicating a successful bind.
6. Release the bind button on the transmitter, then power off both the receiver and the transmitter.
7. Remove the bind plug from the receiver.
8. Power on the transmitter first, then the receiver. The receiver's LED should be solid, confirming the bind.

Note: Some transmitters, like the Radiomaster TS16, may require specific settings for two-way communication to display receiver battery voltage and signal strength. Refer to your transmitter's manual for advanced binding options.

OPERATING INSTRUCTIONS

Once the receiver is successfully bound to your transmitter and connected to your model's flight controller or servos, it is ready for operation.

- **Power On Sequence:** Always power on your transmitter first, then your receiver/model. When powering off, disconnect power from the receiver/model first, then power off the transmitter.
- **Signal Range:** The FS-iA6B offers a reliable operating range of 500 to 1500 meters under optimal conditions. Environmental factors can affect range.
- **PPM Output:** The PPM/CH1 port provides a single-wire PPM signal, simplifying connections to compatible flight controllers.
- **iBus Port:** The iBus port allows for digital serial communication, enabling connection to iBus compatible devices and expanding the number of usable channels beyond the physical 6 servo ports.
- **Indicator Light:** Observe the LED indicator on the receiver. A solid light indicates a stable connection, while a flashing light may indicate a loss of signal or binding mode.

MAINTENANCE

Proper maintenance ensures the longevity and reliable performance of your FS-iA6B

receiver.

- **Storage:** Store the receiver in a dry, cool environment, away from direct sunlight and extreme temperatures.
- **Cleaning:** Use a soft, dry cloth to clean the receiver. Avoid using solvents or harsh chemicals.
- **Antenna Care:** Ensure the dual antennas are not bent sharply or damaged. Proper antenna orientation is crucial for signal reception. Avoid cutting or modifying the antenna wires.
- **Connection Integrity:** Periodically check all wire connections to ensure they are secure and free from corrosion or damage.

TROUBLESHOOTING

If you encounter issues with your FS-iA6B receiver, consider the following troubleshooting steps:

- **Receiver Not Binding:**

- Ensure the bind plug is correctly inserted into the B/VCC port.
- Verify the receiver is receiving adequate power (4.0-8.4V DC).
- Confirm your transmitter is in binding mode and compatible with the FS-iA6B.
- Try repeating the binding process carefully, ensuring the transmitter is powered off before inserting the bind plug and powering on the receiver.
- Check your transmitter's settings; some require specific configurations for two-way communication or binding.

- **Loss of Signal / Intermittent Connection:**

- Check the distance between the transmitter and receiver. Ensure you are within the operational range.
- Inspect the receiver antennas for any damage or improper orientation. Ensure they are extended and positioned correctly.
- Avoid operating near sources of strong electromagnetic interference (e.g., high-power electrical lines, Wi-Fi routers).
- Verify the power supply to the receiver is stable and sufficient.

- **No Response from Servos/Flight Controller:**

- Confirm the receiver is successfully bound (solid LED).
- Check all wiring connections between the receiver and your servos/flight controller. Ensure correct polarity and channel assignment.
- Verify that your flight controller or servos are powered correctly.
- If using PPM or iBus, ensure your flight controller is configured to receive signals from these ports.

WARRANTY INFORMATION

This product is manufactured by OGUNKE. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact the manufacturer directly. Typically, warranties cover defects in materials and workmanship under normal use.

SUPPORT

Should you require further assistance or have questions not covered in this manual, please contact OGUNKE RC customer support. You can often find contact information on the product packaging or the seller's official website.

For additional product details and customer reviews, you may visit the product page on Amazon: [Flysky FS-iA6B Receiver on Amazon](#).