

Bitcoin Battery Miner

Consuming just 15 watts of power

Support different Solo mining

Hashrate of up to 500 GH/s



NMAXE

User Manual rev.1.0

1 Specification

1.1 General Specification

Title	Info
ASIC	BM1366AG/AL
Master Chip	ESP32-S3R8, Xtensa32 dual core processor
HashRate	450 ~ 550 GH/s
Wi-Fi	802.11 b/g/n, up to 150Mbps
Device management	Web service Axe OS / NMController
Firmware upgrade	Upgrade Over the air(OTA) / NMFashTool
Power Interface	Type-C USB / DC2.0
Supply mode	DC/PD3.0 DC adapter and PD charger are supported
Power supply range	9/2.5A~12V /2A
Power Consumption	15~20W
Display	1.14 inch TFT-LCD ; 135*240;Full-color
Fan	DC 5V/Dual bearing brushless Fan
Heat Sink	40mm*40mm*14mm
Memory	512KB SRAM; 8MB PSRAM; 384KB ROM; 16MB SPI Flash
Dimension	85*56*44mm
Operating Temperature	-20 ~ 70 °C

2 Get Start

2.1 Prepare in advance

- Your home wifi name.
- Your home wifi password.
- Your BTC address.

2.2 Power on

Power the NMAxe via one of the following ways:

- 12V * 2A, 110-240V adapter.
- USB-PD adapter, at least 9V*2A, the Official PD Power is 30W.

2.3 Quick setup


- Search a hotspot which named "**NMAxe_xxxxx**", and connect it with password "**12345678**":



***Note1:** "**NMAxe_xxxxx**" only active once the QR code appeared on the screen of NMAxe.

***Note2:** There are only 5 minutes for you to setup the NMAxe if you notice the QR code.

- Login the admin page in your browser with “192.168.4.1” you will see something as below:

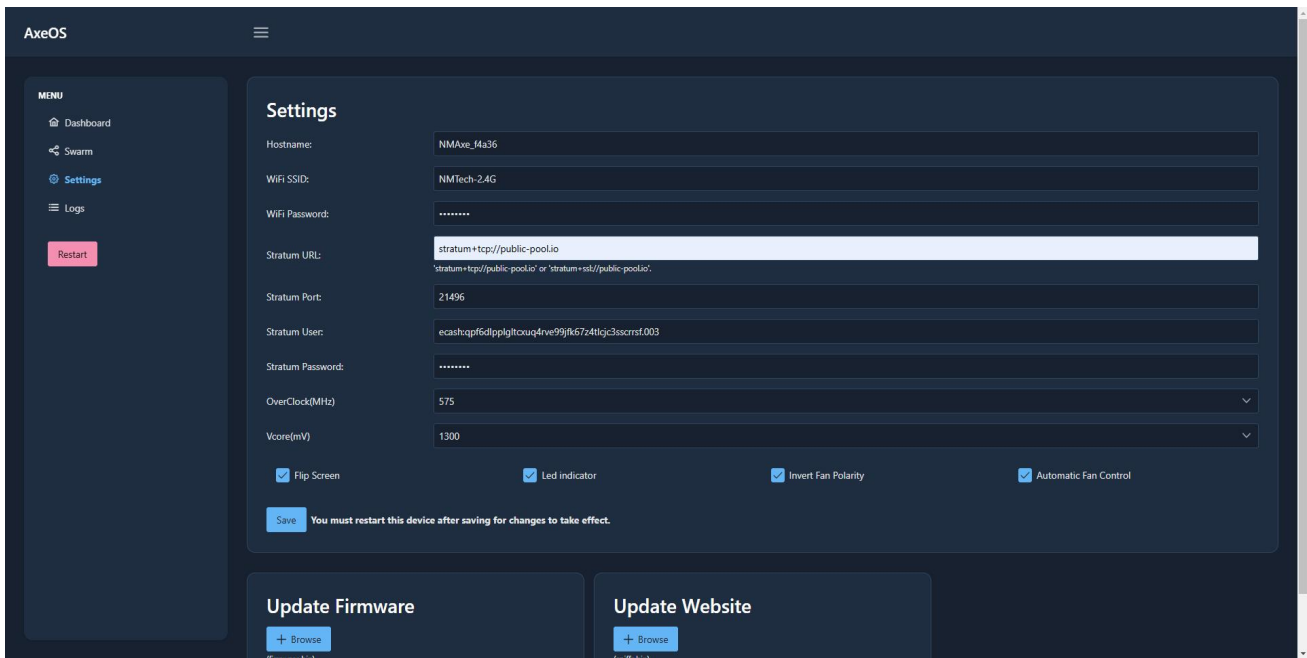

No.	Setting Items	Description	Take effect
1	WiFi SSID	Your home WiFi Name (2.4G only)	Click “restart” button.
2	WiFi Password	Your home WiFi Password	Click “restart” button.
3	Stratum URL	Mining pool address or IP address • tcp : stratum+tcp://ip_address • ssl : stratum+ssl://ip_address Note: prefix “stratum+tcp://” or “stratum+ssl://” is necessary.	Click “restart” button.
4	Stratum Port	Mining pool port number	Click “restart” button.
5	Stratum User	Your wallet address or register account name of pool	Click “restart” button.
6	Stratum Password	None, x, or use to set the Mining pool difficulties	Click “restart” button.

7	OverClock(MHz)	ASIC operating Frequency (500-575MHz)	Click "restart" button.
8	Vcore(mV)	ASIC core voltage(1200~1300 mV)	Click "save" button.
9	Flip Screen	Rotate screen	Click "restart" button.
10	Led Indicator	Enable or disable the led indicator	Click "restart" button.
11	Screen Brightness	Brightness adjustment	Click "save" button.

- For quick setup the NMAxe, just change "**WiFi SSID**", "**WiFi Password**" and "**Stratum User**" to yours, click save button, and then click restart button. You will see NMAxe screen restart and connect to your home wifi if everything goes well.
- Once you are here , it means your NMAxe is working perfectly now.



Computer : <https://www.youtube.com/watch?v=pl67yVkJDyN0&t=39s>

Android : <https://www.youtube.com/watch?v=KSAFLVkyBM&t=7s>

iOS : <https://www.youtube.com/watch?v=bC0GBCjw2Is&t=23s>

3 User guide

3.1 Buttons



Buttons	Action	Description
boot	Double click	Switch to next page
boot	Long press	Force configuration
user	Long press	Restore to factory settings
reset	Click	Reset the NMAXe

3.2 Admin page

- Login to the admin page via your local IP address on the upper right corner once NMAXe stay in the mining page.



3.3 Abnormal

- Once you see “**Vbus 5v(at least 8v)**” shown on screen, it means that the voltage of your power adapter does not match.
- Once you see “**Stratum user error**” shown on screen, it means that the “**Stratum User**” filed is wrong.
- Once you see a QR code on the screen, it means that NMAXe connecting to your home WiFi timeout, you should connect the hotspot “**NMAXe_xxxxx**” and login “**192.168.4.1**” to check your home WiFi name and password, 2.4G WiFi only.

4 Firmware upgrade


4.1 Via NMFlash

Website : <https://flash.nmminer.com>

Tutorial : <https://www.youtube.com/watch?v=xK62TOcza6Q&t=4s>

4.2 Via AxeOS

Download the latest **firmware.bin** and **spiffs.bin** from <https://github.com/NMminer1024/ESP-Miner-NMAxe>

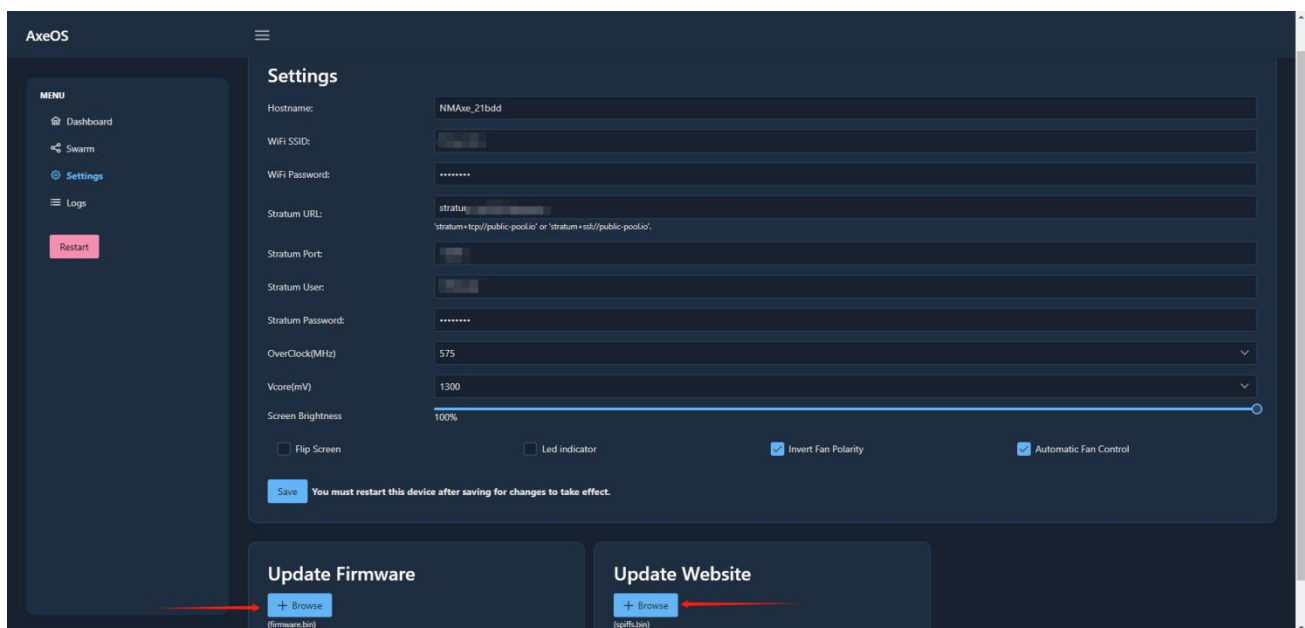

***Note:** If the AxeOS upgrade of **spiffs.bin** is interrupted, you may no longer be able to log in to AxeOS. Don't worry, you can perform a forced upgrade by following the steps in section [4.1](#) above.

5 Centralized monitor

5.1 NMController

Tutorial : <https://www.youtube.com/watch?v=6MhN53XgWGE>

6 Pool reference

6.1 Solo Mining Pool

Url	Type	Port	Description	Minimum required difficulty
public-pool.io	tcp	21496	BTC	1M initial, Minimum 0.001
solo.ckpool.org	tcp	3333	BTC	10K initial, dynamically adjusted based on hashrate
pool.nmminer.com	tcp	3333	XEC	1K initial, dynamically adjusted based on hashrate
eu.molepool.com	tcp	7450	DGB	Minimum 32.768K constantly
eu.molepool.com	tcp	5566	BCH	Minimum 32.768K constantly
eu.molepool.com	tcp	2566	SPACE	Minimum 32.768K constantly
eu2.molepool.com	tcp	1801	FB	Minimum 32.768K constantly

6.2 Pool

Url	Type	Port	Description	Region
btc.f2pool.com	tcp	1314	BTC	common
btc-asia.f2pool.com	tcp	1314	BTC	Asia
btc-na.f2pool.com	tcp	1314	BTC	North America
btc-euro.f2pool.com	tcp	1314	BTC	Europe
btc-africa.f2pool.com	tcp	1314	BTC	Africa
btc-latin.f2pool.com	tcp	1314	BTC	Latin

***Note:** List of some active mining pools we have collected here. We are not the owners of these pools, so we are not responsible for their operations.

7.Contact NMTech

Home page: <https://www.nmminer.com>

Telegram: <https://t.me/NMAxe1024>

Email: support@nmminer.com

AliExpress (NMTech Global Store): <https://www.aliexpress.com/store/1104268817>

YouTube: <https://www.youtube.com/@NMTech-official>