

Touch Panel Application

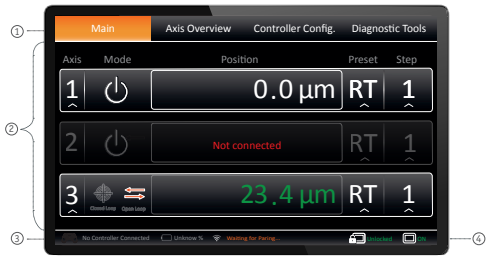

Main Overview

1. Header
2. Control Section
3. Remote Controller Status Bar
4. Locking Bar

Controls	Description
	No positioner is connected.
	A positioner is connected, but controlling is not activated for this axis. Press ⏻ for longer than 1 second to activate and deactivate the axis.
	A positioner is connected and controlling is activated. The control mode is closed-loop positioning.
	A positioner is connected and controlling is activated. The control mode is open loop positioning.

ⓘ Different colours indicate different statuses, please have a look into our manual for an overview.

Controller Configuration

1. Button assignment - stepwise movement
2. Button assignment - continuous movement
3. „Profil to edit“ field
4. „Reset all Profils“ field
5. „Remove Controller“ field



Europe, Munich: +49 89 2877 809 0
US West Coast: +1 510 649 9245

Customer Success: support@attocube.com
Sales Team: info@attocube.com


visit: http://www.attocube.com/attocontact

attocube
WITTENSTEIN Group




AMC300
Motion Controller

Overview Connections

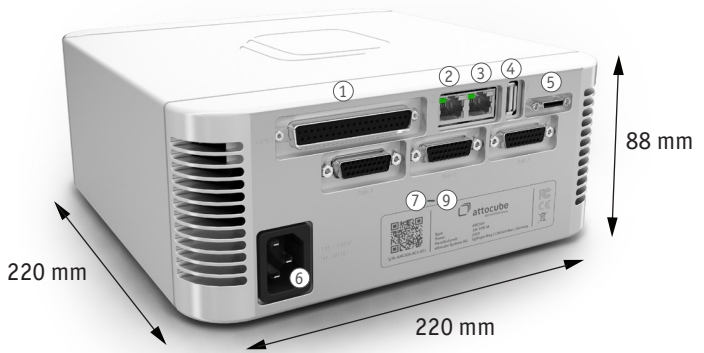

① GIPO Socket
② Ethernet Uplink Socket
③ Ethernet Downlink Socket
④ USB Socket
⑤ Sensor IN Socket
⑥ Power Supply Socket
⑦ Axis 1 Socket
⑧ Axis 2 Socket
⑨ Axis 3 Socket

⚠ Before first operation, please carefully read the manual of both the AMC300 motion controller and your attocube piezo stage to avoid accidental damage to either device.

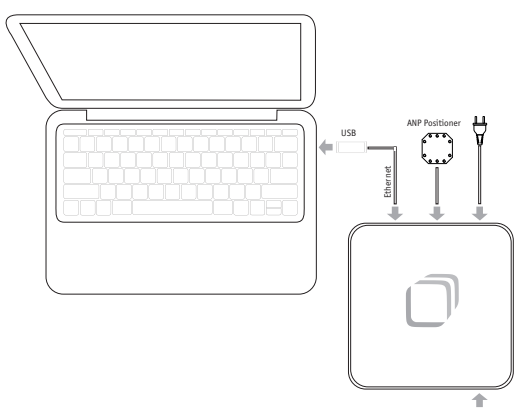


Hardware Connections

- Connect the controller via the supplied USB-to-Ethernet adapter to your PC
- Connect your piezo stage(s) using only the supplied cables
- Connect the device via the power supply cable to the supply mains
- Push the power button on the front of the device to switch it on
- Connect the remote controller via USB cable or wirelessly via Bluetooth to the device

attoDISCOVERY Software & Webserver Application

attoDISCOVERY can be installed from the provided USB stick, a webserver application can be opened by typing the IP (default:192.168.1.1) or serial number of the device followed by .local into a browser's address line. We recommend using Google Chrome.

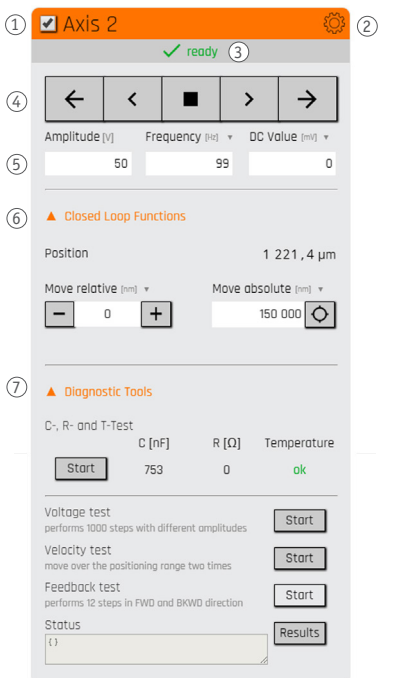

Within the configuration options menu one can set different settings like:

- Positioner type
- Closed loop settings e.g. ground on target
- Sensor configurations

Axis Tile, Operation View

① Activate axis
② Configuration options menu
③ Axis status bar
④ Open loop movement controls (stepwise, continuous, stop)
⑤ Value settings (dependent on positioner and desired performance like velocity)
⑥ Closed loop functions for active position feedback (only usable with /RES positioners) positioner can be moved a specific range (with "Move relative") or to a desired absolute position ("Move absolute")
⑦ Measure the performance of the connected positioner within the „Diagnostic Tools" section

