

- With this instruction reverse beeper can be assembled on a Avant 200 series loader
- This is a retrofit insturction




- Before assembling make sure that you find all of the components listed below in your retrofit kit
 - 64367 x1 Reverse beeper
 - 65241 x1 L-fitting
 - 65240 x1 Manometer
 - 64852 x1 Pressure switch
 - A37001 x1 Wire harness revers



- Remove loaders right side covers and seat base assembly
- Before removing any hoses or loosening any fittings, pump must be cleaned properly
- Wash loader before assembly to avoid contaminating the hydraulic system



Pressure switch is attached here

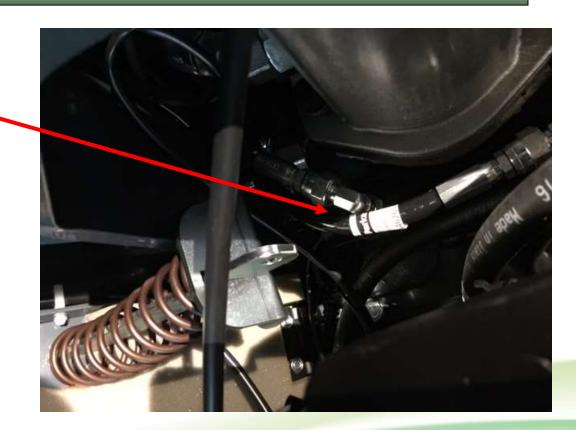



- Pressure switch is attached to the pump
- The hose coming from the drive pedal is attached here





- Reverse beeper wire harness will be routed from top of the pump to the machines right side
- Use zipties to tie it against machines wire harness
- Wire harness fuse and ground wire will be wired under the dashboarb to fusebox and grounding point




- Attach the reverse beeper next to hydraulic oil cooler
- Hydraulic oil cooler is located in the rear of the loader





Wire harness grounding wire will be attached to loaders grounding point

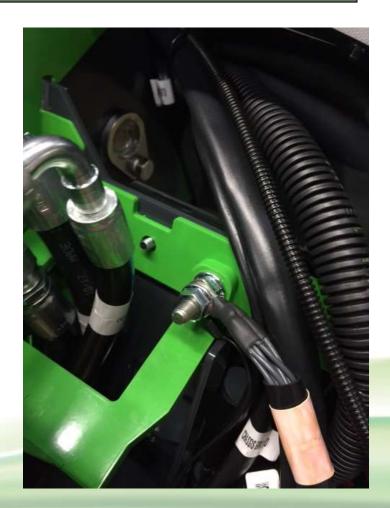




- Wire harness fuse wire will be attached to fuse box
- Make sure to connect to the fused side of the connection bar

•





- Wire harness has connectors for immobilizer
- Connectors for reverse beeper

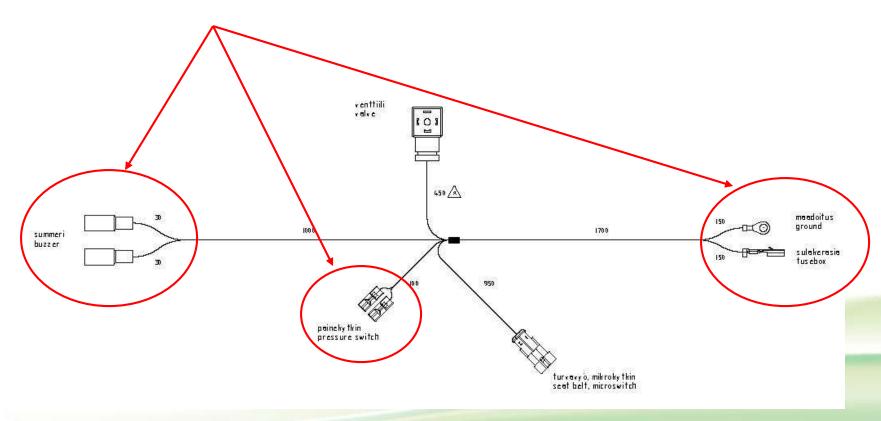



- When everything is attached test the reverse beeper
- Drive the loader backwards and if it makes beeping noise everything is ok
- When there aren't leaks attach removed covers and parts back