


Mechanical engineering

**Rampelmann &
Spliethoff OHG**

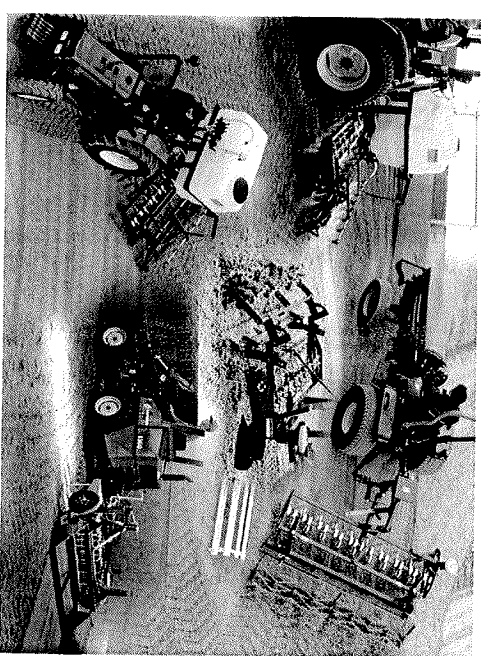

Operating instruction

Platz-Max

Grefenr. Str. 11 D- 48361 Beden Tel. 0049/2586/9304-0 Fax. 0049/2586/9304-30
Homepage: www.platz-max.de e-mail: info@platz-max.de

Contents

Safety advices	page
Qualification of utilisation.....	2
Safety and accident prevention regulation.....	3,4,5
Attached implements.....	5
Layout of hydraulic.....	5,6
Tyres.....	6
Maintenance.....	6
Label of an agriculture implement in traffic.....	7,8
Safety indication and pictograms.....	9
The tractor	
Compressed air and weights.....	10
Breath of trace.....	10
The high of the lower linkage.....	11
Operating instruction	
The attachment of the implements at the tractor.....	12
Driving with Platz-Max at public streets.....	13
To work on the machine.....	13
Unhitched in standing position.....	13
The adjustment of the Platz-Max.....	14
Adjustment of hydraulic arms and top link.....	14
Speed control.....	14
The adjustment of leveller blade and tilling roller.....	15
Spare parts and consumables.....	15
Servicing and maintenance.....	15
Protection against corrosion.....	15
EC – agreed declaration.....	16
The list of spare parts.....	17
3-D drawing.....	18
List of spare parts – hoodbeat rake.....	19
List of spare parts – P-M-Roll.....	20
Equipment of castor angle NLK.....	21

The operating instruction of the Platz-Max



We marked all points in this operating instruction with this sign, if these points concern your safety.

Please pass these safety advisements even on other controllers.

At the moment of publication all informations, depictions and technical details in this operating instruction base on the last stand. The changes of construction are reserved everytime without announcement.

Typ	n° of series	year of construction

The information of typ, n° of series and year of construction is absolutely necessary for the order of spare parts.

We would like to advice you to write these dates in the above mentioned square, so it is obvious everytime.

Safety advices

Qualification of utilisation

- The machine has only to be used for the capacity at bridge path and in riding halls (qualified using)
- Further utilisations are against the qualified using. The manufacturer is not responsible for the resulting defects, the user is the only one who is responsible for these defects.
- The qualification of utilisation includes the operating, the servicing and the maintenance.
- The persons are only allowed to use and maintain the machine if they know exactly the machine and about possible dangers.
- It is important to obey the safety -, working -, traffic- and accident prevention regulations.
- A high-handed changeament at the machine exclude the responsibility of the manufacturer.
- Pay attention that there will be no horse close to the machine during the operating!!!
- Pay attention that teeths are complete at the machine. By fatigue of material the teeths could be broken and it is absolutely necessary to proof its condition and its completeness! There must not be parts of teeths in the riding arena! The horses could harm themselves by this broken teeth!!!! It is absolutely necessary that the horses won't get in contact with these teeths!
- The horses must not get in contact with the machine. They could receive severe injury!

The fundamental regulations:

 Please proof the implement and the tractor for safety in traffic and utilisation before you put it in operation.

Safety and accident prevention regulations

1. Please pay attention to the universally valid safety- and accident prevention regulation.
2. The attached warning signs give you important information for the operation without danger, its attention serve for your safety.
3. Please take care of the respective qualification for driving at public streets.
4. Please inform in detail with the establishment and the operating elements before you are starting to work.

5. The operators' clothes should be tight.

6. Please keep the machine clean to avoid the danger of fire.

7. Please control the surroundings before you start.

8. It is not allowed to drive on the top of the implement during the working or the transport.

9. The implement has only to be attached correctly and safely to the ready-made devices.

10. You have to be really careful if you attach or unhitch the implement off the tractor. Don't stay etween tractor and implement.

11. Please pay attention to the weight of axle, the total weight and the measure of tractor.

12. Please check and attach the equipment for transport like lightning, signe and precautions.

13. The remote controlled operating elements (f.e. ropes, chains, linkages etc.) have to be at a safety place to avoid unintentional movements during the position of transport or working.

14. The implement has to be in the correct condition and to be bolted like operating instructions of the manufacturer during the transport in traffic.

15. Don't leave the drivers' seat during the transport.

16. The speed has to be adjusted to the condition of the environment, please avoid trip into the maintains, downhill trip, traverse to a hanger and sudden curves.

17. Please don't forget that the driving condition, the linking condition and the brake horsepower could be changed because of the attached implements and ballast weight. Take care of enough linking- and brake possibility.

18. Please pay attention to the wide pull out and / or the centrifugal force in a curve.

19. You only have to put the machine in operation if you attached all precaution.

20. It is forbidden to stay on the place of working.

21. It is forbidden to be near the rotation area.

22. There are bruise and cutting points at the foreign-power-pieces (f.e. hydraulics)

23. Please put down the implements on the ground, stop the engine and remove the key before you leave the tractor.

4.

24. If the vehicle is not safety against rolling by brake od wedge, it is not allowed for anyone to stay between the tractor and the implement.

The attached implement

1. Before the implement will be attached or dismantled from the "three-point"-suspension, an unintentional lifting or setting must be impossible.
2. The category of the attachment of the tractor and the implement has to be agreed for the "three-point"-suspension.
3. In the area of the "three-point" – suspension exist the danger of injury caused by bruise and cutting points.
4. Don't stay between the tractor and the implement, if you work at the external control of the "three-point"-suspension.
5. Please pay attention to enoughfixing the side of the "three-point"-suspension of the tractor during the transport-position of the implement.
6. The operating lever of an drop out implement must be fixed against lowering during a trip on a street.

The layout of hydraulic

1. The layout of hydraulic is under pressure.
2. It is necessary to pay attention to the prescribed connection of the flexible tubes of hydraulics, if you connect these flexible tubes to the engine.
3. The hydraulic of the tractor and the implement must be without pressure, if you connect thes flexible tubes to the hydraulic of the tractor.
4. The sleeves of coupling and the plugs of an connection between a tractor and an implement should be marked to avoid a wrong operation.
5. Please control regulary the main of hydraulics' flexible tubes and change it by defects or weakness. The changed main has to be in accordance to the technical standards of the manufacturer.
6. Please use an aid to avoid an injury if you are looking for a leak.

5.

7. If the liquid comes out with high pressure, the skin could be injured deeply. Contact the doctor immediately after an injury! Danger of infection!
8. Please put down the implement, the layout must be without pressure, and turn off the engine, before you start to work at the layout of the hydraulic.

The tyres

1. During the work at the tyres the implement must stay safety and must be adjusted against rolling.
2. The assembly of tyres or wheels should only be done with sufficient knowledge and with the correct tool.
3. Only the expert is permitted to repair the tyres or wheels with the right tool.
4. Please control the air pressure regulary! Take notice of the correct aire pressure!

The maintenance

1. Before you start with a repairing, a maintenance and a cleaning even a removal of malfunction, don't forget to switch of the drive and the engine. Remove the key!
2. Please control regulary the nuts and the screws of a fixed valve and tighten them eventually.
3. During the maintenance at a raised implement carry out the safety of shoring up.
4. Please use the right tool and gloves to chance a working tool with cutting edge.
5. Take the correct waste disposal for oil, grease and filter.
6. You have to separate the electrical layout from the electrical supply before you start working.
7. If there is a consumption at the safety device, they must be controlled regulary and changed in time.
8. Please disconnect the battery and the cables before you start with the electrical welding at the tractor or at the attached implement.
9. The spare parts have to fulfil the technical request of the manufacturer! *Original parts!*
10. You only have to employ the nitrogen to dilute the storing of gasoline

6.

The label of an agriculture implement in traffic

Attention! The driver and owner of a vehicle has the responsibility of the operation and the employment of attached and hanged on implements (§31 StVZO and §23 StVZO). The attached implements must have the sign of 423 x 423 mm or a sign of for parking, if the implement stick out more than 400 mm lateral and more than 1000 mm backwards beyond the the tractors' light.

There could be further legal regulations for the construction and the equipment of a vehicle, sometimes it is also necessary to sign the vehicle or some of the part. Please take the red / white signs of DIN 11030 with 100 mm wide and 45° proceed oblique patrols.

Sometimes the safety measures for the driving of public streets with an agriculture machine are required as follows:

1. If the vehicle shows traffic endanger parts
If you can't avoid the jut out of parts above the outline of the vehicle, the parts must be covered. If this is not possible, you have to employ a sign also for the traffic endanger parts like knives and discs.
2. If the attached implements stick out more than 1 m to the tail-light of the tractor
The end of the implement must be provided with a warning sign.
You have to equip it with one tail-light (minimum) and a reflector if it is necessary because of darkness or weather.
The mounting of the light must be fixed at the boring of the tilling roller.
3. If the maximum permissible transporting width is exceeded
The maximum permissible transporting width of an agricultural machine is 3,0 m (§32 StVZO). You must have an exception to the rule for a bigger transporting width. The safety measure of "the guidelines for the mark of oversized vehicle" are fitted to the machine.
(Also it is required to equip it with tail-lights and reflectors for darkness and weather.)
4. If the distance between the head of an attached front implement and the middle of the steering-wheel of the tractor is more than 3,5m, you need an exception to the rule.

7.

5. For the lighting of the attached implement it is valid as follows:

The prescribed lighting of the vehicle mustn't be covered of the attached implements, otherwise the implements and also the license plate must be repeated. If the implements jut out more than 400mm to the tail-light and boundary-light, the light must also be repeated. Please regard chapter 2 in between of the attached implements with stick out.

6. For attached implements for working on ground it is valid as follows:

The boundary-light, reflector and tail-light must be fixed for each driving on public street, if the implements jut out more than 400mm to the lightning of the tractor.

The light (in accordance with DIN 11027) for all implements are available.

We advise to buy the warning and foils, also as the lightning furnishment from the commerce.

Further prevention regulations for the traffic at public streets:


You must have an operating permission for attached agriculture implements (§ 18 StVZO) with more than 3 t.

The operating permission for an attached "one-axle"-agriculture implement is also decreed.


Please take further instructions from the operating instruction or contact the manufacturer.

8.


Safety indication / pictogram

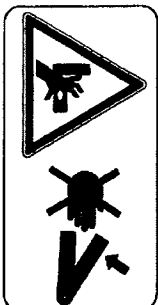

Never grasp into the area of crushing so long as the parts can still move

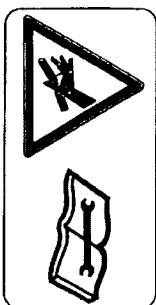


Be careful of the outflow of the liquid in high pressure

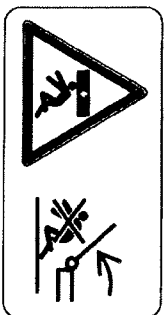


Don't stay in the area of movement of the operating implement.

The tractor The compressed air and weights

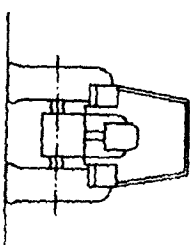

Right: similar pressure


Control the compressed air at regular intervals! Pay attention to the correct air pressure! (Look at the operating instruction of the tractor! The same compressed air in each driving tyre is the guarantee for a maximum traction and a minimal slipping.

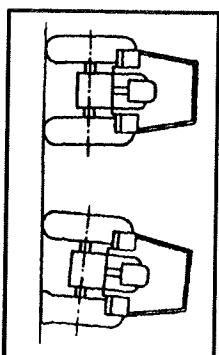

Wrong: to hard dissimilar pressure

The tyres which are filled up with water or other additional weights reduce the slipping. Please put up correctly ballast to the points of tie up. Put attention to the permissible load of the axle and the measurement of transport(look at the operating instruction of the tractor).

The breath of trace

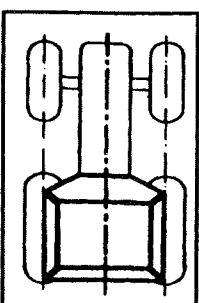


It is an advantage if you suit the distance of the front wheels to the back wheels. A safety guidance of the implement is a result of a same interior measure at the front and the back or a interior measure at the front which is only a few Centimetres bigger than at the back. (Take also a look at the operating instruction of the tractor.)

The tractor

The high of the lower linkage

The lower linkage at the tractor must be adjusted by the pretence device to the same distance of the ground in accordance to the lifting flagstaff.

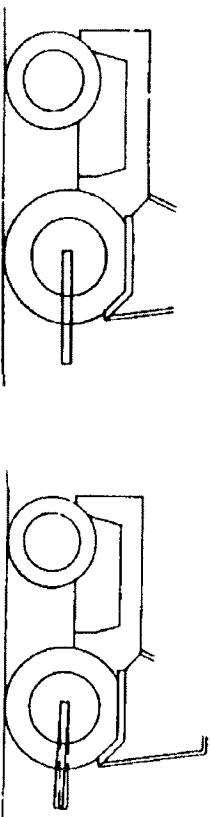


The same high of the lower linkage =
Regular working of the implement

Irregular high of the lower linkage=
Irregular working deepness and
breadth


Category of the "three-point-linkage"

Category	of the tenon of the lower linkage	distance between ball points
0	16mm	500mm
1	22mm	683mm
2	28mm	825mm
3	36,6mm	965mm

The category of the tractor has to agree to the category of the implements. If you would regard it from the top, the lower linkages have to diverge to the direction to the implement.

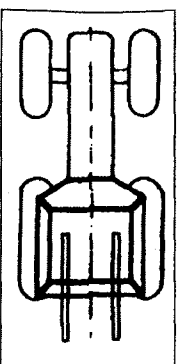

Wrong

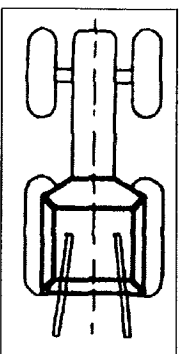

correct

11.

Operating instruction

The attachment of the implement at the tractor

Before you mount or dismount the Platz-Max three-point-link of your tractor make sure that the hydraulic of the tractor will not lift nor drop during the installation. Please be careful during this work. Make sure that no one else (especially children) can touch the controls the tractor during the installation. Please shut of the engine during the operation.

There is a serious risk of injury around the three-point-linkage of any tractor.


Please switch off the engine after lowering the hydraulic arms before you start with maintenance and the work of cleaning. Is it for your own safety, if you remove the ignition key.

Try and perform this operation on level ground.

First connect the hydraulic arms then the top link.

Take care at everytime of the condition of the elements and safety.

To disconnect the Platz-Max disconnect the top link then the hydraulic arm.

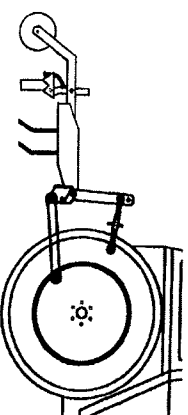

If the link arms use ball fittings make sure they are the right size for the Platz-Max to assure good working and avoid ageing of the equipment.

The implements could couple off itself and cause serious damages for the tractor or the person.

The link arms should be slightly tilted up on the tractor side. The top linkage tilted down towards the tractor. The imaginary lines for the link arms and the top link should meet somewhere between the front and back axle of the tractor to assure ideal traction.

Please also consult the manual of the tractor.

12.

Driving with Platz-Max at public streets.

- ☐ Please check the specific local road regulations.
- ☐ The back of the Platz-Max has to be arming with lights according to law.
- ☐ All parts protruding have to be equipped with arming signs.
- ☐ Please contact the trader of the agriculture machines, he can give you advice concerning safety equipment of your machine.
- ☐ Make sure that the tractor is balanced when fitted with the Platz-Max otherwise add weights to the front.
- ☐ Make sure that the weight of Platz-Max is within the allowed amount of weight for the tractor and the tyres.

To work on the machine

Don't leave the driver's position unless the tractor has come to a full stop. Lower the Platz-Max fully, stop the engine and remove the key prior to leaving the vehicle.



**Stop the engine before performing any work on the Platz-Max.
Is it not allowed to stay at the area of work.**

Unhitched in standing position

The safety in the parked position of the unhitched implement is only guaranteed when the Platz-Max is complete with tilling roller and leveller blade.

13.

Adjustment of the Platz-Max

By controlling the tilling roller.
If the Platz-Max has a Tilling roller you can adjust its working depth with positioning of the pins in the sidebars of the tilling roller.
The higher pin is set the lower the times will be going into the surface.

There is a danger of bruise at the holder of the tilling roller!

The lifting must sloped down completely in order to arrive the maximum operating effect!

Please put attention to the correct condition of the safety elements (Plugs of the springs).
Otherwise the elements must be replaced by new ones.

If the Platz-Max should be used for loosening only without limitation for the deepness, you can drive the machine with the refutation of the stroke or of position.

Adjustment of hydraulic arms and top links

Once you have established your depth of work readjust your top link/hydraulic arms relation as per earlier advice.

If the lower linkages are more smooth, the reconsolidation of the back roller is larger. But be careful, if the upper linkages fail to behind, the implement could tense up against the tractor and it is not suited to the conditions. The machine could be damaged.

Speed control

For a better result use speed (preferably moderate) and make sure the Platz-Max fully touches the ground. The tractive force is rather constant and the implement is adjusted in the high in accordance.

The reconsolidation could be influenced negatively because the complete contact of the back roller is not guaranteed.

Please regard also the operating instruction of the tractor.

14.

Adjustment of leveller blade and tilting roller

When the need arise adjust the leveller blade and the roller with the bridge pins on the spring arms.

!attention of the danger of bruise!

Spare parts and consumables

Please only use original parts. Only use original or identical, bridge pins, lynch pins and clevis pins.

It is only allowed to exchange the prong of spring,

if it is sure that you can't be injured of the Platz-Max!

Don't stay under suspended weights.

The lubricating points must be greased regularly.

Servicing and maintenance

Warning! Stop engine and lower Platz-Max before starting maintaining the implement.

! Remove the key !

Check regulary nuts and screws of thightning (approx. every 100 h)

Protection against corrosion

Protect your equipment from corrosion and use grease and oil of vegetable base.

15.

EC : Declaration of conformity accormity to EC-guideline 89/392 EWG

We, Rampelmann & Spliethoff OHG, Greffener str. 11, D – 48361 Beelen, declare in single responsibility, that the product

“Platz-Max 110 / 135 / 160 / 220 / 270 “

is in accordance to the fundamental rules, the requirements of safety and health of the EC-guideline.

Stamp / signature

Important advices

Use only original parts!

The installation of imitated parts or foreign products could cause serious defects and loss of your guarantee!

Please put attention to:

The imitation or copy or parts, specially parts of consumption, don't maintain what they maybe promise.

It is difficult to examine optically the quality of materials
- be careful of cheap offers and imitated parts!

This is meant specially for imitated parts of consumption, which unusual consumption, bad quality and short life could cause a early breakdown of the machine an costly repairs.


Rampelmann & Spliethoff OHG
Landtechnik-Motorgeräte-Stahlhallenbau-Maschinenbau
Greffener Str. 11, D - 48361 Beelen
tel: 0049/2586/9304-0/ fax: 0049/2586/9304-30
homepage: www.platz-max.de e-mail: info@rnsplie.de

16.

List of spare parts
Platz-Max 1,10 m – 2,70 m


No.	Description	Article no.
1	3-point Platz-Max 1,10 m 3-point Platz-Max 1,35m – 2,20 m 3-point Platz-Max 2,70 m	MB5 300500 MB5 300400 MB5 300600
2	Clevis pin with lynch pin cat. 0 // capsule of reduction cat. 1/2	Z 316. 078 MBRS 9999 9999 Z 919. 025
3	Hydraulic arms linkages cat. 0 and 1 left // cat. 0 and 1 right // cat. 1 and 2 left // cat. 1 and 2 right	MB5 300900L MB5 301100R MB5 300700L MB5 300800R
4	Frame - 1,10 m - 1,35 m - 1,60 m - 2,20 m - 2,70 m	MB5 111000 MB5 113500 MB5 116000 MB5 122000 MB5 127000
5	Tins (front)	MBRS 10-ST-RA-9 V
6	Tins (behind)	MBRS 10-ST-RA-9 H
7	Bolt	MBRS ZRB001 28050
8	Time mounting plate	MB5 400.800
9	Side wheel (side protection)	MBRS 522/200BG MB5 400600
10	Mounting arms for levelling plate and roller	MB5 300100
11	Levelling blade adjustment arm	MB5 300200
12	Levelling blade - 1,10 m - 1,35 m - 1,60 m - 2,20 m - 2,70 m	MB5 211000 MB5 213500 MB5 216500 MB5 222000 MB5 227000
13	mounting arms for roller	MB5 300300
14	roller - 1,10 m - 1,35 m - 1,60 m - 2,20 m - 2,70 m plate - 1,10 m - 1,35 m - 1,60 m - 2,20 m - 2,70 m	MBRS 08110 K MBRS 08135 K MBRS 08160 K MBRS 08220 K MBRS 08170 K MBRS 08110 W MBRS 08135 W MBRS 08160 W MBRS 08220 W MBRS 08270 W
15	Clevis pin & lynch pin	MBRS 500 016
16	Clevis pin & lynch pin	MBRS 500.004
17	Bridge pin	CL6D
18	Bearing of tilling roller	338.501.036

19	the frame for lattice roller of 1,35m	without illustration	MB5 3 043 00
20	the frame for lattice roller of 1,60m	without illustration	MB5 3 042 00
21	lattice roller of 1,35m	without illustration	MB5 3 044 00
22	lattice roller of 1,60m	without illustration	MB5 3 045 00
23	the framed bearing for lattice roller	without illustration	UCFL 205

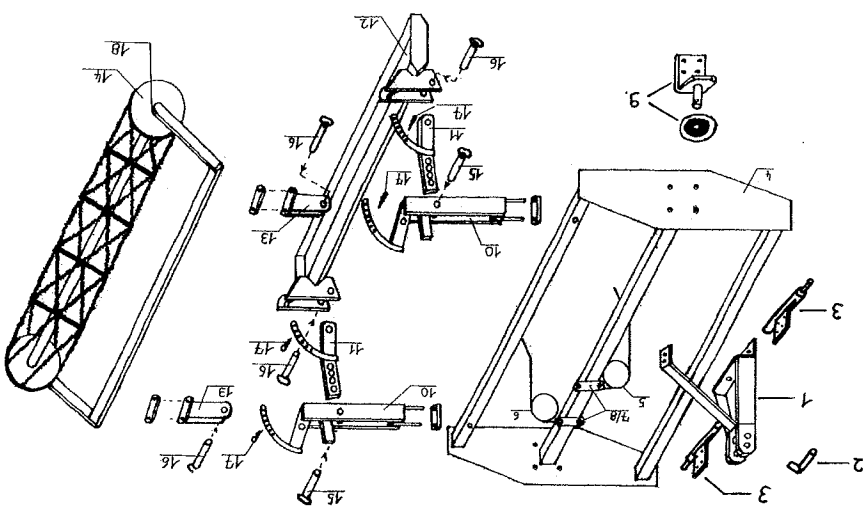

list of spare parts
hoofbeat rake

serial number	name	order number
1	blade - right	MB5 3017 00 R
	blade - left	MB5 3018 00 L
2	holder - gear	MB5 3018 00
3	plate	MB5 3017 00
4	holding plate - right	MB5 3015 00 R
5	holding plate - left	MB5 3016 00 L
6	shaft	MB5 3014 00
7	joint	MB5 3013 00
8	bolt	MBRS ZRB001 28050
9	bolt	931 10 50 /985 10
10	split pin	CL6D Z
11	screw with springing	931 12 30 / 127 B12

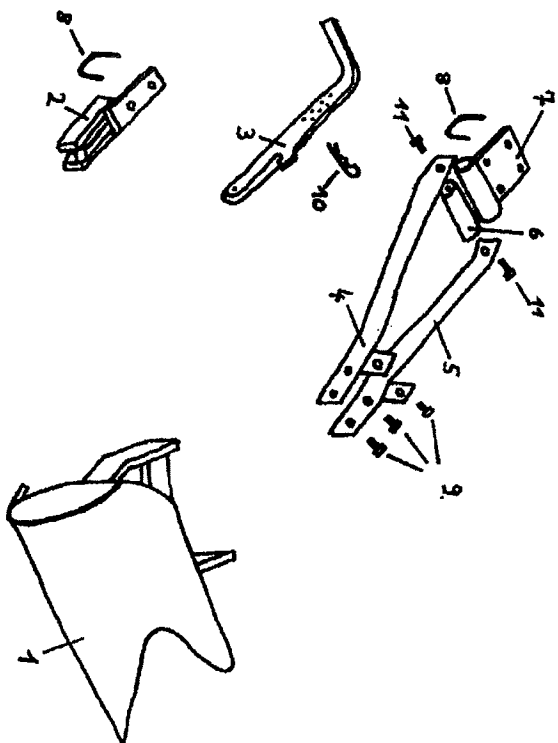

spare-parts
P - M - Roll

serial number	name	order number
1	draw bar	MB5 3 024 00
2	trailing eye	BE 4040
3	globular clutch	EM 150 F
4	holding plate	MB5 3 030 00R
5	tension spring	MB5 3 031 00L
6	top link	MBRS Z-2521
7	clevis pin with lynch pin	TL 2502411 U
8	cylinder	MBRS 999.9999
9	blade wheel	SPEC 13
		MBRS R400/5-K75/1

