




Operator's manual for Attachment



Leveller

Product number:	300-700-series loaders:	A32411 A33537
	200-series loaders:	A33031

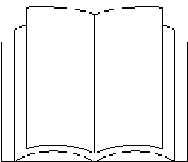

Please read this manual carefully before using the equipment, and follow all instructions.

Keep this manual for later reference.

Manufacturer:

AVANT[®]
AVANT TECNO OY
 e-mail: sales@avanttecono.com

Ylötie 1
 33470 Ylöjärvi
 FINLAND
 Tel. +358 3 347 8800
 Fax +358 3 348 5511

www.avanttecono.com

CONTENTS

1. Foreword.....	3
2. Designed purpose of use	3
3. Safety instructions for the leveller.....	3
4. Leveller specifications	4
5. Mounting the leveller to the loader	4
6. Instructions for use	6
7. Maintenance and servicing.....	6
8. Warranty terms	7

This manual uses the following warning symbols to indicate factors that must be taken into account to reduce the risk of personal injury or damage to property:

	This safety symbol refers to important safety information in this manual. It warns of an immediate hazard that could cause serious personal injury or damage to property. Read the warning text accompanying the symbol carefully and ensure that other operators are also familiar with the warnings, since personal safety is at stake.
---	---



This notice symbol indicates information about the correct operation and maintenance of the equipment.

Failure to observe the instructions accompanying the symbol can lead to equipment breakdown or other property damage.

In addition to the safety instructions included in this manual, you must observe all occupational safety regulations, local laws and other regulations concerning the use of the equipment. Due to continuous product development, some of the details in this manual may differ from your equipment. We reserve the right to change the contents of the manual without notification. Original instructions.

1. Foreword

Avant Tecno Oy would like to thank you for your purchase of this AVANT attachment. It has been designed and manufactured on the basis of years of product development and experience. By familiarising yourself with this manual and following the instructions, you ascertain your safety and ensure the reliable operation and long service life of the equipment. Read the instructions carefully before starting to use the equipment or performing maintenance.

With these instructions, even users with only little experience can use the attachment and loader safely. The manual also includes important instructions for experienced AVANT operators. Ensure that all persons using the equipment have received proper guidance and familiarised themselves with the manual and all safety instructions before using the equipment. Keep this manual at hand throughout the service life of the equipment. If the manual is lost, you can request a new one from the retailer or manufacturer. If you sell or transfer the equipment, be sure to hand over this manual to the new owner.

2. Designed purpose of use

The leveller is an inexpensive and efficient attachment for levelling ground. It is an attachment designed and manufactured to be used with AVANT multi purpose loaders. With the leveller it is easy and effortless to spread piles of soil. The leveller can also be used for lifting job site materials, such as sod rolls, tools etc.

The attachments have been designed to require as little maintenance as possible. The operator can perform regular maintenance tasks, but certain more demanding tasks must be left to qualified professionals. Read the maintenance and servicing instructions in this manual. Please contact your AVANT retailer if you have additional questions about the operation or maintenance of the equipment or if you require spare parts or maintenance services.

3. Safety instructions for the leveller

Please bear in mind that safety is the result of several factors. The loader-attachment combination is highly powerful, and improper or careless use may cause serious personal injury or property damage. Due to this, you should carefully familiarise yourself with the manuals of both the loader and the attachment before starting operation. Do not use the attachment if you have not familiarised yourself with its operation and the related hazards. The purpose of these instructions is to help you to:

- Use the equipment in a safe and efficient manner
 - Monitor and prevent any hazardous situations
 - Keep the equipment intact and ensure a long service life
-
- When mounting the leveller to the loader, ensure that the locking pins of the loader's quick attach plate are in the lower position and that they **have locked the attachment to the loader**.
 - Start the use of the leveller calmly and carefully.
 - Pay attention to the contours of the terrain and other hazards, such as branches and trees reaching the driver's seat. Pay attention to the surroundings and any other persons and machines moving in the vicinity.
 - Do not modify the structure of the attachment in a manner that would affect its safety.
 - Familiarise yourself with the controls of the loader in a safe area.
 - Do not use the leveller to lift persons or as an any kind of access platform.
 - Also read the safety instructions for the loader in the loader manual.



Note that the loader boom moves down and may be tilted even if the engine has been stopped. Never go under a raised boom or to the danger area between the boom and the attachment.

Remember to wear proper protective clothing:




- The noise level in the driver's seat may exceed 85 dB(A). Wear hearing protection while working with the loader.
- The use of safety boots is recommended while working with the loader.

4. Leveller specifications

Table 1 –Leveller technical data


Product number	A33031	A32411	A33537
Width:	1 200 mm		1 500 mm
Length:	860 mm		860 mm
Weight:	85 kg		95 kg
Suitable Avant-loader:	216-220	300-700	

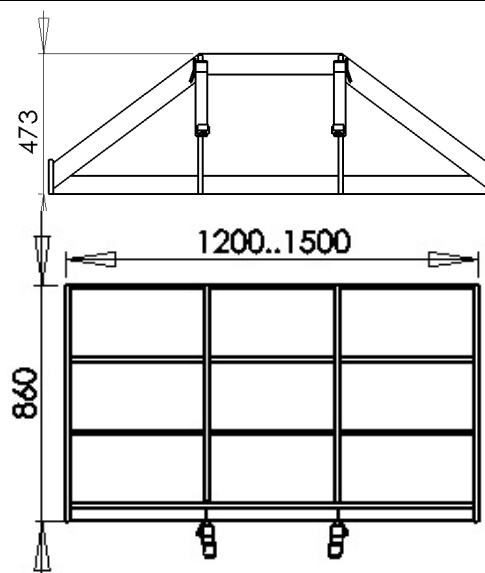

Listed below are the markings and labels fastened to the leveller, and they must be visible on the equipment. Replace the warning labels, if they have become unclear or detached completely. New labels are available via your retailer or contact information provided on the cover page.



The warning decals contain important safety information. Replace damaged or missing decals with new ones.

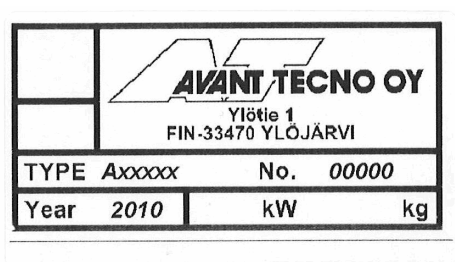


Identification plate of the attachment



A46771



A46772

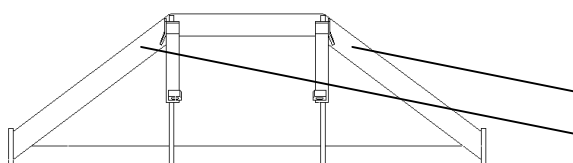

Decal locations

Table 2 – Decal explanations

Decal	Meaning
A46771	Read instructions before use.
A46772	Do not go under a raised attachment or the loader boom, keep a safe distance to lifted equipment.

5. Attaching the leveller to the loader



Attaching the attachment to the loader is quick and easy, but it must be done carefully. If the attachment is not locked to the loader, it may detach from the loader and cause hazardous situations. In the worst case, the attachment may slide onto the driver along a raised boom. For this reason, the attachment must under no circumstances be raised over one metre when it has not been locked. To prevent hazardous situations, always follow the attachment mounting instructions provided in the following pages. Also remember the safety instructions in Section 3.

Do not move the leveller manually. The attachment is fairly heavy and you may injure yourself if trying to move it. Detach the leveller to a place from where it can be reached directly with the loader.

The attachment is installed to the loader boom by using the quick attach plate and the counterpart on the attachment. The locking pins are semi-automatic, they will lock when the attachment is tilted towards the loader at low height. The leveller is attached to the loader as follows:



Step 1:

- Lift the quick attach plate locking pin / locking pins up and turn them backwards into the slot so that they are locked in the upper position.
- If your loader is equipped with a hydraulic attachment locking system, see additional instructions about the use of the locking system from the relevant manuals.

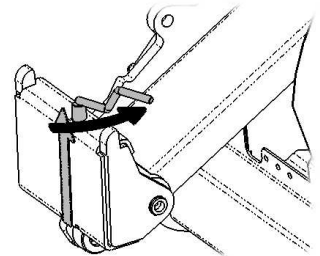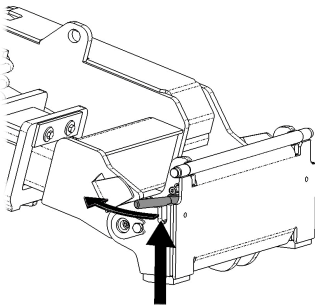



Step 2:

- Turn the quick attach plate hydraulically to an obliquely forward position.
- Drive the loader onto the attachment. If your loader is equipped with a telescopic boom, you can utilise this.

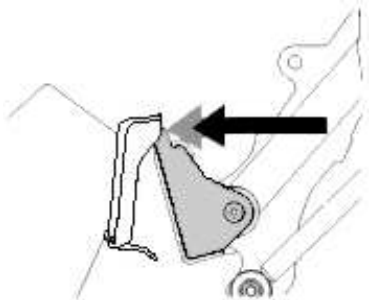
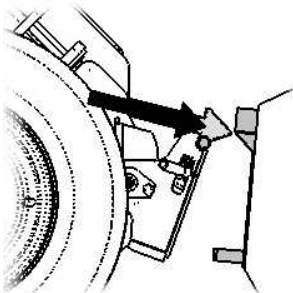


Step 3:

- Lift the boom slightly – pull the boom control lever backward to raise the attachment off the ground.
- Turn the boom control lever left to turn the bottom section of the quick attach plate onto the attachment.
- Turn the boom control lever further to the left so that the locking pins lock as they hit the pin guides.

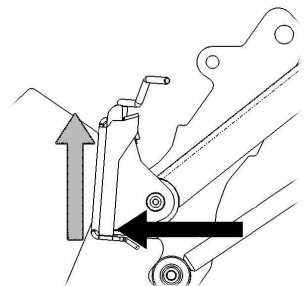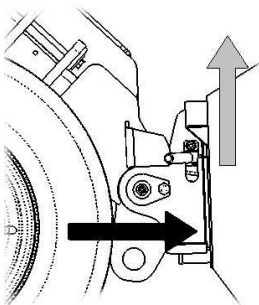

Before moving or raising the attachment, ensure that the locking pins are in the lower position and come through the fasteners on both sides. Unlocked attachment may fall on the boom or operator and cause injuries.

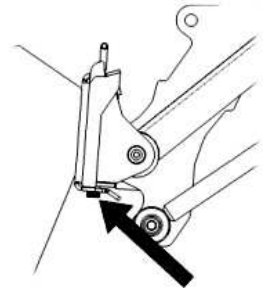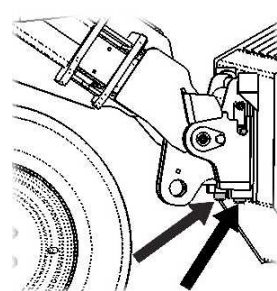



Do not use the automatic locking of the locking pins at a height of over one metre. If the locking pins do not return to the normal position when the front plate is tilted, do not raise the attachment any more. Lower the attachment on the ground and secure the locking manually.

6. Instructions for use

Check the attachment and the operating environment once more before starting to work. Quick inspection of the equipment and the operating area before use are parts of ensuring safety and the best performance of the equipment.

- Check that all obstacles have been removed from the working area before operation. Remember correct working methods and avoid leaving the driver's seat unnecessarily.
- Ensure that the loader and attachment are used in a safe manner and as intended. Operate the loader controls only when sitting at the driver's seat.
- When using the leveller to transport objects, make sure that they stay firmly on the attachment. Use load securing straps as necessary.



Note that when pushing material, hitting an obstacle may cause the loader to stop suddenly. Check the operating area before starting to work and fasten the seat belt.

The boom floating system is available for some loader models, with which it is easier to level ground in certain conditions. Floating refers to a system, which allows the boom to move vertically freely and follow the contours of the ground. Refer to the operator's manual of the loader for further instructions about using the floating. Note that the floating will not prevent the loader from stopping suddenly in case an object has been hit.



Do not use the leveller to lift persons or any kind of access platforms even in temporary use.

7. Maintenance and servicing

You may use a pressure washer and mild detergent to clean the leveller. Do not use strong solvents or spray directly at the labels on the attachment. For longer storage periods touch up the paint where needed to prevent rust damage. Do not store the attachment directly against the ground; place it on blocks of wood or on a pallet, for example.

8. Warranty terms

Avant Tecno Oy grants a warranty of one year (12 months) for the attachment from the date of purchase.

The warranty covers repair costs as follows:

- Work costs are covered, if the repair is not performed at the factory.
- The factory replaces any defective components or consumables.

The factory may reimburse the price of components purchased by the customer in special cases that have been agreed in advance.

The warranty does not cover:

- Normal maintenance work, such as the replacement of blades or the belts, or parts and consumables required for it.
- Damages caused by unusual operating conditions or ways of use, negligence, structural changes made without the consent of Avant Tecno Oy, use of non-original parts or lack of maintenance.
- Consequences of a defect, such as interruption of work or other possible additional damages.
- Travel and/or freight costs caused by the repair.



AVANT[®]