





Installation manual

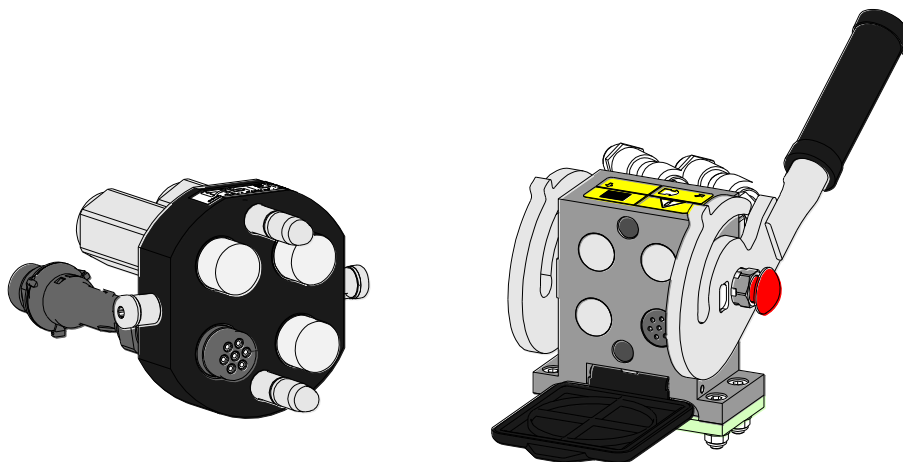

Attachment control switch pack

Electric connectors for multi connector system

Electric socket adapters A36869
 A36679

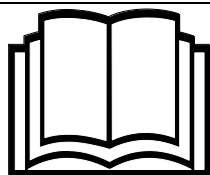

Please read these instructions carefully before using or assembling the equipment and follow all instructions.

For more information or assistance contact your nearest Avant dealer or service point.

AVANT[®]
AVANT TECNO OY
e-mail: sales@avanttecno.com

Ylötie I
33470 YLÖJÄRVI
FINLAND
Tel. +358 3 347 8800
Fax +358 3 348 5511

www.avanttecno.com

I. Introduction

Electric connector

All attachments with electric functions can be connected to the loader by using one of the following ways:

1. Use a separate cable kit with a switch, supplied with the attachment
2. Operate with Attachment control switch pack, with a separate electric socket on the loader boom
3. Operate with the new Attachment control switch pack, with the electric socket integrated in the multi connector.
 - An adapter A36679 is supplied with all attachments delivered after January 1st 2016. This manual will show how to install the adapter to the attachment connector.
 - Electric socket is integrated in the multi connector on all loaders equipped with attachment control switch pack from January 1st 2016. The socket can be retrofitted to the loader multi connector with adapter A36869.


This manual will also show how to fit the adapter to the loader connector.

I.1 In this manual

This manual will show:

- How to fit an electric connector to the attachment multi connector, to connect an attachment with electric functions to the socket on the loader connector.

All attachments delivered after January 1st 2016, with electric features, are equipped with the adapter A36679.

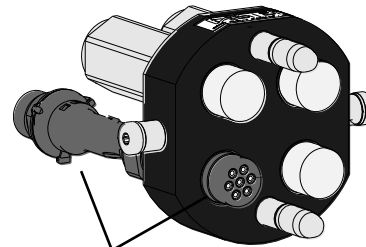


A36679

- How to upgrade the separate electric socket of the attachment control switch pack A34700 into the version with electric socket integrated into the multi connector

Adapter A36869 includes all necessary components for installation.

The adapter completes the Multi connector system by adding a socket on the lower right hole of the loader multi connector, when seen from the front of the machine.

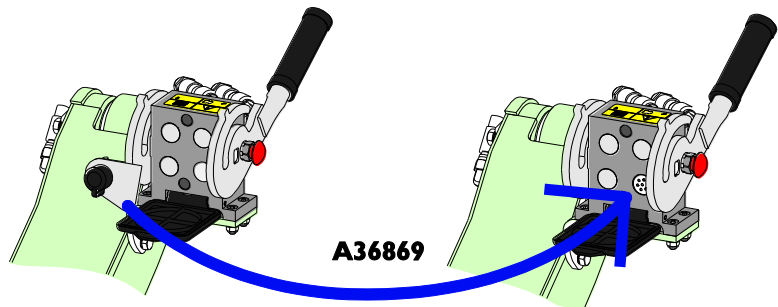

A36869

All electric connections of the retrofit adapters for converting the separate socket next to the loader multi connector to the integrated socket will be made with quick fittings, no electric wire work is needed.

I.2 Attachment control switch pack - Electric connector integrated in the multi connector


Electric connection for attachment integrated into the multi connector system makes changing of an attachment with electric functions even easier and quicker, as all hydraulic hoses and the electric harness of the attachment are connected to the loader simultaneously. If a loader manufactured after January 1st 2016 is equipped with the optional Attachment control switch pack, the electric socket is already integrated in the loader connector. All loaders with electric socket next to the multi connector can be upgraded to the new system.

From January 1st 2016 the Attachment control switch pack option is available on all articulated Avant loaders with the following product numbers, in these the electric socket is integrated to the multi connector:

- A36880 Attachment control switch pack for 200 series 2
- A36878 Attachment control switch pack for 400-700 series
- A36879 Attachment control switch pack for R series



Attachment control pack - Extra switches on boom control lever

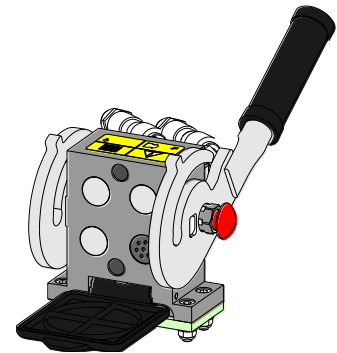

Electric connection integrated in the multi connector

How to operate an attachment with electric features, if the attachment control switch pack is not upgraded

- In case the adapter is not fitted on the loader, the attachment can be operated with the loader control switch pack by unplugging the electric wire from the attachment multi connector and then fitting it to the socket next to the loader socket, or with the electric wire harness with a separate switch. However, it is recommended to install the adapter A36869 to the loader connector to have full advantage of the quick coupling system.
- If the loader is fitted with the socket on the multi connector, but the attachment has separate electric plug, the adapter A36679 must be fitted on the attachment multi connector. All attachments with electric features can be upgraded to have all connectors in the multi connector system

If the loader is not equipped with the attachment control switch pack or the multi connector

All attachments with electric features are equipped with a separate cable, as before, making it possible to operate it without the attachment control switch pack. This wire is equipped with a separate switch to control the electric functions of the attachment. Some attachments may require that the attachment control switch pack is fitted to make it possible to control all electric functions.

If the multi connector, or the attachment control switch pack have not been fitted to your loader, they can be also retrofitted to most loaders. Contact your Avant dealer or service point for more information.

2. Safety

The following warning symbols are used throughout this manual to indicate factors that must be taken into account to reduce the risk of personal injury or damage to property:

	WARNING: This safety symbol refers to important safety information in this manual. It warns of an immediate hazard that could cause serious personal injury. Read the warning text accompanying the symbol carefully and ensure that other operators are also familiar with the warnings, since personal safety is at stake.
---	--

NOTICE

This signal word indicates information about the correct operation and maintenance of the equipment.

Failure to observe the instructions accompanying the symbol can lead to equipment breakdown or other property damage.

Read all safety instructions carefully before beginning installation work



- Lower the loader boom completely down and depressurize hydraulics when working near the loader connector.
- Disconnect battery before working on the loader.
- Make sure the connectors are aligned correctly. Incorrect alignment may cause sparking and damage the electric systems of the attachment and the loader.
- Test the operation of the electric functions of the attachment at a safe location to make sure the connections are made correctly.

3. Multi connector system with electric connection

3.1 Fitting the electric connector to attachment multi connector

If the loader is equipped with the electric socket integrated into the multi connector, the attachment connector can be fitted with adapter A36679.



The adapter A36679 is equipped with all attachments with electric functions, and which are delivered after January 1st 2016.

The adapter A36679 can be purchased separately and fitted to update all attachments already equipped with the multi connector.


Fitting the electric socket to attachment coupler

1. Remove the plug from the attachment coupler.
 - If the plug is solid type, remove by forcing the plug out, by using a hammer and a bolt, for example
 - If the plug is threaded on the connector, and has a hexagonal on it, remove with an Allen key
2. Bolt the attachment socket to the multi connector with the three provided screws, making sure that the attachment socket is correctly oriented.
 - The marker on the electric socket must point to corresponding marker on the multi connector, so that the pins are aligned correctly.

The marker on the loader socket will then be aligned with the marker on the attachment connector plug.

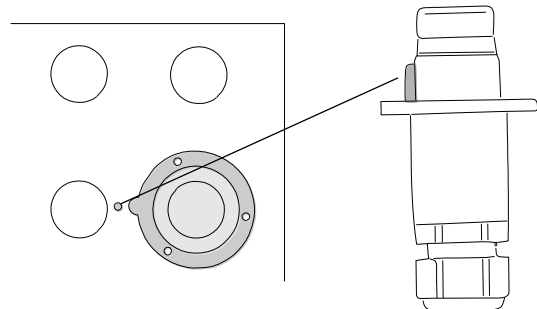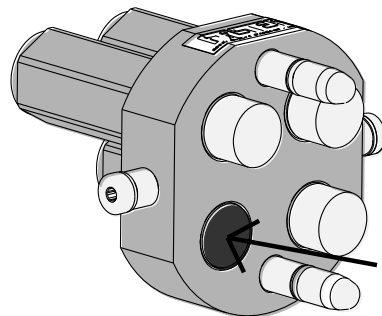

3. Fasten the electric plug of the attachment to the installed adapter on the multi connector.

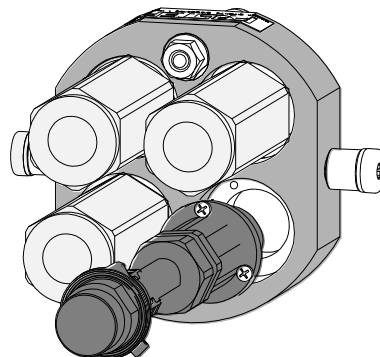

3.2 Fitting the electric connector to loader multi connector

If the loader is equipped with the previous type attachment control switch pack A34700 (socket is not on the multi connector), and new attachments with socket on the multi connector need to be mounted, the adapter A36869 can be easily fitted to the loader multi connector. The following instructions show how to integrate the separate electric socket next to the multi connector into the multi connector system.

It is possible to continue using an attachment without fitting the socket on the loader coupler. In this case, the electric socket must be connected directly to the plug next to the multi connector of the loader.




Disconnect battery before installation work

The loader battery must be disconnected before beginning installation of the attachment socket on the loader. Before the socket is fitted correctly, contact with metal structures of the loader will cause shorting the electric circuit.

To fit the electric socket to loader multi connector:

1. Disconnect the loader battery
2. Turn the retainer ring of the old socket to open and remove it
3. Unplug the electric cable from the old socket
4. Slide the adapter A36869 to the empty hole on the loader connector:
 - a) Put the protective cap first in
 - b) Slide the spring in
 - c) Push the socket in the hole. If it doesn't slide easily, make sure to push and keep the spring in the hole first
 - d) Make sure the socket is properly oriented. The small indicator lump on the connector must point to upper left direction when seen from the driver's seat
 - e) Secure the connector with three provided screws, making sure that the attachment socket is correctly oriented
5. Fit the electric connector of the original socket to the new installed adapter. Make sure the electric cable is not pinned or get stretched in use

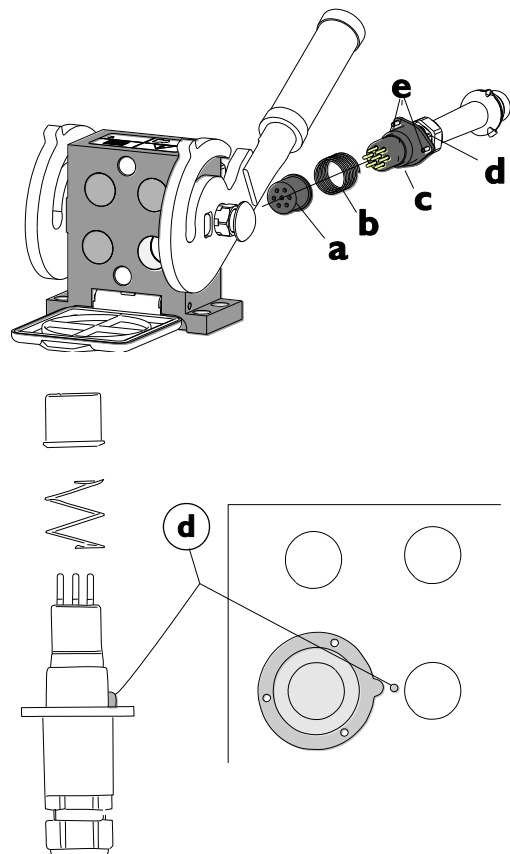


NOTICE

Incorrect alignment of the plug can damage the electric systems of the attachment or the loader. Make sure the plug aligns with the socket on the loader correctly.

4. Technical information

Connection of wires, seen from the wire pin side of the connector.

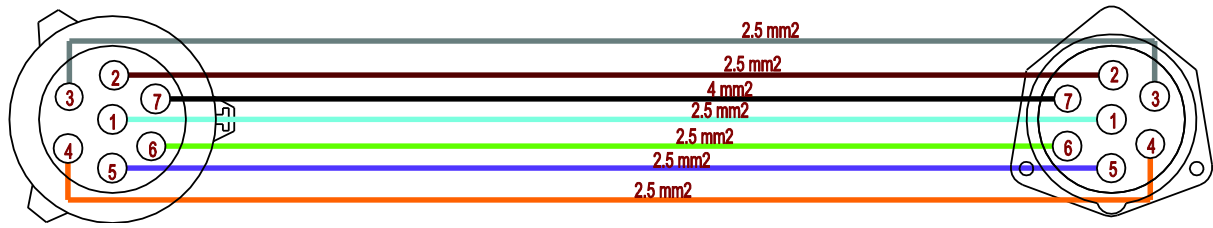



AVANT[®]