

AVANT

Lawn mower

Operator's Manual



Manufacturer:

AVANT

AVANT TECNO OY

Ylötie 1

FIN-33470 YLÖJÄRVI

FINLAND

Tel. +358 (0)3 347 8800

Fax. +358 (0)3 348 5511

Web www.avanttecno.com

TECHNICAL INFORMATION

Drive system	Hydraulic drive, coupling to auxiliary hydraulics of the loader
Number of blades	3
Cut height	ca. 30 – 100 mm
Cut width	1200 mm
Total width	ca. 1500 mm
Length	ca. 1300 mm
Height	550 mm
Weight	160 kg

SAFETY INSTRUCTIONS



Never use the lawn mower without instructions. Before starting operation read carefully this manual and the Operator's Manual of the loader, on which this mower is connected.



Start the operation slowly and carefully.



Operate the control levers with ease and without hesitation.



When coupling the lawn mower to the loader, make sure that the locking pins in the attachment coupling plate lock properly.



Keep hands, feet and clothing away from mower blades. Keep away from the mower when the blades are rotating.



Never lift the mower high from the ground – keep it as close to the ground as possible.

Cut height of the mower can be adjusted with the plastic spacers on the shaft of the support wheel.

The coupling plate on the mower floats about 10 cm up and down. This enables mowing also on uneven terrains.

OPERATION RANGE

AVANT lawn mower is an attachment for the AVANT loaders, destined for lawn mowing.


ATTENTION! The lawn mower is NOT destined for cutting hay, shrub or equivalent taller vegetation.

COUPLING THE MOWER INTO THE LOADER

Lift up the two locking pins on both sides of the attachment coupling plate and turn them backward so that they remain in the up position (see picture 1).

Make sure that the pins remain in the up position, otherwise you cannot couple the attachment properly!

Turn the attachment coupling plate with the tilt movement (see also Operator's Manual of the loader for tilt movement control) so that the upper edge of the plate leans forward.

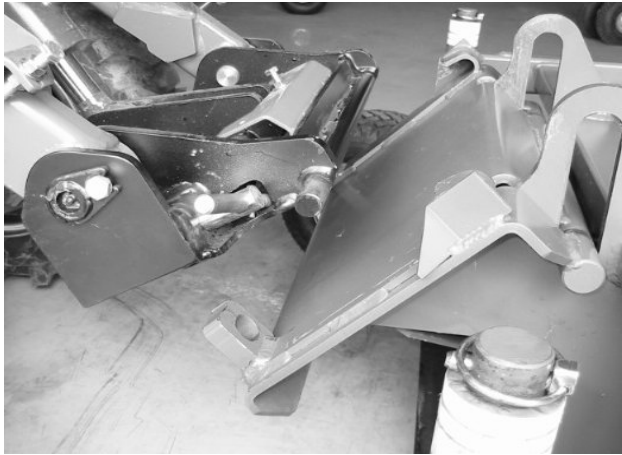

Picture 1.

Drive the loader into the attachment so that the round pins on top of the attachment coupling plate go in the brackets on the mower coupling plate.

Lift the boom so that the mower lifts off of the ground.

Pull the boom control lever to the left so that the attachment coupling plate tilts backwards and the lower edge of the attachment coupling plate turns into the attachment (see picture 2).



Picture 2.

Pull the boom control lever more to the left so that attachment coupling plate turns more and the bolts on the boom push the pins down in the holes of the attachment (picture 3).



Picture 3.

ATTENTION! Make sure that the pins lock properly down in the holes of the attachment.

Connect the hydraulic hoses of the mower in the quick couplers of the auxiliary hydraulics outlet on the loader (see picture 4):

There are 3 hoses on the mower : 2 pcs pressure hoses and 1 pc return hose

- Pressure hoses are equipped with quick coupler nipples (male). Connect them in the quick couplers (female) on the loader. Connect the return hose with female quick coupler in the quick coupler nipple on the loader.
- Engine must be stopped when connecting the hoses. Before connecting the hoses move the auxiliary hydraulics control lever in both directions a couple of times in order to release eventual back pressure.
- **NOTICE!** When connecting the hoses, make sure that they are not overstretched and are not in a position where they can be trapped during the operation of the machine and attachment.
- Rotation direction of mower blades depends on how the pressure hoses are coupled. The blades should rotate clockwise (seen from driver's seat) when one turns the control lever of auxiliary hydraulics to the right in the locking position (see Operator's Manual of the loader). If the rotation direction is not correct switch the places of pressure hoses.
- Make sure that the hoses are coupled properly in the quick couplers. Faulty or damaged quick couplers will restrict or stop oil flow.



Picture 4.

OPERATION

When the mower has been connected to the loader – attachment coupling plate in the mower, hoses in the quick couplers – make sure that the hoses are coupled correctly: Mower blades shall rotate clockwise, seen from driver's seat.

Operate the mower carefully: See to it that there are no persons in the operation area of the mower when you are working.

Grass ejection can be conducted to the right or to the rear:

The mower is equipped with plates which are destined for guiding grass ejection (see picture 5):

If the plates are not used the mower ejects grass to the right.

- By installing the guide plate on picture 6 grass ejection can be directed more towards the ground .
- If the blocking plate on picture 5 is installed, grass ejection is to the rear. Install the plate with 4 pcs M8* 25 hexagonal screws.



Picture 5.



Picture 6.

Cut height of the mower can be adjusted with the plastic spacers on the shaft of the support wheel (picture 7).



Picture 7.

MAINTENANCE

There are 4 pcs grease nipples on the mower, in the shaft of support wheels.

Bearings on the axle of the blades need not to be greased.

Make sure that the blades are sharp – sharpen them if necessary.

Tighten the V belt if necessary.

The mower can be washed with a high pressure washer.

When you lift up the mower for washing, make sure not to lift the front end of the mower too high – there is a risk that the mower tips backwards towards the driver if the mower is lifted too high.

WARRANTY

Warranty period is twelve (12) months from purchase date.

Warranty covers faulty parts and manufacturing faults only.

Warranty does not cover damages caused by use and natural wear