




Operator's manual for Attachment



Snow Blower 1100

Snow Blower 1400

Product number: for 200-series loaders: A35940
 For 300-700-series loaders: A35870
 A35847

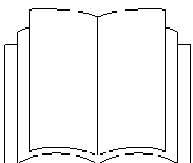

Please read this manual carefully before using the equipment, and follow all instructions.






Keep this manual for later reference.

Manufacturer:

AVANT
AVANT TECNO OY
e-mail: sales@avanttecno.com

Ylötie 1
33470 Ylöjärvi
FINLAND
Tel. +358 3 347 8800
Fax +358 3 348 5511

www.avanttecno.com

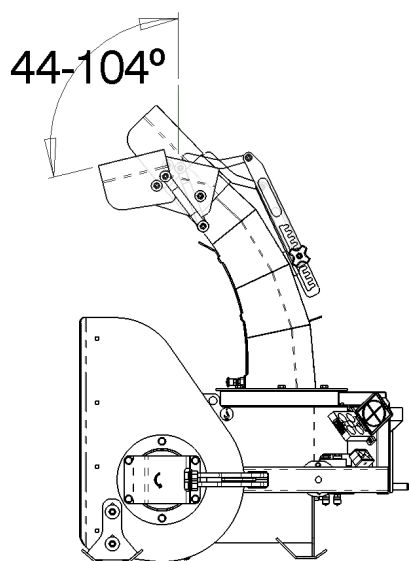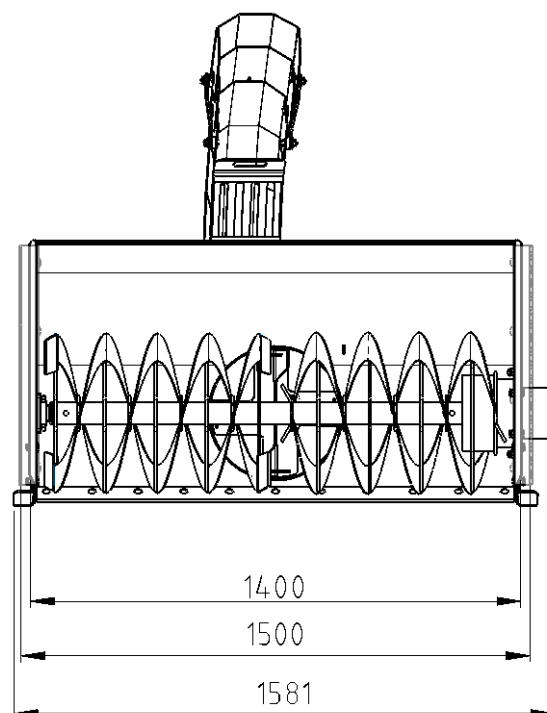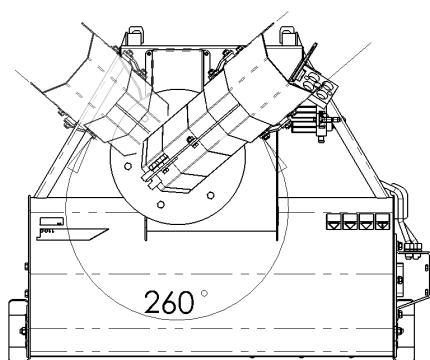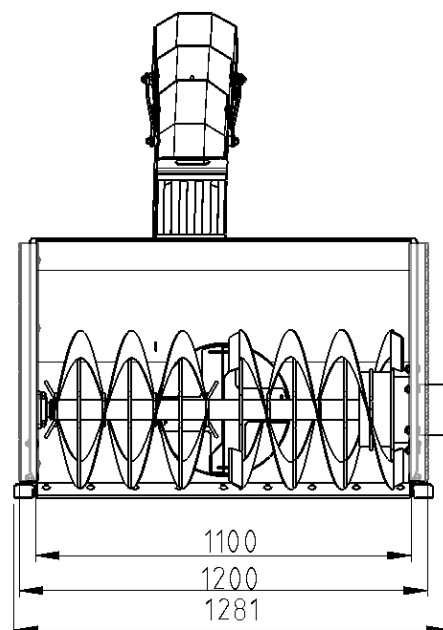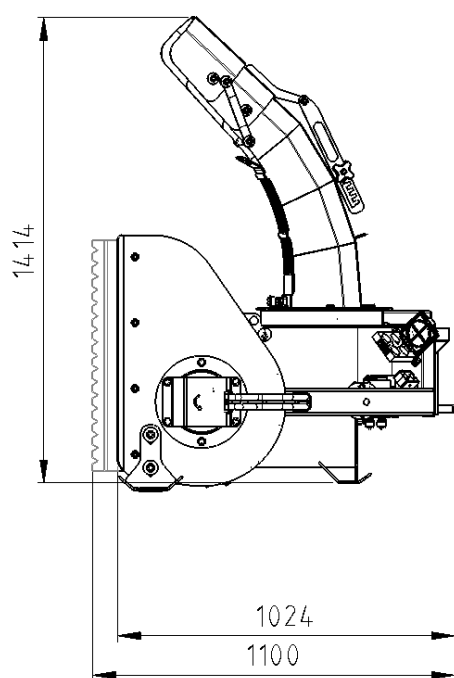

CONTENTS

1. Foreword.....	4
2. Designed purpose of use	5
3. Safety instructions for using the snow blower	5
4. Technical specifications	8
4.1. Safety labels and main components of the Snow Blower.....	8
5. Assembly of the snow blower	10
5.1. Attaching the snow blower to the loader.....	10
5.2. Connecting and disconnecting hydraulic fittings	11
5.3. Electrical connection	13
5.4. Uncoupling and storage of the snow blower	13
6. Instructions for use	14
6.1. Checks before use	14
6.2. Operating the snow blower	15
6.2.1. Discharge chute rotation.....	16
6.2.2. Scraper plate and skids	16
6.2.3. Removing a blockage.....	17
7. Maintenance and servicing	17
7.1. Checking hydraulic components	18
7.2. Cleaning the snow blower	18
7.3. Feed auger and thrower fan	19
7.4. Discharge chute rotation.....	19
8. Warranty terms.....	19

Appendix: EC Declaration of Conformity

1. Foreword

Avant Tecno Oy would like to thank you for your purchase of this AVANT attachment. It has been designed and manufactured on the basis of years of experience and product development. By familiarising yourself with this manual and following the instructions, you ascertain your safety and ensure the reliable operation and long service life of the equipment. Read the instructions carefully before starting to use the equipment or performing maintenance.

The purpose of this manual is to help you to:

- operate the equipment in a safe and efficient manner
- observe and prevent any hazardous situations
- keep the equipment intact and ensure a long service life

The following warning symbols are used throughout this manual to indicate factors that must be taken into account to reduce the risk of personal injury or damage to property:

	Warning: This safety symbol refers to important safety information in this manual. It warns of an immediate hazard that could cause serious personal injury or property damage. Read the warning text accompanying the symbol carefully and ensure that other operators are also familiar with the warnings, since personal safety is at stake.
--	---



Notice:

This notice symbol indicates information about the correct operation and maintenance of the equipment.

Failure to observe the instructions accompanying the symbol can lead to equipment breakdown or other property damage.

With these instructions, even an inexperienced user can use the attachment and loader safely. The manual includes important instructions for experienced AVANT operators as well. Ensure that all persons using the loader have received proper guidance and familiarised themselves with the manual of the loader and attachment and all safety instructions before using the equipment. Using the equipment for other purposes or use in any other way than described in this manual is prohibited. Keep this manual at hand throughout the service life of the equipment. If you sell or transfer the equipment, be sure to hand over this manual to the new owner. If the manual is lost or damaged, you can request a new one from the retailer or manufacturer. Original instructions.

In addition to the safety instructions included in this manual, you must observe all occupational safety regulations, local laws and other regulations concerning the use of the equipment. Particularly the regulations concerning the use of the equipment on public road areas must be observed. We reserve the right to change the contents of the manual without notification.

2. Designed purpose of use

The AVANT Snow Blowers are attachments designed and manufactured for use with AVANT multi purpose loader models that are listed in Table 1. The Snow Blower is especially suitable for use when it is preferred to spread snow evenly to the sides of the area instead of piling it up. The two-phase snow blower is suitable also for professional use, and it is equipped with a powerful hydraulic system with two separate hydraulic motors, guaranteeing efficient operation even when handling wet and heavy snow.

As standard, the blower chute can be turned electrically by 260 degrees directly from the driver's seat. The wide adjustment range of the manual throwing height control makes it possible to control the ejection of snow precisely as needed, either as to pile snow directly to the side of the drive path, or to spread evenly far away. As an option, electric throwing height adjustment is also available, which can be operated only with the electric attachment control switch pack, which is available as an option for 400-700 series loaders. In heavy snow conditions the optional snow wall cutter extensions help to achieve neat and precise snow removal and they can also be used to increase the working width.

The attachments have been designed to require as little maintenance as possible. The operator can perform regular maintenance tasks. However, all repair work can't be performed by the operator, and demanding repair and maintenance operations must be left for professional service technicians. All maintenance work must be done using proper safety equipment. Spare parts must be similar to original specifications, which can be ensured by using only original Avant spare parts.

Familiarise yourself with the manual's instructions regarding service and maintenance. Please contact your AVANT retailer if you have additional questions about the operation or maintenance of the equipment, or if you require spare parts or maintenance services.

Table 1 – Snow Blower 1100 A35870 / A35940 and 1400 A35847 compatibility with Avant loaders

When using with models marked with (•), full performance may not be achieved. For compatibility with a model not shown in table, contact your Avant retailer.

	Snow Blower 1100 A35870 A35940	Snow Blower 1400 A35847
745, 750, R35, 635, 640	-	•
630	(•)	(•)
R28, 528, 525LPG, 419, 420, 220	•	-
218, 320	-	-

3. Safety instructions for using the snow blower

Please bear in mind that safety is the result of several factors. The loader-attachment combination is highly powerful, and improper or careless use may cause serious personal injury or property damage. Due to this, you should carefully familiarise yourself with the manuals of both the loader and the attachment before starting operation. Do not use the attachment if you have not familiarised yourself with its operation and the related hazards.



Misuse, careless use, or using an attachment that is in bad condition, may cause serious injuries. Familiarise yourself with the controls of the loader and coupling and safe operation of the attachment at a safe area. Become familiar especially with how to stop the equipment in a safe manner. Read the following safety precautions carefully.


Read all safety instructions carefully before handling the attachment



- When attaching the attachment to the loader, **ensure that the locking pins of the loader's quick attach plate are positively in the lower position** and that they have **locked the attachment to the loader**.
- The Snow Blower is to be used by one operator at a time. Do not go near a running attachment or allow others to approach the area where the machine is in operation.
- Never leave the driver's seat when the snow blower is running or when the auxiliary hydraulics control lever of the loader is locked on and keep a **safety distance of at least two metres** between activated snow blower and any person in vicinity. Keep hands and feet away from moving parts. Beware of entanglement and severing hazards and possible debris thrown by the blower.
- Lower the attachment firmly on the ground before leaving the driver's seat. Make sure that the attachment is properly supported during maintenance or inspections. Do not leave the driver's seat when the loader boom is lifted. Going under a raised attachment or loader boom is dangerous, as the boom may lower due to loss of stability, mechanical fault or by other person operating the controls of the loader. Follow safe stopping procedure before any maintenance or adjustments. Before clearing blockages, the attachment must always be stopped following safe stopping procedure, to prevent unintended starting of the blower once the blockage has been cleared.
- Pay attention to the surroundings and any other persons and machines moving in the vicinity. Pay attention to the contours of the terrain as well as other hazards, such as loose rocks, or branches and trees that reach the driver's area.
- Keep in mind that the blower will throw snow and any other objects entering the blower at high speed. Do not operate the snow blower, if the discharge chute is directed towards other persons or fragile objects. Make sure that the rotation of discharge chute works smoothly, and that the discharge chute protector and throwing height deflectors are securely fastened. Lock the manual throwing height adjustment securely.
- Make sure to use only an attachment that is in good condition. Perform daily inspections and read the instructions regarding service and maintenance. Never operate the attachment if the hydraulic systems of both the attachment and the loader are not completely intact. Check the condition of the blower rotor regularly.
- Do not modify the attachment in a manner that would affect its safety.
- Make sure that the loader is equipped with necessary safety equipment, and that they are in order. Seat belt must be used. If there are specific risks at the operating area, appropriate safety equipment must be used.
- Also read the safety instructions of the loader from the operator's manual of the loader. Get familiar with the controls of the loader and how to drive it safely, and also note the effect slippery surfaces to the handling characteristics of the loader.



Note that the blower may throw sand or other objects found in the operating area up to 30 metres away at high speed. Always keep a safety distance of at least two metres between the snow blower and other persons. Do not allow others at the danger areas of the blower and stop the snow blower immediately, if there are others in the direction of snow throwing.

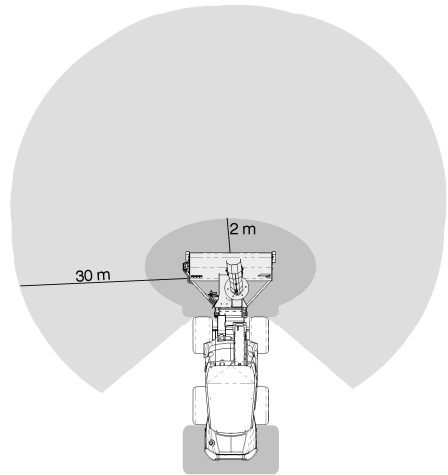

Near the snow blower the hazards of entanglement and severing are present. The snow blower must be stopped following the safe stopping procedure before going near it. Never put your hand inside the discharge chute or the auger; always use a brush or other suitable medium. Removing the discharge chute guard is allowed only when removing blockages. The guard must be securely locked in its place immediately after clearing the blockage.

Safe stopping of the equipment, before going near the snow blower



Always stop the snow blower following safe stopping procedure before going near the attachment. Never go under a raised loader boom or the attachment. Note that the loader boom can move down even if the engine of the loader is turned off. Safe stopping procedure:

- Stop the attachment and the loader.
- Lower the boom and the attachment on the ground.
- Shut down the loader engine and lock the parking brake.
- Release residual pressure from the hydraulic system.
- Prevent starting of the machine, remove key from ignition.

Remember to wear proper protective clothing:



- The noise level in the driver's seat exceeds 85 dB(A). Wear hearing protection while working with the loader.



- The use of safety boots is recommended while working with the loader.
- Wear protective gloves. When handling hydraulic hoses or components, wear also safety goggles.

4. Technical specifications

Table 2 – Snow blower specifications

Product number:	A35940	A35847	A35870
Working width:	1100 mm		1400 mm
Working width with optional snow wall cutters:	1200 mm		1500 mm
Total width:	1281 mm		1 581 mm
Weight:	225 kg		255 kg
Electric discharge chute rotation:	Standard equipment, 260°		
Available options:	snow wall cutter extensions A35925		
	-	Electric throwing height adjustment: A34845	
Maximum input of hydraulic energy:	40 l/min, 22,5 MPa		70 l/min, 22,5 MPa
Suitable AVANT loader:	200-series	See Table 1 400-600	600-700
Dimensions:	Page 2		

4.1. Safety labels and main components of the Snow Blower

Listed below are the labels and markings, which must be visible on the equipment. Replace the warning labels, if they have become unclear or if they have detached completely. New labels are available via your retailer or contact information provided on the cover.



The warning labels contain important safety information and they help to identify and remember the hazards related to the equipment. Replace damaged or missing warning labels with new ones.



A46771



A46772




A46804





A46799

Table 3 – Decal warning messages and locations

Decal	Explanation
A46771	Read instructions before use.
A46772	Do not go under a raised attachment or loader boom; stay away from raised equipment.
A46804	Entanglement hazard, keep clear of rotating parts. Stop the attachment before leaving the driver's seat. Keep a safe distance to other persons.
A46806	Hazard of thrown objects. Keep the discharge chute directed towards safe direction and stop the attachment, if there are people in direction of the snow ejection.
	Identification plate of the attachment

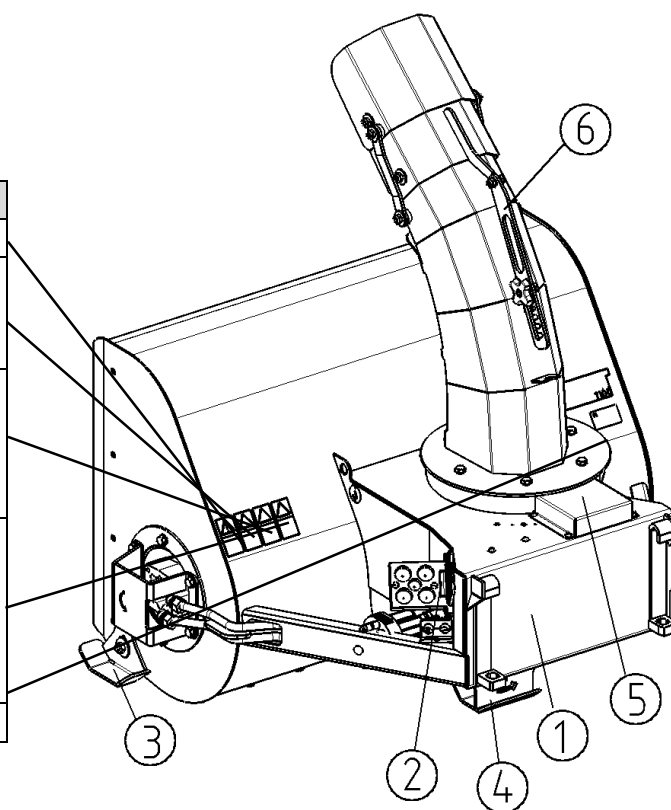
Table 4 - Main components of the snow blower

1	Frame with quick coupling plate
2	Multiconnector parking stand
3	Adjustable skids
4	Standing support, fixed
5	Chute rotating actuator and gear rim
6	Throwing height adjustment, manual version
7	Snow wall cutter extensions (optional)
8	Hydraulic motor protector
9	Discharge chute guard
10	Adjustable scraper edge

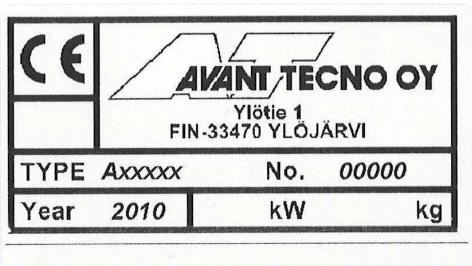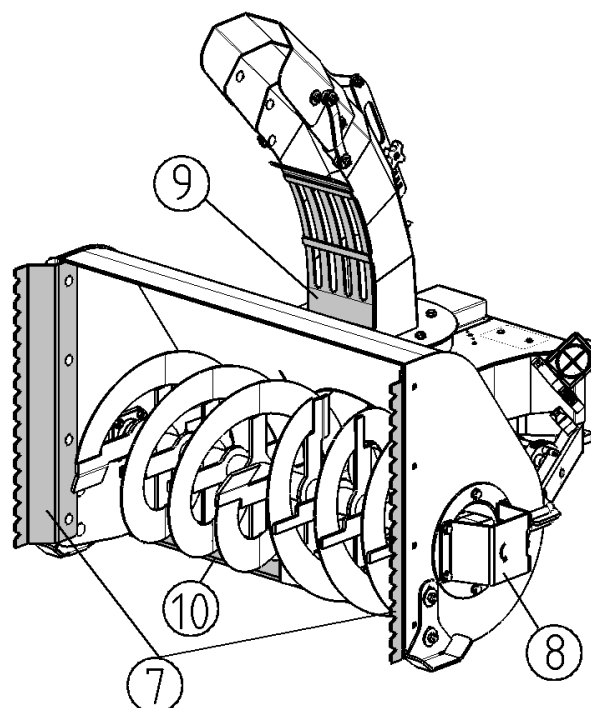
Identification plate of the attachment

5. Assembly of the snow blower

The attachment is ready for use as delivered. Attach the attachment and its hydraulic hoses to the loader as instructed below.


5.1. Attaching the snow blower to the loader

Mounting the attachment to the loader is quick and easy, but it must be done carefully. An attachment that has not been locked may come off from the loader and cause hazardous situations. The attachment is mounted to the loader boom by using the quick attach plate and the counterpart on the attachment. In the worst case, the attachment may slide onto the driver along a raised boom. For this reason, the attachment must under no circumstances be raised to a height of over one metre when it has not been locked. To prevent hazardous situations, always follow the attachment mounting instructions provided in the following pages. Also remember the safety instructions in Section 3 and the instructions provided in the operator's manual of the loader.


300-700 series loaders:

Step 1:

- Lift the quick attach plate locking pin / locking pins up and turn them backwards into the slot so that they are locked in the upper position.
- If your loader is equipped with a hydraulic attachment locking system, see additional instructions about the use of the locking system from the relevant manuals.
- Ensure that the hydraulic hoses or the electric harness are not in the way during installation.


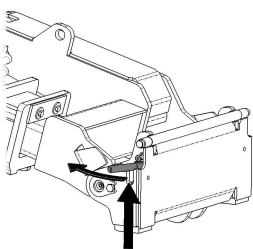


200 series loaders:

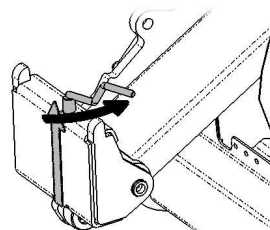



Step 2:

- Turn the quick attach plate hydraulically to an obliquely forward position.
- Drive the loader onto the attachment. If your loader is equipped with a telescopic boom, you can utilise this. Align the upper pins of the loader's quick coupling plate so that they are under the corresponding brackets of the attachment.

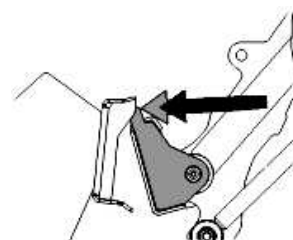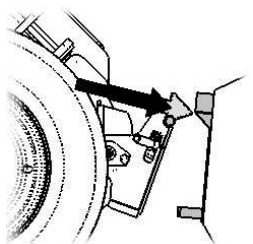


Step 3:

- Lift the boom slightly – pull the boom control lever backward to raise the attachment off the ground.
- Turn the boom control lever left to turn the bottom section of the quick attach plate onto the attachment.
- Lock the locking pins manually or lock the hydraulic locking.
- Always check the locking of pin / pins.

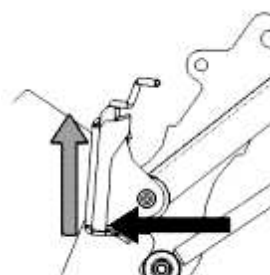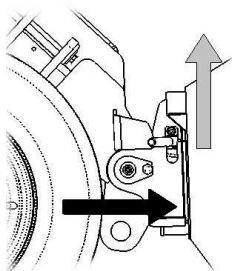




An attachment that has not been completely locked to the loader may fall on the boom or operator, or under the loader during driving, causing loss of control of the loader. Before moving or lifting the attachment, make sure that the locking pins are in the lower position and come through the fasteners on both sides. Never move or lift an attachment that has not been locked.

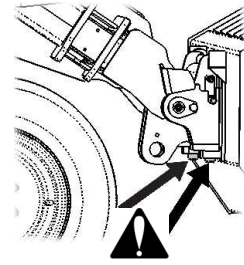

Do not use the automatic locking of the locking pins at a height of over one metre. If the locking pins do not return to the normal position when the front plate is tilted, do not raise the attachment any more. Lower the attachment on the ground and secure the locking manually.

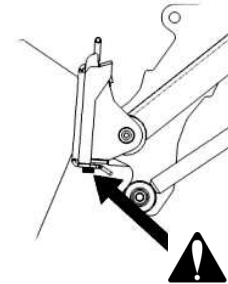

5.2. Connecting and disconnecting hydraulic fittings

On 400-700 series loaders hydraulic hoses are connected using the multiconnector system. If you want to change the type of the hydraulic couplings, contact your Avant dealer or service point for instructions or installation services. On 200-series loaders only conventional quick couplings are available.




Never connect or disconnect quick couplings or other hydraulic components while the system is under pressure or if the control lever of the auxiliary hydraulics control lever is locked on. Connecting or disconnecting the hydraulic couplings while the system is pressurized may lead to unintended movements of the attachment, or ejection of high-pressure fluid, which can cause serious burns or other injuries.

Keep the fittings as clean as possible; use the protective caps for the quick couplings on both the attachment and the loader. Dirt, ice, etc. may make using the fittings significantly more difficult. Never leave the hoses hanging on the ground; place them on top of the equipment.

Connecting the multiconnector system:

Align the pins of the attachment connector with corresponding holes of the loader connector. The multiconnector will not connect if the attachment connector is upside down. Connect and lock the multiconnector by turning the lever towards the loader.

The lever should move easily all the way to its locking position. If the lever does not slide smoothly, check the alignment and position of the connector and clean the connectors. Also shut down the loader and release the residual hydraulic pressure.

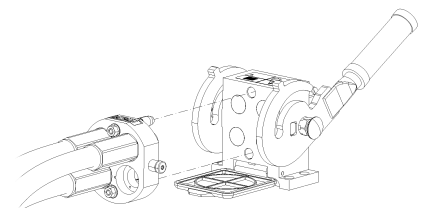

To disconnect the multiconnector system, turn off the auxiliary hydraulics of the loader, and unlock the multiconnector. To unlock, push the knob on the side of the connector, and turn the lever to disconnect.

Conventional quick couplings (alternative couplings for some loader models):


Before connecting or disconnecting the standard quick couplings, the residual pressure must be released as shown below. The conventional quick couplings will not connect, if there is pressure in the hydraulic system.

To connect and disconnect the standard couplings, move the collar at the end of the female fitting. The hoses should be connected so that the fitting equipped with a coloured cap is connected to the corresponding fitting of the loader. Note that the protective caps on the loader and the attachment can be fastened to each other during operation to reduce the accumulation of dirt. When disconnecting the standard quick couplings a small amount of oil may drip from the couplings. Wear protective gloves and have some cloth at hand to keep the equipment clean.



Make sure that all three quick coupling fittings are properly connected, otherwise the hydraulic motors of the attachment may get damaged.

In a 200-series machine, the hose can be connected by pushing the fitting in the counterpart. When connecting and disconnecting the 200-series hydraulics quick couplings, you should pay attention to their locking. There is a small groove in the collar of all female fittings, and a small ball near the collar. When connecting or disconnecting, the groove and ball must be aligned. The locking prevents the female and male fittings from being disconnected from each other by accident when the attachment moves. The collar may also turn accidentally to the locking position, making it impossible to connect or disconnect the couplings.

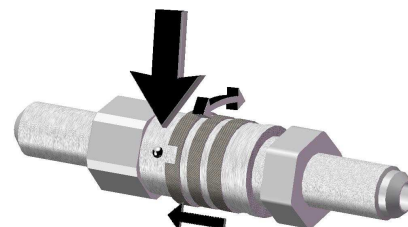


Releasing residual hydraulic pressure:

To make sure that there will not be residual pressure in the hydraulic system of the attachment, shut down the loader engine and move the auxiliary hydraulics control lever of the loader to its extreme positions before disconnecting the couplings. If the fittings will not connect to the loader, the residual pressure must be released. The residual pressure must be released before handling the rotating components of the attachment and before storage of the attachment.

5.3. Electrical connection

The electric discharge chute rotation can be controlled with the electric harness provided with the snow blower. If the blower is also equipped with electric throwing height adjustment, the attachment control switch pack is also necessary (400-700 series loaders).

- A cable harness with a 2-way switch is delivered with the blower, and it can be used to control the electric chute rotation. Select the location of the switch in the cab so that it is easily accessible but will not be used inadvertently.
- To control the discharge chute on 400-700 series loaders, the optional attachment control switch pack can be used. In this case the electric connector of the attachment is plugged into the socket on the loader boom, and the separate cable harness is not needed. The discharge chute rotation is controlled by switch number 2 and the throwing height with switch 3.

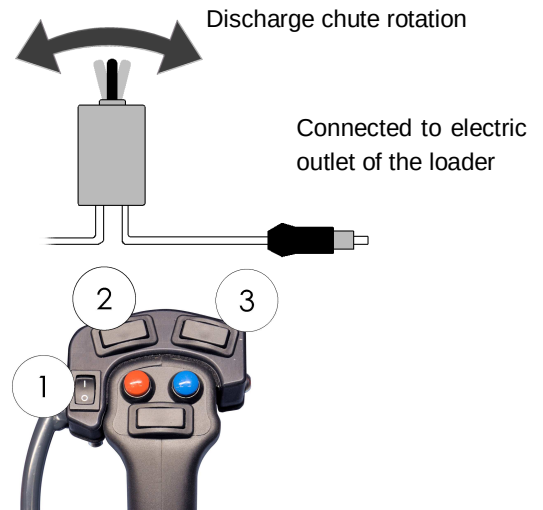

Instructions about the power outlet of the loader can be found in the operator's manual of the loader. Route the selected cable in a way that it cannot get stuck or squeezed or stretch when moving the equipment.

5.4. Uncoupling and storage of the snow blower

Uncouple and store the snow blower on level surface so, that it will stand firmly on its two side skids and the fixed standing support under the blower. Avoid storing the attachment directly against the ground, place a pallet or blocks of wood under it, for example. The best storage place for the attachment is an area that is protected from rain and direct sunlight. Remove most of the snow from the chute, throwing rotor, and the frame of the blower, so that melting and re-freezing snow will not cause the blower to get stuck. Ensure the stability of the blower during its storage. Climbing on the snow blower is prohibited. Service the blower before longer storage periods, read instructions concerning maintenance and service from Chapter 7.




When uncoupling the attachment from the loader, always disconnect the hydraulic fittings first before unlocking the quick attach plate, to prevent hose damage and any oil spills. Reinstall the protective caps on the fittings to prevent dirt from entering the hydraulic system.

6. Instructions for use

Check the attachment and the operating area once more before starting work. Quick inspection of the equipment before starting to use it is part of ensuring safety and the best performance of the equipment. Practise the use of the blower at an open and safe area. If you are unfamiliar with the loader model in use, it is recommended to practice its use without any attachments.



Beware of severing and entanglement hazards near the blower, never leave the driver's seat if the blower is switched on, or if it can start unexpectedly. Always stop the blower and the loader following the safe stopping procedure before going near the attachment. Always use suitable tool to clear blockages, never put your hands inside the discharge chute. The discharge chute guard can be used to clear the chute, lock the guard in its place immediately after clearing a blockage.

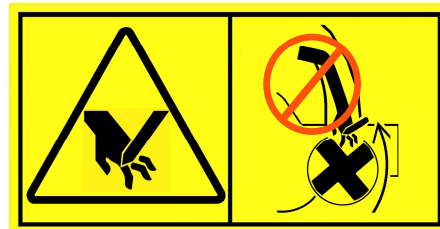

Keep in mind that regardless of the protective housing, the snow blower may throw ice, sand, stones, pieces of wood or other material up to even 30 metres away. Stop the attachment if other persons are closer than 10 metres from the blower at any direction. Keep the chute directed to safe direction away from people and fragile surfaces.



6.1. Checks before use

- Check the general condition of the attachment and the loader, and check for possible hydraulic oil leaks. The attachment must not be used, if there is a fault in the hydraulic system of the loader or the attachment. Refer to Chapter 7 for maintenance instructions.
- Check the condition of the auger and the throwing rotor, and that they can rotate freely. Check that there is no string or other foreign material coiled around them.
- Check that the discharge chute rotation works smoothly as intended, and that the rotation is not blocked. Set the throwing height to correct setting and direct the chute to safe direction.
- Check the setting of the side skids and edge plate. See Chapter 6.2.2.
- Before starting work, remove larger obstacles from the working area that may damage the blower. Remember correct working methods and avoid leaving the driver's seat unnecessarily.
- Drive carefully on uneven terrain and note the effect of heavy load at the front of the loader to the stability and handling of the loader.
- Ensure that the loader and the attachment are used in a safe and intended manner. Operate the controls of the loader only when sitting on the driver's seat. Do not allow children to operate the machine.



Check that the discharge chute guard is locked in its place before operating the snow blower. Using the blower without the guard in its place is prohibited. Ensure that the chute is directed towards safe direction before starting the blower. Operate the manual throwing height adjustment only when the blower is stopped.




Overheating of hydraulic oil decreases power and affects the service life of the hydraulic components of both the attachment and the loader. Clean the loader oil cooler core regularly; refer to the loader manual for more instructions. Poorly performing cooler may cause the hydraulic oil to overheat also in winter conditions.

6.2. Operating the snow blower

Start the blower by turning the auxiliary hydraulics control lever toward its locking position when using low engine rpm on the loader. During operation, use high engine rpm and use slow drive speed that is adjusted according to operating conditions. Depending on the model of the blower and the loader, one or two auxiliary hydraulic pumps may be used. Note the maximum allowed hydraulic oil flow of the attachment stated in Chapter 4, the value must not be exceeded.

Set the blower lightly on the ground in upright position or tilted slightly forward, when the edge plate will collect less sand. Note that the blower is intended to run on its side skids. Do not press the blower so hard against the ground, that it would affect the controllability of the loader as the front wheels get less weight. If your loader is equipped with boom floating system, it should be switched on. Keep the telescopic boom retracted during use for the best visibility and stability of the loader.

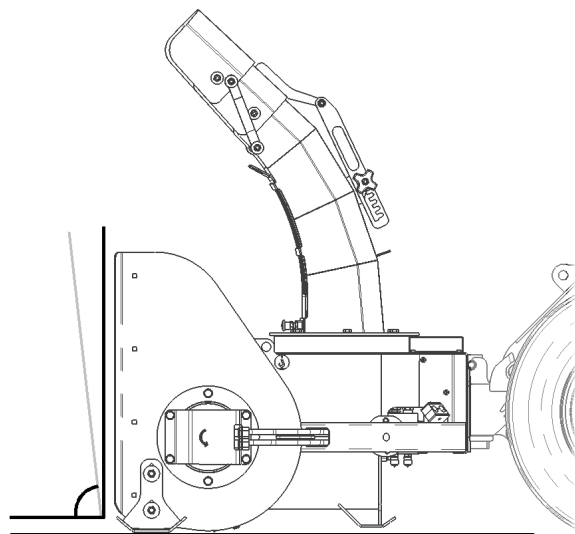


Breakage prevention valve:

The blower is equipped with a safety function that will stop the auger when the force needed to rotate it becomes excessively high. The purpose of the feature is to prevent damaging the auger when i.e. a foreign object enters the blower. The blower will start immediately after the blockage is cleared. If the blower stops during use, stop the blower following the safe stopping procedure and check the equipment. Adjusting the hydraulic system of the blower is prohibited, and the safety feature will not affect the normal operation of the snow blower. Contact service to check the operation of the safeguard system.

6.2.1. Discharge chute rotation

The electric discharge chute can be used when the ignition key of the loader is turned to switch on the electric outlet of the loader. The chute will rotate 260°, turning directly towards the loader is blocked. Make sure that the chute is directed to safe direction at all times. If using the electric switch harness supplied with the attachment, keep the switch within reach or in your hand so that you can redirect the chute quickly, if necessary. Do not keep the rotation activated for long periods, if the chute is already turned against its blocks, or if the chute is stuck for other reasons.

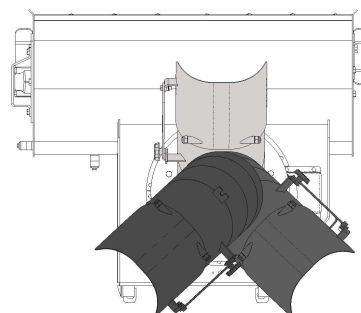




The height adjustment of the chute tip may be manual or electric. Tighten the manual adjustment securely.

6.2.2. Scraper plate and skids

Adjust the scraper plate and side skids shown in the adjacent figures, so that the blower runs smoothly on the surface without the frame touching the ground.

The side skids can be adjusted by loosening their bolts without removing them completely. Set both skids to same height.

The scraper plate under the blower can be adjusted as needed, but it shouldn't be adjusted to constant contact with the ground. On uneven surfaces keep the blower tilted slightly forward, so that the scraper will leave bigger ground clearance.

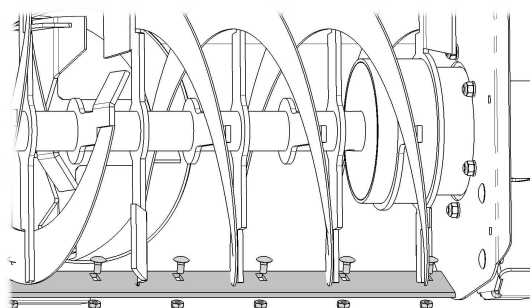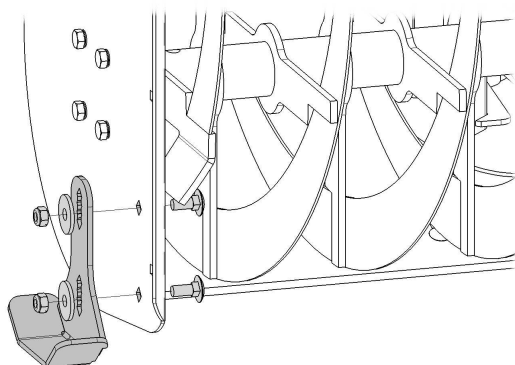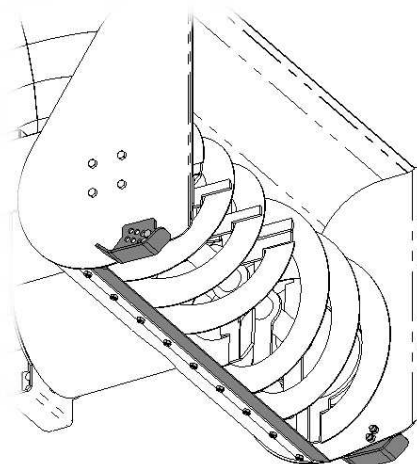


6.2.3. Removing a blockage

Clogging of the feed auger is in most cases caused by drive speed. If the auger can't throw the snow fast enough, drive speed must be reduced. Clogging of the discharge chute is affected by the type of snow in addition to engine rpm. Do not hit the blower against the ground to clear blockages, as the blower may get damaged. If the blower gets blocked or stops unexpectedly, stop the attachment following safe stopping procedure and check the discharge chute.



If the discharge chute clogs up, do not put your hand inside the blower to remove the blockage. The protective guard can be used as a tool to clear the chute, or for example a brush handle or some other suitable tool. Going near the blower is safe only after it has been stopped following the safe stopping procedure. Turn off the auxiliary hydraulics and shut down the loader engine before going near the snow blower.

The discharge chute guard can be used as a tool to clear any blockage of the blower. Lock the protector carefully to its place immediately after use. Ensure that the locking pin of the guard has positively locked the guard to the blower.

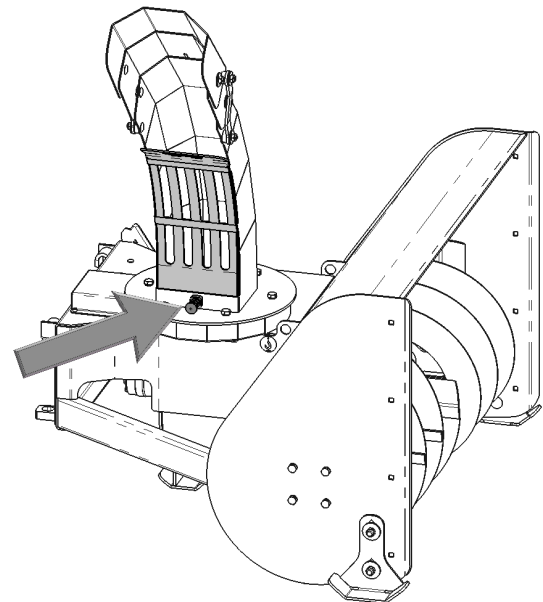

7. Maintenance and servicing

Continuous maintenance of the snow blower includes regular cleaning and lubrication of the equipment as well as monitoring the condition of the feed auger and fan.



Ensure that the snow blower is properly supported during all maintenance work. Ensure the support also when the snow blower is mounted to the loader; note that the loader boom may move even if the engine is not running.

7.1. Checking hydraulic components

Check the condition of the hydraulic hoses and components when the engine has been turned off and the pressure has been relieved. Repair all leaks immediately after detecting them; a small leak can quickly grow into a big one. Do not use the equipment, if you have discovered a leak in the hydraulic system of the attachment or the loader. Leaking hydraulic fluid may penetrate skin and cause serious injuries. Seek medical attention immediately in case hydraulic fluid penetrates the skin. Wash any part of body that has been in contact with hydraulic oil carefully with water and soap. Hydraulic fluid is also harmful to the environment and any leak to the environment must be prevented. Operate the attachment only with type of hydraulic oil that is accepted for use in Avant loaders.



Never handle hydraulic components when the hydraulic system is pressurized, since a fitting may break or become loose and the released oil may cause serious injuries. Do not use the equipment, if you have discovered a fault in the hydraulic system.



Check hoses visually for cracks or abrasions. Monitor the wearing of the hoses and stop the use, if the surface layer of any hose has worn off. Check the routing of the hoses, adjust the hose clamps to avoid abrasion to the hoses. The hoses have limited service life, which is marked on the hoses. After the date marked on the hoses, they should be replaced with new ones. If there are signs of leaks, to check a component, hold up a piece of cardboard in the area where a leak is suspected.

Finding any of these faults means that the hydraulic hose or component must be replaced. Spare parts are available from your nearest AVANT retailer or service point. Leave the repair work to professional service technicians, if you don't have adequate knowledge and experience about hydraulic assemblies and how to perform the repairing safely.

7.2. Cleaning the snow blower

Right after use, raise the snow blower slightly off the ground and use it for a moment on high rpm to remove any remaining snow from the blower. Do not hit the blower against the ground. If ice builds up heavily preventing the normal use of the blower, defrost the attachment in a warm area, using chemicals may cause damage to the hydraulic hoses. You may use a pressure washer and a mild detergent to wash the snow blower. Avoid spraying directly at the electric or hydraulic components or using solvents when washing. In addition, mind the labels on the attachment. Lubricate the lubrication point on the snow blower after washing. Wiping the snow blower clean after use will help to reduce building up of ice and snow on the machine.


Clean the attachment before long storage periods, touch up the paint where needed and grease the lubrication point to prevent rust damage. Oil the rotation rim of the discharge chute slightly. Store the snow blower on blocks of wood, for example, not directly on the ground. Ensure the support during storage.

Lubrication:

The snow blower has a lubrication point in the bearing on the free end of the feed auger. Add lubricant regularly.



Lubricant must be added approximately every 7 to 10 operating hours. Clean the end of the nipple before greasing. Only add the grease amount of a couple of grease press pushes at a time.

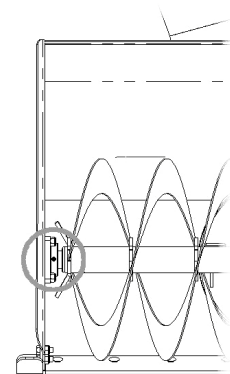**7.3. Feed auger and thrower fan**

The rotor of the feed auger and thrower fan must be in balance. Abnormal vibration and noise are signs of imbalance. In case of vibrations, clean and defrost the parts from ice and packed snow. Unbalanced components may lead to the failure of the hydraulic motors or bearings. If the parts are damaged or the vibration continues after cleaning the parts, contact your nearest AVANT service.

7.4. Discharge chute rotation

The gear rim of the discharge chute can be oiled slightly without opening the structure. The discharge chute actuator is a maintenance-free electric motor. The bearings of the discharge chute are permanently lubricated and normally do not require maintenance. The electric components of the chute rotation and the chute tip adjustment do not contain user serviceable parts.

8. Warranty terms

Avant Tecno Oy grants a warranty of one year (12 months) from the date of purchase for the attachment it manufactures.

The warranty covers repair costs as follows:

- Work costs are covered, if the repair is not performed at the factory.
- The factory replaces any defective components or consumables.

The factory may reimburse the price of components purchased by the customer in special cases that have been agreed in advance.

The warranty does not cover:

- Normal maintenance work or parts and consumables required for it.
- Damages caused by unusual operating conditions or ways of use, negligence, structural changes made without the consent of Avant Tecno Oy, use of non-original parts or lack of maintenance.
- Consequences of a defect, such as interruption of work or other possible additional damages.
- Travel and/or freight costs caused by the repair.

EY-vaatimustenmukaisuusvakuutus
EG-försäkran om överensstämmelse
EC Declaration of Conformity
EG-Konformitätserklärung



Valmistaja / Tillverkare / Manufacturer / Hersteller:

AVANT TECNO OY

Osoite / Adress / Address / Adresse:

Ylötie 1

33470 YLÖJÄRVI, FINLAND

Vakuutamme täten, että alla mainitut tuotteet täyttävät konedirektiivin turvallisuus- ja terveysvaatimukset (direktiivi 2006/42/EY muutoksineen). Seuraavia yhdenmukaistettuja standardeja on sovellettu:
 SFS-EN ISO 12100-1, SFS-EN ISO 12100-2, SFS-EN 4413, SFS-EN 13021

Vi försäkrar härmed att nedan beskrivna produkter överensstämmer med hälso- och säkerhetskrav i EG-maskindirektiv (EG-direktiv 2006/42/EG som ändrat). Följande harmoniserade standarder har tillämpats:
 SFS-EN ISO 12100-1, SFS-EN ISO 12100-2, SFS-EN 4413, SFS-EN 13021

We hereby declare that the products listed below are in conformity with the provisions of the Machinery Directive (directive 2006/42/EC as amended). The following harmonized standards have been applied:
 SFS-EN ISO 12100-1, SFS-EN ISO 12100-2, SFS-EN 4413, SFS-EN 13021

Wir erklären hiermit, dass die nachstehend aufgeführte Maschine konform ist mit den Bestimmungen der EG-Maschinenrichtlinie (EG-Richtlinie 2006/42/EG mit Änderungen). Die folgende harmonisierte Normen wurden angewandt:
 SFS-EN ISO 12100-1, SFS-EN ISO 12100-2, SFS-EN 4413, SFS-EN 13021

Kuvaus: Avant-kuormainten kanssa käytettävä hydraulitoiminen lumilinko
 Beskrivning: Hydraulisk snöfräs; arbetsredskap för Avant lastare
 Description: Hydraulic snow blower; attachment for Avant loaders
 Beschreibung: Hydraulische Schneefräse; Anbaugerät für Avant Radlader

Mallit / Modeller / Models / Modellen:

Avant	220	419, 420, 520, R28, 528, 525LPG, 630	630, 635, R35, 640, 745, 750
Lumilinko Snöfräs Snow blower Schneefräse	1100 A35940	1100 A35870 A35940	1400 A35847

Allekirjoitus / Namnteckning / Signature / Unterschrift:

16.10.2013 Ylöjärvi, Finland

Risto Käkälä,
 Toimitusjohtaja / Verkställande direktör /
 Managing Director / Geschäftsführer





AVANT[®]