

TARBOX

By

ESSENER
equipment co.

TarBox ATB1200 - ATB1500 **Equipment User & Maintenance Manual**



Essener Equipment Co.
4 Ballynargan Road, Coagh, Co.Tyrone, BT80 0DS
T: +44(0)28 8673 7181 F: +44(0)28 8673 6345
E: sales@essener.co.uk
W: www.essener.co.uk

Manufactured By:

Essener Equipment Co.

4 Ballynargan Road

Coagh

Co.Tyorne

N.Ireland

BT80 0DS

Tel: +44 (0)28 8673 7181

Fax: +44 (0)28 8673 6345

Authorised Agent:

Copy Of Machine Identification

Model Number:

Serial Number:

Year Of Manufacture

INDEX

Introduction	4
<i>Intended use</i>	4
Safety Notes	
1 Prepare for safe operation	5
2 Filling the TarBox	6
3 Operating the TarBox	6
4 Useful tips	6
5 Notes on the Footplate	7
6 Ready for work – check again!	8
 Maintenance and Servicing	 9
<i>Checking hydraulic components</i>	9
 Mounting and adjusting the TarBox / connecting hydraulics	 10 /11 /12
<i>Attaching the TarBox when using an AVANT type loader.</i>	
<i>Connecting and disconnecting hydraulic fittings.</i>	
 Maintenance	 13
Warranty statement	14
Declaration of Conformity	15

TarBox by ESSENER

INTRODUCTION

The team at ESSENER EQUIPMENT wish to thank you for purchasing this TarBox.

We ask that you read and understand the contents of this manual before operating this attachment.

Please contact your area dealer or ESSENER EQUIPMENT for any questions or problems that might arise during the operation of the TarBox.

Keep this manual with the TarBox at all times / if it gets lost or destroyed we will be pleased to provide a replacement.

INTENDED USE

The ESSENER TarBox has been designed to distribute free flowing materials on to a prepared base.

TarBox is an attachment designed to be fitted to many types of machines such as Multi Tool Carriers, articulated loaders, tele handlers, skid steers, tractors, etc. The operator must read and understand the host machines functions. He must ensure that the TarBox is suitable for use with that host machines.

Every person who is to work with a machine that can carry and operate a TarBox must follow all generally accepted rules related to health and safety.

Remember that safety consists of several factors. The host machine and the TarBox have the potential to cause serious damage or personal injury if operated incorrectly or in a careless manner.

Do not operate either the host machine or the TarBox without having first familiarised yourself with the use and eventual dangers related to them.

These operating instructions are designed to help the user.

Operate this machine safely and efficiently

Observe and prevent situations that may cause risk or danger

Keep the TarBox in good condition

The TarBox will require very little maintenance if kept clean and free from excess material.

Service and maintenance is covered under that heading.

PREPARE FOR SAFE OPERATION

- Check the general condition of the attachment and the loader.
- Check for possible hydraulic oil leaks.
- The TarBox must not be used if there is any fault in the hydraulic system.
- Before starting work, clear any large obstructions from the work area.
- Ensure that there are no hazards such as voids or holes in the work surface.
- Drive carefully on uneven terrain and note the effect of a heavy load on the front of the loader to its stability and handling.
- Check that sliding floor is opening and closing freely.
- Check that the striker plate jack screws are moving freely.
- Check that the TarBox is secured to the loader.
- Ensure that the loader locking pins are fully engaged.
- The loader and TarBox are only to be used by one operator at a time.
- Always transport the TarBox as low as possible, with the boom fully retracted.
- Make sure not to tilt or lift the TarBox in a way that would spill material.
- Operate the loaders controls in a calm manner especially when driving.
- Lower the TarBox firmly to the ground before leaving the driver's seat.
- Never perform any maintenance or adjustments whilst the loader's engine is running.
- Ensure that the TarBox is properly supported during all maintenance procedures.
- When removing the TarBox from the loader ensure that the hydraulic connections are detached.
- Inspections, cleaning and removing blockages must be done with due care and attention.
- Do not modify the structure of the TarBox or loader in any way that would affect their safety.
- Never operate the TarBox if the attachment hydraulic system and loader are not completely intact.
- Ensure that loader is equipped with necessary safety equipment, and that they are in order.
- Always use the loader's seat belt, be aware of specific risks with the operating area and use appropriate safety equipment.

FILLING THE TarBox.

Check all the recommendations regarding the safe use and carrying capacity of the loader and having followed the instructions for the attachment of the TarBox.

Move all to a position at the rear of the delivery tipper lorry carrying the material to be spread.

Manoeuvre the TarBox directly under the discharge chutes.

Ensure that the sliding floor is closed.

The TarBox is now ready to be filled.

Do not overfill the TarBox.

A heaped load may exceed the capacity of the loader.

OPERATING THE TarBox.

Manoeuvre the loader and TarBox into the position that is to be covered with the medium now in the TarBox.

Place the TarBox on the ground, if boom float is available this should be engaged.

Ensure that all operatives are aware that the loader is about to reverse and there are no obstructions.

Operate the sliding floor and leave it fully opened.

Using the stricker plate screw jacks adjust these to set the desired depth.

Reverse slowly and steadily and the material will flow out of the TarBox.

When the TarBox is fully discharged, close the sliding floor and repeat the operation.

USEFUL TIPS

Just before the TarBox is completely emptied close the sliding floor, lift the TarBox then move forward a little, open the sliding floor again. Drop a line of material onto the edge of the last carpet that had been laid. This line of material can be raked out to square off the ends and fill any gap when the next batch is to be laid.

Care should be taken when standing on the foot plate if the operator is using it as a platform for when raking.

Remember the foot plate is NOT to be used when the TarBox is being moving around the job site.

NOTES ON USE OF THE FOOTPLATE.

The footplate was introduced at the request of customers in 2016.

Do NOT ride on the footplate whilst the TarBox is moving around a site.

The footplate is for the convenience of a man who needs to rake in joints etc.

READY FOR WORK - CHECK AGAIN!

Check the attachment and operating are once more before starting work. Giving a quick inspection of the equipment before starting to use it is part of ensuring safety and the best performance of the equipment. Practise using the TarBox in an open and safe area. If you are unfamiliar with the loader model in use, it is recommended to practise without attachments.

***Beware of the hazard of getting trapped in the moving parts of the TarBox.**

*Never leave the driver's seat.

*Stop the loader following a safe stopping procedure before going near the attachment.

*Always use suitable tools to clear blockages or clogs.

*Never reach below the sliding floor.

*Never allow the TarBox to be dismantled whilst connected to the loader.

MAINTENANCE AND SERVICING

Continuous maintenance of the TarBox includes regular cleaning, monitoring of the wear parts.

Check any material left in the TarBox and remove any clogged material using suitable tools.

If the TarBox makes any unusual noises, stop the operation, empty the TarBox and check that the sliding floor is operating.

Checking the hydraulic components

Care should be taken and suitable hand and eye protection should be observed whilst examining the hydraulic hoses and connections.

Whilst the engine is switched off and the systems pressure has been relieved checks should be made of any leaks.

If a leak is detected do not start the engine or engage the hydraulics. Make any adjustments to loose connections or replace faulty components before starting the engine again.

Hydraulic fluid is harmful to the environment and any leak should be prevented and cleaned as soon as it is safe to do so.

Leaking hydraulic fluid can penetrate the skin and cause serious injury, wash any part of the body which has come in contact with hydraulic oil with warm water and soap.

Do not use the equipment until any leaks are repaired.

Operate the loader and the TarBox with the hydraulic oil accepted by the manufacturers.

*Never handle components when the hydraulic system is pressurised, since a fitting may break or become loose and the released oil may cause serious injuries. Do not use the equipment, if you have found a fault in the hydraulic system.*

Check hoses visually for cracks or abrasions. Do not use hands to search for leaks. If the surface area of any hoses have worn off arrange for these to be replaced. Check all hose clamps to avoid abrasion. Replace any suspect hoses.

Spare components are available from your nearest TarBox supplier.


Leave repair work to be carried out by professional technicians.

5. Assembly of the TarBox when using an AVANT

5.1. Attaching the TarBox to the loader


The TarBox is ready for use as delivered. Mounting the attachment to the loader is quick and easy, but it must be done carefully. An attachment that has not been locked may come off from the loader and cause hazardous situations. In the worst case, the attachment may slide onto the driver along a raised boom. For this reason, the attachment must under no circumstances be raised to a height of over one metre when it has not been locked.

To prevent hazardous situations, always follow the attachment mounting instructions provided in this manual. Also remember the safety instructions in Section 3 and the instructions provided in the operator's manual of the loader. The spreader is mounted to the loader as follows:

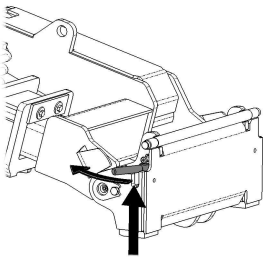


Step 1:

- Lift the quick attach plate locking pin / locking pins up and turn them backwards into the slot so that they are locked in the upper position.
- If your loader is equipped with a hydraulic attachment locking system, see additional instructions about the use of the locking system from the relevant manuals.
- Ensure that the hydraulic hoses are not in the way during installation.

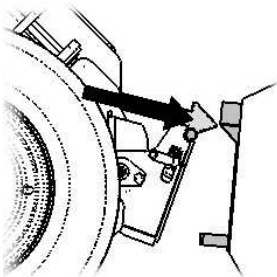

Step 2:

- Turn the quick attach plate hydraulically to an obliquely forward position (manual tilt on rear lift device).
- Drive the loader onto the attachment. If your loader is equipped with a telescopic boom, you can utilise this. Align the upper pins of the loader's quick coupling plate so that they are under the corresponding brackets of the attachment.

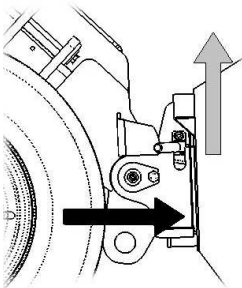


Step 3:

- Lift the boom slightly – pull the boom control lever backward to raise the attachment off the ground.
- Turn the boom control lever left to turn the bottom section of the quick attach plate onto the attachment (tilt rear lift plate manually).
- Lock the locking pins manually or lock the hydraulic locking.
- Always ensure positive locking of both pins.



An attachment that has not been completely locked to the loader may fall on the boom or operator, or under the loader during driving, causing loss of control of the loader. Before moving or lifting the attachment, make sure that the locking pins are in the lower position and come through the fasteners on both sides. Never move or lift an attachment that has not been fully locked.

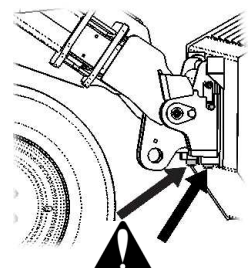



Do not use the automatic locking of the locking pins **at a height of over half a metre**. If the locking pins do not return to the normal position when the front plate is tilted, do not raise the attachment any more. Lower the attachment on the ground and secure the locking manually.

5.2. Connecting and disconnecting hydraulic fittings

On 400 to 700 series loaders, the multiconnector type hydraulic coupling is used to connect hydraulic hoses. If you want to change the type of the fittings on the loader or on the attachment, contact your Avant dealer or service representative for instructions or installation service.




Never connect or disconnect quick couplings or other hydraulic components if the system is under pressure, or if the control lever of the auxiliary hydraulics control lever is locked on. Connecting or disconnecting the hydraulic couplings while the system is pressurized may lead to unintended movements of the attachment, or ejection of high-pressure fluid, which can cause serious burns or other injuries.

Connecting the multiconnector system:

Align the pins of the attachment connector with corresponding holes of the loader connector. The multiconnector will not connect if the attachment connector is upside down. Connect and lock the multiconnector by turning the lever towards the loader.

The lever should move easily all the way to its locking position. If the lever does not slide smoothly, check the alignment and position of the connector and clean the connectors. Also shut down the loader and release the residual hydraulic pressure.

To disconnect the multiconnector system, turn off the auxiliary hydraulics of the loader, and unlock the multiconnector. To unlock, push the knob on the side of the connector, and turn the lever to disconnect.

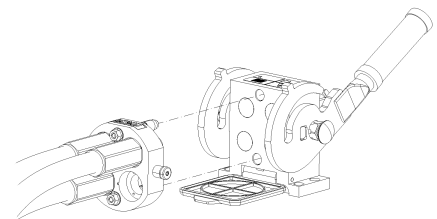

Align the pins of the multiconnector system

Conventional quick couplings (*alternative couplings for some loader models*):

Before connecting or disconnecting the standard quick couplings, the residual pressure must be released as shown below. The conventional quick couplings will not connect, if there is pressure in the hydraulic system.

To connect and disconnect the standard couplings, move the collar at the end of the female fitting. The hoses should be connected so that the fitting equipped with a coloured cap is connected to the corresponding fitting of the loader. Note that the protective caps on the loader and the attachment can be fastened to each other during operation to reduce the accumulation of dirt. When disconnecting the standard quick couplings a small amount of oil may drip from the couplings. Wear protective gloves and have some cloth at hand to keep the equipment clean.



Conventional quick couplings

NOTICE

Make sure that all three quick coupling fittings are properly connected, otherwise the hydraulic motor of the attachment may get damaged.

NOTICE

Keep all fittings as clean as possible; use the protective caps for the quick couplings on both the attachment and the loader. Dirt, ice, etc. may make using the fittings significantly more difficult. Never leave the hoses hanging on the ground; place them on top of the equipment.

Releasing residual hydraulic pressure:

To make sure that there will not be residual pressure in the hydraulic system of the attachment, shut down the loader engine and move the auxiliary hydraulics control lever of the loader to its extreme positions before disconnecting the couplings. If the fittings will not connect to the loader, the residual pressure must be released. The residual pressure must be released before handling or going near the moving components of the attachment and before storage of the attachment.

Maintenance

Work Safely

Before you begin your working day, take time to check your machine and ensure that all systems are in good operational order.

- Never operate the TarBox with worn, damaged or missing parts. Use only genuine replacement parts.
- Always ensure that the parent machine is secure and stable with its engine switched off and hydraulic pipes are disconnected before carrying out any maintenance work.
- Check for loose, broken, missing, or damaged parts. Have everything put into good repair. Make certain all safety devices are in place.
- Perform all maintenance procedures outlined for the equipment
- Always protect hands. Select appropriate gloves when handling the hedge cutter during fitting/removing or adjusting.
- Always protect feet with safety boots



WARNING: Hydraulic fluid under pressure can penetrate the skin or eyes and cause serious personal injury, blindness or death. Fluid leaks under pressure may not be visible. Use a piece of cardboard or wood to find leaks. DO NOT use your bare hands. Wear safety goggles for eye protection. If any fluid is injected into the skin, it MUST be surgically removed. See a doctor immediately.

Make sure that all hydraulic lines are correctly installed.

Before applying pressure to the hydraulic system be sure all connections are tight and that lines, pipes and hoses are not damaged. Before disconnecting hydraulic lines, be sure to relieve all pressure.

Warranty Statement

All new Essener Equipment products are warranted to be free of defects in material and workmanship, which may cause failure under normal usage and service when used for the purpose intended.

Essener Equipment warrants its equipment for a period of twelve (12) months dating from delivery to the original user. This warranty covers faulty workmanship and defective parts manufactured by Essener Equipment. Liability are limited to repair or replacement of faulty parts at the discretion of Essener Equipment Co.

The warranty does not cover the following;

- Normal wear and tear.
- Faults or failures due to incorrect dealer assembly, pre delivery inspection or installation.
- Faults or failures due to use under load conditions greater than the technical specification.
- Hydraulic hoses.
- Transportation cost of goods.
- Consequential loss of any description.

Essener Equipment's products must be operated in accordance with the recommended procedures and within the ranges specified in the operator's manual.

Any claims under warranty must be made in writing within fourteen (14) days of the fault occurring. Any claims received by Essener Equipment within the 14 days may be deemed invalid.

Essener Equipment is not responsible for nor will accept any charges for work carried out by any unauthorized repairers. Charges, including those for spare parts, will not be accepted unless they have been authorised in writing by Essener Equipment Co.

Any goods returned to Essener Equipment by the customer, under warranty or for repair, must be freight paid unless authorised in writing by Essener Equipment Co.

ESSENER EQUIPMENT CO.

SPERRINVIEW WORKS, BALLYNARGAN ROAD, COAGH, COOKSTOWN, CO.TYRONE. NORTHERN IRELAND BT80 0DS

EC Declaration of Conformity

We, ESSENER EQUIPMENT CO. OF

SPERRINVIEW WORKS

BALLYNARGAN ROAD

COAGH, COOKSTOWN

CO.TYRONE NORTHERN IRELAND

BT80 0DS

DECLARE THAT;

MAKE ESSENER

TYPE TB SERIES TarBox

SERIAL NUMBER

DESCRIPTION An attachment for industrial loaders such as compact articulated and kink loaders
To which a TarBox can be attached.

Is in Conformity of the relevant clauses of the;

2006/42/EC Machinery Directive

And has been designed and manufactured according to the relevant clauses of that directive. The following harmonised standards have been applied.

EN ISO 12100:2010

I hereby declare that the equipment named above has been designed to comply with all relevant essential requirements of the directive(s).

The undersigned, contactable at the address listed above, is the person authorised to compile the technical documentation in accordance with part A of Annex VII of the Directive 2006/42/EC.

The undersigned is established in the community.

Signed:

Name:

Position:

Signed at (place)

On date

CE 16