

AVANT[®]

The most fun
attachment for
your AVANT!

User
manual


 **BEER BOX**

Table of content

Filling cooler with water	3
CO2n and pressures	5
Different type of beer can connectors	8
Service and cleaning	10
Table of malfunctions	11

Filling cooler with water

Firstly you have to fill up water in cooler. Open toolbox lid and you will see refrigerator on the right side. Refrigerator unit is attached to toolbox shelf with belt (no 1 on the picture). Loosten belt and open top cover nuts (no 2 on the picture). Now you can remove cover of cooler.

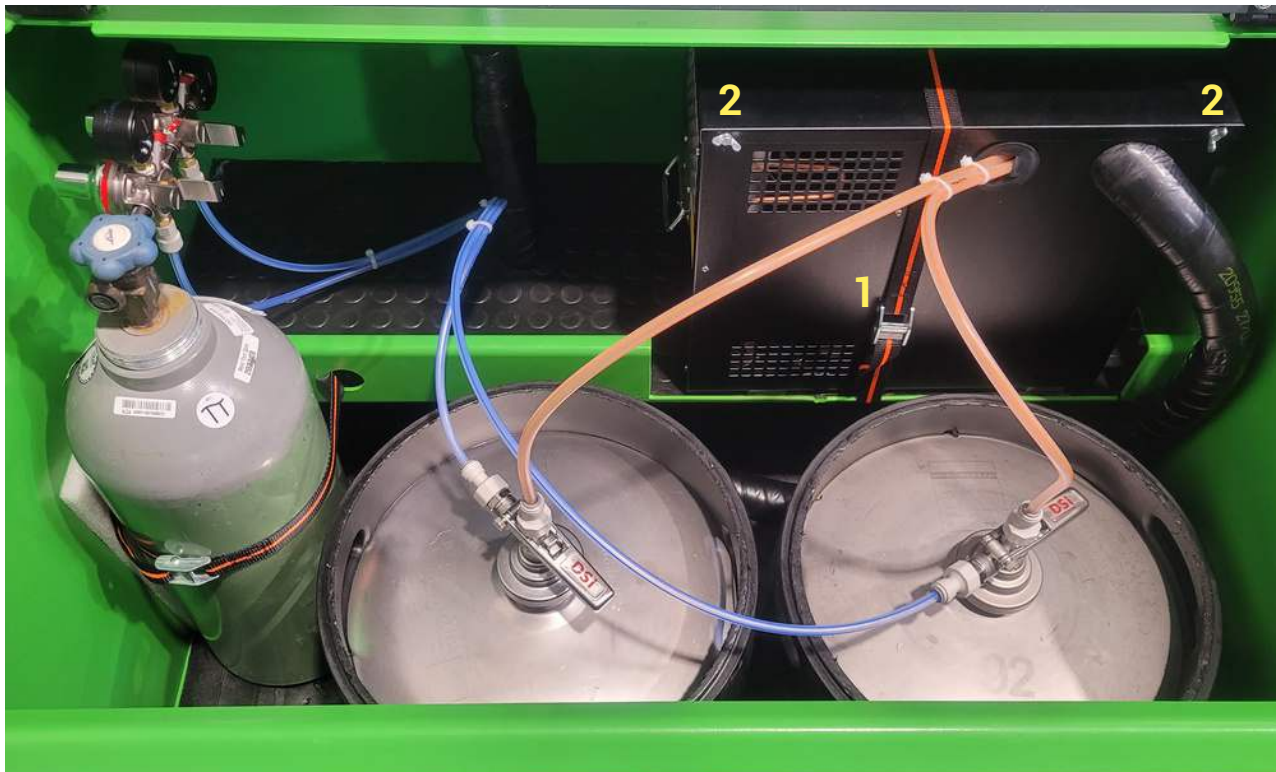

In cooler you can see it is divided in 2 sections. On left side there is compressor, heat exchanger and fan. On right side there are spiral pipes inside of water container. This is important when using Beer Box. You have to fill it up with clean water. Upper water level has to be near overflow pipe on right side (no 3 on the picture). Cooler principle is to cool water in tank where spiral beer pipes are placed in. Basically beer is cooled with cold water. Also cold water is circulating through beer tap tower.




Now you can close top cover and tighten belt that holds cooler on it's position. Before tightening belt make sure belt does not cover buttons on rear wall of cooler. Stretch hand behind cooler from left side and place belt correctly. Buttons behind cooler are for switching (no 4 on the picture) on and regulating cooling level (no 5 on the picture).

The temperature of the cooled beverage is controlled by a mechanical thermostat in temperature range of 2 °C to 8 °C. The thermostat has a numerical scale of 1-7.




CO2 balloon and pressures

Connect pressure regulator unit to food CO2 balloon. Be sure that gas is ment for food! Firstly you have to remove carry handle from balloon because it won't fit under Beer Box main cover with it. Pressure regulating unit is with 2 sections. Number one is for first tap and two is for secont tap. You can see markings on hoses and beer can balloon connectors as I or 1 for tap number one and II or 2 for tap number two. Sequence for marking is always read from left to right. So if you are looking to beer taps from filling cap position on the left side of Beer Box, then left tap is for line number 1 and right tap is for line number 2. Working pressure is about 0,5 to 1 bar.

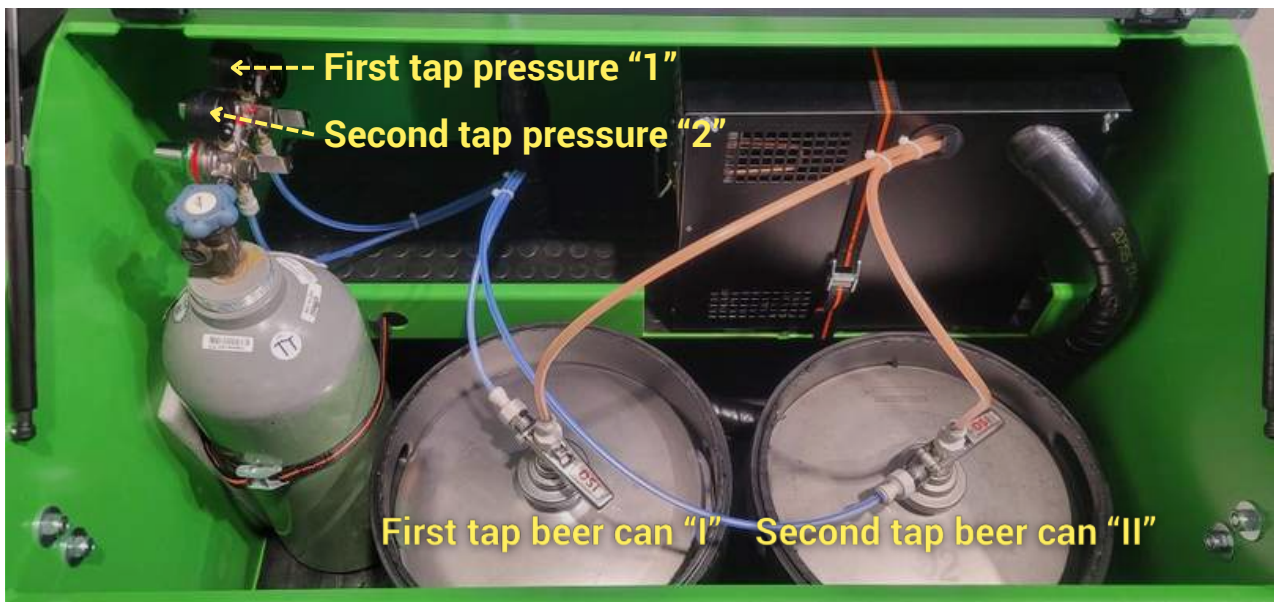


You can adjust pressure for each tap separately with hexagon wrench. Wrench is included with Beer Box. If you are sure you have correct pressure reached for after few times of using, you can add caps on regulating screws to be sure somebody don't adjust those again. You can ask working pressure range from beer seller, but it should be between 0,5 and 1 bar. PS! To change from higher pressure e.g. 1,5 bar to 1 bar you have to reduce pressure to 0,5 bar first. Then adjust requested pressure 1 bar.

You can adjust pressure for each tap separately with hexagon wrench. Wrench is included with Beer Box. If you are sure you have correct pressure reached for after few times of using, you can add caps on regulating screws to be sure somebody don't adjust those again. You can ask working pressure range from beer seller, but it should be between 0,5 and 1 bar. PS! To change from higher pressure e.g. 1,5 bar to 1 bar you have to reduce pressure to 0,5 bar first. Then adjust requested pressure 1 bar.

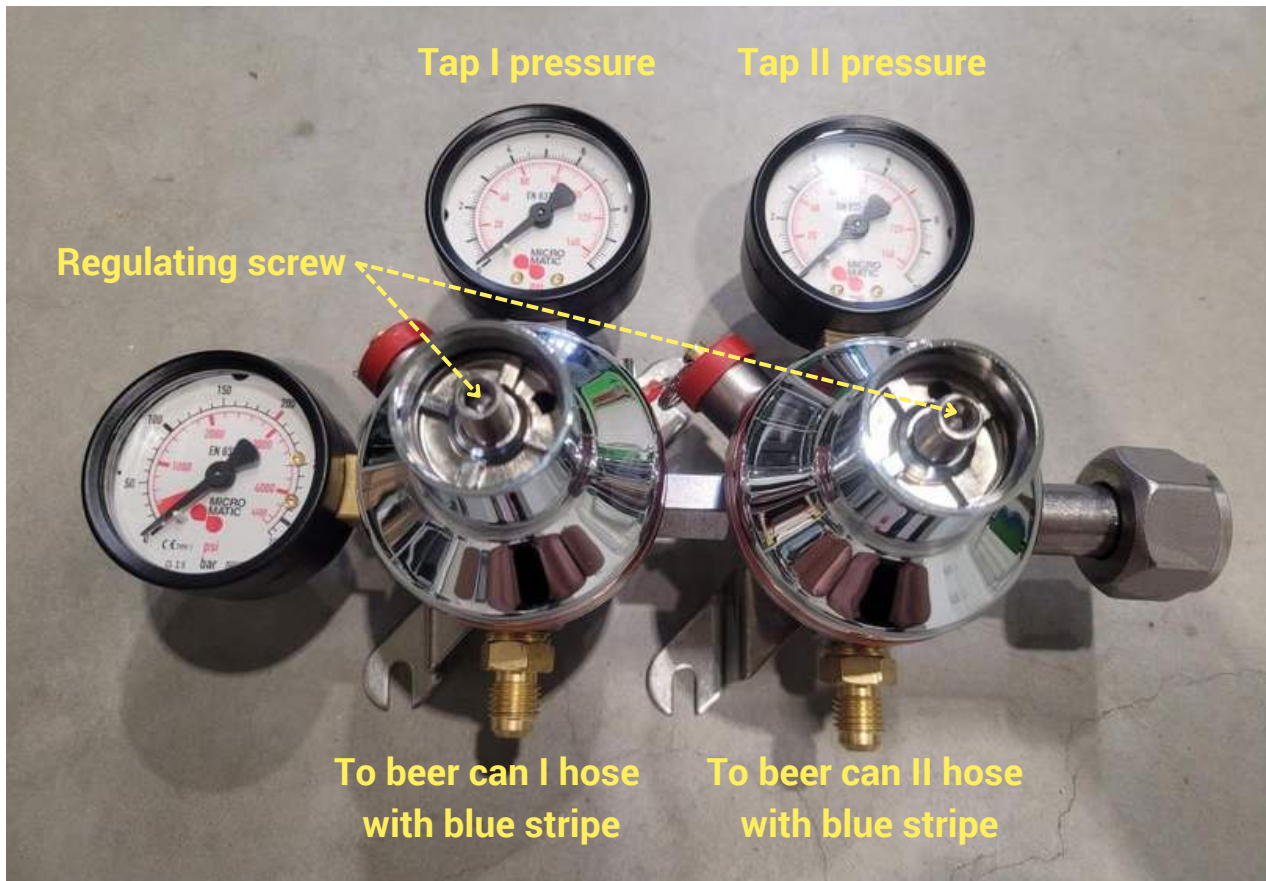

Different type of beer can connectors

Both tap lines are equipped with G-type beer can connection. There are different connectors available. Connections are easy to change. Hoses are with quick connectors. You have to push in plastic stopper ring on hose connection and pull hose out on same time. As gas and beer hoses are in different diameter you cannot mix them up. Beer hose is connected to top and gas connection is connected from side.

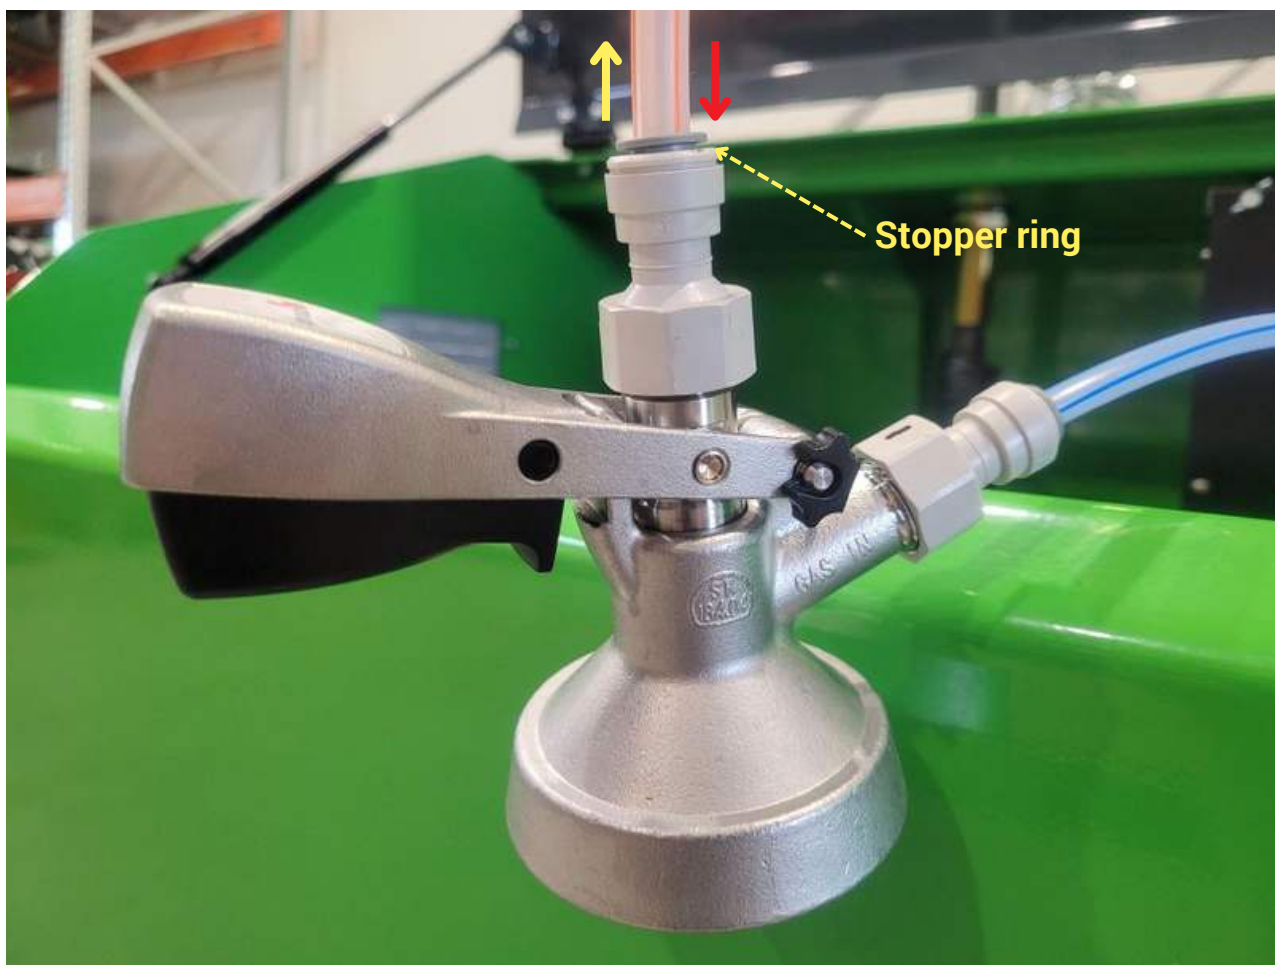



A-Type connector



S-Type connector



A-Type connector



S-Type connector



A-Type connector



S-Type connector


Service and cleaning

If Beer Box is not used for longer time, you have to drain water from cooler. Also when transporting, it is suggested to drain water out. There is no emptying pump included with Beer Box. Easiest way is to suck water through regular hose and let it flow out itself. If beer cans are empty don't disconnect connectors from cans if Beer Box is not used for few months. If Beer Box is kept for standing longer, then you have to clean beer pipes. Easiest way is to suck hot water through system with vacuum or use pressure pump. You can remove can connectors from pipes from quick connectors. Wash can connectors with hot water. Beer taps has to be cleaned also. Loosen nut from connection (on following picture marked as „Tap nut“) to tower and pull tap out. Wash tap with hot water.



Table of malfunction

Malfunction	Cause	Removal
beverage does not flow	keg tapped incorrectly	check that the keg coupler level is pushed down
		device with built-in compressor - turn on the switch
	water from sanitation froze	turn off the device; then wait until the beverage starts flowing again (may take a few minutes, or hours)
	compensator is closed	move the compensator lever on the tap
beverage cooled insufficiently	incorrect thermostat setting	turn the thermostat knob to the right towards number 7
	poor air circulation	check the cleanliness of condenser plates
	device overheats	place the device in a colder environment
tap jerks, drink sprays out	pressure too high	reduce delivery medium supply pressure in the keg
air compressor does not switch on		press the switch on the cooler
air compressor does not switch off	leakage	pull out and reinsert the air hose, tighten the nuts on the keg coupler
beer foams excessively		reduce beverage temperature - turn the thermostat knob to right
		regulate flow rate by pushing the compensator lever up
speed fittings leaking	hose poorly inserted	pull out the hose, check that the end of the hose is flat (not at an angle), level off with a knife if needed
	scratches on the hose	pull out the hose and shorten by ca 2 cm

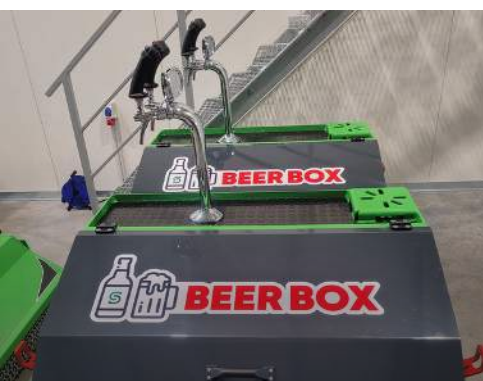

Avant loaders and attachments

OÜ SAMI Masinakeskus

T: +372 5883 4445

M: info@avant.ee

www.avant.ee