

UX Scenario — Cronômetro do Tatame

Reference document for LG QA testers. Every screen is shown with numbered callouts, every on-screen string is translated, and a step-by-step test procedure is given at the end.

App name	Cronômetro do Tatame
App ID	com.nailson.cronometrotatame
Version	1.0.0
Category	Sports / Fitness
Interface language	Portuguese (pt-BR) — every string is translated in this document
Target resolution	1280x720
Login required	No
Network required	No — the app is fully self-contained and works offline
In-app purchase	No
Ads	No
Personal data collected	None. Settings are stored locally via localStorage
Age rating	All ages

What the app does

An interval timer for Brazilian Jiu-Jitsu training. It counts a training round (called a "rola" in Brazilian Portuguese), then a rest period, then repeats until stopped. It is designed to be read from across a training mat, so the countdown fills the screen.


Remote control

Key	Action
OK / Enter	Activates the focused button
Left / Right	Moves focus within the current button row
Up / Down	Moves focus between rows: top icons and bottom buttons
Back	Closes the settings screen; on the main screen, exits the app
Magic Remote pointer	Click works on every control

On launch, focus is already on the main button, so OK works immediately. The focused control is filled with the phase colour and scaled up, so the focus position is readable from a distance — see Screen 9.

Screen 1 — Initial state (app just launched)


This is what the tester sees immediately after the app opens. The timer is stopped and focus is already on the centre button, so OK starts it right away.

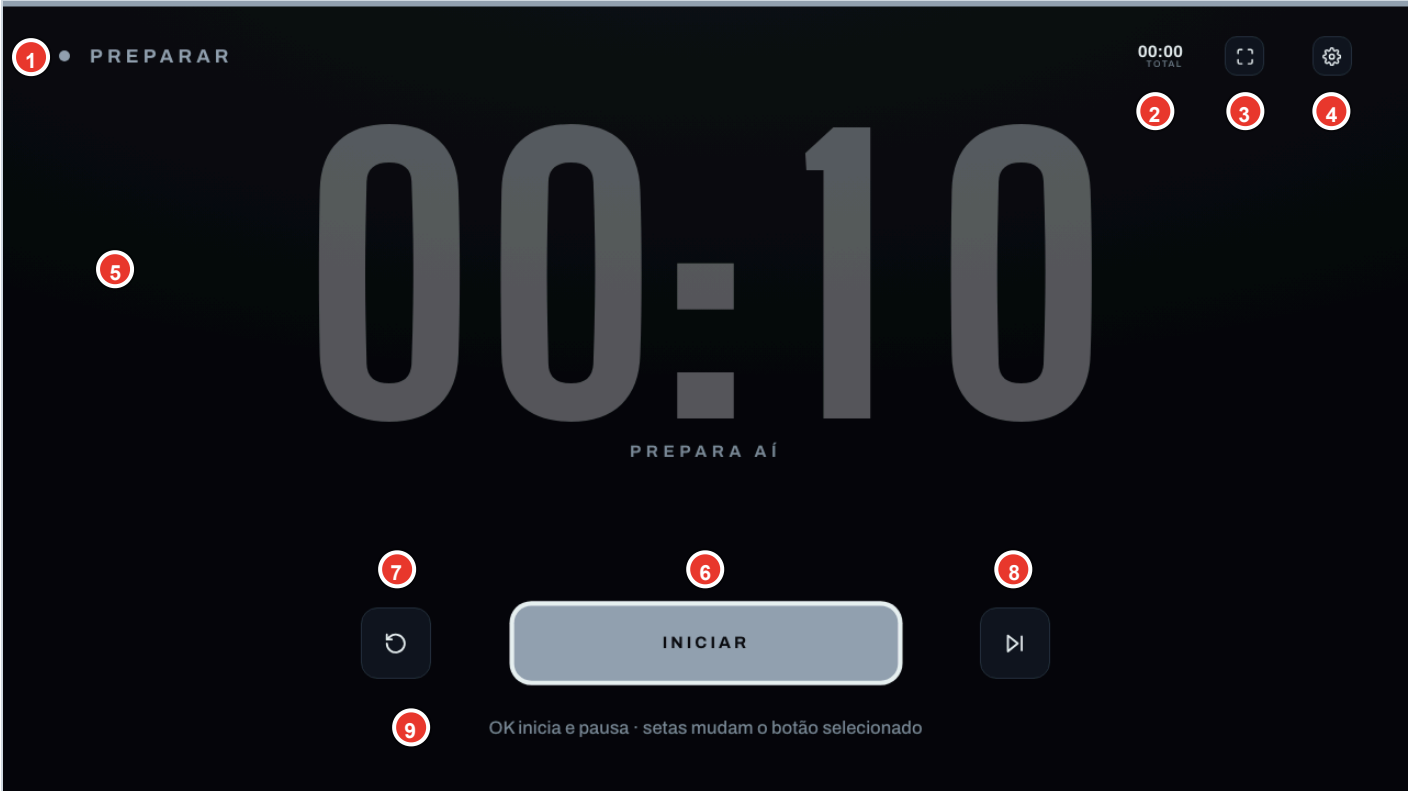

Nº	Element	Meaning and behaviour
1	Phase label	PREPARAR = PREPARE. The countdown before the first round.
2	Session total	Total elapsed time of the whole session. 00:00 before starting.
3	Fullscreen	Toggles fullscreen.
4	Settings	Opens the settings screen (Screens 7 and 8).
5	Countdown	00:10 — the preparation time. Configurable.
6	Main button	INICIAR = START. Focused on launch; press OK to begin.
7	Reset	Returns to this initial state and clears the session total.
8	Skip	Jumps immediately to the next phase.
9	Remote legend	OK starts and pauses · arrows change the selected button.

Screen 2 — Round running


After the preparation ends, the round starts. The colour of the number moves continuously from green through yellow and orange as the round progresses — this is intentional and shows how much time is left without reading the digits.

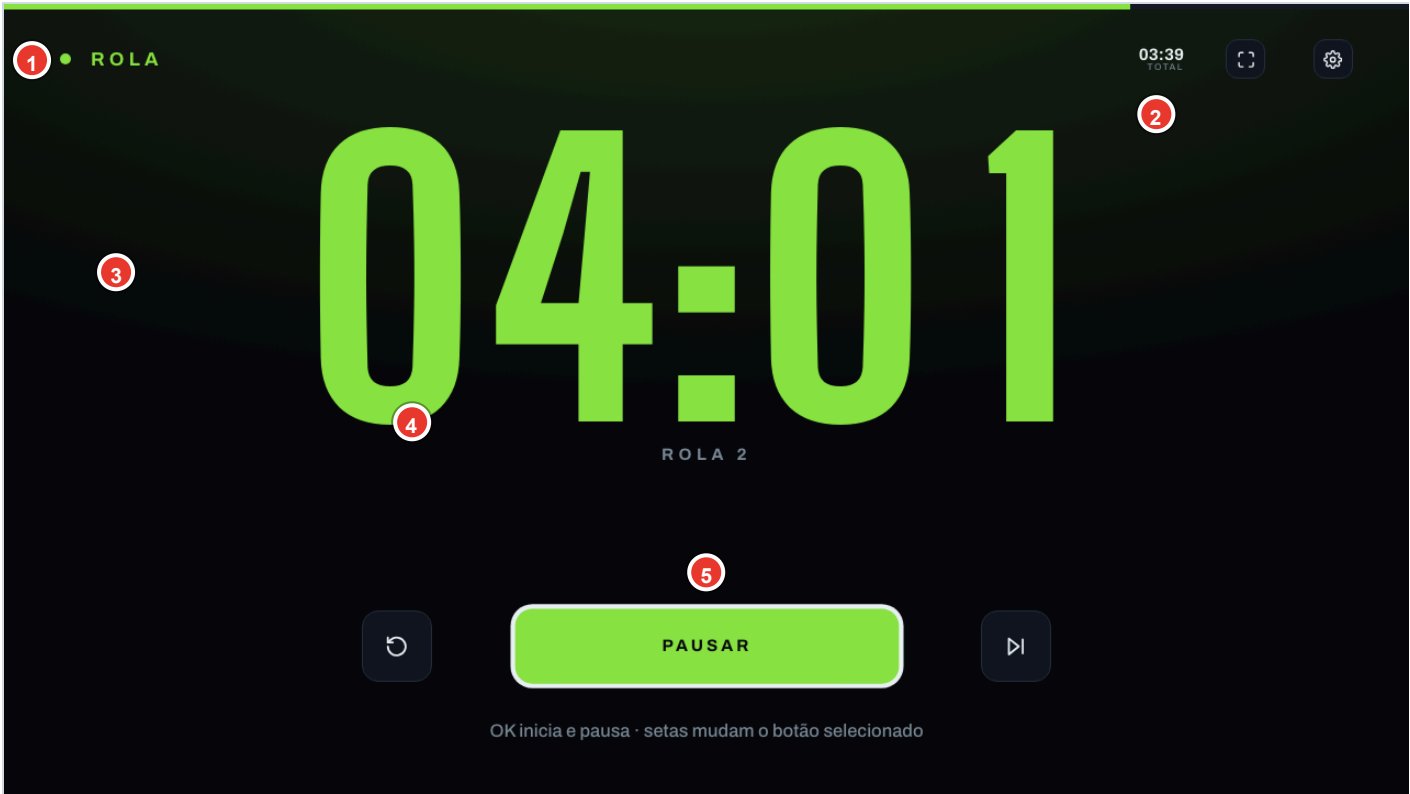

Nº	Element	Meaning and behaviour
1	Phase label	ROLA = ROUND. A Brazilian Jiu-Jitsu sparring round.
2	Session total	Keeps counting across rounds and rests.
3	Countdown	Time left in the current round.
4	Round counter	ROLA 2 = ROUND 2. Shows 'ROLA 2 de 6' when a round limit is set.
5	Main button	PAUSAR = PAUSE while running.

Screen 3 — Round, final seconds


In the last ten seconds everything turns red and one beep sounds per second. The final beep is longer and lower. At zero, a three-blast horn plays.

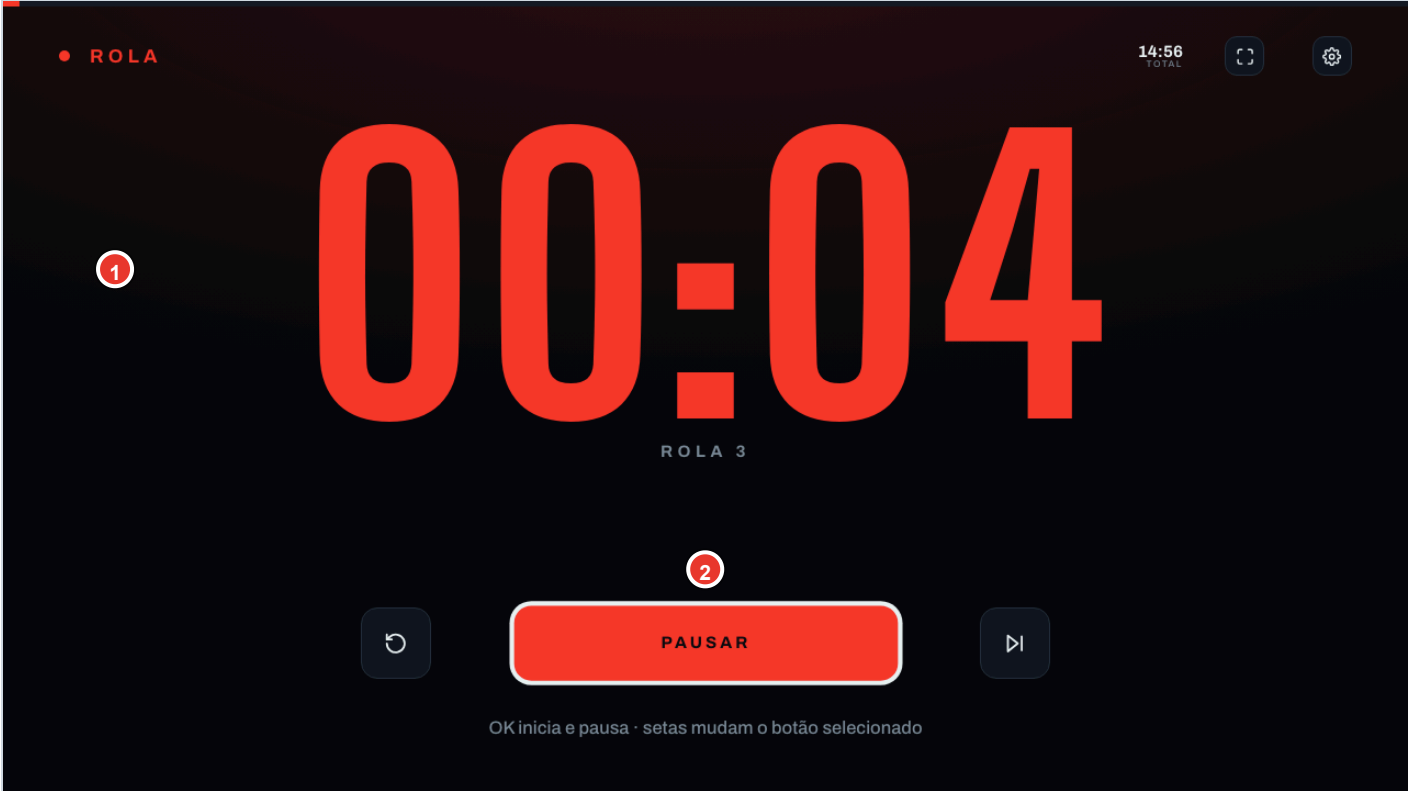

Nº	Element	Meaning and behaviour
1	Countdown	Red in the last ten seconds.
2	Main button	Also takes the phase colour.

Screen 4 — Rest


After the round, the rest period starts in blue. The same ten-second beep countdown applies, but at zero a rising chime plays instead of the horn, signalling the start of the next round.

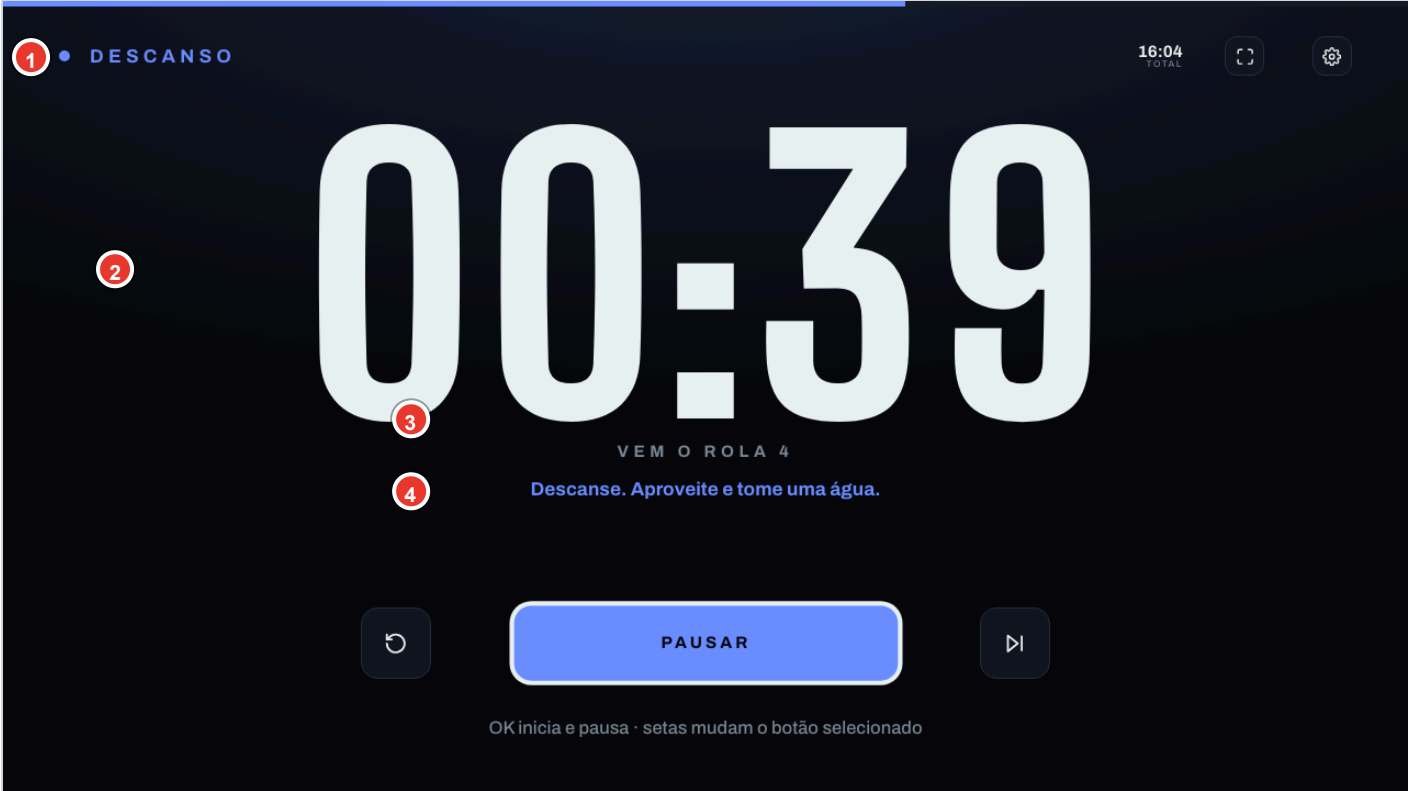

Nº	Element	Meaning and behaviour
1	Phase label	DESCANSO = REST.
2	Countdown	Time left in the rest period.
3	Next round	VEM O ROLA 4 = ROUND 4 IS NEXT.
4	Rest message	'Descanse. Aproveite e tome uma água.' = 'Rest. Take the chance to drink water.'

Screen 5 — Paused


Pressing OK while running pauses the timer. The number dims to make the paused state obvious from a distance, and the button label returns to INICIAR.

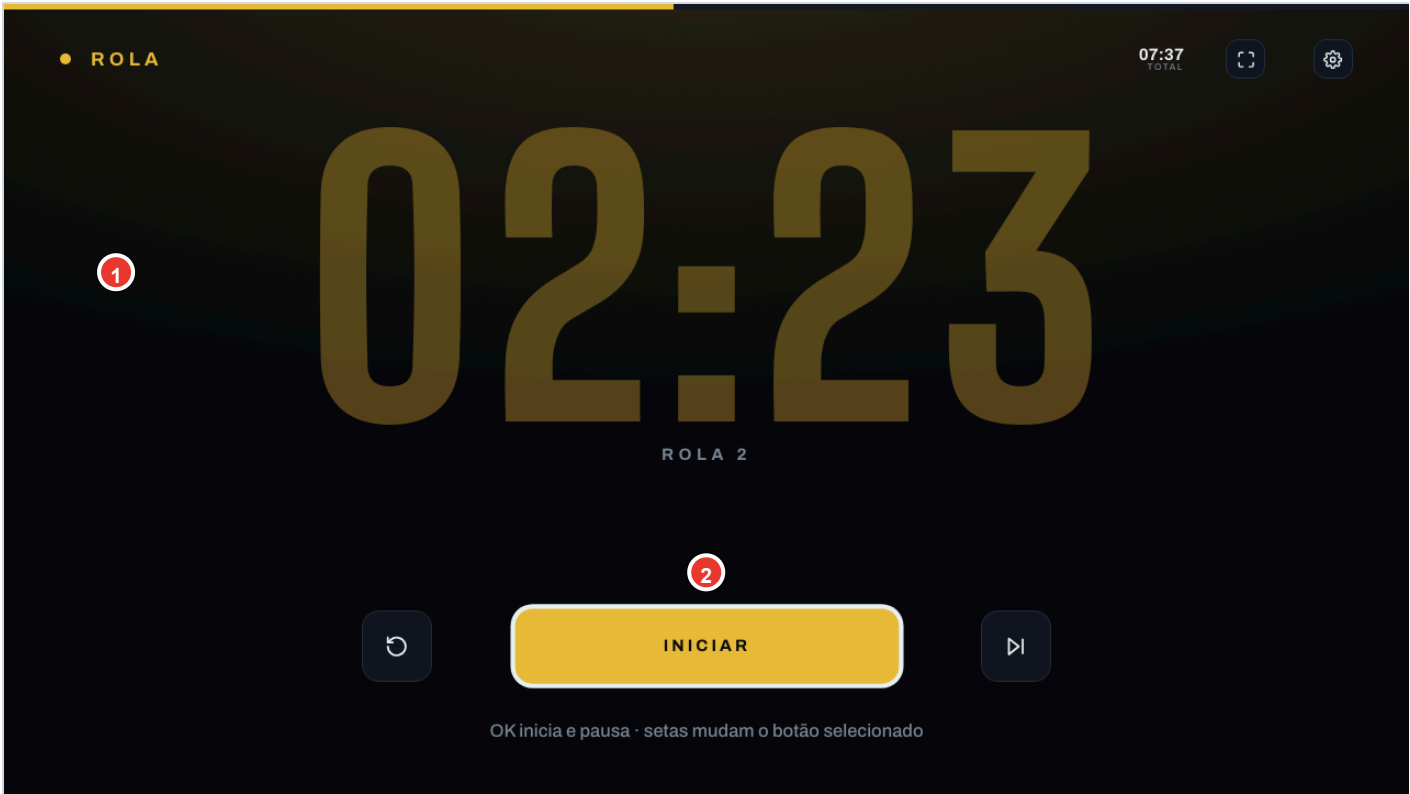

Nº	Element	Meaning and behaviour
1	Countdown	Dimmed while paused.
2	Main button	Back to INICIAR = START.

Screen 6 — Session finished


Shown only when a round limit was set and the last round has ended. Pressing OK restarts the session from the beginning.

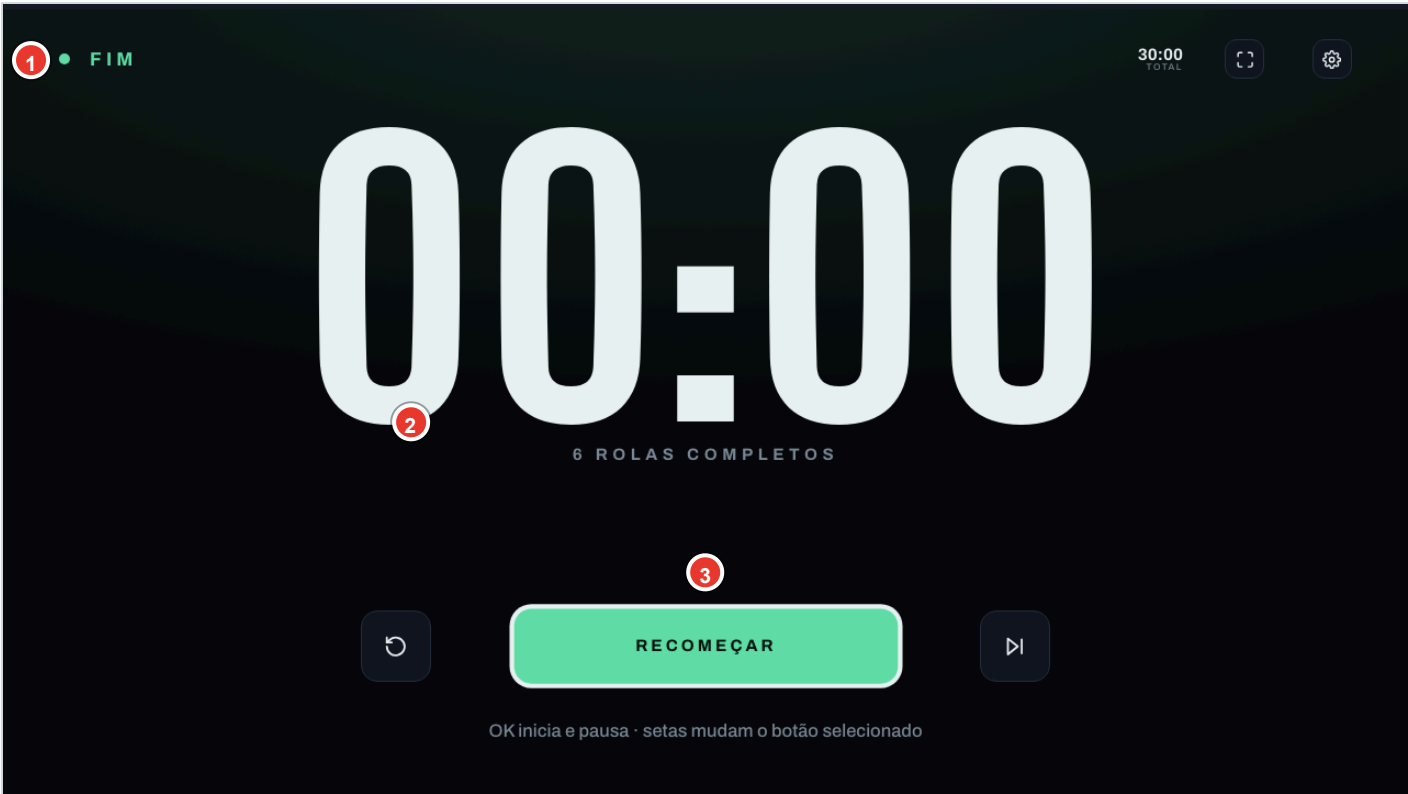

Nº	Element	Meaning and behaviour
1	Phase label	FIM = END.
2	Summary	'6 ROLAS COMPLETOS' = '6 ROUNDS COMPLETED'.
3	Main button	RECOMEÇAR = RESTART.

Screen 7 — Settings, upper part


Reached from the main screen by moving focus up to the gear icon and pressing OK. Opens full screen. Up and Down move between rows; Left and Right move within a row, reaching the – and + buttons of each value.

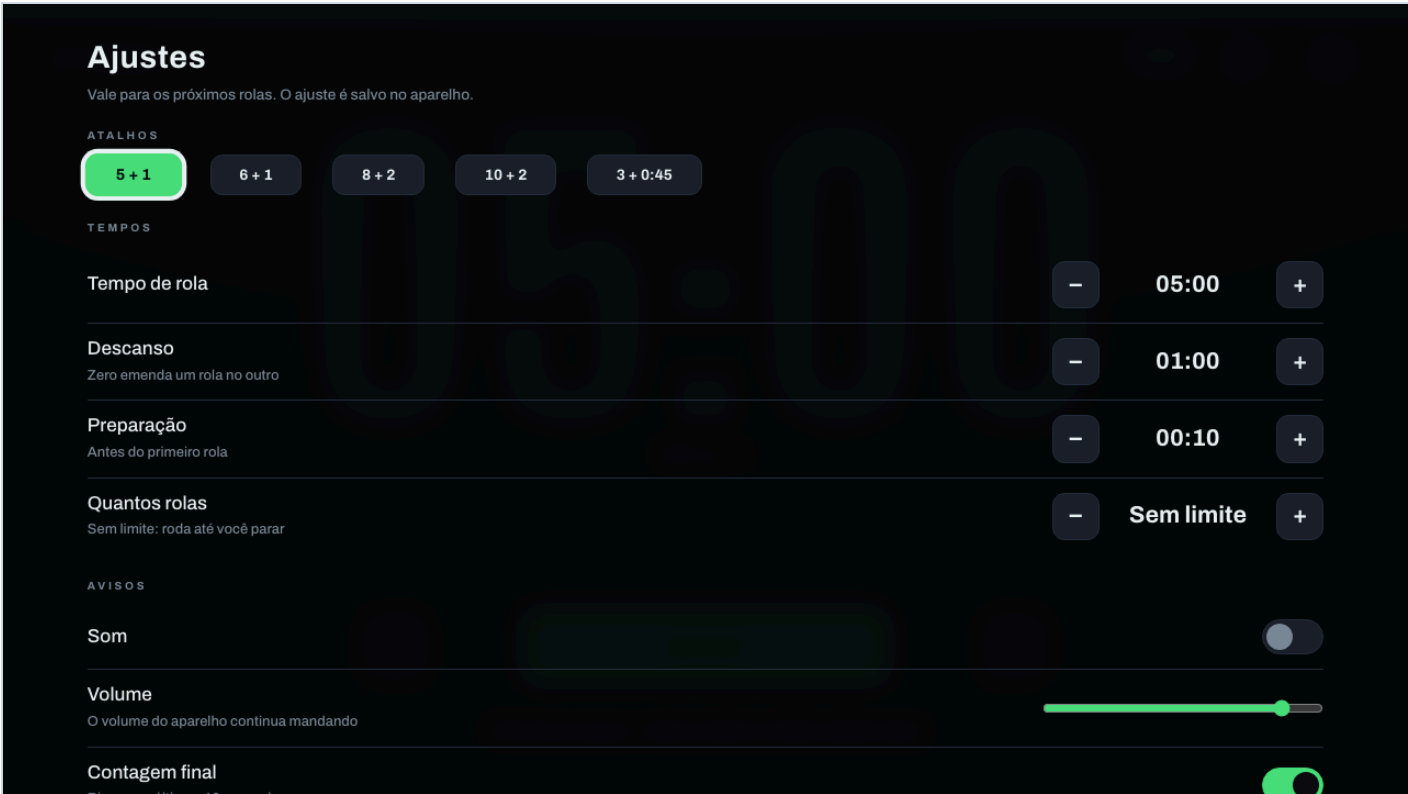

On screen (pt-BR)	Meaning	What it does
Ajustes	Settings	Screen title.
Vale para os próximos rolas.	Applies to the next rounds.	Subtitle. Settings are saved on the device.
Atalhos	Shortcuts	Preset pairs. '5 + 1' = 5 min round, 1 min rest.
Tempo de rola	Round time	Length of each round. – and + change it by 15 seconds.
Descanso	Rest	Length of the rest. Zero links one round straight into the next.
Preparação	Preparation	Countdown before the first round.
Quantos rolas	How many rounds	Round limit. 'Sem limite' = no limit.
Som	Sound	Master sound toggle.
Volume	Volume	Sound level. The TV volume still applies.

Screen 8 — Settings, lower part


Scrolled to the bottom of the same screen.

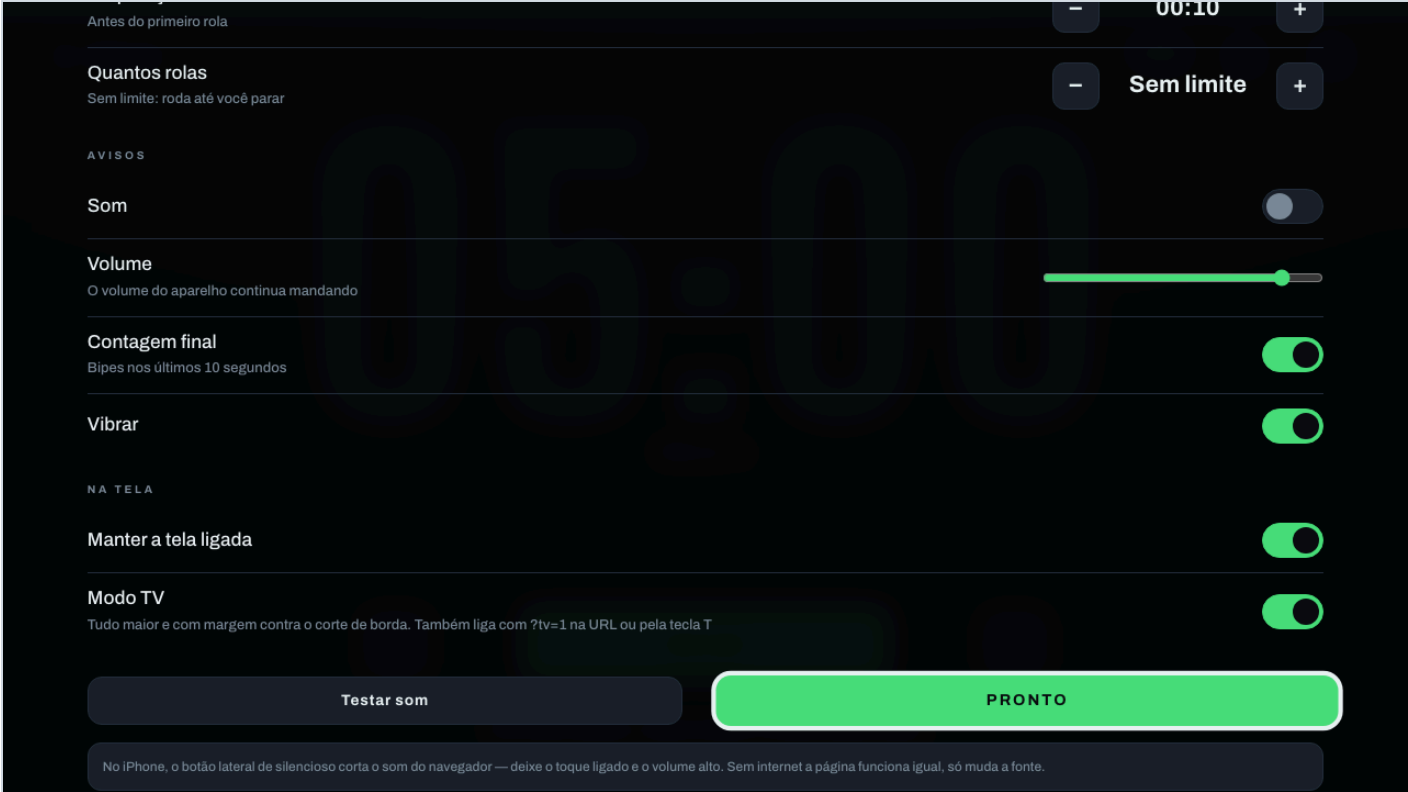

On screen (pt-BR)	Meaning	What it does
Contagem final	Final countdown	Beeps in the last ten seconds.
Vibrar	Vibrate	No effect on TV; present for phone use.
Manter a tela ligada	Keep screen on	Prevents the screen saver during a session.
Modo TV	TV mode	Larger layout for viewing at a distance. On by default on TV.
Testar som	Test sound	Plays the end-of-round horn, then the start-of-round chime. Use this to verify audio without waiting for a round to end.
Pronto	Done	Closes the settings and returns focus to the main button.

Screen 9 — Focus indication

The focused control is filled with the current phase colour, scaled up and outlined in white. Here focus is on the skip button while a round is running. This is how the tester can tell which control OK will activate.

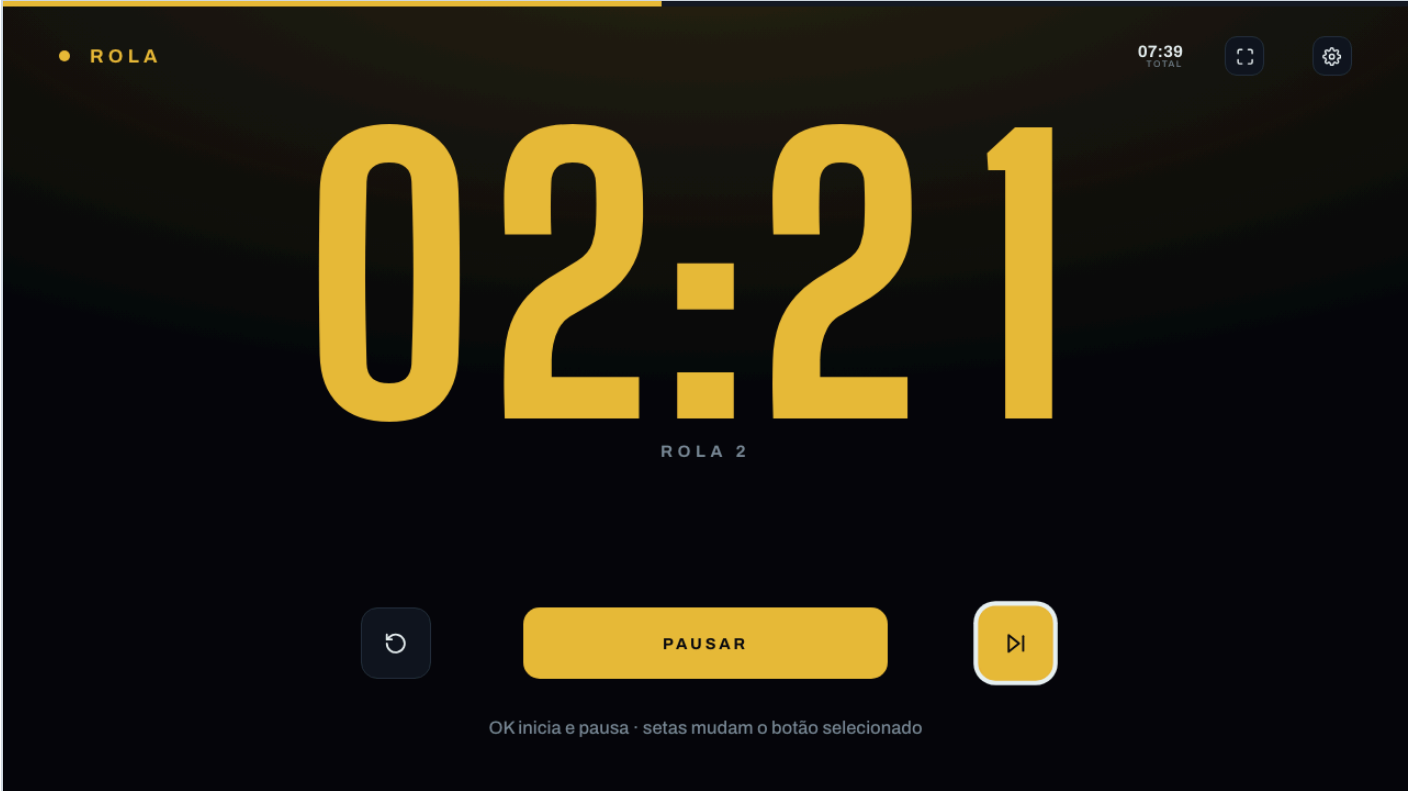

Test procedure

Each step lists the action and the expected result. To see a complete cycle quickly, first open the settings and use the "3 + 0:45" shortcut — a full round-rest-round cycle then takes under two minutes instead of six.

- 1

Launch the app

PREPARAR and 00:10 are shown, stopped. Focus is on the centre button.
- 2

Press OK

The preparation counts down with one beep per second; a rising chime at zero.
- 3

Wait

Phase changes to ROLA at 05:00 and the number is green.
- 4

Observe the colour

It warms through yellow and orange as the round progresses.
- 5

Wait for the last 10 seconds

Everything turns red; one beep per second; the final beep is longer.
- 6

Wait for zero

A three-blast horn plays. Phase changes to DESCANSO at 01:00, in blue.
- 7

Wait for the rest to end

Ten beeps again, then a rising chime. ROLA 2 starts.
- 8

Press OK

The timer pauses, the number dims, the button reads INICIAR.
- 9

Press OK again

The timer resumes from where it stopped.
- 10

Press Right, then OK

The skip button advances immediately to the next phase.
- 11

Press Left twice, then OK

The reset button returns to the initial state and clears the total.
- 12

Press Up, then navigate to the gear icon, then OK

The settings screen opens.
- 13

Reach the + button of 'Tempo de rola' and press OK

The round time increases by 15 seconds. Holding OK repeats.
- 14

Move to 'Testar som' and press OK

The end-of-round horn plays, then the start chime.
- 15

Press Back

The settings close and focus returns to the main button.
- 16

Press Back again

The app exits.

Notes

Point	Detail
No network, by design	The app makes zero network requests. Fonts are embedded as data URIs and all sounds are generated at runtime with the Web Audio API — there are no audio files. Testing with the TV disconnected behaves identically. This is not a defect.
Audio check	Sound is on by default. 'Testar som' in the settings plays both the end-of-round and start-of-round sounds on demand.
Two sounds, on purpose	End of round is a flat, repeated low horn. Start of round rises and holds a bright tone. They are shaped to be told apart across a noisy gym.
Persistence	All settings survive closing and reopening the app.
Exit	Back on the main screen closes the app. Nothing keeps running in the background.