



TOP VIEW

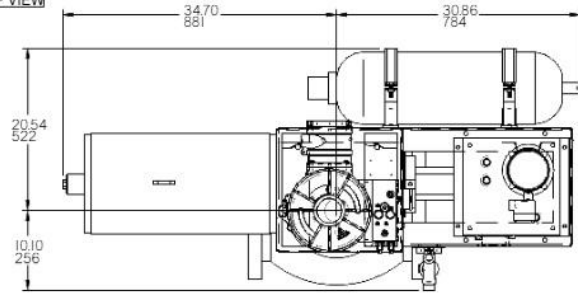

PLAN VIEW

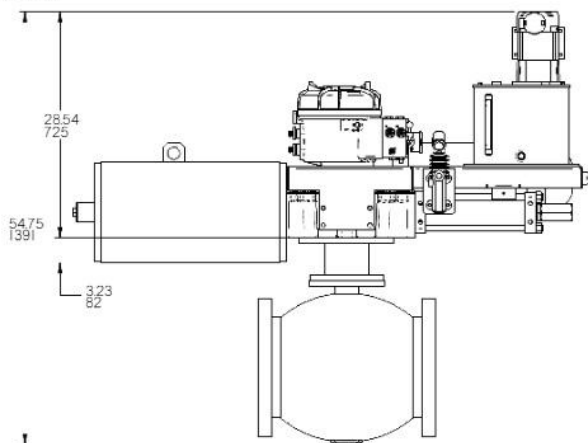


GENERAL NOTES:

- DIMENSIONS ARE IN MM.
- DOUBLE ACTING (DA) ACTUATORS ARE DRAWN IN FULL "CLOCKWISE" POSITION AS VIEWED IN "TOP VIEW".
- SPRING RETURN ACTUATORS ARE SHOWN WITH SPRING IN FULLY EXTENDED POSITION.
- FOR INDICATOR COVER DIMENSIONS REFER TO: ROTORK DWG NUMBER GD00220 (PUB003-003) FOR B-HOW REFER TO: ROTORK DWG NUMBER F730E (AVAILABLE ON WWW.ROTORK.COM)
- NOTE: EH ACCUMULATORS ARE SHIPPED WITHOUT NITROGEN PRE-CHARGE AS STANDARD. 1-7/16" SPANNER TOOL REQUIRED. PRE-CHARGE KITS ARE AVAILABLE UPON REQUEST. (PRE-CHARGE GAS VALVE PER 8V1-ISO 4570)

HYDRAULIC RESERVOIRS ARE SHIPPED WITHOUT OIL.

TECHNICAL DETAILS	
MOTOR SUPPLY:	24VDC INTERNAL V1PH1Hz
CONTROLLER POWER:	24VDC INTERNAL
AREA CLASSIFICATION:	CL1 DIV 1 GR. GD 13B
TEMP RANGE:	+4F to +104F/-14C to +40C °F/°C
NOM. PRESSURE:	1500 PSI
MAX. PRESSURE:	3000 PSI
RECOMMENDED OIL:	MOBIL DTE10 EXCEL32
VALVE STEM ORIENTATION:	VERTICAL
ACCUMULATOR PRE-CHARGE:	1350 PSI

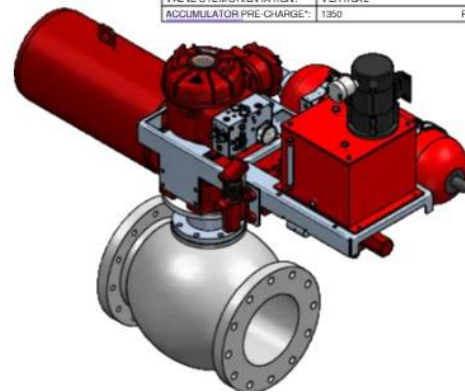

JOINT ACTUATOR ROUTINE & SHUTDOWN MAINTENANCE FRAGNET

OPENING

Preparation

LOTO

- Depressurize
- Isolate

Inspect as found

- TAG
- Inspect Body
- Inspect Bonnet

Functional Check

- Manual Operation
- Check for Open/Close
- Disconnect air lines
- Secure lines from damage

Removal & Disassemble

Drop the Actuator

- Scaffold
- Depressurize Valve
- Check actuator position
- Check valve "open"
- If Open close the Valve
- Remove fasteners
- Lift actuator
- Rign down actuator

REFURBISHMENT

Shop Activities

Dismantle Actuator

Clean

- Remove Dirt
- Remove Scale
- Remove product

Inspection

- Mechanical inspection
- Visual Inspection
- Fail Safe (Open/Close) inspect

Replacement

- Replace pin
- Replace lubricant
- Grease
- Replace standard kit
- Replace spindle O rings
- Attend checklist

Assemble

- Temporary boxup
- Travel check
- Replace tight fastners

REFIXING

Valve return & refix

Rig Back to location

- Ensure Vakve in position
- Position Actuator above Valve

Reconnection

- Reconnect air lines
- Check fail safe position (open/close)
- Ensure cover leak free
- Lubricate

Actuator Position check

- Tighten Cover
- Torque fasteners
- Check actuator operation
- Pressurise air tubes
- Check valve operation
- Final Boxup

rPlan

AT 39, MERMAID 1 CHS LTD., SEC-11,
CBD-BELAPUR, NAVI MUMBAI - 400611

Legal Owner

QR Code



Drw electronic code

Drawn By:

Drawn Date

Drw Purpose Code :-

Status of Approval :-

Dimensions as Mentioned

Engg Code :-

Backup Info Code :-

Angle of Projection :-

Description:

Single Acting Actuator Typ FRAGNET
Preliminary Doc under prep

Statutory Note:

This document is prepared by rPlan and is the sole proprietary of the company. Its purpose is educational and no references within this document are for Engineering or Design correlation with the applicable codes. For any clarifications beyond the intended purpose viewers can always correspond to rPlan via its company website. This drw is not for duplication without company permission!

Checked Approved by

Checked Approved Date

XX

DWG No.

SCALE:-

SHEET