



SP125



OWNER'S MANUAL

This manual should be considered a permanent part of the vehicle and kept accessible to ensure its correct and safe use.

This publication includes the latest production information available before publishing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your actual vehicle.

For any query or assistance, please call Customer care number:
1800 103 3434 (Toll free)

Welcome

Congratulations on your purchase of a new Honda vehicle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the vehicle.

- The following code in this manual indicates the destination.

Destination Codes

Code	Destination
CBF125MEF	
III ID	India

A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a vehicle. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the vehicle
- Safety Messages preceded by a safety alert symbol  and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER

You **WILL** be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING

You **CAN** be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION

You **CAN** be HURT if you don't follow instructions.

Other important information is provided under the following title:

NOTICE Information to help you avoid damage to your vehicle, other property, or the environment.

Contents

Vehicle Safety

P. 2

Operation Guide

P. 14

Maintenance

P. 77

Troubleshooting

P. 120

Information

P. 140

Specifications

P. 153

Warranty Policy

P. 156

Index

P. 164

Vehicle Safety

This section contains important information for safe riding of your vehicle.
Please read this section carefully.

Safety Guidelines	P. 3
Image Labels	P. 6
Safety Precautions	P. 8
Riding Precautions	P. 9
Accessories & Modifications	P. 12
Loading	P. 13

Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flames away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. Always wear an approved helmet and protective apparel.

➤ P. 8

Before Riding

Make sure that you are physically fit, mentally focused, and free of alcohol and drugs. Check

that you and your passenger are both wearing an approved helmet and protective apparel. Instruct your passenger on holding onto the grab rail or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the vehicle is stopped.

Take Time to Learn & Practice

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Safety Guidelines

Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

Don't Drink or Use Drugs and Ride

Alcohol or drugs and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. The same is true for drug use. Don't drink or use drugs and ride, and don't let your friends do it either.

Keep Your Honda in Safe Condition

It's important to keep your vehicle properly maintained and in safe riding condition. Inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits (➤P. 13), and do not modify your vehicle or install accessories that would make your vehicle unsafe (➤P. 12).

If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first turn the ignition switch to the OFF position, and evaluate the condition of your vehicle. Inspect for fluid leaks, check the tightness of critical nuts and

bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously. Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colourless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in a confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide.

Never run your vehicle inside a garage or other enclosure.

WARNING

Running the engine of your vehicle while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your vehicle's engine when it is located in a well ventilated area outdoors.

Image Labels

Image Labels

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully. In the interest of safety, take the vehicle to be serviced only by your dealer.

DANGER (with RED background)

You **WILL** be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING (with ORANGE background)

You **CAN** be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION (with YELLOW background)

You **CAN** be HURT if you don't follow instructions.



Sample

**BATTERY LABEL
DANGER**

- Keep flame and spark away from the battery. Battery produce explosive gas that can cause explosion.
- Wear the eye protection and rubber gloves when handling the battery, or you can get burned or lose your eyesight by the battery electrolyte.
- Do not allow children and other people to touch a battery unless they understand proper handling and hazards of the battery very well.
- Handle the battery electrolyte with extreme care as it contains dilute sulfuric acid. Contact with your skin or eyes can burn you or cause loss of your eyesight.
- Read this manual carefully and understand it before handling the battery. Neglect of the instructions can cause personal injury and damage to the vehicle.
- Do not use a battery with the electrolyte at or below the lower level mark. It can explode causing serious injury.

**FUEL LABEL**

- Unleaded petrol only.
- ETHANOL up to 20 % by volume

Safety Precautions

Safety Precautions

- Ride cautiously and keep your hands on the handlebar and feet on the footpegs.
- Instruct your passenger to keep their hands on the grab rail or your waist and their feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

Protective Apparel

Make sure that you and any passenger are wearing an approved helmet, eye protection, and high-visibility protective clothing. Be sure to avoid loose clothes that could get caught on any part of your vehicle. Ride defensively in response to weather and road conditions.

| Helmet

Should be safety-standard certified, high-visibility, and the correct size for your head.

- Must fit comfortably but securely, with the chin strap fastened.

- Face shield with unobstructed field of vision or other approved eye protection.

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

| Gloves

Full-finger leather gloves with high abrasion resistance.

| Boots or Riding Shoes

Sturdy boots with non-slip soles and ankle protection.

| Jacket and Trousers

Protective, highly visible, long-sleeved jacket and durable trousers for riding (or a protective suit).

Riding Precautions

Running-in Period

During the first 500 km (300 miles) of running, follow these guidelines to ensure your vehicle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking and rapid down-shifts.
- Ride conservatively.

Brakes

Observe the following guidelines:

- Avoid excessively hard braking and downshifting.
 - ▶ Sudden braking can reduce the vehicle's stability.
 - ▶ Where possible, reduce speed before turning; otherwise, you risk sliding out.

- Exercise caution on low traction surfaces.
 - ▶ The tyres slip more easily on such surfaces and braking distances are longer.
- Avoid continuous braking.
 - ▶ Repeated braking, such as when descending long, steep slopes, can seriously overheat the brakes, reducing their effectiveness. Use engine braking with intermittent use of the brakes to reduce speed.
- For full braking effectiveness, operate both the front and rear brakes together.

| Combi Brake

Your vehicle is equipped with a brake system that distributes the braking force between the front and rear brakes.

The distribution of the braking force applied to the front and rear brakes when operating the lever only and when operating the pedal only is different.

For full braking effectiveness, operate both the front and rear brakes together.

Riding Precautions

| Engine Braking

Engine braking helps slow your vehicle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

| Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.

Parking

- Park on a firm, level surface.
- If you must park on a slight incline or loose surface, park so that the vehicle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes, and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebar and remove the key when leaving the vehicle unattended.

Use of an anti-theft device is also recommended.

| Parking with the Side Stand or Centre Stand

1. Stop the engine.
2. **Using the side stand**

Push the side stand down.
Slowly lean the vehicle to the left until its weight rests on the side stand.


Turn the handlebar fully to the left.

- Turning the handlebar to the right reduces stability and may cause the vehicle to fall.

Using the centre stand

To lower the centre stand, stand on the left side of the vehicle.

Hold the left handle grip and the left grab rail. Press down on the tip of the centre stand with your right foot and, simultaneously, pull up and back.

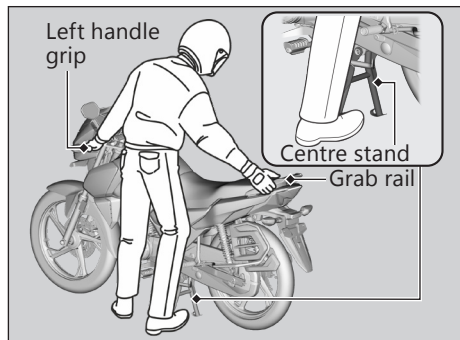

3. Turn the ignition switch to the LOCK position and remove the key. ➡ P. 59

Refuelling and Fuel Guidelines

Follow these guidelines to protect the engine, fuel system and catalytic converter:

- Use only unleaded petrol.
- Use the recommended octane number. Using lower octane petrol will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol. ➡ P. 151
- Do not use stale or contaminated petrol or an oil/petrol mixture.
- Avoid getting dirt or water in the fuel tank.

Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed for your vehicle by Honda or make modifications to your vehicle from its original design. Doing so can make it unsafe.

Modifying your vehicle may also void your warranty and make your vehicle illegal to operate on public roads. Before deciding to install accessories on your vehicle, be certain the modification is safe and legal.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your vehicle. Your vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

Loading

- Carrying extra weight affects your vehicle's handling, braking, and stability.
Always ride at a safe speed for the load you are carrying.
- Avoid carrying an excessive load and keep within specified load limits.
Maximum weight capacity ➤ P. 153
- Tie all luggage securely, evenly balanced, and close to the centre of the vehicle.
- Do not place objects near the lights or the muffler.

WARNING


Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Basic Operation Flow

| Pre-ride Inspection ➡ P. 82

Carefully inspect your vehicle to make sure that it is safe to ride.

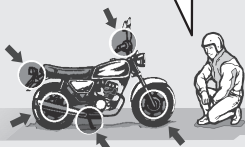

| Acceleration

Apply throttle gradually.
Obey the speed limit.



| Shifting Gears ➡ P. 71

| Starting the Engine ➡ P. 68

Start the engine.
Avoid revving the engine.



| Starting the Vehicle


Before pulling away, indicate your direction with the turn signal switch, and check for oncoming traffic.

How to use basic features.

- Instruments ➡ P. 18
- Indicators ➡ P. 57
- Switches ➡ P. 58
- Steering Lock ➡ P. 60
- Idling Stop System ➡ P. 65



| Braking

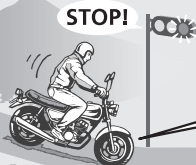

Close the throttle and apply the front and rear brakes together.
► The brakelight will indicate that you have applied the brakes.


| Stopping

If pulling off the road, signal early enough to show traffic that you are pulling over, and pull over smoothly.



| Turning Corners

Do your braking before entering corners.

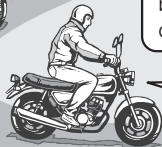

Gradually reapply throttle when exiting turn.

| Parking ➡ P. 10


Park on a firm level surface. Use the stand, and lock the steering.




| Refuelling ➡ P. 72




Parts Location

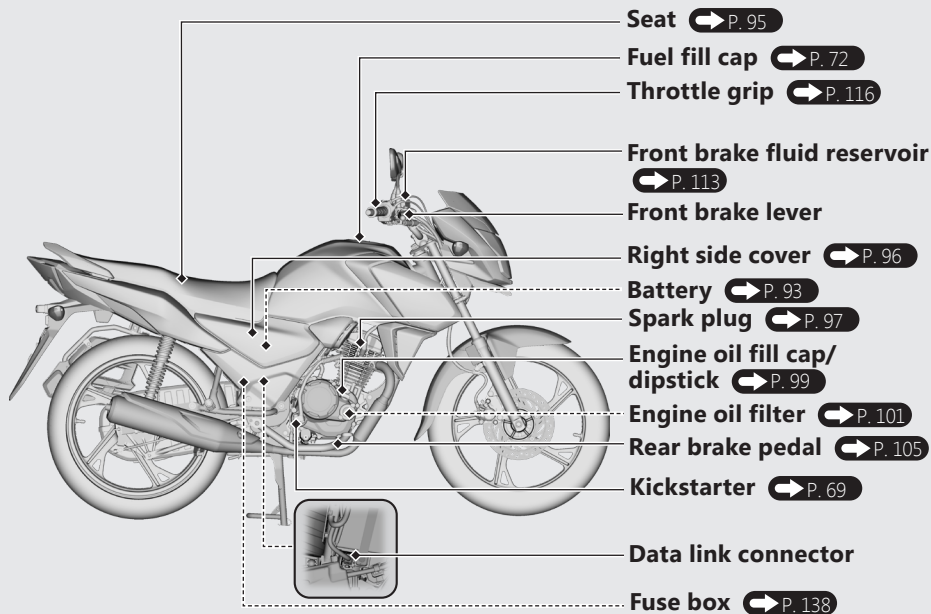


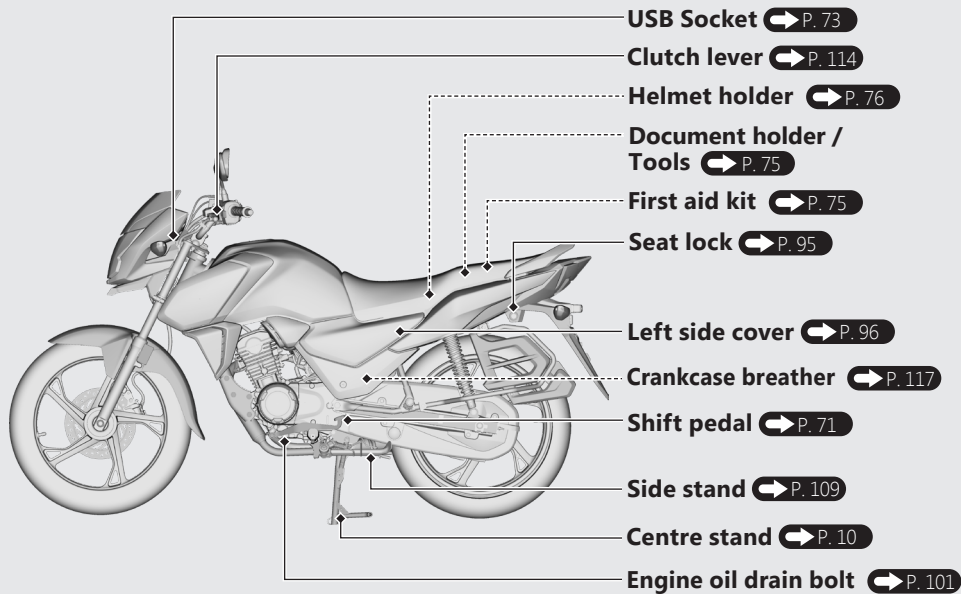

Instruments

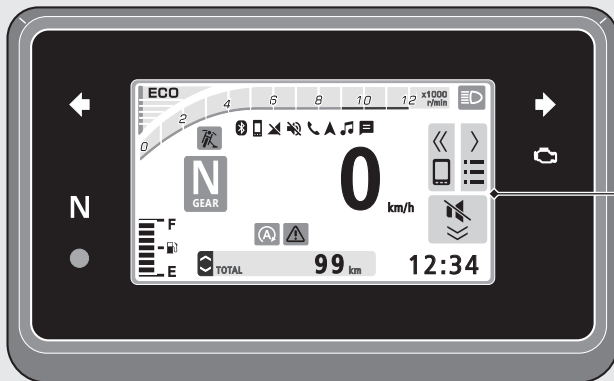

Do not operate the display functions for a long time with the engine stopped. It may result in a low (or dead) battery.

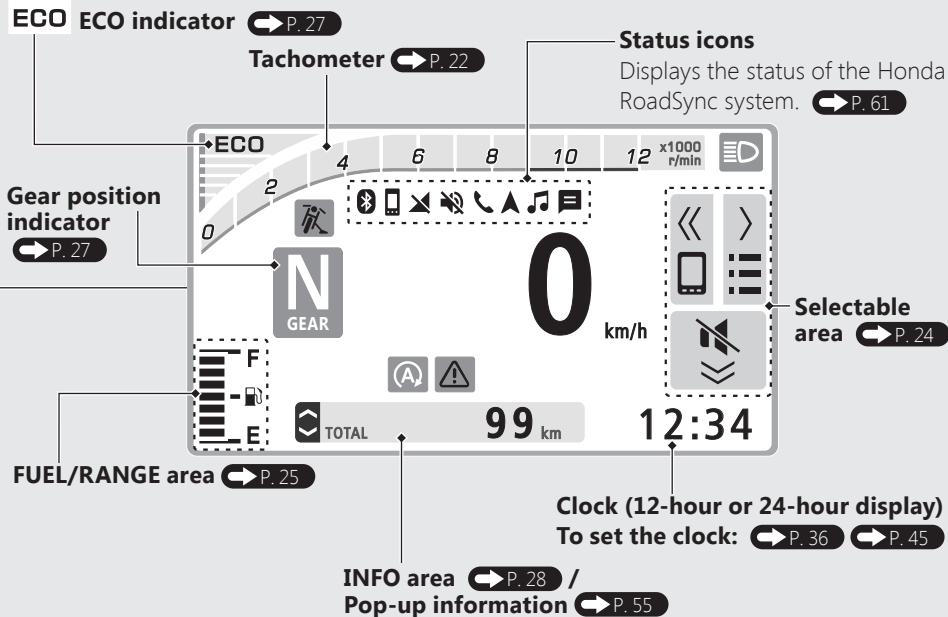

Instruments (Continued)




Side stand indicator ➡ P. 109

Comes on when the side stand is lowered. It goes off when the side stand is raised.

Speedometer ➡ P. 22



High beam indicator

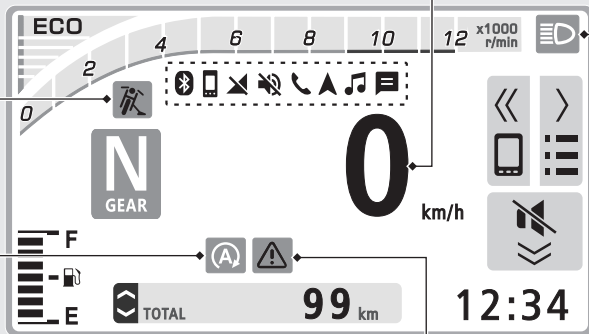

Idling Stop indicator

Comes on briefly when the Idling Stop switch is in the  (Idling Stop) position with the ignition switch turned on.

Idling Stop system: ➡ P. 65



Warning indicator

Comes on when your vehicle has warning information.

Also it is displayed as pop-up information in the INFO area. ➡ P. 53 ➡ P. 56

The meter has two display types.


The display and arrangement change depending on each display type.

Initial setting is BAR.

► Tachometer is available when display type is BAR.

To change the display type: ➡ P. 36

Display type: BAR

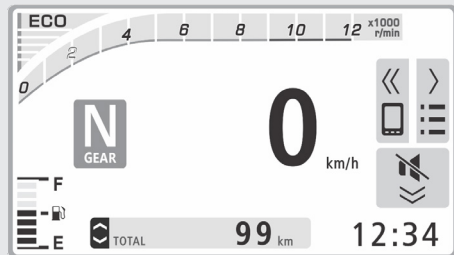

Display type: SIMPLE



Instruments (Continued)

Speedometer/Tachometer

Tachometer

Tachometer is available when display type is BAR.


DISPLAY TYPE setting:  P. 42

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(Excessive engine rpm range)

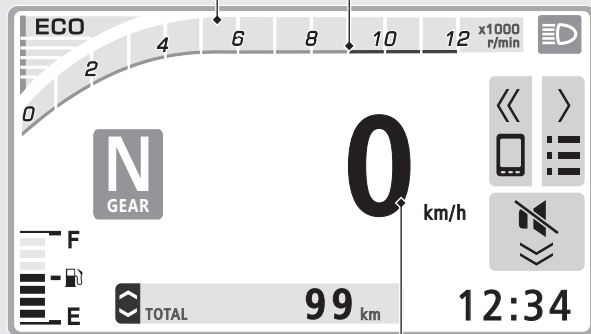


Speedometer

Basic Operations

You can operate and set the various functions of the display using the switches on the left handlebar.

When switching or setting the display, refer to the switch operation guide is displayed.

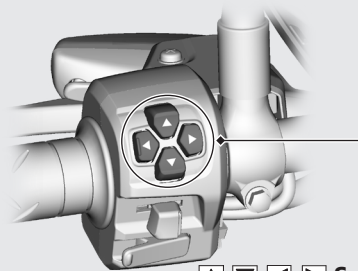

Type of the switch operation guide:

		▲ ▼ ◀ ▶ Sel switch
^	: Press the	▲ of the sel switch
v	: Press the	▼ of the sel switch
<	: Press the	◀ of the sel switch
>	: Press the	▶ of the sel switch
≡	: Press and hold the	▲ of the sel switch
≡	: Press and hold the	▼ of the sel switch
≡	: Press and hold the	◀ of the sel switch
≡	: Press and hold the	▶ of the sel switch

Instruments (Continued)

Selectable area


You can select the following:

- General menu  P. 33
- Honda RoadSync operation  P. 61
- Honda RoadSync mute

Honda RoadSync

Move to Honda RoadSync operation display

General menu

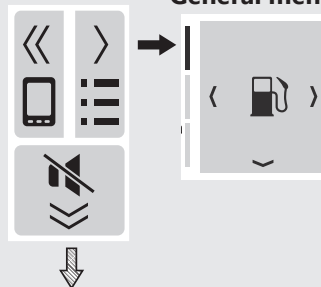

Honda RoadSync mute

Mute audio and sound

-  Press the  of the sel switch
-  Press and hold the  of the sel switch
-  Press and hold the  of the sel switch

FUEL/RANGE area

This area has two information.

You can choose whether to display the FUEL (fuel gauge) or RANGE (available driving distance).

To change the FUEL/RANGE mode: ➡ P. 34

FUEL



Remaining fuel when only 1st (E) segment starts flashing:
approximately 0.8 litres (0.21 US gal, 0.18 Imp gal)


If the fuel gauge indicator flashes in a repeat pattern or turns off: ➡ P. 123

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

Instruments (Continued)

RANGE

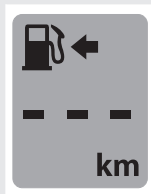

Displays the estimated distance you can travel on the remaining fuel.

The indicated available driving distance is calculated based on driving conditions, and the indicated figure may not always be the actual allowable distance.

Display range: 999 to 5 km (999 to 3 mile)

- Initial display: "---" is displayed.
- Above 999 km (mile): "999" is displayed.
- When the available driving distance is below 5 km (3 mile) or remaining fuel is below 1.0 L (0.26 US gal, 0.22 Imp gal), "---" is displayed.


When "---" is displayed except for the above-mentioned cases, go to your dealer for service.

Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ “-” appears when the transmission is not shifted properly.

Gear position indicator

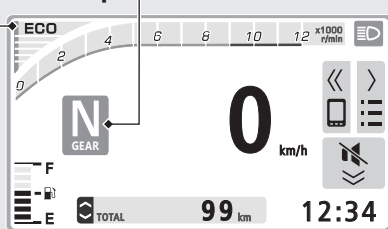

ECO ECO indicator

ECO indicator

The ECO indicator comes on according to the fuel mileage.

When the fuel consumption is improved, ECO indicator bar will rise.

To set the ECO indicator:

➡ P. 36 ➡ P. 41

Instruments *(Continued)*

Multi-information display


INFO area

Pressing the ▼ or ▲ of the sel switch switches between the information display selected in the FAVORITE INFORMATION setting.

FAVORITE INFORMATION setting:

➡ P. 36

➡ P. 44

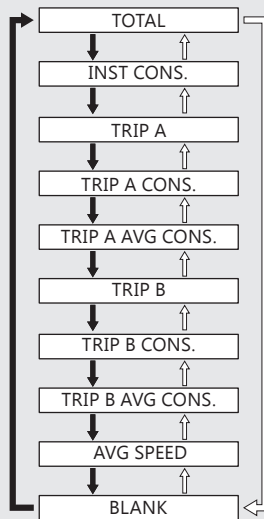

➡ Press the ▼ of the sel switch

⇨ Press the ▲ of the sel switch


You can select from below items as display information.

If no item is selected, the INFO area is not displayed.

- Odometer [TOTAL] ➡ P. 29
- Current fuel mileage [INST CONS.] ➡ P. 30
- Tripmeter A [TRIP A] ➡ P. 30
- Tripmeter A fuel consumption [TRIP A CONS.] ➡ P. 31
- Tripmeter A average fuel mileage [TRIP A AVG CONS.] ➡ P. 31
- Tripmeter B [TRIP B] ➡ P. 30
- Tripmeter B fuel consumption [TRIP B CONS.] ➡ P. 31
- Tripmeter B average fuel mileage [TRIP B AVG CONS.] ➡ P. 31
- Average speed [AVG SPEED] ➡ P. 32
- BLANK display. ➡ P. 32

! Odometer [TOTAL]

Total distance ridden.



When "-----" is displayed, go to your dealer for service.

Instruments *(Continued)*

| Current fuel mileage [INST CONS.]


Displays the current instant fuel mileage.

Display range: 0 to 80 km/L or
0 to 4 L/100 km

- When your speed is less than 5 km/h (3 mph): zero segment is displayed.



Zero segment



When it is not displayed properly except for the above-mentioned case, go to your dealer for service.

| Tripmeter [TRIP A/B]

Distance ridden since tripmeter was reset.



When "----.-" is displayed, go to your dealer for service.

To reset the tripmeter: ➡ P. 33

➡ P. 34

Fuel consumption [TRIP A/B CONS.]

Displays the fuel consumption since the selected tripmeter was reset.

The fuel consumption will be calculated based on value of the tripmeter A or B.

Display range: 0.0 to 299.9 L.

 TRIP A
CONS **2.0** L

 TRIP B
CONS **1.8** L

When "---.-" is displayed, go to your dealer for service.

To reset the fuel consumption:  P. 34

Average fuel mileage [TRIP A/B AVG CONS.]

Displays the average fuel mileage since the selected tripmeter A or B was reset.

The average fuel mileage will be calculated based on value of the tripmeter A or B.

 TRIP A
AVG CONS **51.0** km/L

 TRIP B
AVG CONS **65.8** km/L

Display range: 0.0 to 299.9 km/L or
0.0 to 299.9 L/100 km

- Above 299.9 L/100km : "---.-" is displayed.
- Less than 0.1 km/L or L/100km : "0.0" is displayed.
- More than 299.9 km/L : "299.9" is displayed.
- When the tripmeter A or B is reset: "---.-" is displayed.

When "---.-" is displayed except for the above mentioned cases, go to your dealer for service.

To reset the average fuel mileage:

 P. 34

Instruments *(Continued)*

| Average speed [AVG SPEED]

Displays the average speed since when the engine starts.

Display range: 0 to 199 km/h

Initial display: "---" is displayed.

- When your vehicle has traveled less than 0.2 km (0.12 mile) since the engine was started: "---" is displayed.
- When your vehicle operating time is less than about 15 seconds since the engine was started: "---" is displayed.



AVG SPEED

55 km/h

When "---" is displayed except for the above mentioned cases, go to your dealer for service.


| BLANK display

Displays the blank.

General menu

Pressing the  of the sel switch opens the general menu.

Pressing the  or  of the sel switch can switch between the fuel mode, tripmeter reset, and setting mode and pressing the  of the sel switch opens each display.

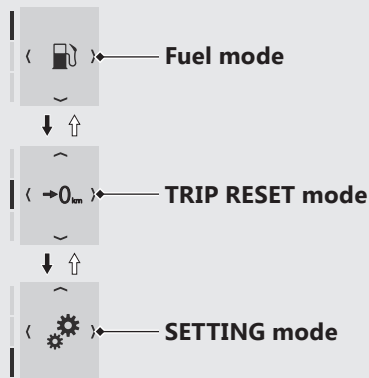

→ Press the  of the sel switch

⇨ Press the  of the sel switch

Pressing the  of the sel switch closes the general menu.

Pressing none of switch for about 10 seconds also closes the general menu except when the status display is selected.


Instruments (Continued)

Fuel mode


You can select whether to display FUEL or RANGE in the FUEL/RANGE area. ➡ P. 25

► If button is not pressed for 10 seconds, display switches to ordinary display.

1. Select the Fuel mode and press the  of the sel switch. ➡ P. 33

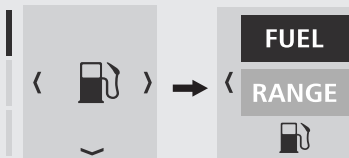


2. Select the FUEL or RANGE by pressing the  or  of the sel switch.

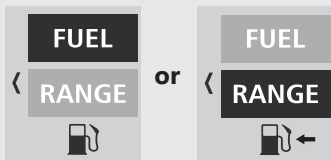

TRIP RESET mode

1. Select the TRIP RESET mode and press the  of the sel switch. ➡ P. 33

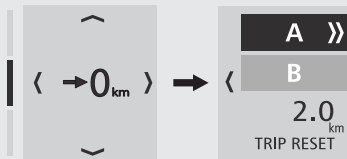

2. Select the tripmeter A or B using the  or  of the sel switch.



3. Press and hold the  of the sel switch.
- When the tripmeter A/B is reset, fuel consumption [TRIP A/B CONS] and average fuel mileage [AVG CONS. A/B] based on each tripmeter are reset at the same time.



Also, the tripmeter A, tripmeter A fuel consumption, and tripmeter A average fuel mileage can be automatically reset when the fuel gauge increases over 2 segments after refuelling.

You can turn on or off this function.

TRIP A AUTO RESET:  P. 41.

SETTING mode

Press the  of the sel switch to shift to setting mode.

- To shift to setting mode, stop the vehicle.



Setting mode:  P. 36

Instruments (Continued)


SETTING mode

To shift to the setting mode


Press the  of the sel switch when the selectable area displays setting mode  P. 33

- ▶ The clock, indicators, and speedometer are displayed at the top of the screen while the setting mode is displayed.

Ordinary display

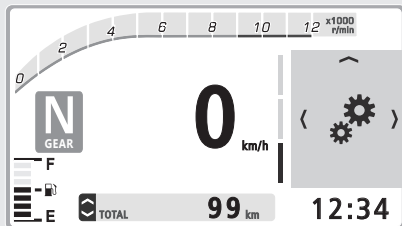


Setting mode

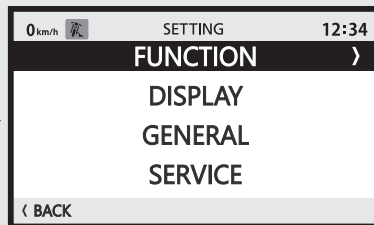

To return to the ordinary display


- Press the  of the sel switch during selecting FUNCTION, DISPLAY, GENERAL, or SERVICE.
- Turn the ignition switch to the OFF position and to the ON position again.

Setting flow

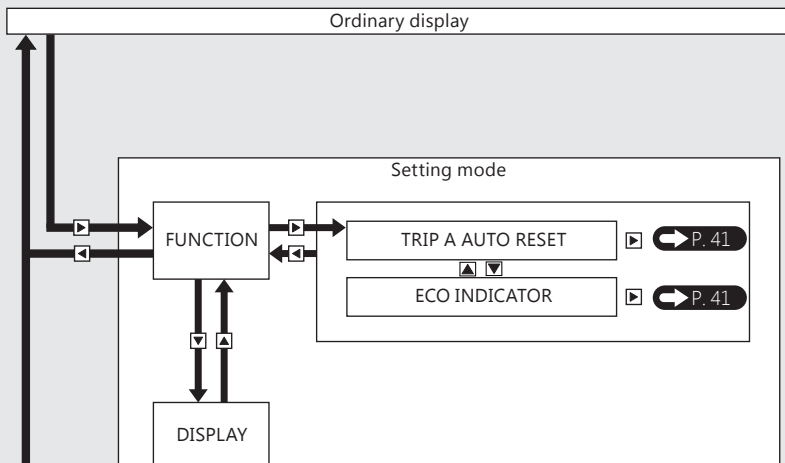


→ Press

Instruments (Continued)

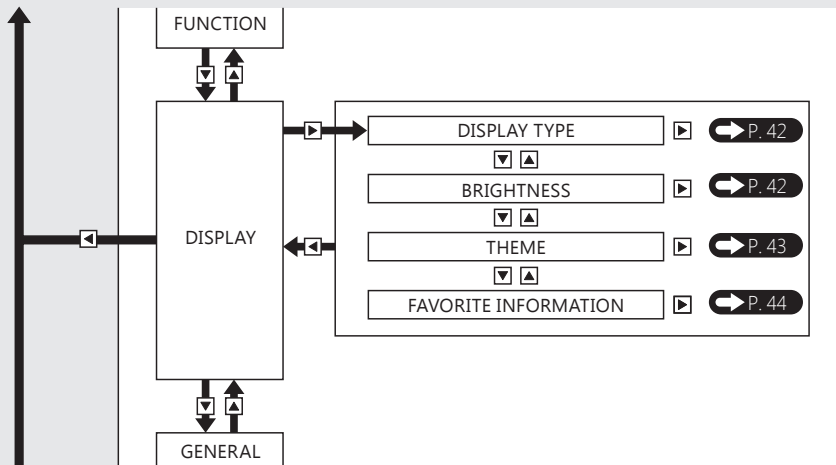


→ Press

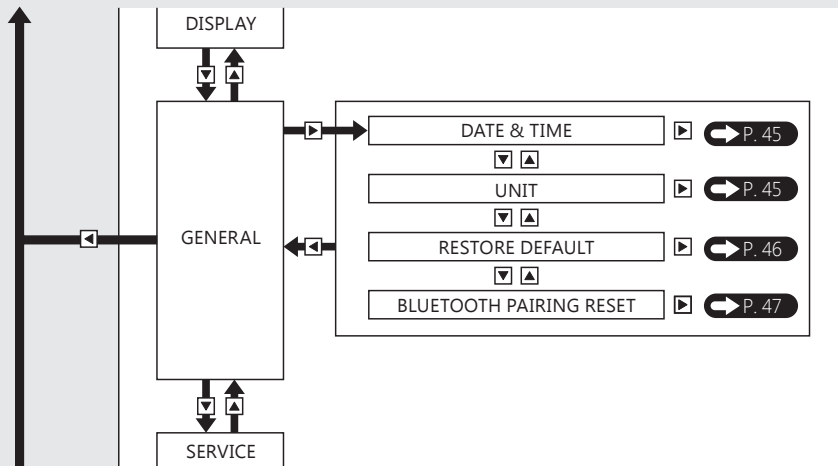

→ Press

Instruments (Continued)

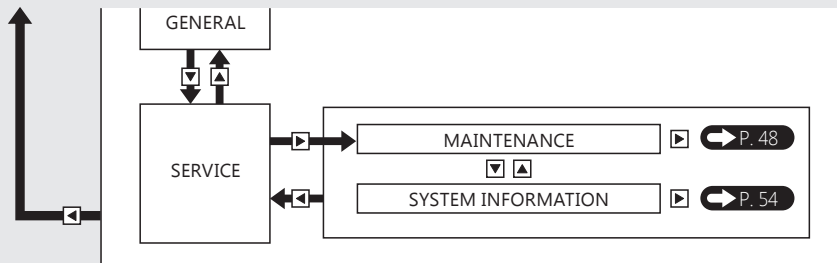

→ Press

TRIP A AUTO RESET

You can enable or disable the tripmeter A automatic reset mode. ➡ P. 34

- 1 Enable or disable by pressing the  of the sel switch.

Enable



Disable




- 2 Press the  on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➡ P. 36
To continue setting, press the  on the sel switch to return to the upper hierarchy.
▶ The set value is retained.

ECO INDICATOR

You can enable or disable the eco indicator. ➡ P. 27

- 1 Enable or disable by pressing the  of the sel switch.

Enable

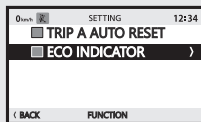

Disable




- 2 Press the  on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➡ P. 36
To continue setting, press the  on the sel switch to return to the upper hierarchy.
▶ The set value is retained.

Instruments (Continued)

| DISPLAY TYPE

You can change the display type. ➡ P. 21

- ① Select the display type ("BAR", or "SIMPLE") using the ▲ or ▼ on the sel switch.

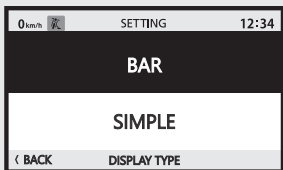

- ② Press the ◀ of the sel switch to complete the setting.
- ③ Return to the ordinary display to complete the setting. ➡ P. 36
To continue setting, press the ◀ on the sel switch to return to the upper hierarchy.
▶ The set value is retained.


| BRIGHTNESS

You can adjust the backlight brightness to one of the eight levels or select the auto adjustment.

Automatic brightness control: ➡ P. 143

The display can become dark when the display is very hot. If it does not restore the original brightness, contact your dealer.

- ① Select the backlight brightness mode ("AUTO", or "MANUAL") using the ▲ or ▼ on the sel switch.

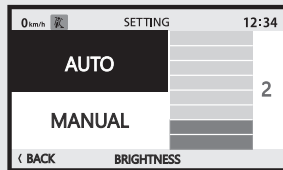


② When select the "AUTO"

Press the  of the sel switch to complete the setting.

When select the "MANUAL"

Press  on the sel switch to select the backlight brightness using  or  on the sel switch.

Press  on the sel switch to complete the setting.

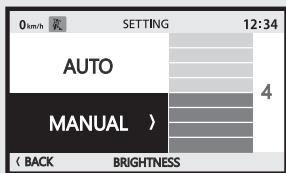

③ Return to the ordinary display to complete the setting. ➡ P. 36

To continue setting, press the  on the sel switch to return to the upper hierarchy.


► The set value is retained.

THEME

You can change the setting of the theme to "LIGHT," "DARK," or "AUTO" adjustment.

① Select the theme type using the or on the sel switch.

► In "AUTO" type, light or dark theme is automatically selected by system based on backlight brightness.

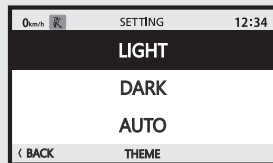

② Press the of the sel switch to complete the setting.

③ Return to the ordinary display to complete the setting. ➡ P. 36

To continue setting, press the  on the sel switch to return to the upper hierarchy.


► The set value is retained.

Instruments (Continued)

FAVORITE INFORMATION

You can change the information items displayed in the INFO area. ➡ P. 28


- ① Select the desired information item using the ▲ or ▼ on the sel switch.
- ② Enable or disable display of selected information item using the ► on the sel switch.
 - ▶ When the bar turns to green, the item is displayed in INFO area.
 - ▶ Up to 10 items are available. (Including BLANK)

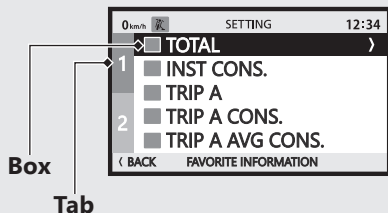

- ③ Press the ◀ of the sel switch to complete the setting.
- ④ Return to the ordinary display to complete the setting. ➡ P. 36
 - To continue setting, press the ◀ on the sel switch to return to the upper hierarchy.
 - ▶ The set value is retained.

DATE & TIME

- ① Select the Hour, Minute, Day, Month, Year, "12/24", and "AM / PM" using  or  on the sel switch.
- ② Select the desired setting using  or  on the sel switch.
 - ▶ When "12/24" is set to 24-hour indication, "AM / PM" cannot be usable.

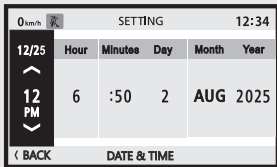


- ③ Press the  of the sel switch to complete the setting.
- ④ Return to the ordinary display to complete the setting.  P. 36
To continue setting, press the  on the sel switch to return to the upper hierarchy.
▶ The set value is retained.

UNIT

You can change the fuel mileage meter units.

- ① Select the desired setting using  or  on the sel switch.

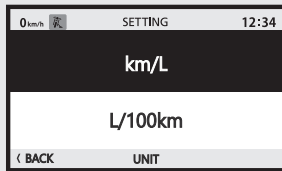

- ② Press the  of the sel switch to complete the setting.
- ③ Return to the ordinary display to complete the setting.  P. 36
To continue setting, press the  on the sel switch to return to the upper hierarchy.
▶ The set value is retained.

Instruments (Continued)

RESTORE DEFAULT

The set values can be returned to the default settings.

- 1 Press and hold the  on the sel switch.
The set value return to default setting.



- 2 Press  on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting.  P. 36

To continue setting, press the  on the sel switch to return to the upper hierarchy.

► The set value is retained.

The following items are restored to their default values:

- DISPLAY TYPE
- ECO INDICATOR
- BRIGHTNESS
- THEME
- FAVORITE INFORMATION
- UNIT
- TRIP A AUTO RESET

Bluetooth PAIRING RESET

You can reset the pairing record of *Bluetooth*®.

Reset a *Bluetooth*® pairing record after stopping at a safe place

To connect the device: ➡ P. 63

Make sure smartphone that you want to delete connection is connected to your vehicle.

To check if the smartphone is connected: ➡ P. 19

- ① Select the "NO" (not reset) or "YES" (reset) using the ◀ or ▶ on the sel switch.
- ② When the "NO" is selected
Press the ◀ of the sel switch. The pairing record is maintained, and then the display returns to the upper level hierarchy.

When the "YES" is selected

Press and hold the ▶ on the sel switch. Your smartphone connection is deleted and the pairing record is reset.

- ▶ When reset is complete, "FINISHED" will be displayed.



- ▶ If the pairing information remains in your smartphone even if the pairing information is deleted from the vehicle, the smartphone may be connected to the vehicle again.



Instruments (Continued)

SERVICE

| MAINTENANCE

You can select the following:

- PERIODIC MAINTENANCE ➡ P. 49
- OIL CHANGE ➡ P. 51
- WARNING INFORMATION ➡ P. 53

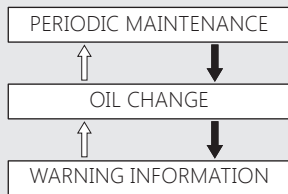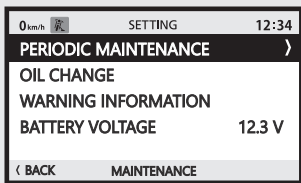


- ➡ Press the ▼ of the sel switch
- ⇨ Press the ▲ of the sel switch

PERIODIC MAINTENANCE

You can check the next periodic inspection time.

You can change the setting of the next periodic inspection time. ➡ P. 50

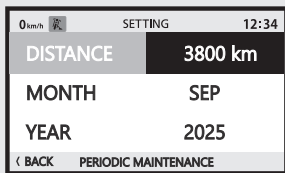

Display range:

DISTANCE:

-----, 6,000 to -99,999 km

► Pass 0 km: "-----" mark is displayed.

DATE:


Month: ---, JAN to DEC

Year: ----, 2020 to 2099

Instruments (Continued)

Next inspection setting

- ① Select the distance, month or year using  or  on the sel switch.

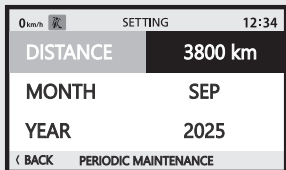


- ② Press  on the sel switch to change the setting.
- ③ Select the desired setting using  or  on the sel switch.
 - ▶ If you press  or  on the sel switch while setting the distance, it will move every 100.
 - ▶ If you press and hold  on the sel switch while setting the distance, it will move to next 1000 figure.

- ▶ Available setting range of the distance:
-----, 100 to 6,000 km
Initial setting:-----
- ▶ Available setting range of the date:
Month:---, JAN to DEC
Initial setting:---
Year: ----, 2020 to 2099
Initial setting:----
- ▶ Maintenance information  P. 55 will not be displayed if the distance and date are set to the initial settings.

- ④ Press  on the sel switch to complete the setting.
- ⑤ Return to the ordinary display to complete the setting.  P. 36
To continue setting, press the  on the sel switch to return to the upper hierarchy.
 - ▶ The set value is retained.

OIL CHANGE

You can check the next engine oil change.
You can program a reminder for the next engine oil change. ➡ P. 52

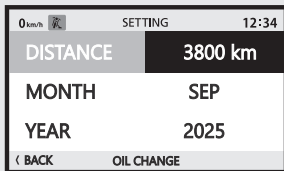

Display range:

DISTANCE:

-----, 6,000 to -99,999 km

▶ Pass 0 km: "-----" mark is displayed.

DATE:


Month: ---, JAN to DEC

Year: ----, 2020 to 2099

Instruments (Continued)

Next oil change setting

- ① Select the distance, month or year using  or  on the sel switch.

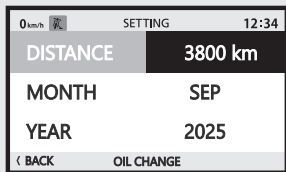


- ② Press  on the sel switch to change the setting.
- ③ Select the desired setting using  or  on the sel switch.
 - ▶ If you press and hold  on the sel switch while setting the distance, it will move every 1000.

- ▶ Available setting range of the distance:
-----, 100 to 6,000 km
Initial setting:-----
 - ▶ Available setting range of the date:
Month:---, JAN to DEC
Initial setting:---
Year: ----, 2020 to 2099
Initial setting:----
 - ▶ Maintenance information  P. 55 will not be displayed if the distance and date are set to the initial settings.
- ④ Press  on the sel switch to complete the setting.
 - ⑤ Return to the ordinary display to complete the setting.  P. 36
To continue setting, press the  on the sel switch to return to the upper hierarchy.
 - ▶ The set value is retained.

The pop-up information appears in the ordinary display when it reaches either of the following. ➡ P. 55

- 500 km (300 mile) before the next periodic inspection.
- 100 km (60 mile) before the next engine oil change.
- One month before the set month.

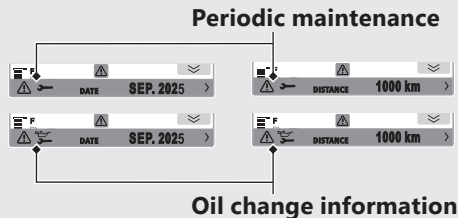


WARNING INFORMATION

Displays each warning information and maintenance information.

- ▶ If there is no warning information to display, it displays nothing.
- ▶ If there is a warning information, see your dealer for service.

Warning information

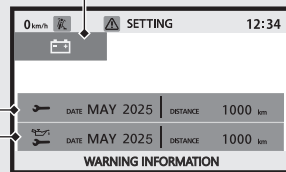


Maintenance information

Instruments (Continued)


BATTERY VOLTAGE

Displays the current voltage but not selectable.

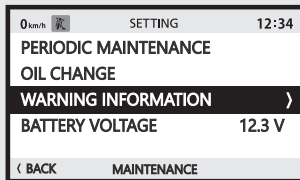

SYSTEM INFORMATION

Displays the software version and hardware information.

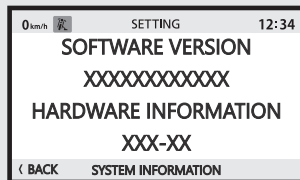

Pop-up information

In the following cases, pop-up information appear at the INFO area

- Maintenance information:

When the inspection timing of your vehicle is approaching.

- Warning information:

When your vehicle has warning information.

When your vehicle has multiple pieces of information, pop-up information display appears alternately.

Maintenance Information

Indication	Explanation	Remedy
	When the periodic maintenance time or distance of your vehicle is approaching.	Have your vehicle inspected by your dealer.
		
	When the oil change time or distance of your vehicle is approaching.	Change the engine oil.
		

Instruments (Continued)

| Warning Information

Indication	Explanation	Remedy
	Appears when vehicle has low battery voltage or battery performance degradation	Refer to "Battery Charging condition indicator". ➔ P. 122


You can hide the pop-up information by pressing either the     of the sel switch while the pop-up information is displayed.

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems. Refer to the "Instruments" about indicators appeared on the display: ➡ P. 19 ➡ P. 20



Left turn signal indicator

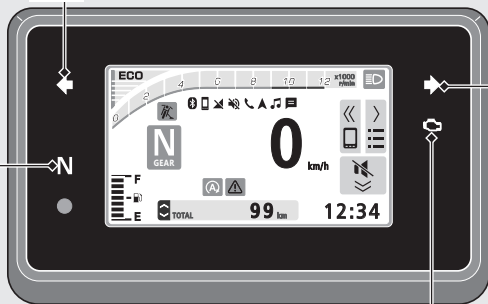

Right turn signal indicator

N

N

Neutral indicator

Comes on when the transmission is in Neutral.




PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on or flashes while engine is running: ➡ P. 122

Switches

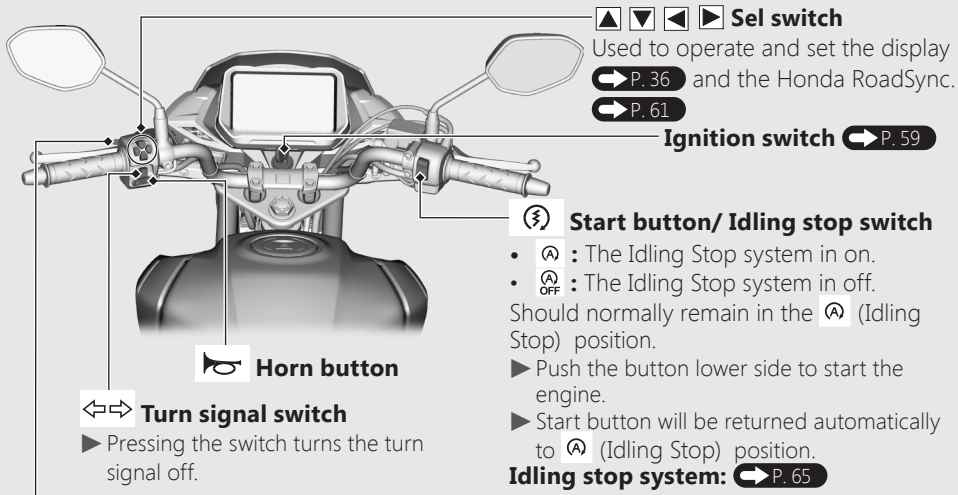

Headlight dimmer/ Passing light control switch

- : High beam
- : Low beam
- : Flashes the high beam headlight

Ignition switch

Switches the electrical system on/off, locks the steering.

- Key can be removed when in the OFF or LOCK position.

Steering Lock: ➡ P. 60

ON


Turns electrical system on for starting/riding.

OFF

Turns engine off.

LOCK

Locks steering.


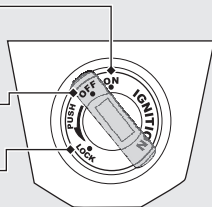


Switches *(Continued)*

Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

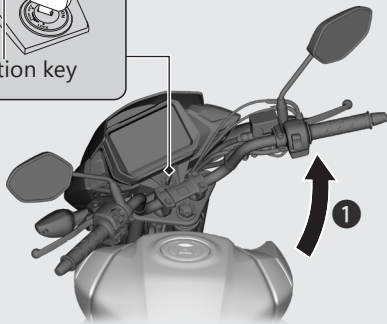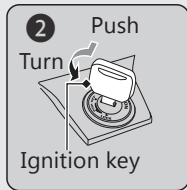

Locking

- 1 Turn the handlebar all the way to the left or right.
- 2 Push the key down, and turn the ignition switch to the LOCK position.
 - ▶ Jiggle the handlebar if the lock is difficult to engage.
- 3 Remove the key.

Unlocking

Insert the key, and turn the ignition switch to the OFF position.

Honda RoadSync

Connecting your smartphone with the vehicle and a *Bluetooth*® headset via *Bluetooth*® allows you to operate the smartphone by voice input from the headset. You can also use the system by operating switches on the handlebar.

- To use the system, you need to install the dedicated application on your smartphone beforehand and pair your smartphone with the vehicle and the headset.

For terms of service and information on how to install/operate the dedicated application, see the following URL:

<https://global.honda/voice-control-system/>



- The dedicated application is not available in some regions/countries.
For available countries, see the above URL.

Communication range:

Within 1 meter radius from vehicle.

Supported *Bluetooth*® version/profiles

<i>Bluetooth</i> ® version	Bluetooth 4.2 or higher
<i>Bluetooth</i> ® profiles	GATT (Generic Attribute Profile)
	HOGP (HID over GATT Profile)

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

Honda RoadSync *(Continued)*

- Costs of network communication and communication equipment necessary for the use of this feature shall be borne by the user.
- You cannot pair two or more smartphones at once.
- Some smartphones may not be compatible with the feature.
- We shall not be liable for any damages or trouble in the use of smartphones.
- When unable to connect your smartphone to the vehicle, change the storage location of the smartphone.

The system itself has certain limitations. Therefore, you must verify the voice guidance and information in the meter provided by the system by carefully observing the roadway, signs, and signals, etc. If you are unsure, proceed with caution. Always use your own good judgement, and obey traffic laws while riding.

WARNING

Using the Honda RoadSync while riding can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

- Be especially cautious when crossing intersections, in heavy traffic, etc.
- Carefully observe the roadway, signs, and signals.
- Obey traffic laws while riding.

■ Honda RoadSync Limitations

Changes in operating systems, hardware, software, and other technology integral to providing Honda RoadSync functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Honda RoadSync functionality and services.

Honda cannot and does not provide any warranty or guarantee of future Honda RoadSync performance or functionality.


■ Pairing your smartphone via Bluetooth®

For operation of the application, follow the instruction of the application. Make a Bluetooth® pairing after stopping at a safe place.

Only one smartphone can be connected at the same time.


To connect other smartphone, reset the Bluetooth® pairing record ➡ P. 47

- 1 Select the BLUETOOTH PAIRING RESET menu. ➡ P. 36 ➡ P. 47
- 2 Press and hold the  on the sel switch to select "YES." ➡ P. 47
 - ▶ Press  of the sel switch to cancel the pairing. The display returns to the upper level hierarchy.

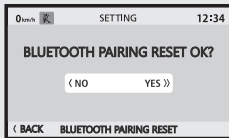

Honda RoadSync (Continued)

- 3 "PROCEEDING..." is displayed and the system will be in pairing standby. Perform the pairing operation by the application on your smartphone within about 2 minutes.

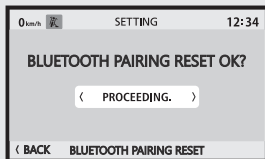

- On the ordinary display, the *Bluetooth*® indicator is flashing while waiting for pairing.

Bluetooth®
indicator



- For operation of the application, follow the instruction of the application.


- 4 When pairing is complete, "FINISHED" will be displayed.

- Even if you do not complete, "FINISHED" will be displayed about 2 minutes after.

Check the status icons to confirm pairing is complete. ➡ P. 19

If pairing is not completed, perform

1 to 3 again.

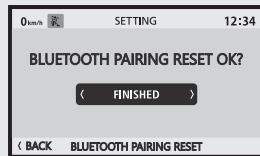

Idling Stop System

Idling Stop system is designed to help reduce the fuel consumption and noise, by idling stop while making a stop such as waiting at an intersection.

Switching the Idling Stop System On or Off

Switches the Idling Stop system on or off using the Start button/ Idling Stop switch.

- ON:  **(Idling Stop)**
 - ▶ Idling Stop indicator comes on when the Idling Stop system becomes ready to stop the engine while riding. Idling Stop indicator flashes when the engine is stopped by the Idling Stop system.
- OFF:  **(Idling)**
 - ▶ Idling Stop indicator does not come on when the Idling Stop system is off.

Activation of the Idling Stop System


The Idling Stop system becomes ready to stop the engine and Idling Stop indicator comes on when the following requirements are satisfied with the Start button/ Idling Stop switch in the  (Idling Stop) position:

- put the side stand up
- start the engine by pressing the start button
- warm up the engine enough
- ride the vehicle at speeds over 10 km/h (6 mph)


Idling Stop Indicator Does Not Come

On:  P. 124

Start button/Idling Stop switch

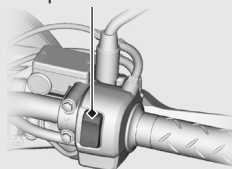

Idling Stop indicator




Idling Stop System *(Continued)*

Stopping the engine by the Idling Stop System

The engine stops and Idling Stop indicator changes to flash after you close the throttle completely and stop the vehicle in Neutral or any gear position with clutch fully disengaged while the Idling Stop indicator is on.

- ▶ While the engine is stopped by the Idling Stop system, if you press the Idling Stop switch to  (Idling), the Idling Stop system will be cancelled. The engine will not restart even when you open the throttle.

Idling Stop indicator



Safety Precaution for the Idling Stop System

Do not go away from the vehicle while the Idling Stop indicator is flashing. When you go away from the vehicle, always turn the ignition switch to the OFF position.

- ▶ The engine may start unexpectedly if the throttle is opened.

| Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On:  **P. 125**

NOTICE

Stopping by the Idling Stop system for a long time may cause battery discharge.

Restarting the Engine

Check that the Idling Stop indicator is flashing, and transmission in Neutral (**N** indicator comes on) or any gear position with the clutch fully disengaged, and then open the throttle.

- ▶ If it is not flashing, you can't restart the engine with the Idling Stop system, even if you open the throttle.
- ▶ While the engine is stopped by the Idling Stop system, if you operate the side stand, the flashing Idling Stop indicator turns off or stops flashing and stays on, then the engine will not restart even when you open the throttle.

Engine Does Not Start Even If the Throttle is Opened: ➡ P. 126

NOTICE

Headlight stays on after the engine is stopped by the Idling Stop system. The battery may discharge and you may not be able to restart engine.

When the battery is weak, switch the Idling Stop switch to  (Idling) and do not use the Idling Stop system. See your dealer to check the battery.

Always replace the battery with another maintenance-free battery of the same type. See your dealer for checking the battery as specified in the maintenance schedule.

Maintenance Schedule: ➡ P. 79



Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the OFF position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine and the exhaust system.
- Do not operate the kickstarter while the engine is running as engine damage could result. Do not apply excessive force on the kickstarter.
- Fold up the kickstarter after the kickstarter is returned to the pedal stop.

- 1 Turn the ignition switch to the ON position.
- 2 Shift the transmission to Neutral (**N** indicator comes on)

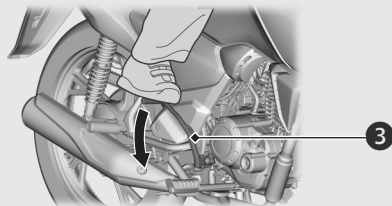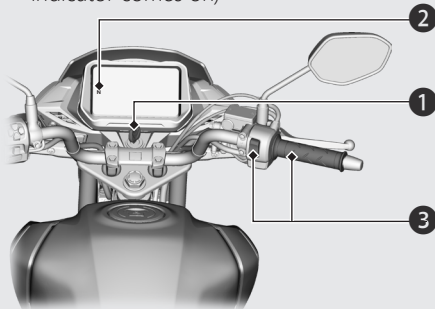

3 Using the start button

With the throttle completely closed, press the start button.

Using the kickstarter


With the throttle completely closed, operate the kickstarter starting from the top of the stroke, kick through to the bottom with a rapid, continuous motion.

Warm up the engine by opening and closing the throttle slightly.

If you cannot start the engine:

Open the throttle slightly (about 3 mm, without freeplay).

About 3 mm without freeplay

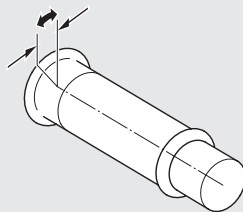

Starting the Engine *(Continued)*

If the engine does not start:

Using the start button

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait for 10 seconds before trying steps ① & ② again.

Using the kickstarter


- ① Turn the ignition switch to OFF.
- ② Open the throttle fully and crank the engine several times with the kickstarter.
- ③ Turn the ignition switch to ON.
- ④ Repeat the starting procedure.
- ⑤ If engine starts, open the throttle slightly if the idling is unstable.
- ⑥ If engine does not start, trying steps ①-④ again.

| If Engine Will Not Start ➡ P. 121

Shifting Gears


Your vehicle transmission has 5 forward gears in a one-down, four-up shift pattern when you shift with your toe.

You can also shift to a higher gear by depressing the shift pedal with your heel.

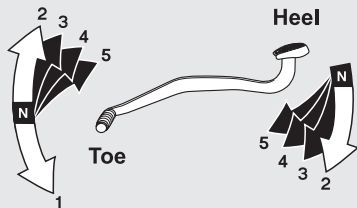

If you put the vehicle in gear with the side stand down, the engine will shut off.

Refuelling

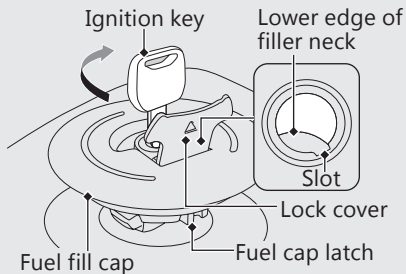

Do not fill with fuel above the lower edge of the filler neck.

Fuel type: Unleaded petrol only

Fuel octane number: Your vehicle is designed to use Research Octane Number (RON) 91 or higher.

Tank capacity: 11.0 litres (2.91 US gal, 2.42 Imp gal)

Refuelling and Fuel Guidelines ➔ P. 11
Opening the Fuel Fill Cap

Lift up the lock cover, insert the ignition key,

and turn it clockwise to open the cap.

Closing the Fuel Fill Cap

- 1 After refuelling, align the fuel cap latch with the slot in the filler neck. Push the fuel fill cap into the filler neck until it snaps closed and locks.
- 2 Remove the key and close the lock cover.
 - The key cannot be removed if the fuel fill cap is not locked.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flames away.
- Only handle fuel outdoors.
- Wipe up spills immediately.

USB Socket

The USB socket is located at the left side of headlight rear cover.

Use USB devices at your own risk. In no event shall Honda be liable for any damage to your USB device when in use.

Only USB devices within the following specifications can be connected.

USB type-C connectors can be used.


Rated capacity is

15 W (5 V, 3.0 A).

► The USB socket is for charging only. Do not connect USB devices that exceed the rated capacity. They may not be charged or work properly even if connected. For information on usage or malfunction of the USB device you connect, refer to its instruction manual.

To connect your USB device

- 1 Open the cover to access the USB socket.

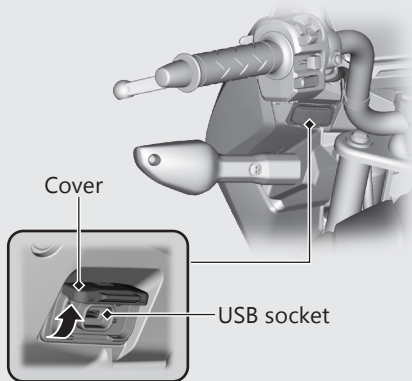

- 2 Connect a certified USB cable to the USB socket.

USB Socket *(Continued)*

- ▶ To prevent the battery from becoming weak (or dead), keep the engine running while drawing current from the USB socket.
- ▶ To prevent entry of foreign matter into the USB socket, be sure to close the cover when the USB socket is not used.
- ▶ Carefully secure all connected devices, as vibration may cause damage to them or they could shift unexpectedly.


NOTICE

- Using any heat-generating USB devices or improperly rated USB devices can damage the USB socket.
- Do not use the USB socket in wet conditions, when or while washing or any other wet conditions as these will damage the USB socket.
- Do not allow the USB's harness to become pinched or trapped.

Storage Equipment


First Aid Kit

First aid kit is located under the seat.

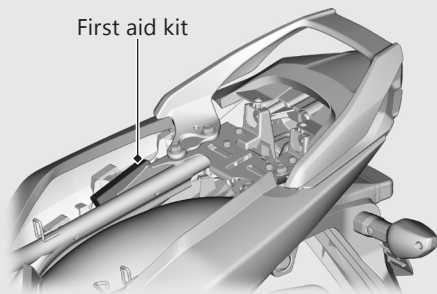

Document Holder/ Tools

Document holder and tools are available in the reverse side of the seat.

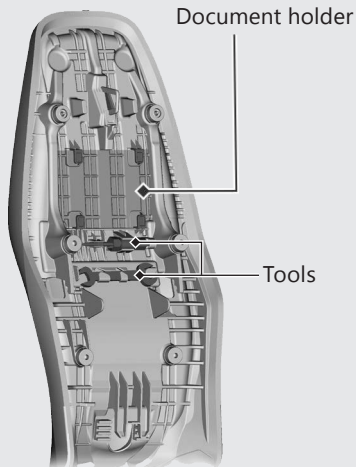


Removing the seat ➡ P. 95

Storage Equipment *(Continued)*

Helmet Holder

The helmet holder is located under the seat.

- Use the helmet holder only when parked.

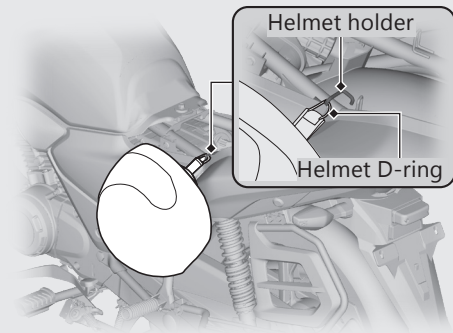

⚠ WARNING

Riding with a helmet attached to the holder can interfere with your ability to safely operate the vehicle and could lead to a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

Importance of Maintenance	P.78	Side Stand	P.109
Maintenance Schedule	P.79	Drive Chain	P.110
Maintenance Fundamentals	P.82	Clutch	P.114
Tools	P.92	Throttle	P.116
Removing & Installing Body Components	P.93	Crankcase Breather	P.117
Battery.....	P.93	Other Adjustments	P.118
Drive Chain Case.....	P.94	Adjusting the Headlight Aim.....	P.118
Seat.....	P.95	Adjusting the Rear Suspension.....	P.119
Side Cover.....	P.96		
Spark Plug	P.97		
Engine Oil	P.99		
Brakes	P.103		

Importance of Maintenance

Importance of Maintenance

Keeping your vehicle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your vehicle before each ride and perform the periodic checks specified in the Maintenance Schedule. ➡ P. 79

WARNING

Improperly maintaining your vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety

Always read the maintenance instructions before you begin each task and make sure that you have the tools, parts, and skills required. We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and remove the key.
- Place your vehicle on a firm, level surface using the side stand, centre stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

Maintenance Schedule

The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance and proper emission control.

Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your vehicle is properly maintained.

Make sure that whomever performs the maintenance completes this record.

All scheduled maintenance is considered a normal owner operating cost and will be charged to you by your dealer. Retain all receipts. If you sell the vehicle, these receipts should be transferred with the vehicle to the new owner.

Honda recommends that your dealer should road test your vehicle after each periodic maintenance is carried out.

Maintenance Schedule

Items		Pre-ride Check ➡ P.92	Odometer Readings *1								Annual Check	Regular Replace	Refer to Page
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
			Months	1	6	12	18	24	30	36			
Honda Diagnostic System	✂				I		I		I				–
Fuel Line	✂				I	I	I	I	I	I	I		–
Fuel Level		I											–
Throttle Operation	✂	I			I	I	I	I	I	I	I		116
Air Cleaner *2	✂						R			R			91
Crankcase Breather*3					C	C	C	C	C	C			117
Spark Plug					I	R	I	R	I	R			97
Valve Clearance	✂				I	I	I	I	I	I			–
Engine Oil		I		R	R	R	R	R	R	R	R		99
Engine Oil Filter						R		R		R			101
Engine Oil Strainer Screen	✂					C		C		C			–
Engine Idle Speed	✂			I	I	I	I	I	I	I	I		–
Evaporative Emission Control System	✂						I			I			–

Maintenance Level

- ✂ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- ✂✂ : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean
- L : Lubricate

Items		Pre-ride Check P.92	Odometer Readings *1								Annual Check	Regular Replace	Refer to Page
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
			Months	1	6	12	18	24	30	36			
Drive Chain		I	1000 km (600mi): I L										110
Battery	🔧				I	I	I	I	I	I		93	
Brake Fluid*4		I			I	I	I	I	I	I	2 Years	103	
Brake Pads/ Shoes Wear		I			I	I	I	I	I	I		104, 107	
Brake System		I		I	I	I	I	I	I	I		103	
Brakelight Switch					I	I	I	I	I	I		108	
Headlight Aim					I	I	I	I	I	I		118	
Lights/Horn		I										–	
Clutch System		I		I	I	I	I	I	I	I		114	
Side Stand		I			I	I	I	I	I	I		109	
Suspension	🔧				I	I	I	I	I	I		119	
Nuts, Bolts, Fasteners	🔧			I		I		I		I		–	
Wheels/Tires	🔧🔧	I			I	I	I	I	I	I		89	
Steering Head Bearings	🔧🔧					I		I		I		–	

Notes:

- *1 : At higher odometer reading, repeat at the frequency interval established here.
- *2 : Service more frequently when riding in unusually wet or dusty areas.
- *3 : Service more frequently when riding in rain or at full throttle.
- *4 : Replacement requires mechanical skill.

Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tyre, can be a major inconvenience.

Check the following items before you get on your vehicle:

- Fuel level - Fill fuel tank when necessary ➡ P. 82
- Throttle - Check for smooth opening and full closing in all steering positions. ➡ P. 132
- Engine oil level - Add engine oil if necessary
Check for leaks ➡ P. 109
- Drive chain - Check condition and slack, adjust and lubricate if necessary ➡ P. 126

- Brakes - Check operation;
Front: check brake fluid level and pads wear ➡ P. 103, 104
Rear: check shoes wear and freeplay, adjust if necessary ➡ P. 107, 105
- Lights and horn - Check that lights, indicators and horn function properly
- Clutch - Check operation;
Adjust freeplay if necessary ➡ P. 114
- Side stand ignition cut-off system - Check for proper function ➡ P. 109
- Wheels and tyres - Check condition, air pressure and adjust if necessary ➡ P. 89, 154

Replacing Parts

Always use Honda Genuine Parts or their equivalents to ensure reliability and safety.

WARNING

Installing non-Honda parts may make your vehicle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your vehicle.

Battery

Your vehicle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.



This symbol on the battery means that this product must not be treated as household waste.

NOTICE

An improperly disposed of battery can be harmful to the environment and human health.

Always confirm local regulations for proper battery disposal instruction.

What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
 - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
 - ▶ Remove affected clothing and wash your skin thoroughly using water.
- Electrolyte splashes into your mouth:
 - ▶ Rinse mouth thoroughly with water, and do not swallow.

WARNING

The battery gives off explosive hydrogen gas during normal operation.


A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

Cleaning the Battery Terminals

1. Remove the battery.  P. 93
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.

3. If the terminals are heavily corroded, clean and polish the terminals with a wire brush or sandpaper. Wear safety glasses.

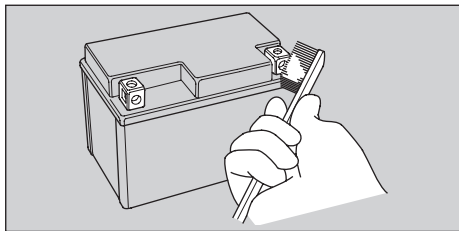

4. After cleaning, reinstall the battery.

The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.

NOTICE


Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

Fuses

Fuses protect the electrical circuits on your vehicle. If something electrical on your vehicle stops working, check for and replace any blown fuses. ➡ P. 138

Inspecting and Replacing Fuses

Turn the ignition switch to the OFF position to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➡ P. 155

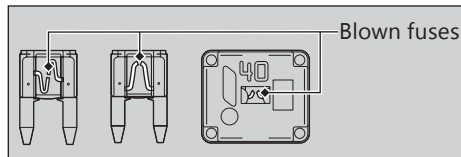

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

Maintenance Fundamentals

If a fuse fails repeatedly, you likely have an electrical fault. Have your vehicle inspected by your dealer.

Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


Selecting the Engine Oil

For recommended engine oil, see "Specifications." ➡ P. 154

If you wish to use other than recommended engine oil, check the label to make sure that the oil satisfies all of the following standards:


- JASO T 903 standard*1: MA
- SAE standard*2: 10W-30
- API classification*3: SJ or higher

*1.The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

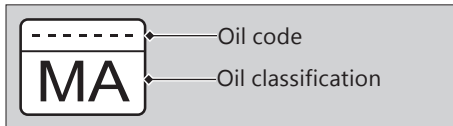

*2.The SAE standard grades oils by their viscosity.

*3.The API classification specifies the quality and performance rating of engine oils. Use SJ or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

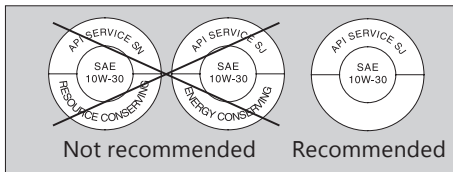

Brake Fluid

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces. Wipe up spills immediately and wash thoroughly.

Recommended brake fluid:


Honda DOT3 or DOT4 Brake Fluid or equivalent

Drive Chain

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration. ➡ P. 110

If the chain does not move smoothly, makes strange noises, has damaged rollers, has loose pins, has missing O-rings, or has kinks, have the chain inspected by your dealer.

Also inspect the drive sprocket and driven sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer.

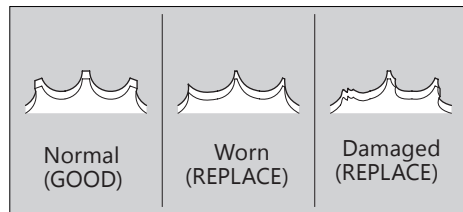

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.


Maintenance Fundamentals

Cleaning and Lubricating

After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use a dry cloth with chain cleaner designed specifically for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty. After cleaning, wipe dry and lubricate with the recommended lubricant.

Recommended lubricant:

Drive chain lubricant designed specifically for O-ring chains
If not available, use SAE 80 or 90 gear oil.

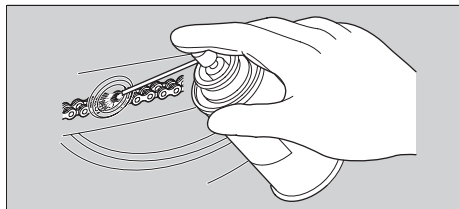

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as petrol and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specifically for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tyres.

Avoid applying excess chain lubricant to prevent spray onto your clothes and the vehicle.

Crankcase Breather

Service more frequently when riding in rain, at full throttle, or after the vehicle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

If the drain tube overflows, the air filter may become contaminated with engine oil, causing poor engine performance. ➤ P. 117


Tyres (Inspecting/Replacing)

Checking the Air Pressure

Visually inspect your tyres and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tyres look low. Always check air pressure when your tyres are cold.


Inspecting for Damage

Inspect the tyres for cuts, slits, or cracks that expose fabric or cords, or nails or other foreign objects embedded in the side of the tyre or the tread. Also inspect for any unusual bumps or bulges in the side walls of the tyres.

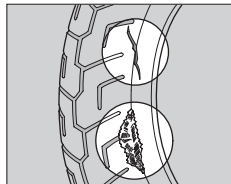


Inspecting for Abnormal Wear

Inspect the tyres for signs of abnormal wear on the contact surface.

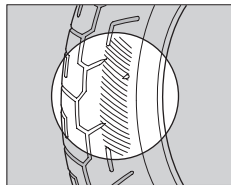

Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tyres immediately.

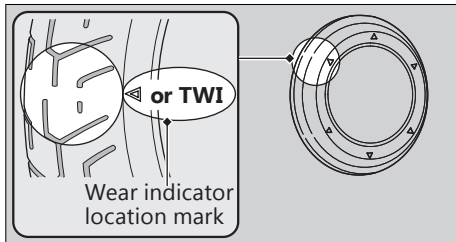

WARNING

Riding on tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Have your tyres replaced by your dealer.

For recommended tyres and air pressure, see "Specifications." ➡ P. 154

Follow these guidelines whenever you replace tyres:

- Use the recommended tyres or their equivalents of the same size, construction, speed rating, and load range.

- Do not install a tube inside a tubeless tyre on this vehicle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tyres on this vehicle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

! WARNING

Installing improper tyres on your vehicle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.


Always use the size and type of tyres recommended in this owner's manual.

Air Cleaner

This vehicle is equipped with a viscous type air cleaner element.

Air blow cleaning or any other cleaning can degrade the viscous element performance and cause the intake of dust.

Do not perform the maintenance. Should be serviced by your dealer.

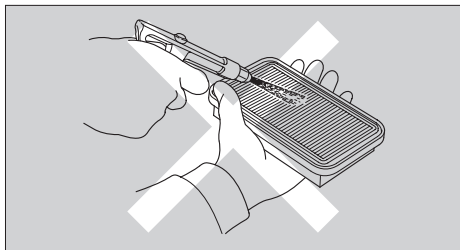

Tools


Tools are stored in the reverse side of the seat.

➔ P. 75


You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.

- 14 x 17 mm Open end wrench
- Spark plug wrench
- Standard/Phillips screwdriver

When using the screwdriver, use the spark plug wrench as a screwdriver handle.

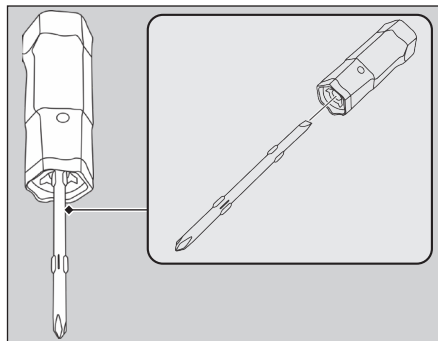

Battery

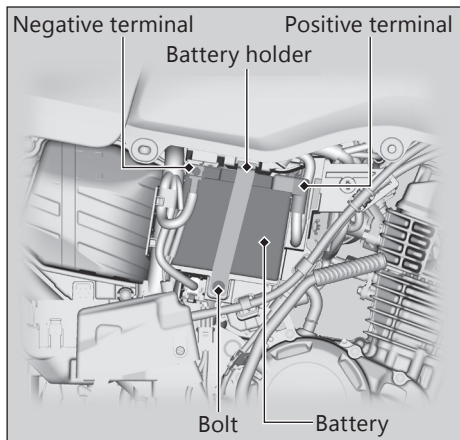

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the right side cover. ➡ P. 96
2. Remove the bolt.
3. Remove the battery holder.
4. Disconnect the negative $\ominus$ terminal from the battery.
5. Disconnect the positive $\oplus$ terminal from the battery.
6. Remove the battery, taking care not to drop the terminal nuts.


Installation

Install the parts in the reverse order of removal. Always connect the positive $\oplus$ terminal first. Make sure bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➡ P. 45, ➡ P. 62

For proper handling of the battery, see "Maintenance Fundamentals." ➡ P. 82
"Battery Goes Dead." ➡ P. 134

Drive Chain Case

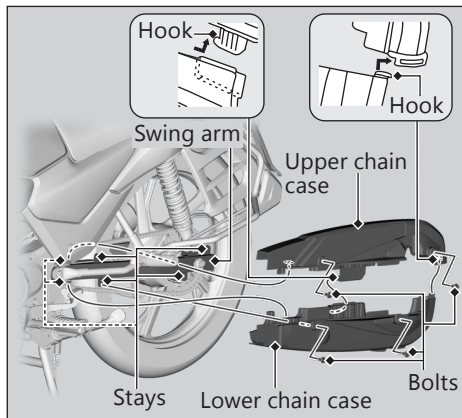

Removal


1. Remove the bolts.
2. Remove the drive chain case.

Installation

1. Match the holes and insertions of the upper chain case with the swing arm holes and stays.
2. Temporarily tighten the 2 bolts to hold upper chain case.
3. Fit the insertions of the upper and lower chain case with the swing arm stays.
 - The body will be slightly outside and appear like floating.
4. Slide the lower chain case to the rear and insert the hook.
5. Visually check that all hooks have been inserted.
6. Turn to the right side of the vehicle and check.
7. Tighten 4 bolts of the upper and lower chain case.

Torque: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Seat

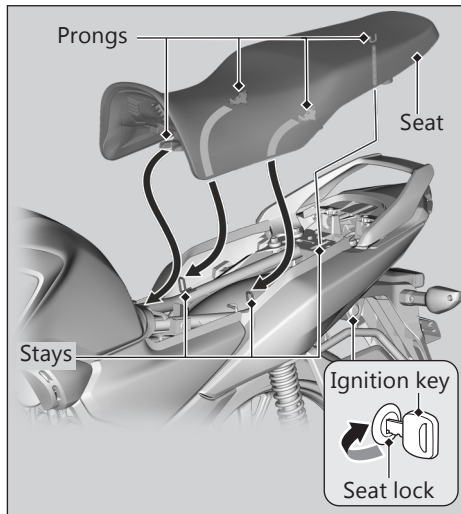

■ Removal

1. Insert the ignition key into the seat lock.
2. Turn it clockwise, then pull the seat up and back.

■ Installation


1. Insert the prongs into the stays on the frame.
2. Push forward and down on the rear of the seat until it locks in place.

Make sure that the seat is locked securely in position to pull it up lightly.

The seat locks automatically when closed.

Take care not to lock your key in the compartment under the seat.

Side Cover

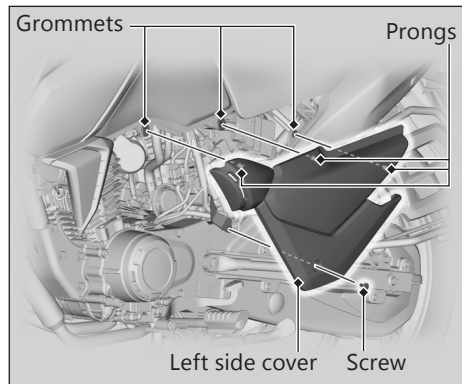

The right and left side covers can be removed in the same manner.

■ Removal

1. Remove the screw.
2. Remove the prongs from the grommets.
3. Remove the side cover.

■ Installation

Install the parts in the reverse order of removal.

Checking Spark Plug


For the recommended spark plug, see "Specifications". ➤ P. 154

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Disconnect the spark plug cap from the spark plug.
2. Clean any dirt from around the spark plug base.
3. Remove the spark plug using provided spark plug wrench. ➤ P. 92

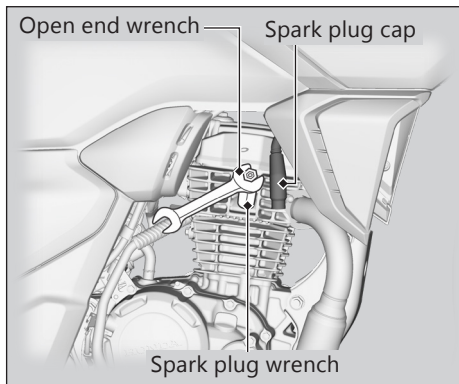


4. Inspect the electrodes and centre porcelain for deposits, erosion or carbon fouling.
 - If the erosion or deposit is heavy, replace the plug.
 - Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

Spark Plug ► Checking Spark Plug

5. Check the spark plug gap using a wire-type feeler gauge.
► If adjustment is necessary, bend the side electrode carefully.

The gap should be:

0.8 to 0.9 mm (0.03 to 0.04 in)

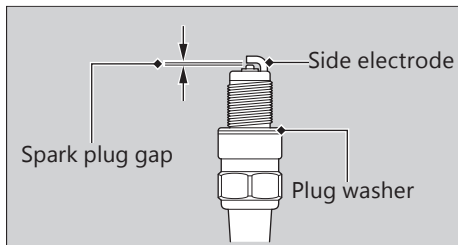

6. Make sure the plug washer is in good condition.
7. Install the spark plug. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.

8. Tighten the spark plug:

- If the old plug is good:
1/8 turn after it seats.
- If installing a new plug, tighten it twice to prevent loosening:
 - a) First, tighten the plug:
1/2 turn after it seats.
 - b) Then loosen the plug.
 - c) Next, tighten the plug again:
1/8 turn after it seats.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.


9. Install the parts in the reverse order of removal.

- When reinstalling the spark plug cap, take care to avoid pinching any cables or wires.

Checking the Engine Oil

Check the engine oil with the Idling Stop switch at **A OFF** (Idling).

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the OFF position and wait for 2 to 3 minutes.
3. Place your vehicle on its centre stand on a firm, level surface.
4. Remove the oil fill cap/dipstick and wipe it clean.
5. Insert the oil fill cap/dipstick until it seats, but don't screw it in.
6. Check that the oil level is between the upper level and lower level marks on the oil fill cap/dipstick.
7. Securely install the oil fill cap/dipstick.

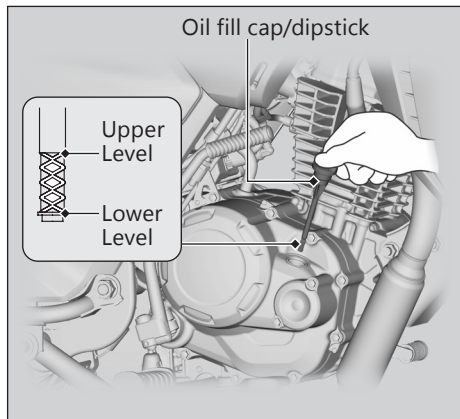

Adding Engine Oil

If the engine oil is below or near the lower level mark, add the recommended engine oil.

➡ P. 86, 154

1. Remove the oil fill cap/dipstick. Add the recommended oil until it reaches the upper level mark.
 - Place your vehicle on its centre stand on a firm, level surface when checking the oil level.
 - Do not overfill above the upper level mark.
 - Make sure no foreign objects enter the oil filler opening.
 - Wipe up any spills immediately.
2. Securely reinstall the oil fill cap/dipstick.

NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. They may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see "Maintenance Fundamentals".

➡ P. 86

Changing Engine Oil and Filter



Changing the oil and filter requires special tools. We recommend that you have your vehicle serviced by your dealer.

Use a new Honda Genuine oil filter or equivalent specified for your model.

NOTICE

Using the wrong oil filter can result in serious damage to the engine.

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the OFF position and wait for 2 to 3 minutes.
3. Place your vehicle on its centre stand on a firm, level surface.
4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap/dipstick, drain bolt, and sealing washer to drain the oil.

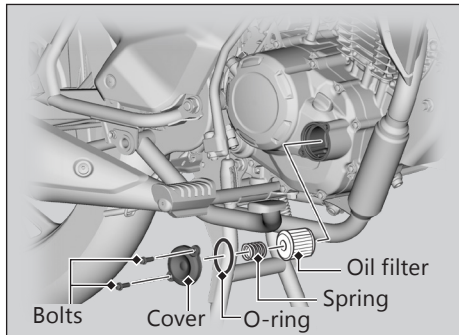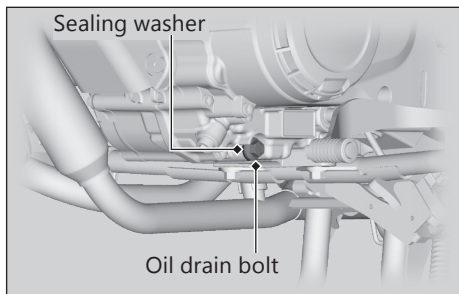

Engine Oil ► Changing Engine Oil and Filter

6. Remove the oil filter cover, oil filter, spring and O-ring by removing the oil filter cover bolts and let the remaining oil drain out.
 - Discard the oil and oil filter at an approved recycling centre.
7. Install the new oil filter with the OUT-SIDE mark facing out.
8. Install the new oil filter spring into the oil filter cover, and then install the new O-ring and oil filter cover by tightening the oil filter cover bolts.

Torque: 10 N·m (1.0 kgf·m, 7 lbf·ft)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 24 N·m (2.4 kgf·m, 18 lbf·ft)

10. Fill the crankcase with the recommended oil (► P. 86) and install the oil fill cap/dipstick.

Required oil

When changing oil & engine oil filter:

0.9 litres (0.95 US qt, 0.79 Imp qt)

When changing oil only:


0.9 litres (0.95 US qt, 0.79 Imp qt)

11. Check the oil level. ► P. 99

12. Check that there are no oil leaks.

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

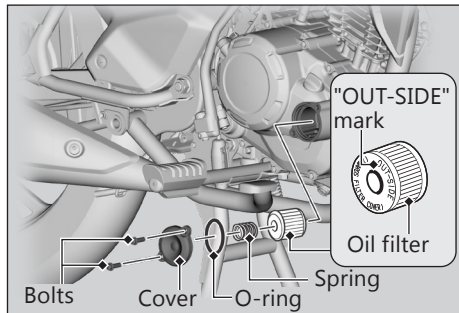


Checking Brake Fluid

1. Place your vehicle in an upright position on a firm, level surface.
2. Check that the brake fluid reservoir is horizontal and that the fluid level is above the LWR mark.

If the brake fluid level in the reservoir is below the LWR mark or the brake lever freeplay becomes excessive, inspect the brake pads for wear.

If the brake pads are not worn, you most likely have a leak. Have your vehicle inspected by your dealer.

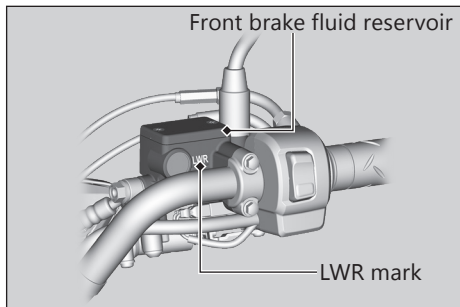

Inspecting the Front Brake Pads


Check the condition of the brake pad wear indicators.

The pads need to be replaced if a brake pad is worn to the bottom of the indicator.

Inspect the brake pads from in front of the brake caliper.

If necessary, have the pads replaced by your dealer.


Always replace both left and right brake pads at the same time.

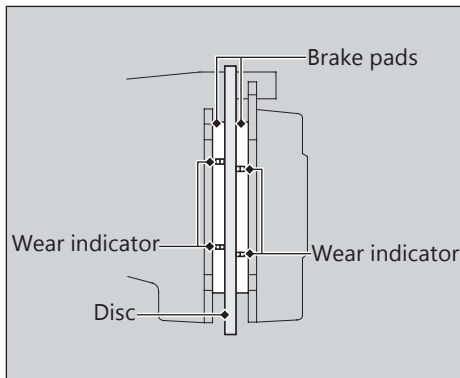

Inspecting the Rear Brake Pedal Freeplay

1. Place your vehicle on its centre stand on a firm, level surface.
2. Measure the distance the rear brake pedal moves before the brake takes hold.


Freeplay at the tip of the brake pedal: 20 to 30 mm (0.8 to 1.2 in)

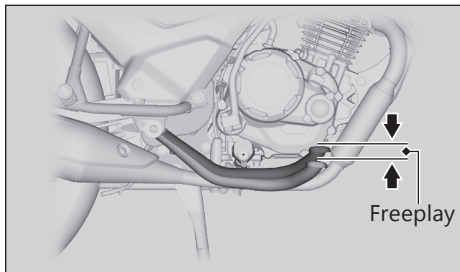


Make sure the brake rod, brake arm, spring and fastener are in good condition.

Adjusting the Rear Brake Pedal Freeplay

Make sure the cut-out on the adjusting nut is seated on the brake arm pin when adjusting the freeplay.

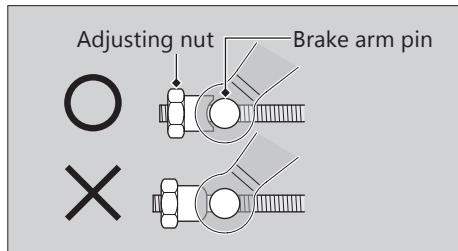


If proper adjustment cannot be obtained by this method, see your dealer.

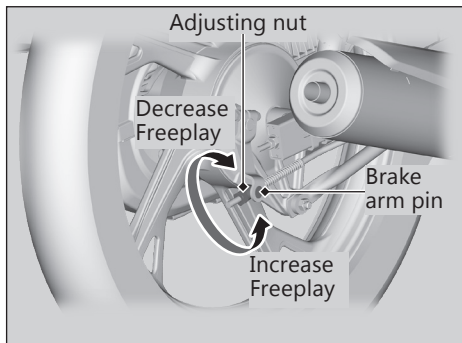Brakes ► Adjusting the Rear Brake Pedal Freeplay

1. Adjust by turning the rear brake adjusting nut a half-turn at a time.
2. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

3. Push the brake arm to confirm that there is a gap between the rear brake adjusting nut and brake arm pin.

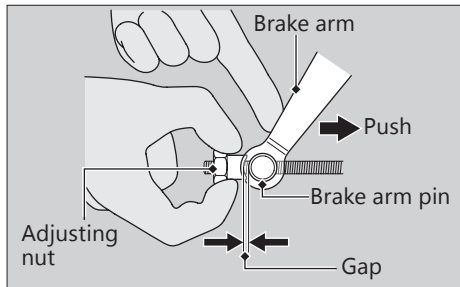

After adjustment, confirm the freeplay of the brake pedal.


Make sure the brake rod, brake arm, spring and fastener are in good condition.

NOTICE

Do not turn the adjuster beyond its natural limits.

Inspecting the Rear Brake Shoe Wear

The rear brake is equipped with a brake wear indicator.

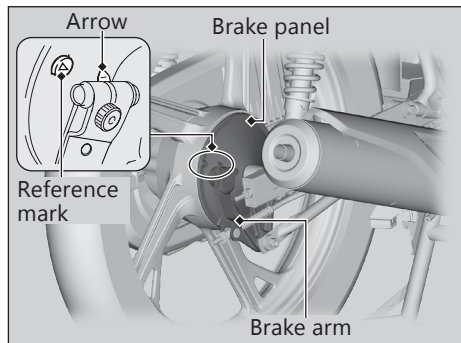


When the brake is applied, an arrow attached to the brake arm moves toward a reference mark on the brake panel. If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced. See your dealer for this service.


When brake service is necessary, see your dealer. Use only Honda Genuine Parts or their equivalent.

Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Hold the brakelight switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

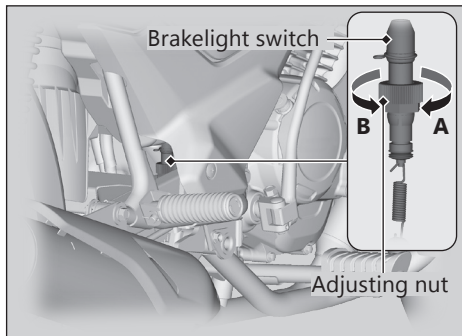

Checking the Side Stand

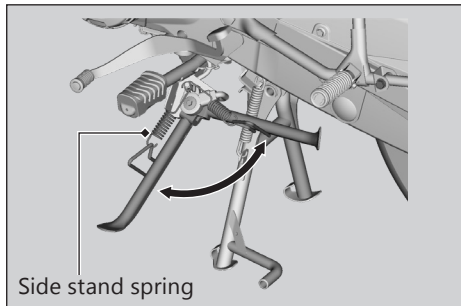

1. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.
2. Check the spring for damage or loss of tension.


3. Sit on the vehicle, shift the transmission to Neutral, and raise the side stand.
4. Start the engine, pull the clutch lever in, and shift the transmission into gear.
5. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your vehicle inspected by your dealer.

Inspecting the Drive Chain Slack

Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding.

Have the chain inspected by your dealer.


1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.
3. Remove the inspection hole cap.
4. Move the lower part of the drive chain up and down to check chain slack, midway between the sprockets.

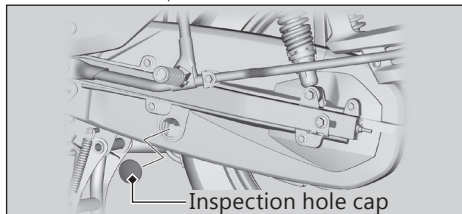

Drive chain slack:

20 to 30 mm (0.8 to 1.2 in)

- Do not ride your vehicle if the slack exceeds 50 mm (2.0 in).


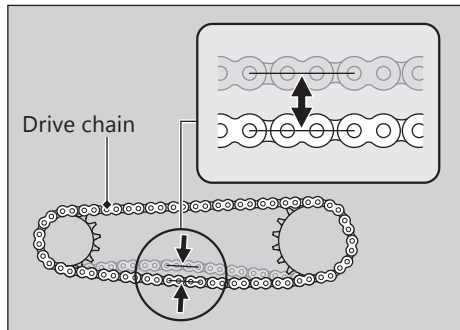


5. Rotate the rear wheel and check that the chain moves smoothly.
6. Remove the chain case. ➡ P. 94
7. Inspect the sprockets. ➡ P. 87
8. Clean and lubricate the drive chain. ➡ P. 88
9. Install the parts in the reverse order of removal.

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both adjusting bolts.

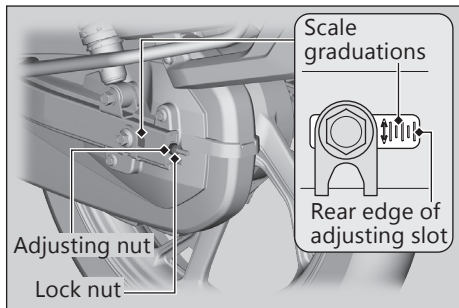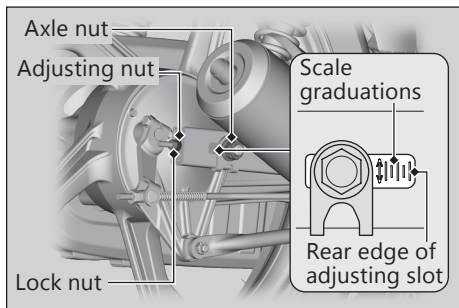

Drive Chain ► Adjusting the Drive Chain Slack

5. Turn both adjusting nuts an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting nuts clockwise to tighten the chain. Turn the adjusting nuts counterclockwise and push the rear wheel toward the front to provide more slack. Adjust the slack at a point midway between the front sprocket and the rear sprocket. Check the drive chain slack. ➡ P. 110
 6. Check rear axle alignment by making sure the end of the chain adjuster aligns with the scale graduations on both sides of the swingarm.
Both marks should correspond. If the axle is misaligned, turn the right or left adjusting nut until the marks are aligned and recheck chain slack.
 7. Tighten the rear axle nut.
- Torque: 54 N·m (5.5 kgf·m, 40 lbf·ft)**
8. Tighten the drive chain adjusting nuts lightly, then hold the adjusting nuts and tighten the lock nuts.
 9. Recheck drive chain slack.

10. Rear brake pedal freeplay is affected when repositioning the rear wheel to adjust the drive chain slack. Check rear brake pedal freeplay and adjust as necessary. ➡ P. 105

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

Improper assembly may lead to loss of braking capacity.


Checking the Drive Chain Wear

Check the chain wear label when adjusting the drive chain. If the index mark of the adjusting plate enters the red zone on the label after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.

Drive chain must be replaced with new sprocket set.

Chain: DID420ADV
LGBR420OR

If necessary, have the drive chain replaced by your dealer.

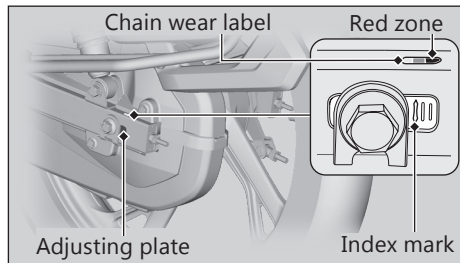


Checking the Clutch

Checking the Clutch Lever Freeplay

Check the clutch lever freeplay.

Freeplay at the clutch lever:

10 to 20 mm (0.4 to 0.8 in)

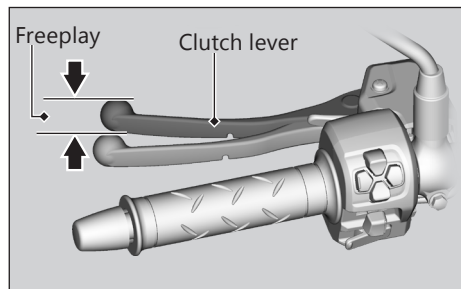

Check the clutch cable for kinks or signs of wear. If necessary, have it replaced by your dealer.

Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.


NOTICE

Improper freeplay adjustment can cause premature clutch wear.

Clutch ► Adjusting the Clutch Lever Freeplay

Adjusting the Clutch Lever Freeplay

1. Loosen the lock nut.
2. Turn the adjusting nut until the clutch lever freeplay is 10 to 20 mm (0.4 to 0.8 in).
3. Tighten the lock nut and check the clutch lever freeplay.
4. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the vehicle does not creep. Gradually release the clutch lever and open the throttle. Your vehicle should move smoothly and accelerate gradually.

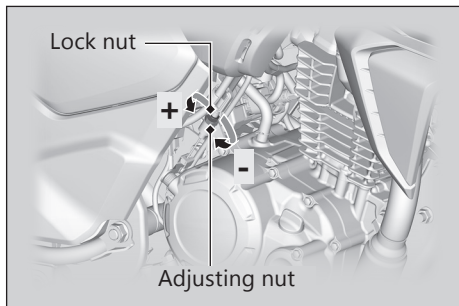


If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.

Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open in all steering positions and throttle freeplay is correct. If the throttle does not move smoothly or close automatically, or if the cable is damaged, have the vehicle inspected by your dealer.


Freeplay at the throttle grip flange:

2 to 6 mm (0.1 to 0.2 in).

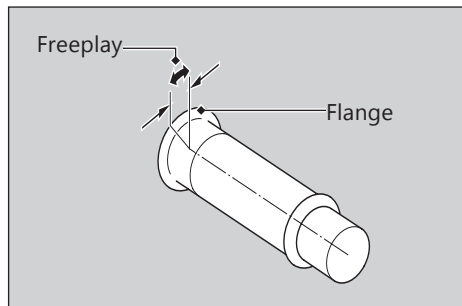

Cleaning the Crankcase Breather


1. Remove the left side cover. ➡ P. 96
2. Place a suitable container to receive deposits.
3. Remove the crankcase breather tube and drain deposits.
4. Reinstall the crankcase breather tube.
5. Install the left side cover. ➡ P. 96

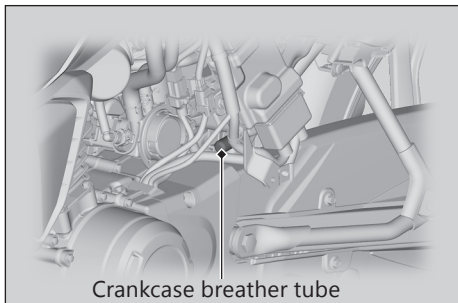

Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. To move the headlight, loosen the bolt.

Tighten the bolt after adjustment.
Obey local laws and regulations.

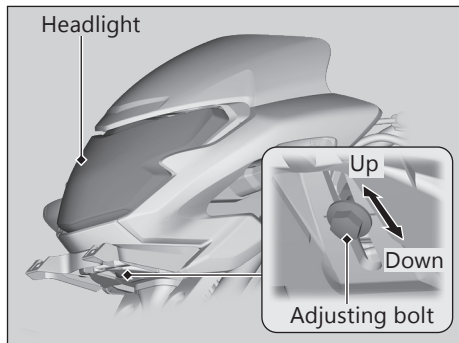

Adjusting the Rear Suspension

Adjusting the suspension requires a pin spanner. We recommend that you have your vehicle serviced by your dealer.

Spring Preload


You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the pin spanner to turn the adjuster. Position 1 is for a decrease spring preload (soft), or turn the position 3 to 5 to increase spring preload (hard). The standard position is 2.

NOTICE

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.

NOTICE

Do not turn the adjuster beyond its limits. Adjust both left and right shock absorbers to the same spring preload.

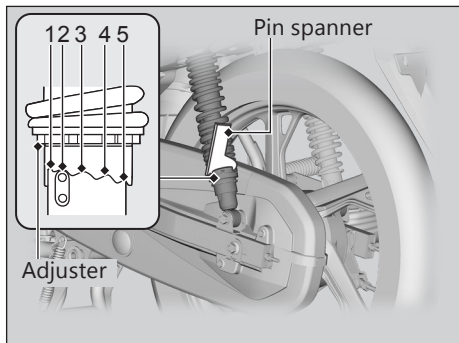

Troubleshooting

Engine Will Not Start P. 121

Warning Indicators On or Flashing P. 122

PGM-FI (Programmed Fuel Injection)

Malfunction Indicator Lamp (MIL)..... P. 122

Battery Charging Condition indicator..... P. 122

Other Warning Indications P. 123

Fuel Gauge Failure Indication..... P. 123

**When the Idling Stop system does not
operate properly**..... P. 125

Tyre Puncture P. 125

Smartphone Pairing Trouble..... P. 132

Electrical Trouble..... P. 134

Battery Goes Dead..... P. 134

Burned-out Light Bulb..... P. 134

Blown Fuse..... P. 138

Unstable Engine Operation Occur

Intermittently..... P. 139

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➤P. 68
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➤P. 68
- Check for a blown fuse. ➤P. 138
- Check for a loose battery connection (➤P. 93) or battery terminal corrosion (➤P. 84).

- Check the condition of the battery. ➤P. 83

If the problem continues, have your vehicle inspected by your dealer.

If the electric starter does not work and you can start the engine with kickstarting.

WARNING

When you kickstart the engine, check if the lights, horn, and turn signals operate normally. If they do not work normally, do not ride the vehicle as the battery is not charged.

If the battery is not charged, lights, horn and turn signals may not operate properly.

As a result, other vehicles may not be able to see you or you may not be able to see other vehicles or road hazards, increasing the risk of a crash resulting in injury or death.

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

Reasons for the indicator lamp to come on or blink

- Comes on if there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

What to do when the indicator lamp blinks

Park the vehicle in a safe place with no

flammable items and wait at least 10 minutes with the engine stopped until it cools.

NOTICE

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h (31 mph) or less. Have your vehicle inspected.

Battery Charging Condition indicator

If the indicator comes, you may have a condition of low battery voltage or battery performance degradation. Have your vehicle inspected by your dealer.

The indicator may not come on:




- ▶ If the battery does not have enough voltage to drive the indicator system.
- ▶ If the vehicle was started with external power source.
- ▶ If the vehicle has an unspecified battery.

Other Warning Indications

Fuel Gauge Failure Indication

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration.

If this occurs, see your dealer as soon as possible.

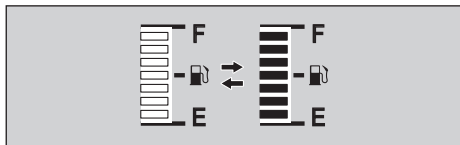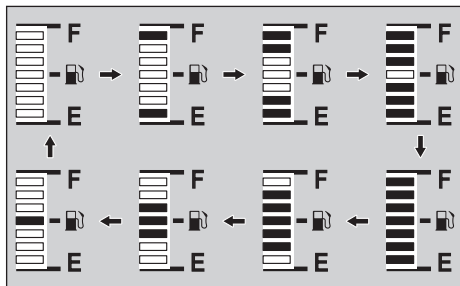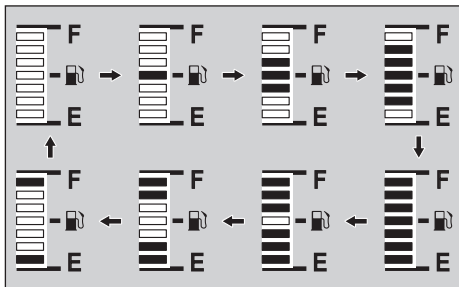

When the Idling Stop System Does Not Operate Properly

Idling Stop Indicator Does Not Come On

When the Idling Stop indicator does not come on, perform the followings.

If the Idling Stop switch is at  (Idling):

Press the Idling Stop switch to  (Idling Stop).

If you started the engine with the kickstarter:

If you started the engine with the kickstarter, the Idling Stop system may not operate. Restart the engine with the start button, referring to the starting procedure (▶P. 68) for standard engine starting.

If the engine is cold:

Warm up the engine.
The Idling Stop system does not operate when the engine is cold.

If you did not ride the vehicle after engine starts:

Ride the vehicle at speeds of over 10 km/h (6 mph). The Idling Stop system does not operate until you ride once.

If PGM-FI malfunction indicator lamp (MIL) lights:

When the PGM-FI malfunction indicator lamp (MIL) lights, the Idling Stop system does not operate for protection of the engine. See your dealer.

If the battery voltage is low:

Ride the vehicle awhile, then stop the engine and then restart the engine with start button, referring to the starting procedure (▶P. 68) for standard engine starting. The Idling Stop system may not operate if the battery voltage is low.
If this occurs frequently, contact your dealer.

Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is on

When the engine is not stopped by the Idling Stop system while the Idling Stop indicator is on, perform the followings.

If the vehicle does not stop completely:

Stop the vehicle completely. The Idling Stop system operates if the speed is only at 0 km/h (0 mph).

If the throttle is not closed completely:

Close the throttle completely.

Engine Does Not Start Even If the Throttle is Opened

Engine does not start even if the throttle is opened, perform the followings.

If the side stand is down:

While the engine is stopped by the Idling Stop system, if you operate the side stand, the flashing Idling Stop indicator turns off or stops flashing and stays on, and the Idling Stop system is cancelled. Restart the engine with start button referring to the starting procedure (►P. 68) for standard engine starting.

If Vehicle Transmission shifted to any gear:

While the engine is stopped by the idling Stop system, if you shifted the transmission from Neutral to any other gear position, then the engine will not restart even when you open the throttle. Pull the Clutch lever and open the throttle to restart the vehicle.

If the Idling Stop switch is at (Idling):

While the engine is stopping by the Idling Stop system, if you press the Idling Stop switch to  (Idling), the Idling Stop system will be cancelled. Restart the engine with start button referring to the starting procedure (►P. 68) for standard engine starting.

If the Idling Stop indicator flashes (the Idling Stop switch is at  (Idling Stop) position), but engine does not start even if the throttle is opened, perform the followings.

Low (or dead) battery or battery lead is loose:

Check the battery and battery terminals. If the battery is weak, contact your dealer.

Tyre Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tyre inspected/replaced by your dealer.

Emergency Repair Using a Tyre Repair Kit

If your tyre has a minor puncture, you can make an emergency repair using a tubeless tyre repair kit.

Follow the instructions provided with the emergency tyre repair kit.

Riding your vehicle with a temporary tyre repair is very risky. Do not exceed 50 km/h (30 mph). Have the tyre replaced by your dealer as soon as possible.

WARNING

Riding your vehicle with a temporary tyre repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tyre repair, ride slowly and carefully and do not exceed 50 km/h (30 mph) until the tyre is replaced.



Removing Wheels

Follow these procedures if you need to remove a wheel in order to repair a puncture.

Front Wheel

Removal

1. Place your vehicle on its centre stand on a firm, level surface.
2. Support your vehicle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
3. Remove the axle nut cap and front axle nut.
4. Remove the front axle shaft, front wheel and side collars.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - Do not pull the brake lever while the front wheel is removed.

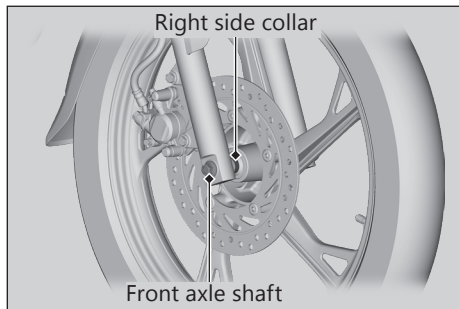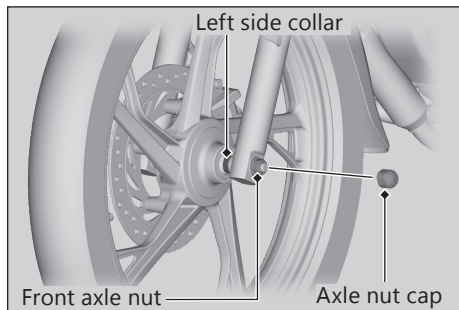

Installation

1. Attach the side collars.
2. Position the wheel between the fork legs and insert the front axle shaft from the right side, through the right fork leg and wheel hub.

NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

3. Install and tighten the axle nut and fix axle nut cap.

Torque: 54 N·m (5.5 kgf·m, 40 lbf·ft)


4. After installing the wheel, apply the brake lever several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.


Rear Wheel

Removal

1. Support your vehicle securely and raise the rear wheel off the ground using the centre stand or a hoist.
2. Remove the rear brake adjusting nut, disconnect the brake rod from the brake arm by pushing down on the rear brake pedal.
3. Disconnect the brake stopper arm from the brake panel by removing the cotter pin, stopper arm nut, washer and rubber grommet.
4. Remove the drive chain case. **P. 94**
5. Loosen the drive chain lock nuts and drive chain adjuster nuts on both sides of the swingarm.
6. Remove the rear axle nut while holding the rear axle shaft at the other end with a wrench.

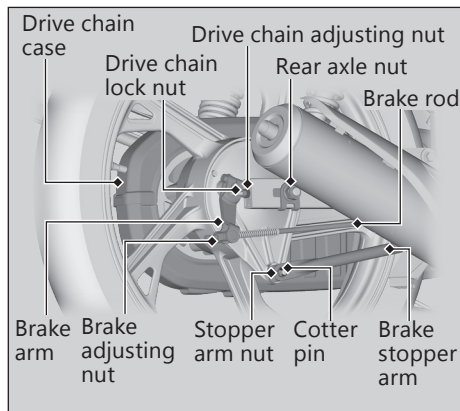

7. Remove the drive chain from the driven sprocket by pushing the rear wheel forward.
8. Remove the rear axle shaft, rear wheel and side collars from the swingarm.

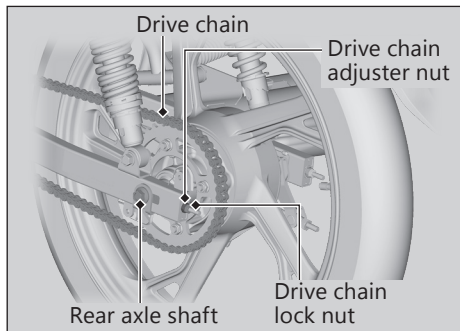

Installation

1. Install the side collars into rear wheel.
2. Place the rear wheel between the swingarm and install the drive chain over the driven sprocket.
3. Insert the rear axle shaft from the left side, through the left swingarm, wheel hub and brake panel.
4. Temporarily tighten the rear axle nut.

5. Reassemble the brake stopper arm and tighten the stopper arm nut.

Torque: 22 N·m (2.2 kgf·m, 16 lbf·ft)

6. Connect the brake rod to the brake arm.
7. Adjust the drive chain. ►P. 111
8. Adjust the rear brake freeplay. ►P. 105
9. Tighten the rear axle nut.

Torque: 54 N·m (5.5 kgf·m, 40 lbf·ft)

10. Reassemble the drive chain case. ►P. 94
11. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

A used cotter pin may not effectively secure a fastener. Always replace a used cotter pin with a new one.

Smartphone Pairing Trouble

Symptom	Cause/remedy
Unable to pair a smartphone	Some smartphones you use may be incompatible with the vehicle and/or the operable functions may be limited.
	Check that the vehicle and smartphone are both in pairing mode. ➡ P. 63
	Check your surroundings to make sure no other device being paired is present before re-pairing. Presence of a Bluetooth® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	When connecting a smartphone, make sure no other Bluetooth® device readied for pairing is present. Presence of a Bluetooth® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	Check that the vehicle pairing information is deleted from your smartphone Bluetooth® setting. Depending on the smartphone used, connecting may not be possible unless the pairing information is deleted.

Symptom	Cause/remedy
Unable to connect a smartphone	Depending on the smartphone you use, it may take some time for the vehicle to connect to a smartphone and to start using a dedicated application.
	The connection may be temporarily disconnected when starting the engine, which is normal and not a malfunction. The smartphone will be reconnected after the engine is started.
	Check that Bluetooth® status icon comes on. Refer to the instruction manual of your smartphone and check that your smartphone is in connectable state.
	Some smartphones you use may not connect automatically. For connecting, follow the instructions in the instruction manual of your smartphone.
	You cannot connect two or more smartphones at once.

If the problem continues after the above-described inspection, have your vehicle inspected by your dealer.

Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the vehicle before charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage.

If the battery does not recover after recharging, contact your dealer.

NOTICE

Jump starting using an automobile battery can damage your vehicle's electrical system and is not recommended.

Burned-out Light Bulb

Follow the procedure below to replace a burned-out light bulb.

Turn the ignition switch to the OFF or LOCK position.


Allow the bulb to cool before replacing it.

Do not use bulbs other than those specified.

Check the replacement bulb for correct operation before riding.


For the light bulb wattage, see "Specifications." ➤ P. 155

| Headlight

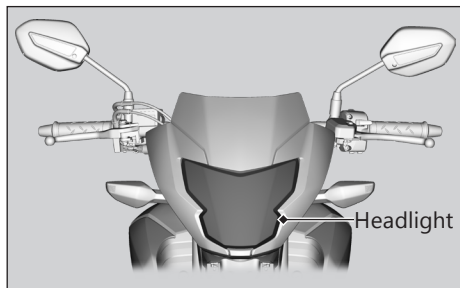


The headlight uses several LEDs. If there is an LED which is not turned on, see your dealer for servicing.

| Brakelight/Taillight

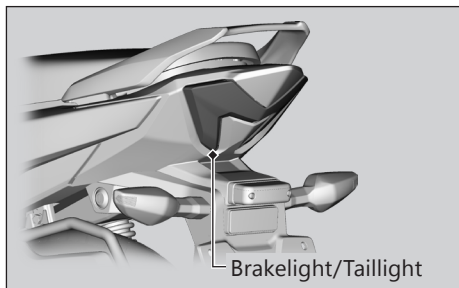

The brakelight/taillight uses several LEDs. If there is an LED which is not turned on, see your dealer for servicing.


Front/Rear Turn Signal Light Bulb

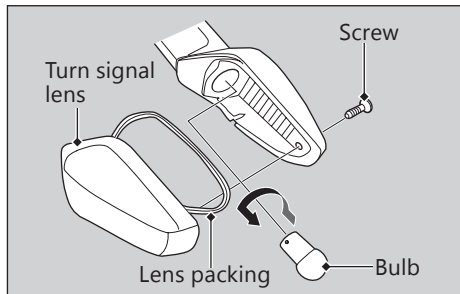

1. Remove the screw.
2. Remove the turn signal lens and lens packing.
3. Slightly press the bulb and turn it counterclockwise.
4. Install a new bulb and parts in the reverse order of removal.
► Use only the amber bulb.

Torque: 1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)

License Plate Light Bulb

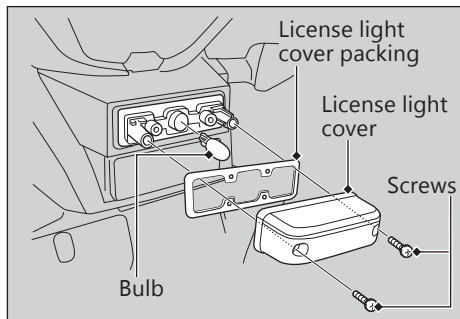


1. Remove the screws, license light cover and license light cover packing.
2. Pull out the bulb without turning it.
3. Install a new bulb and parts in reverse order of removal.
4. Install and tighten the screws.

Torque: 1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)

Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 85

I Main Fuse & FI Fuse

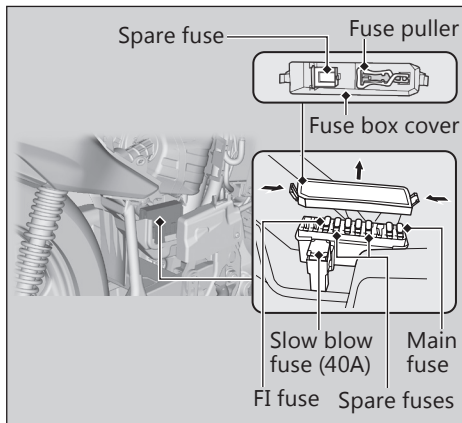

1. Remove the right side cover. ► P. 96
2. Open the fuse box cover.
3. Pull the fuses out one by one with the fuse puller and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare fuses are provided in the fuse box and reverse side of fuse box cover.
 - Fuse puller is provided in the reverse side of fuse box cover.
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.

Unstable Engine Operation Occurs Intermittently

If the fuel pump filter is clogged, unstable engine operation will occur intermittently while riding.

Even if this symptom occurs, you can continue to ride your vehicle.

If unstable engine operation occurs even if sufficient fuel is available, have your vehicle inspected by your dealer as soon as possible.

Information

Service Diagnostic Recorders	P. 141
Keys	P. 141
Instruments, Controls, & Other Features	P. 142
Caring for Your Vehicle	P. 144
Storing Your Vehicle	P. 147
Transporting Your Vehicle	P. 148
You & the Environment	P. 149
Serial Numbers	P. 150
Fuels Containing Alcohol	P. 151
Catalytic Converters	P. 152

Service Diagnostic Recorders

Your vehicle is equipped with service-related devices that record information about powertrain performance and riding conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However, this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives, and contractors only for the purpose of the technical diagnosis, research, and development of the vehicle.

Keys


Ignition Key

Be sure to record the key number provided with the key number plate. Store the spare key and key number in a safe location.

To make a duplicate, take the spare key or the key number to your dealer.

If you lose all ignition keys and the key number, the ignition switch assembly will probably have to be removed by your dealer to determine the key number.

A metal key holder may cause damage to the area surrounding the ignition switch.

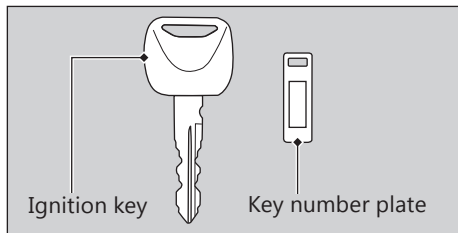

Instruments, Controls, & Other Features

Ignition Switch

Leaving the ignition switch in the ON position with the engine stopped will drain the battery. Do not turn the key while riding.

Odometer

The display remains at 999,999 when the odometer exceeds 999,999.

Tripmeter

Each tripmeter reset to 0.0 when the trip mileage exceeds 9,999.9.

Also for tripmeter A, average fuel mileage & available driving distance are reset at the same time

Document Holder

Document holder is available in the reverse side of the seat.

Ignition Cut-off System


A banking (lean angle) sensor automatically stops the engine and fuel pump if the vehicle falls over. To reset the sensor, you must turn the ignition switch to the OFF position and back to the ON position before the engine can be restarted.

Automatic Brightness Control

The backlight brightness and background of the meter will be controlled automatically when "AUTO" is selected on the BRIGHTNESS or the THEME setting ➡ P. 42 ➡ P. 43

Ambient brightness is detected by the photosensor.

Do not damage or cover the photosensor. Otherwise, the automatic brightness control may not work properly.

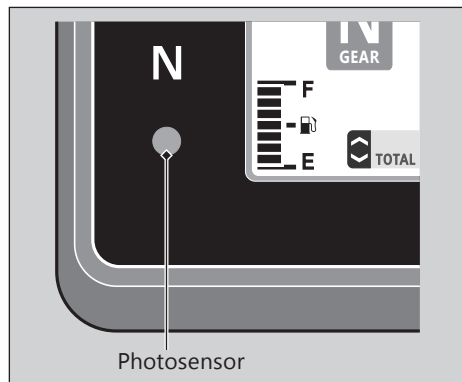

Caring for Your Vehicle

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean vehicle makes it easier to spot potential problems. In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Also, mud and dust may accelerate front suspension wear and cause oil leaks. Always wash your vehicle thoroughly after riding on coastal, treated, muddy or dusty roads.

Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your vehicle thoroughly using a low pressure garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
 - ▶ Clean the headlight lens, panels, and other plastic components with extra care to avoid scratching them. Avoid directing

water into the air cleaner, muffler, and electrical parts.

3. Thoroughly rinse your vehicle with plenty of clean water and dry with a soft, clean cloth.
4. After the vehicle dries, lubricate any moving parts.
 - ▶ Make sure that no lubricant spills onto the brakes or tyres. Brake discs, pads, drums, or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the vehicle.
6. Apply a coat of wax to prevent corrosion.
 - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your vehicle.
Keep the wax clear of the tyres and brakes.
 - ▶ If your vehicle has any matte painted parts, do not apply a coat of wax to the matte painted surface.

■ Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
 - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
 - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
 - Do not direct water at the muffler:
 - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
 - Dry the brakes:
 - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
 - Do not direct water under the seat:
 - ▶ Water under the seat can damage your documents and other belongings.
-
- Do not direct water at the air cleaner:
 - ▶ Water in the air cleaner can prevent the engine from starting.
 - Do not direct water near the headlight:
 - ▶ The headlight's inside lens may fog temporarily after washing or while riding in the rain. This does not impact the headlight function.
However, if you see a large amount of water or ice accumulated inside the lens(es), have your vehicle inspected by your dealer.
 - Do not use wax or polishing compounds on matte painted surfaces:
 - ▶ Use a soft cloth or sponge, plenty of water, and a mild detergent to clean matte painted surfaces. Dry with a soft clean cloth.

Aluminium Components

Aluminium will corrode from contact with dirt, mud, or road salt. Clean aluminium parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting petrol, brake fluid, or detergents on the instruments, panels, or headlight.

Exhaust Pipe and Muffler

If the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

Storing Your Vehicle

If you store your vehicle outdoors, you should consider using a full-body vehicle cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your vehicle and wax all painted surfaces (except matte painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain. ➤ P. 88
- Place your vehicle on its centre stand and position a block so that both tyres are off the ground.
- After rain, remove the body cover and allow the vehicle to dry.
- Remove the battery (➤ P. 93) to prevent discharge. Fully charge the battery and then place it in a shaded, well-ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative ⊖ terminal to prevent discharge.

After removing your vehicle from storage, inspect all maintenance items required by the Maintenance Schedule.

Transporting Your Vehicle

If your vehicle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform and motorcycle tie-down straps. Never try to tow your vehicle with a wheel or wheels on the ground.

NOTICE

Towing your vehicle with a wheel or wheels on the ground can cause serious damage to the transmission.

You & the Environment

Owning and riding a vehicle can be enjoyable, but you must do your part to protect the environment.

Choose Sensible Cleaners

Use a biodegradable detergent when you wash your vehicle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.



Recycle Wastes

Put oil and other toxic wastes in approved containers and take them to a recycling centre. Call your local or state office of public works or environmental services to find a recycling centre in your area and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash or pour it

down a drain or on the ground. Used oil, petrol, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.

Serial Numbers

The frame and engine serial numbers uniquely identify your vehicle and are required in order to register your vehicle. They may also be required when ordering replacement parts. You should record these numbers and keep them in a safe place.

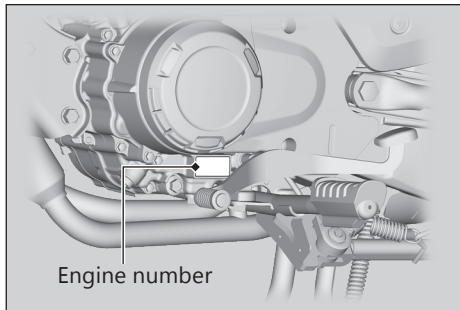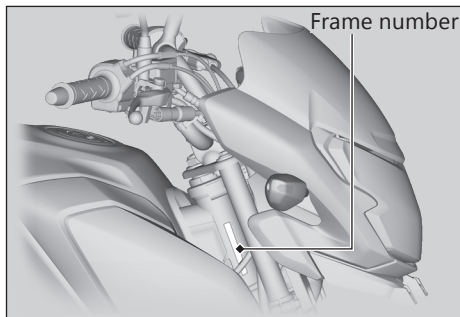

Fuels Containing Alcohol

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 20% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

The use of petrol containing more than 20% ethanol may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

Catalytic Converter

This vehicle is equipped with a three-way catalytic converter. The catalytic converter contains precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gases into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your vehicle's catalytic converter:

- Always use unleaded petrol. Leaded petrol will damage the catalytic converter.
- Keep the engine in good running condition.
- Have your vehicle serviced if your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine.

Specifications

■ Main Components

Overall length	2027 mm (79.8 in)
Overall width	785 mm (30.9 in)
Overall height	1091 mm (43.0 in)
Wheelbase	1285 mm (50.6 in)
Minimum ground clearance	160 mm (6.3 in)
Caster angle	26° 0'
Trail	92 mm (3.6 in)
Curb weight	117 kg (258 lb)
Maximum weight capacity ^{*1}	170 kg (375 lb)
Passenger capacity	Rider and 1 passenger
Minimum turning radius	2.04 m (6.7 ft)

*1 Including rider, passenger, all luggage, and accessories

Displacement	123.94 cm ³ (7.560 cu-in)	
Bore x stroke	50.000 x 63.121 mm (1.969× 2.485 in)	
Compression ratio	10.0:1	
Fuel	Unleaded petrol Recommended: 91 RON or higher	
Fuel containing alcohol	ETHANOL up to 20% by volume as per certification	
Tank capacity	11.0 litres (2.91 US gal, 2.42 Imp gal)	
Battery	ETZ6/ ATZ6L/ YTZ6V 12 V-5 Ah (10 HR)	
Gear ratio	1st	3.454
	2nd	1.933
	3rd	1.315
	4th	1.095
	5th	0.933
Reduction ratio (primary / final)	3.421/2.928	

Specifications

■ Service Data

Tyre size	Front	80/100-18M/C 47P
	Rear	100/80-18M/C 53P
Tyre type		Tubeless
Recommended tyres	Front	NYLOGRIP ZAPPER-FS (MRF) M910 (MAXXIS) ZOOM PLUS F (CEAT)
	Rear	ZAPPER-Q1 (MRF) M904 (MAXXIS) ZOOM PLUS (CEAT)
Tyre air pressure	Front	175 kPa (1.75 kgf/cm ² , 25 psi)
	Rear	225 kPa (2.25 kgf/cm ² , 33 psi)
Spark plug		CPR8EA-9 (NGK)
Spark plug gap		0.8 to 0.9 mm (0.03 to 0.04 in)
Idle speed		1500 ± 100 rpm

Recommended engine oil	Honda 4-stroke motorcycle oil API Service Classification SJ or higher, excluding oils marked as "Energy Conserving," or "Resource Conserving" SAE 5W-30, JASO T 903 standard MA	
	After draining	0.9 litres (0.95 US qt, 0.79 Imp qt)
Engine oil capacity	After draining with oil filter replacement	0.9 litres (0.95 US qt, 0.79 Imp qt)
	After disassembly	1.0 litres (1.06 US qt, 0.88 Imp qt)
Recommended brake fluid	Honda DOT3 or DOT4 Brake fluid	
Recommended drive chain lubricant	Drive chain lubricant designed specifically for O-ring chains. If not available, use SAE 80 or 90 gear oil.	
Drive chain slack	20 to 30 mm (0.8 to 1.2 in)	
Standard drive chain	DID420ADV or LGBR420OR	
	No. of links	118
Standard sprocket size	Drive sprocket	14T
	Driven sprocket	41T

■ Bulbs

Headlight	LED
Brakelight/Taillight	LED
Front turn signal	12 V- 10 W x 2
Rear turn signal	12 V- 10 W x 2
License plate light	12 V- 5 W

■ Fuses

Main fuse	15 A
Other fuses	40 A, 7.5 A

■ Torque Specifications

Drive chain case bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Engine oil filter cover bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
Engine oil drain bolt	24 N·m (2.4 kgf·m, 18 lbf·ft)
Rear axle nut	54 N·m (5.5 kgf·m, 40 lbf·ft)
Front axle nut	54 N·m (5.5 kgf·m, 40 lbf·ft)
Rear brake stopper arm nut	22 N·m (2.2 kgf·m, 16 lbf·ft)
Front/Rear turn signal screw	1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)
License light cover screw	1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)

Warranty Policy (Valid in India only)

Honda Motorcycle & Scooter India (Pvt.) Ltd. (HMSI) gives the following warranty in respect of vehicle **"SP 125"** manufactured by them.

Proper care and precaution has been taken to ensure the best quality in respect of the material and workmanship in manufacturing of every vehicle.

HMSI would repair or replace at its discretion, those part(s) found to have manufacturing defects during examination. This repair or replacement of part(s) would be done free of charge at their authorised workshop, within a warranty period of 36 months from the date of sale or until the vehicle has covered 42000kms, whichever comes first.

Warranty claims in respect of proprietary parts like tyres and battery are warranted by their respective manufacturers and should be claimed on them directly by customer.

NOTE: Battery Warranty is applicable from 21 months from Date Of Charging at manufacturer or 18 Months from the Date Of Sale or 20000 Kms whichever is earlier.

In all such cases the decision of the respective manufacturer will be final and binding.

HMSI shall not be liable in any manner to replace them though their dealers will give full assistance in preferring such claims on their manufacturers.

HMSI undertake no liability in the matter of consequential loss or damage caused due to the failure of the parts. Delay, if any, at the repairing workshop in carrying out repair to vehicle shall not be a ground for extending the warranty period nor shall it give any right to the customer for claiming any compensation for damages.

HMSI reserves the right either to repair or replace the defective part.

Where a defective part can be replaced by part/s of alternative brand/s, which are normally used by HMSI in the course of manufacturing, HMSI reserves the right to carry out the replacement by a part or parts of any such alternative brands.

This warranty and any claim arising there from is subject to Gurgaon jurisdiction only.

No claim for exchange or repair can be consider unless the customer:

- a. Ensures that immediately upon discovery of the defect, he approaches any nearest authorised dealer of HMSI with the concerned vehicle and enables him to remove and dispatch the part/parts attributing to manufacturing defect to the company.
- b. It must be expressly understood that claims forwarded directly to us by the owner/customer will not be entertained at all and such defective part/parts thus forwarded by them will lie at our factory at their own risk, and this warranty shall not be enforceable.

Further this warranty is not applicable to:

1. Any vehicle on which any free and paid services has not been carried out, as per schedule given in Owner's Manual.
2. Normal maintenance operations like valve adjustment, cleaning of fuel system or such other adjustments.
3. HMSI does not warrant normal wear and tear items like Clutch Weight, Clutch Disc, Brake shoe, Brake Pads, Brake Disc, Drive belt, Drive Chain, Drive Chain Sprocket, Wheel Rim (in case of misalignment and bent), Bushes, Fasteners, Shims, Washers and Electrical items like Bulbs, Fuses, Rubber and Plastic Components like Grommets, O-Rings, Bellows, Packings, Gaskets, Oil Seals and Consumables like Fuel Filter, Air Cleaner Element, Engine Oil, Grease, Suspension Oil, and other items as specified by HMSI.
4. Fasteners and clips which needs replacement during maintenance/service will not be covered under warranty.

Warranty Policy (Valid in India Only)

5. If there is any damage to the painted surface due to industrial pollution or other extraneous factors.
6. Any damage resulting from unavoidable natural disaster i.e fire, collision, earthquake, flood etc.
7. Any damage caused by exposure of the product to soot and smoke, chemical agents, bird-droppings, sea water, sea breeze, or other environmental phenomenon.
8. If there is any damage caused due to usage of improper oil/grease, non genuine parts.
9. For two-wheelers, which have been used for any commercial purposes as taxi etc.
10. For maintenance repairs required due to misuse while driving or due to adulteration of oil, petrol or due to bad road conditions.
11. Recommended fuel quality not used.
12. Parts of the vehicle that have been subjected to misuse, accident, negligent treatment or which have been used in conjunction with parts and an equipment not manufactured or recommended for use by HMSI if in the sole judgment of HMSI, such use prematurely affects the performance and reliability of the vehicle.
13. Parts of the vehicle that have been altered or modified or replaced in unauthorised manner, and which in the sole judgment of HMSI affect its performance and reliability.
14. The vehicle that has not been serviced by HMSI authorised dealer as per the service schedule or which have not been operated or maintained in accordance with instructions mentioned in the Owner's Manual.
15. The vehicles used for any competition or race and/or for attempting to set up any kind of record HMSI reserves the right to make any changes in design or to add any improvement on the vehicle at any time without incurring any obligations to install the same on a vehicle previously supplied and sold. Also the conditions of this warranty are subject to alteration without any notice.

This warranty is entirely written warranty given by HMSI and no other person, including the dealer or its or his agent or employee is authorised to extend or enlarge this warranty.

This warranty is given in lieu of and excludes every condition or warranty whether statutory or otherwise not herein expressly set out.

EMISSION WARRANTY

Subject to other terms of the warranty policy and other conditions and obligations laid down hereunder, the manufacturer certifies that the components liable to affect the emission of the gaseous pollutants in the vehicle in normal use despite the use to which it may be subjected, comply with provisions of rule 115(2) of the Central Motor Vehicle Rules, 1989 and further warrants that if on examination by a service center duly authorized by the manufacturer, the vehicle is discovered to be failing to meet the emission standard as specified in the said rule,

the authorized service center shall take such corrective measures as may be necessary and shall at its sole discretion replace free of charge such components of emission control system as are specified in schedule.

A. Conditions

1. This warranty will be in addition to and run parallel to the product warranty given by the manufacturer and will apply to components as mentioned later. This warranty is applicable in Delhi, Mumbai, Kolkata and Chennai with effective from 1st July 2001. Other places when included will be covered under warranty accordingly.
2. The period of the vehicle's emission warranty will be determined starting from the date of the vehicle sale. The period of time and kilometers that are covered under the provisions of warranty may vary but should not be less than the minimum warranty period based on the vehicle category.

For a two-wheeler the emission warranty period is 30,000 kms or 3 years whichever is earlier.

Warranty Policy (Valid in India Only)

3. Warranty claim for the components under Emission warranty will be admitted, for a prima facie examination, in the event of failure of the vehicle to meet the emission standard as specified in sub-rule (2) of Rule No 115 of the Central Motor vehicle Rules.
4. The warranty claim will be accepted only after the examinations carried out by Authorized Service Centers leads to a firm conclusion that none of the original settings have been tampered with and that the components has/have a manufacturing defect, and/or, that the vehicle is unable to meet the in-use emission standard, in spite of the vehicle being maintained and used in accordance with the instructions in the owner's manual.
5. The methods of examination to determine the warrantable condition of the components will be at the sole discretion of manufacturers and or their Authorized service centers and results

of such examination will be final and binding. If, on examination, a warrantable condition is not established, the manufacturers will have to charge all, or part, of the cost of such examination.

6. In case of a vehicle in which the components covered under Emission warranty, the manufacturer will replace, at Authorized centers free of charge, the components which are covered, but the consumables as mentioned in Owner's Manual shall be charged as per actuals.
7. In case of a vehicle in which the components covered under Emission warranty or the associated parts are not independently replaceable on account of their being integral parts of a complete assembly, the manufacturer will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.

8. Any consequential repairs or replacement of parts which may be found necessary to establish compliance to in-use emission standards, in addition to replacement of the parts covered under emission warranty, will not be made free of cost unless such parts are also found to be in a warrantable condition within the scope and limit of the product warranty. The consumables shall be charged as per actual during such repairs or replacement of parts.
9. All the parts removed for replacement under warranty will be the property of the manufacturer.
10. The manufacturer will not be responsible for the cost of transportation of the vehicle to the nearest Authorized Service center or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination by the manufacturer and repairs.
11. The manufacturer will not be responsible for any penalties that may be charged by statutory authorities on account of failure to comply with the in use emission standards.
12. Emission warranty will be applicable irrespective of the change of ownership of the vehicle provided all the conditions as laid down in this document are met from the date of original sale of the vehicle.
13. The emission warranty will be applicable only if:
 - a. Observes all the important instructions and any other precautions listed in the Owner's Manual for use of the vehicle.
 - b. Under all circumstances uses lubricants and fuel as recommended by manufacturer.
 - c. Regularly obtains and carries out maintenance in accordance with the manufacturers guidelines and enters the details in the Logbook.
 - d. Immediately approaches the nearest authorized service center upon discovery of failure to comply with the

in use emission standards in spite of having maintained and used the vehicle in accordance with the instructions in the Owner's Manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.

- e. Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate, or pursuant upon being directed by an officer as referred to in sub-rule(2) of Rule 116 of the Central Motor Vehicle Rules.
- f. Produces receipts covering maintenance of the vehicle as specified in the Owner's Manual from the date of original purchase of the vehicle.

g. Produces valid certificate of insurance and RTO registration.

14. Conditions under which warranty is not applicable:

A valid 'Pollution Under Control' certificate as described in customer obligation D(6) above is not produced.

A vehicle which is not serviced by Authorized service center as per the service schedule described in the maintenance chart given in the Owner's Manual.

A vehicle, which has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident. Use of replacement parts not specified and approved by the manufacturer.

A vehicle, or parts thereof, which has been altered, tampered with or modified or replaced in an unauthorized manner.

A vehicle on which the odometer is not functioning or the odometer has been changed/tampered with so that the actual mileage cannot be readily determined.

A vehicle which has been used for competitions, races, rallies or for the purpose of establishing records.

Examination by the manufacturers or his Authorized Service Centers of the vehicle shows that any of the conditions stipulated in the Owner's Manual with regard to use and maintenance have been violated.

A vehicle, which has been run on, adulterated fuel, leaded fuel or lubricant or fuel/lubricants other than those specified by the manufacturer in the Owner's Manual with regard to use and maintenance have been violated.

SCOPE AND LIMITS

1. This emission warranty is in addition to product warranty and shall run parallel to the product warranty for the vehicle as per the scope and limit described in the Owner's Manual and all conditions described there in will apply in addition to those exclusively stipulated in this warranty.

2. The emission warranty covers only compliance with the emission standard as specified in the sub rule (2) of rule 115 of CMVR. It does not cover any other performance of these parts or routine test and consequent maintenance or adjustments to establish compliance to the in use emission standard as applicable to the state, in which the vehicle is registered and is in use.

The parts, which are covered under emission warranty, are throttle body, fuel injector, ignition coil, muffler etc.

NOTE: The emission warranty is applicable only when a customer enters into emission warranty contract.

A

Accessories.....	12
Average Speed Meter.....	32

B

Basic Operation Flow.....	14
Battery.....	83, 93
Battery Charging Condition indicator ..	122

Brakes

Brake Lever Freeplay	108
Brake Pedal Freeplay	105
Brake Light Switch	108
Fluid	103
Pad Wear.....	104
Shoe Wear.....	107

Braking.....	9
--------------	---

Bulb

Brake/Tail Light	135
Front Turn Signal	136
Headlight.....	135
License Plate Light.....	137
Rear Turn Signal.....	136

C

Caring for Your Vehicle.....	144
------------------------------	-----

Clutch	114
--------------	-----

Catalytic Converter	152
---------------------------	-----

Clock.....	45, 62
------------	--------

Compartment

Document Holder.....	75, 142
Tools	92

Crankcase Breather.....	117
-------------------------	-----

D

Drive Chain	87, 110
-------------------	---------

Document Holder.....	75, 142
----------------------	---------

E

Electrical Trouble.....	134
-------------------------	-----

Engine

Number.....	150
Oil	86, 99, 154
Oil Filter.....	101
Starting	68

Environment.....	149
------------------	-----

F

Frame Number.....	150
-------------------	-----

Front Brake Lever Adjustment.....	108
-----------------------------------	-----

Fuel	
Gauge.....	19, 58
Recommended	72
Remaining	25, 58
Tank Capacity	72
Fuels Containing Alcohol	151
Fuses	85, 155
G	
Gasohol	151
Gear Position Indicator	19, 58
H	
Headlight Aim	118
Headlight Dimmer Switch.....	57, 58
Helmet Holder	76
High Beam Indicator	20, 55
Horn Button	57, 58
I	
Idling Stop Indicator	20, 55
Idling Stop Switch	57, 58
Idling Stop System.....	65
Ignition Cut-off System	
Side Stand	109

Ignition Key	141
Ignition Switch	57, 58
Image Labels	6
Indicators	54
Instruments	18

K

Keys	141
-------------------	-----

L

Labels	6
Load Limits	13
Loading Guidelines	13

M

Maintenance

Fundamentals.....	82
Importance	78
Safety.....	78
Schedule	79

Maximum Weight Limit	13, 153
-----------------------------------	---------

Modifications	12
----------------------------	----

N

Neutral Indicator..... 54, 55

O

Odometer 29, 142

Oil

Engine 86, 99, 154

P

Parking..... 10

Parts Location 16

Passing Light Control Switch..... 57, 58

Petrol..... 11, 72, 153

PGM-FI (Programmed Fuel Injection)

Malfunction Indicator Lamp (MIL) .. 54, 55, 122

Pop-up Information

Maintenance 55

Warning 56

Protective Apparel..... 8

R**Recommended**

Fuel..... 72

Oil..... 86

Refueling..... 72

Removal

Battery..... 93

Drive Chain Case 94

Seat..... 95

Side Cover 96

Riding Precautions..... 9

S

Safety Precautions..... 8

Seat..... 95

Serial Numbers 150

Side Stand..... 109

Side Stand Ignition Cut-off System.. 68, 109

Spark Plug..... 97

Specifications 153

Speedometer 20, 58

Start Button 57, 58

Starting the Engine..... 68

Steering Lock..... 60

Storage Equipment..... 75

Storing Your Vehicle..... 147

Switches..... 57

T

Throttle.....	116
Tools	92
Transporting Your Vehicle.....	148
Tripmeter.....	30, 59
Troubleshooting.....	120
Turn Signal Indicators.....	54, 55
Turn Signal Switch.....	57, 58
Tyres	
Air Pressure.....	99, 154
Puncture	125
Replacing.....	89

W

Warning Indicator On or Flashing	122
Warranty Policy.....	156
Washing Your Vehicle.....	144
Weight Limit.....	13
Wheels	
Front Removal.....	128
Rear Removal	130

HONDA

Registered office:

Honda Motorcycle & Scooter India Pvt. Ltd.

Plot No. 1, Sector - 03, IMT Manesar, Distt. Gurugram, (Haryana) – 122050

customercare@honda.hmsi.in, www.honda2wheelersindia.com

32K0NF10
00X32-K0N-F100