

INOKRAFT

HANDHELD POOL VACUUM

USER MANUAL

QUESTIONS?


support@inokraft.com

Register Your InoKraft Product:

- Priority Customer Support
- How-to Guides & Instructions Videos
- Exclusive Product Trail Opportunities



Discover More at
www.inokraft.com

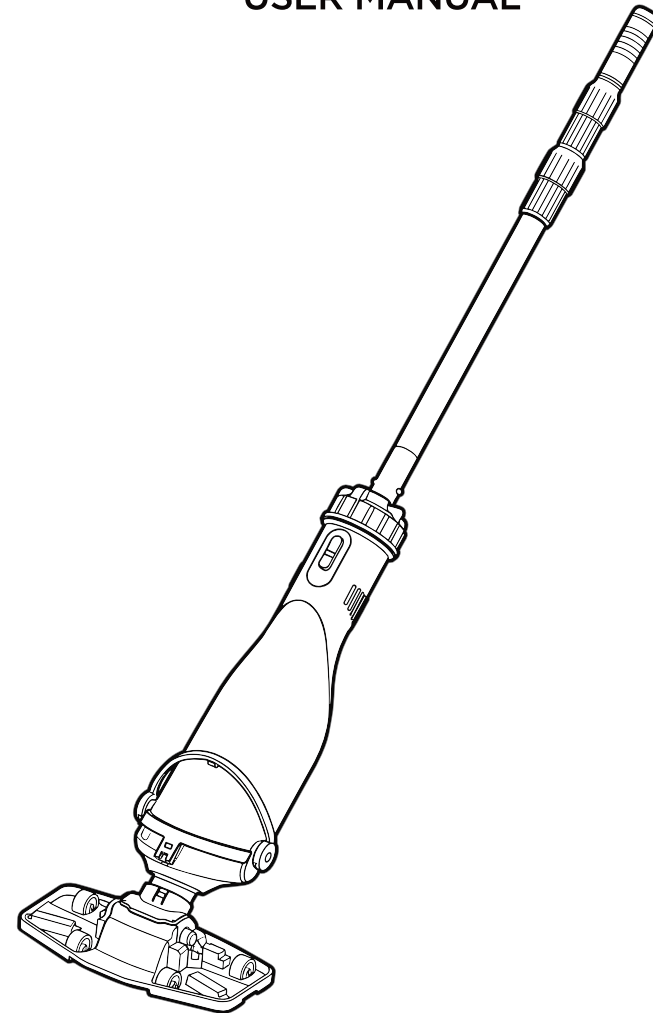

English . Deutsch

Model Number: IK02101 Series

Please read and understand the instruction manual
before use and retain it for reference.

Email our technical support at: support@inokraft.com

Welcome to the InoKraft Family

Dear Valued Customer,

Thank you for choosing InoKraft! We are thrilled to welcome you to our community of satisfied customers. Our products are designed with a focus on customer experience, accompanying you in enjoying your backyard life: innovated to release your passion.

To help you get started and make the most of your new tool, we invite you to explore our website www.inokraft.com. There, you will find detailed product specialist: product resource and our community information.

We appreciate your trust in us and hope you enjoy using your Inokraft product.

Warm regards,
The InoKraft Team

TABLE OF CONTENTS

1. SAFETY INSTRUCTIONS	2
1.1 General Safety	2
1.2 Electrical Safety	2
1.3 Charger Safety	3
1.4 Battery Safety	3
2. PRODUCT SPECIFICATION & FEATURES	3
3. PREPARATION	4
3.1 Prepare Electricity	4
3.2 Prepare Cleaner	5
4. OPERATION	6
5. MAINTENANCE	7
5.1 Cleaning	7
5.2 Storage	7
6. TROUBLE SHOOTING	8
7. WARRANTY	9
8. REGULATORY COMPLIANCE INFORMATION	10
9. AUTHENTICATION	11

1. SAFETY INSTRUCTIONS

1.1 General Safety



WARNING

1. Read all safety warnings, instructions, diagrams, and specifications provided with this cleaner before use. Failure to follow these instructions may result in electric shock, fire, or serious injury.
2. Keep the cleaner out of reach of children.
3. The user is responsible for ensuring the safety of others in the operating area.
4. Before first use, have a qualified electrician confirm that all required electrical safety measures are in place.

1.2 Electrical Safety

1. Do not operate the product while people are in the pool.
2. This appliance may be used by children aged 8 and older, and by persons with reduced physical, sensory, or mental capabilities, only if they are supervised and have been instructed on safe use and understand the risks involved. Children must not play with the appliance. Cleaning and maintenance must be carried out under supervision.
3. If the equipment is damaged, it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified professional to prevent hazards. Contact a qualified electrician if necessary.
4. Use the appliance only for the purposes specified in these instructions.
5. The user is responsible for maintaining a safe operating environment.
6. The operator is responsible for complying with all local safety and installation regulations. Consult a licensed electrician for guidance.
7. In case of malfunction, repairs must be performed by a qualified electrician.
8. Never operate the unit dry or with the intake fully closed. Damage caused by dry running will void the warranty.
9. Water temperature range: 4°C (39.2°F) – 35°C (95°F).
10. To prevent injury, keep hair, body parts, and clothing away from the suction inlet during operation.
11. Do not disassemble the cleaner unless authorized by the manufacturer.
12. This cleaner is designed exclusively for underwater use and is not intended for general-purpose cleaning.
13. Do not use the cleaner to pick up sharp objects, as this may damage both the cleaner and the filter bag.

1.3 Charger Safety

1. Make sure both the cleaner and charger are completely dry before charging.
2. Turn off the cleaner before charging.
3. Use only the original charger provided with the cleaner.
4. Charge the cleaner indoors, in a well-ventilated, clean, and dry location.
5. Stop charging immediately if the charger is damaged.
6. If the power cord is damaged, it must be replaced by the manufacturer or authorized personnel to prevent hazards.


1.4 Battery Safety

1. This pool cleaner contains a lithium battery that must be disposed of properly. Contact your local waste authority for disposal instructions.
2. Do not attempt to disassemble the battery.
3. Never dispose of used or damaged batteries in water or fire. Follow all local environmental regulations.

2. PRODUCT SPECIFICATIONS & FEATURES


Model NO.	IKO2101 Series
Rated Power	40W
Nominal Voltage	DC 18V
Battery Capacity	2000 mAh
Watt-Hours	36
Max. Flow Rate	1100GPH (4200L/h)
Max. Particle Size	<0.98" (25mm)
Max. Water Temperature	122°F (50°C)
Moisture Protection	IPX8
Battery Charging Time	90 min
Battery Life	50-60min
Priming Water Level	11.8"

Note: Fits standard 1-1/4" telescoping poles for extended reach and easier pool cleaning.

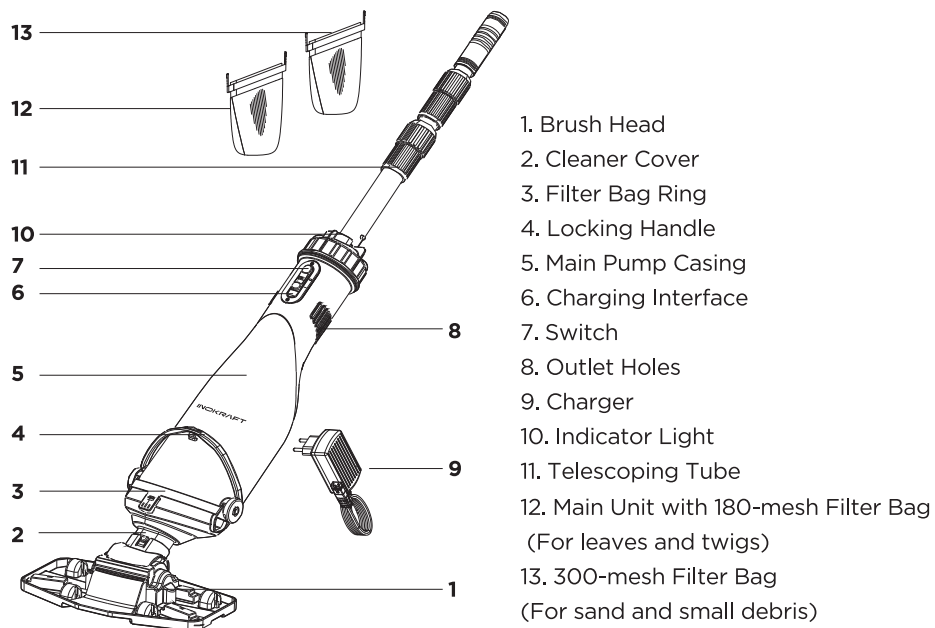

3. PREPARATION

3.1 Prepare Electricity

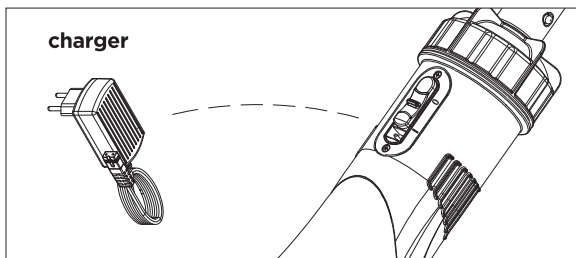

Fast access to video guide

Before first use, charge the cleaner for **1.5 hours**. When fully charged, the cleaner can operate for **50-60 minutes**. Connect the charger to the cleaner as shown in the diagram.

Indicator Light Status	Description
Solid Green	Battery level is between 11% and 100%. The cleaner functions normally.
Solid Red	Battery level is below 10%. Please recharge the cleaner promptly.
Blinks Red	Filter bag is clogged. Please clean or replace the filter bag.
Blinks green	The cleaner is charging.

Note: The green light blinks during charging and turns solid green once fully charged.

3.2 Prepare Cleaner




WARNING

Read carefully and understand all operating instructions before using this pool cleaner.


1. Install The Brush Head

Insert the brush head into the cleaner cover until it is securely locked in place. If not fully inserted, it may detach from the cleaner cover during operation.

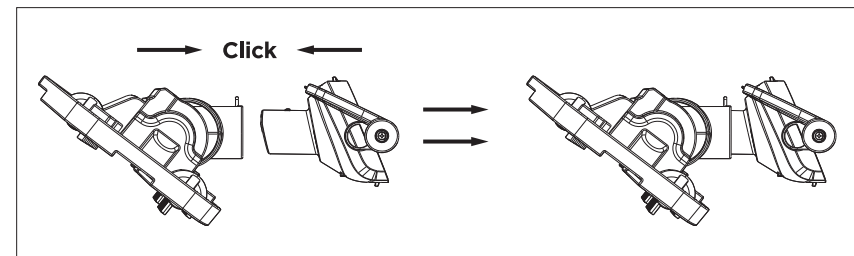

2. Install The Filter Bag



Place the brush head on a flat surface and adjust the locking handle to the lowest position. Then, properly install filter bag seal ring on the cleaner cover and securely fasten the hasps on both sides.

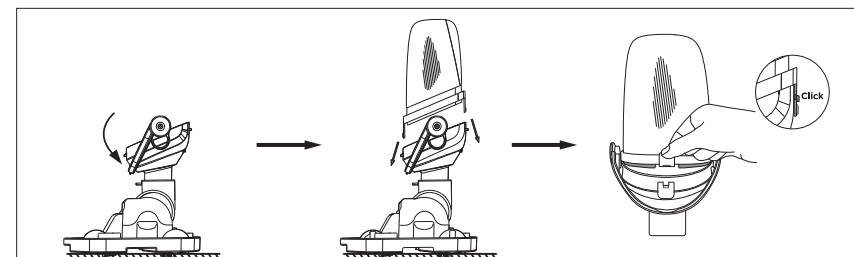

3. Install The Main Pump Casing

A: Move the locking handle to the cleaner cover position. Align the clasp, then push until it is securely locked.

B: Snap the locking handle onto the main pump casing and securely clamp it in place.

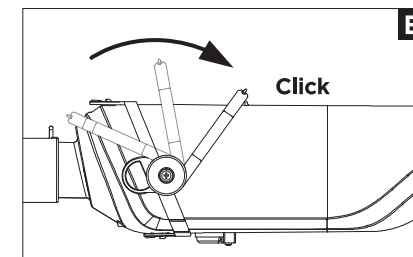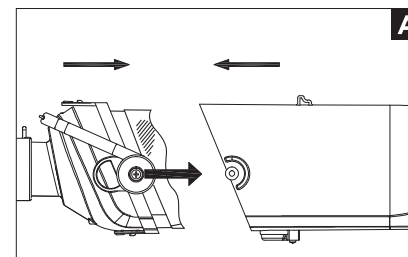


Caution:

Properly install the filter bag seal ring onto the main pump casing. Make sure the filter bag is free from any obstructions.

4. Install The Telescoping Tube

To attach the telescoping tube, align it with the pool cleaner handle, squeeze the spring buttons, and slide it in until the buttons snap into place. To adjust the length, unlock each section, extend to the desired length, and lock it securely.

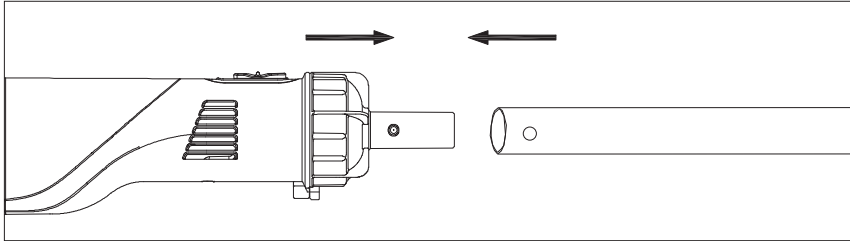


Caution:

Do not overextend or forcefully pull the telescoping tube when adjusting its length, as this may cause damage.


4. OPERATION

⚠️ ⚠️ WARNING

- The maximum temperature of water for continuous operation must not exceed 95°F (35°C).
- The pool cleaner is designed for small swimming pools, fish ponds, bathing pools, and ornamental ponds. **Do not use it with algae, or with combustible, gaseous, or explosive liquids.**

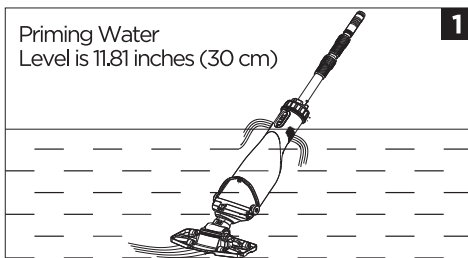

1. The minimum water depth from the priming level to the horizontal surface must be **11.81 inches (30 cm)**. If the water level is lower, fill the main pump casing with water up to the priming level before starting the cleaner.

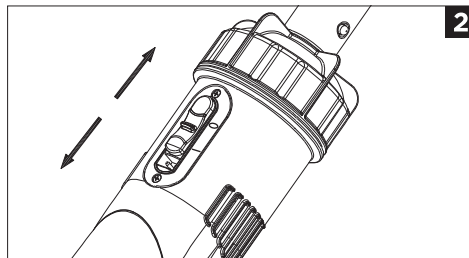


2. Switching on the pool cleaner and putting it into the water.

Note:

2.1 **O**: OFF **I**: ON

2.2 The warranty will be void if the pump is damaged due to running dry.

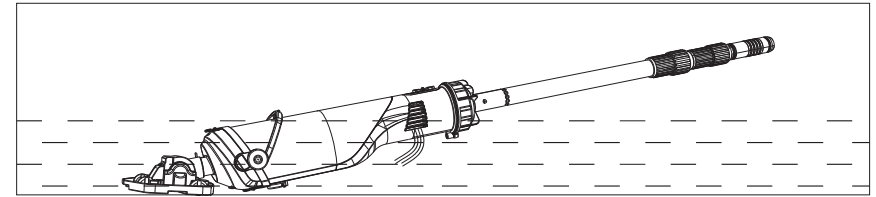


Note:

For cleaning shallow areas:

- Place the cleaner horizontally and fully submerge it until the water chamber is filled.
- Then, gently raise the telescoping tube while keeping the brush head underwater, and begin cleaning.

5. MAINTENANCE

5.1 Cleaning

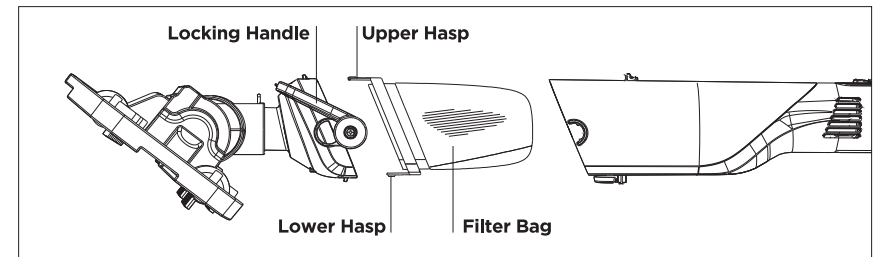

- Remove and clean filter bag after each use.
- To clean filter bag: Unlock the upper and lower hasps, remove the filter bag, empty the debris, and rinse it thoroughly with clean water.

5.2 Storage

- Charge the battery fully before storing it to ensure optimal performance and battery life. Damage caused by insufficient charging is not covered under warranty.
- Use original packaging or cover the pool cleaner with a clean cloth to protect it from dust.
- Store the pool cleaner and its accessories in a dry, well-ventilated, frost-free, and dark area.
- Keep the pool cleaner out of reach of children.
- Recommended storage temperature: 50°F to 86°F (10°C to 30°C).

6. TROUBLE SHOOTING

WARNING

To avoid hazards, all installations, repairs, and component replacements should be performed by authorized service personnel. Before operating the cleaner, ensure the device is turned off and unplugged.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Fail to clean the waste.	The battery is depleted.	Check the indicator light and recharge the cleaner. Once fully charged, it operates for 50–60 minutes.
	The water level inside the unit is below the priming level.	Submerge the unit until the water level reaches the 11.8" priming mark.
	The impeller is damaged.	For assistance, please contact: support@inokraft.com
	The impeller is blocked by waste.	Turn off the cleaner and inspect the impeller. Consult a professional to clear any blockages.
	The filter bag is full or clogged.	Clean waste from the filter bag as needed.
Waste gets out of the brush head.	The check valve is damaged.	For assistance, please contact: support@inokraft.com
	The brush head, cleaner cover, or filter bag may be blocked.	Check and clean the brush head, cleaner cover, and filter bag to remove any blockages.
Waste gets out of the filter bag.	The filter bag is not installed properly.	Check the installation and reinstall the filter bag correctly.
	The filter bag is damaged.	Replace the filter bag immediately.
	Incorrect filter mesh size used.	Check the filter bag type being used: • 180-mesh filter bag (for leaves and twigs) • 300-mesh filter bag (for sand and small debris)
The extension pole fails to connect.	The connective V-Cord is damaged.	Please contact: support@inokraft.com
Cleaner fails to be charged.	The battery is damaged.	For battery replacement, please contact support@inokraft.com . Warning: To avoid damaging the cleaner, use only the original lithium battery for replacement.
	The charger is damaged.	For charger replacement, please contact support@inokraft.com . Warning: To prevent damage to the cleaner, use only the original charger for replacement.
The cleaner auto turns on.	Cleaner malfunction.	Please contact: support@inokraft.com

7. WARRANTY

InoKraft warrants all equipment referenced in this document which is manufactured by InoKraft and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by InoKraft, InoKraft will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by InoKraft to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with InoKraft's written recommendations.

This warranty does not cover, and InoKraft shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-InoKraft component parts. Nor shall InoKraft be liable for malfunction, damage or wear caused by the incompatibility of equipment with structures, accessories, equipment or materials not supplied by InoKraft, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by InoKraft.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized InoKraft distributor for verification of the claimed defect. If the claimed defect is verified, InoKraft will repair or replace with free of charge for any defective parts. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

InoKraft's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

InoKraft MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED

BY InoKraft. These items sold, but not manufactured by InoKraft (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. InoKraft will provide purchasers with reasonable assistance in making any claim for breach of these warranties. In no event will InoKraft be liable for indirect, incidental, special or consequential damages resulting from InoKraft supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of InoKraft, or otherwise.



Easy access to email support

8. REGULATORY COMPLIANCE INFORMATION

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

EU Declaration of Conformity

This device meets the EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection. The full text of the EU declaration of conformity is available at the following: <https://inokraftshop.com/pages/declaration-of-conformity>



9. AUTHENTICATION

EU Declaration of Conformity

This device meets the EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

Blooming Forest (HK) Limited declares that the product is in compliance with Directive 2014/30/EU and 2014/35/EU. The full text of the EU declaration of conformity is available at the following: <https://inokraftshop.com/pages/declaration-of-conformity>



Restriction of Hazardous Substances Directive (RoHS)

The products, with included parts (cables, cords, and so on) meets the restriction of the use of certain hazardous substances in electrical and electronic equipment 2011/65/EU and its amendment Directive (EU) 2015/863.

Waste Electrical and Electronic Equipment (WEEE) Directive

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.



Willkommen in der Inokraft-Familie

Sehr geehrte Kundin, sehr geehrter Kunde,

vielen Dank, dass Sie sich für Inokraft entschieden haben! Wir freuen uns sehr, Sie in unserer Gemeinschaft zufriedener Kunden willkommen zu heißen.

Unsere Produkte werden mit einem klaren Fokus auf Benutzererlebnis entwickelt und begleiten Sie dabei, Ihr Leben im eigenen Garten in vollen Zügen zu genießen – innovativ gestaltet, um Ihre Leidenschaft zu entfalten.

Um Ihnen den Einstieg zu erleichtern und das Beste aus Ihrem neuen Gerät herauszuholen, laden wir Sie ein, unsere Website zu besuchen: www.inokraft.com. Dort finden Sie detaillierte Produktinformationen, hilfreiche Ressourcen sowie weitere Inhalte aus unserer Community.

Wir danken Ihnen für Ihr Vertrauen und wünschen Ihnen viel Freude mit Ihrem Inokraft-Produkt.

Mit freundlichen Grüßen
Ihr Inokraft-Team

INHALTSVERZEICHNIS

1. SICHERHEITSANWEISUNGEN	14
1.1 Allgemeine Sicherheitshinweise	14
1.2 Elektrische Sicherheit	14
1.3 Sicherheitshinweise zum Ladegerät	15
1.4 Sicherheitshinweise zur Batterie	15
2. PRODUKTSPEZIFIKATIONEN UND FUNKTIONEN	15
3. VORBEREITUNG	16
3.1 Vorbereitung der Stromversorgung	16
3.2 Vorbereitung des Reinigungsgeräts	17
4. BETRIEB	18
5. WARTUNG	19
5.1 Reinigung	19
5.2 Lagerung	19
6. FEHLERBEHEBUNG	20
7. GARANTIE	21
8. REGULATORY COMPLIANCE INFORMATION	22
9. AUTHENTICATION	23

1. SICHERHEITSANWEISUNGEN

1.1 Allgemeine Sicherheitshinweise

WARNUNG

1. Lesen Sie vor der Inbetriebnahme des Reinigungsgeräts sämtliche Sicherheits- und Warnhinweise, Anweisungen, Abbildungen sowie technischen Daten sorgfältig durch. Die Nichtbeachtung dieser Hinweise kann zu Stromschlägen, Brandgefahr oder schweren Verletzungen führen.
2. Bewahren Sie das Reinigungsgerät außerhalb der Reichweite von Kindern auf.
3. Der Benutzer ist verantwortlich für die Sicherheit anderer Personen im Arbeitsbereich.
4. Lassen Sie vor der ersten Inbetriebnahme durch eine qualifizierte Elektrofachkraft überprüfen, ob alle erforderlichen elektrischen Sicherheitsmaßnahmen vorhanden und ordnungsgemäß umgesetzt sind.

1.2 Elektrische Sicherheit

1. Betreiben Sie das Produkt nicht, während sich Personen im Pool befinden.
2. Dieses Gerät darf von Kindern ab 8 Jahren sowie von Personen mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten nur verwendet werden, wenn sie beaufsichtigt werden, in die sichere Verwendung des Geräts eingewiesen wurden und die damit verbundenen Risiken verstehen. Kinder dürfen nicht mit dem Gerät spielen. Reinigung und Wartung dürfen nur unter Aufsicht durchgeführt werden.
3. Ist das Gerät beschädigt, muss es vom Hersteller, einem autorisierten Kundendienst oder einer vergleichbar qualifizierten Fachkraft ersetzt bzw. repariert werden, um Gefahren zu vermeiden. Wenden Sie sich bei Bedarf an eine qualifizierte Elektrofachkraft.
4. Verwenden Sie das Gerät ausschließlich für die in dieser Anleitung beschriebenen Zwecke.
5. Der Benutzer ist verantwortlich für die Aufrechterhaltung einer sicheren Betriebsumgebung.
6. Der Betreiber ist verantwortlich für die Einhaltung aller örtlichen Sicherheits- und Installationsvorschriften. Wenden Sie sich bei Bedarf an einen zugelassenen Elektrofachbetrieb.
7. Im Falle einer Fehlfunktion dürfen Reparaturen nur von einer qualifizierten Elektrofachkraft durchgeführt werden.
8. Betreiben Sie das Gerät niemals im Trockenlauf oder bei vollständig geschlossener Ansaugöffnung. Schäden durch Trockenlauf führen zum Erlöschen der Garantie.
9. Zulässiger Wassertemperaturbereich: 4 °C (39,2 °F) – 35 °C (95 °F).
10. Halten Sie während des Betriebs Haare, Körperteile und Kleidung von der Ansaugöffnung fern, um Verletzungen zu vermeiden.
11. Zerlegen Sie das Reinigungsgerät nicht, sofern dies nicht vom Hersteller ausdrücklich genehmigt wurde.
12. Dieses Reinigungsgerät ist ausschließlich für den Einsatz unter Wasser vorgesehen und nicht für allgemeine Reinigungszwecke geeignet.
13. Verwenden Sie das Reinigungsgerät nicht zum Aufnehmen scharfer Gegenstände, da dies das Gerät sowie den Filterbeutel beschädigen kann.

1.3 Sicherheitshinweise zum Ladegerät

1. Stellen Sie vor dem Laden sicher, dass sowohl das Reinigungsgerät als auch das Ladegerät vollständig trocken sind.
2. Schalten Sie das Reinigungsgerät vor dem Laden aus.
3. Verwenden Sie ausschließlich das originale Ladegerät, das mit dem Reinigungsgerät geliefert wurde.
4. Laden Sie das Reinigungsgerät ausschließlich in Innenräumen an einem gut belüfteten, sauberen und trockenen Ort.
5. Beenden Sie den Ladevorgang sofort, wenn das Ladegerät beschädigt ist.
6. Ist das Netzkabel beschädigt, muss es vom Hersteller oder autorisiertem Fachpersonal ersetzt werden, um Gefahren zu vermeiden.


1.4 Sicherheitshinweise zur Batterie

1. Dieses Poolreinigungsgerät enthält eine Lithiumbatterie, die ordnungsgemäß entsorgt werden muss. Wenden Sie sich an Ihre örtliche Entsorgungsbehörde, um Informationen zur fachgerechten Entsorgung zu erhalten.
2. Versuchen Sie nicht, die Batterie zu zerlegen.
3. Entsorgen Sie gebrauchte oder beschädigte Batterien niemals im Wasser oder im Feuer. Beachten Sie alle geltenden lokalen Umweltvorschriften.

2. PRODUKTSPEZIFIKATIONEN UND FUNKTIONEN

Modellnummer	IKO2101 Series
Nennleistung	40W
Nennspannung	DC 18V
Batteriekapazität	2000 mAh
Wattstunden	36
Max. Förderleistung	1100GPH (4200L/h)
Max. Partikelgröße	<0.98" (25mm)
Max. Wassertemperatur	122°F (50°C)
Schutzart	IPX8
Ladezeit der Batterie	90 min
Betriebsdauer	50-60min
Mindest-Ansaughöhe (Priming-Wasserstand)	11.8"


Hinweis: Kompatibel mit handelsüblichen Teleskopstangen mit einem Durchmesser von 1-1/4" für eine größere Reichweite und eine einfachere Poolreinigung.

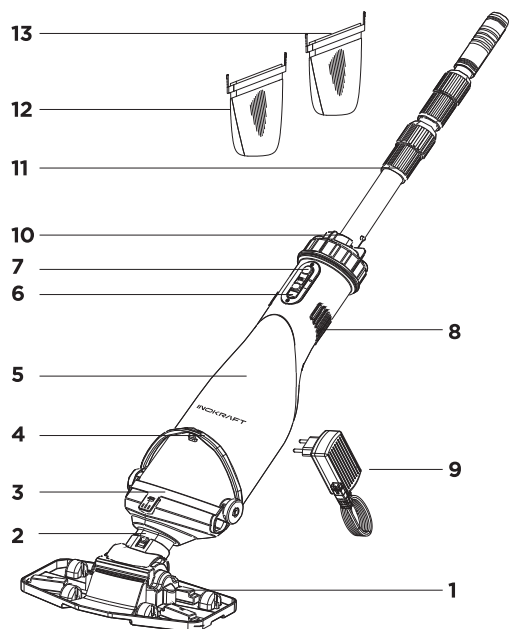

1. Bürstenkopf
2. Gehäuseabdeckung
3. Filterbeutelring
4. Verriegelungsgriff
5. Hauptpumpegehäuse
6. Ladeanschluss
7. Ein-/Ausschalter
8. Wasserablassöffnungen
9. Ladegerät
10. Kontrollleuchte
11. Teleskopstange
12. Haupteinheit mit 180-Mesh-Filterbeutel
13. 300-Mesh-Filterbeutel

3. VORBEREITUNG

3.1 Vorbereitung der Stromversorgung

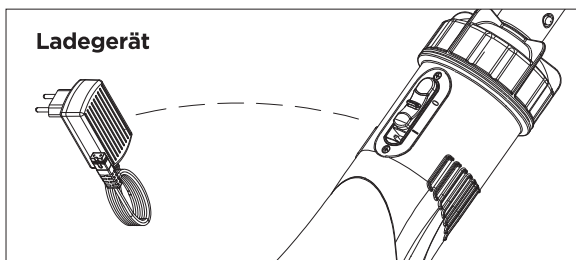

Schneller Zugriff auf die Videoanleitung

Laden Sie das Reinigungsgerät vor der ersten Inbetriebnahme **1,5 Stunden lang auf**. Bei vollständiger Aufladung beträgt die Betriebsdauer etwa **50–60 Minuten**. Schließen Sie das Ladegerät gemäß der Abbildung an das Reinigungsgerät an.

Status der Kontrollleuchte	Beschreibung
Grün – Dauerlicht	Der Batteriestand liegt zwischen 11 % und 100 %. Das Reinigungsgerät funktioniert normal.
Rot – Dauerlicht	Der Batteriestand liegt unter 10 %. Bitte laden Sie das Reinigungsgerät umgehend auf.
Rot – blinkend	Der Filterbeutel ist verstopft. Bitte reinigen oder ersetzen Sie den Filterbeutel.
Grün – blinkend	Das Reinigungsgerät wird geladen.

Hinweis: Während des Ladevorgangs blinkt die grüne Kontrollleuchte und leuchtet dauerhaft grün, sobald die Batterie vollständig geladen ist.

3.2 Vorbereitung des Reinigungsgeräts




WARNUNG

Lesen Sie vor der Verwendung dieses Poolreinigungsgeräts alle Bedienungsanweisungen sorgfältig durch und stellen Sie sicher, dass Sie diese vollständig verstanden haben.


1. Montage des Bürstenkopfs

Setzen Sie den **Bürstenkopf** in die **Gehäuseabdeckung** ein, bis er sicher eingerastet ist. Ist der Bürstenkopf nicht vollständig eingesetzt, kann er sich während des Betriebs von der Gehäuseabdeckung lösen.

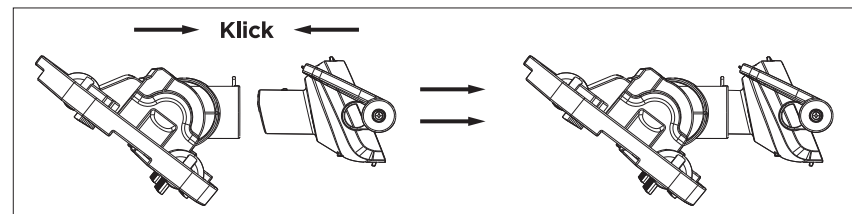

2. Montage des Filterbeutels



Legen Sie den Bürstenkopf auf eine ebene Fläche und stellen Sie den **Verriegelungsgriff** in die niedrigste Position. Montieren Sie anschließend den Filterbeutelring korrekt an der **Gehäuseabdeckung** und verriegeln Sie die Verschlüsse auf beiden Seiten sicher.

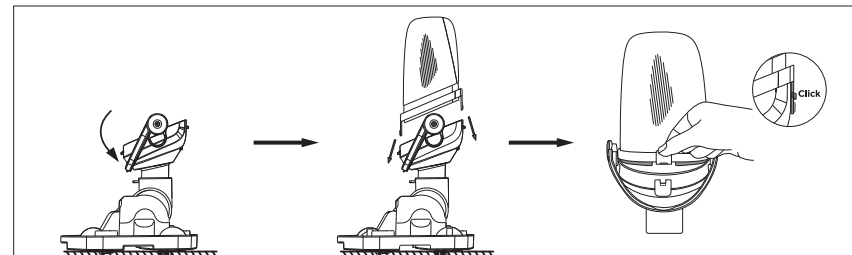

3. Montage des Hauptpumpegehäuses

A: Bewegen Sie den **Verriegelungsgriff** in die Position der Gehäuseabdeckung. Richten Sie die Verriegelung aus und drücken Sie sie, bis sie sicher einrastet.

B: Rasten Sie den Verriegelungsgriff am **Hauptpumpegehäuse** ein und fixieren Sie ihn sicher.

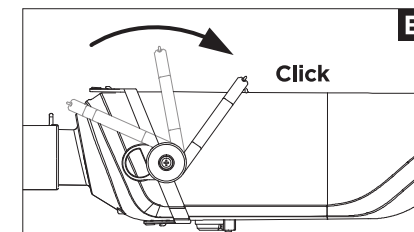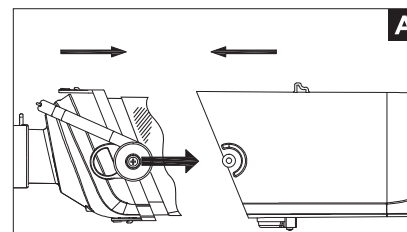


Achtung:

Montieren Sie den Filterbeutelring korrekt am Hauptpumpegehäuse. Stellen Sie sicher, dass der Filterbeutel frei von Verstopfungen oder Fremdkörpern ist.

4. Montage der Teleskopstange

Richten Sie die **Teleskopstange** am Griff des Poolreinigungsgeräts aus, drücken Sie die Federknöpfe und schieben Sie die Stange hinein, bis die Knöpfe einrasten. Zum Einstellen der Länge entriegeln Sie die einzelnen Segmente, ziehen Sie die Stange auf die gewünschte Länge aus und verriegeln Sie sie anschließend sicher.

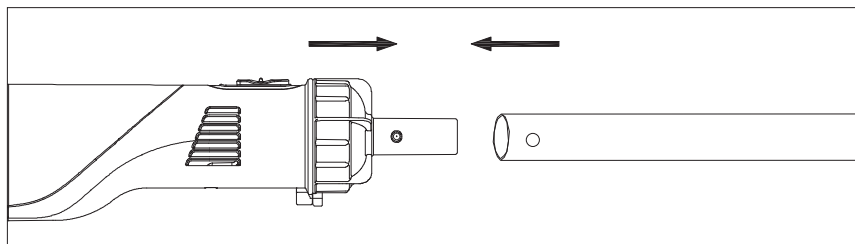


Achtung:

Ziehen Sie die Teleskopstange nicht übermäßig heraus und wenden Sie keine übermäßige Kraft an, da dies zu Beschädigungen führen kann.

4. BETRIEB


! ! WARNUNG

- Die maximale Wassertemperatur für den Dauerbetrieb darf 95 °F (35 °C) nicht überschreiten.
- Das Poolreinigungsgerät ist für kleine Schwimmbecken, Fischteiche, Badebecken und Zierteiche ausgelegt. Verwenden Sie das Gerät nicht zur Reinigung von Algen sowie nicht mit brennbaren, gasförmigen oder explosiven Flüssigkeiten.

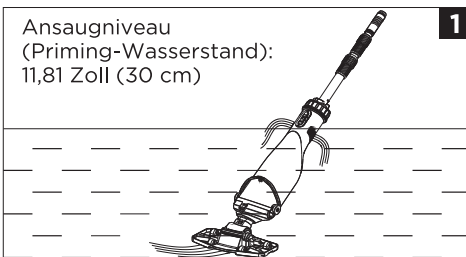

1. Mindestwasserstand

Die Mindestwassertiefe vom Ansaugniveau bis zur horizontalen Wasseroberfläche muss **11,81 Zoll (30 cm)** betragen. Ist der Wasserstand niedriger, füllen Sie vor der Inbetriebnahme des Reinigungsgeräts das Hauptpumpengehäuse bis zum Ansaugniveau mit Wasser.

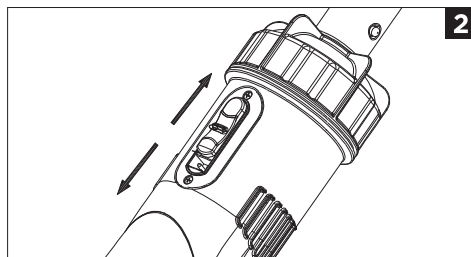


2. Einschalten des Poolreinigungsgeräts und Eintauchen ins Wasser

Hinweis:

2.1 **O**: OFF **I**: ON

2.2 Die Garantie erlischt, wenn die Pumpe durch Trockenlauf beschädigt wird.

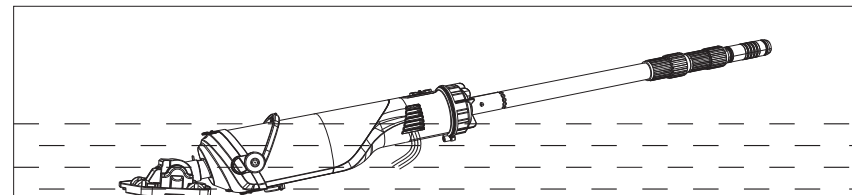


Hinweis:

Reinigung in flachen Bereichen

- Platzieren Sie das Reinigungsgerät horizontal und tauchen Sie es vollständig unter, bis die Wasserkammer vollständig gefüllt ist.
- Heben Sie anschließend die Teleskopstange vorsichtig an, während der Bürstenkopf unter Wasser bleibt, und beginnen Sie mit der Reinigung.

5. WARTUNG

5.1 Reinigung

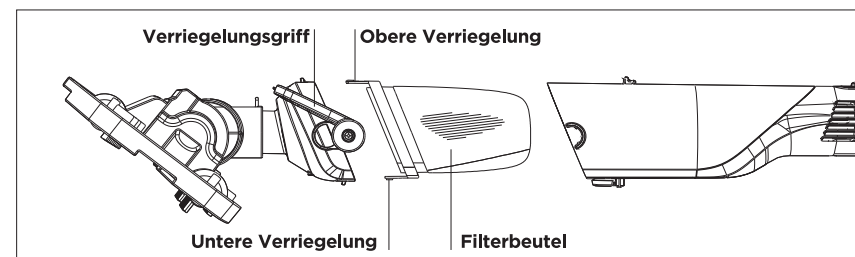

- Entfernen und reinigen Sie den Filterbeutel nach jeder Verwendung.
- Reinigung des Filterbeutels: Entriegeln Sie die obere und untere Verriegelungsklammer, entnehmen Sie den Filterbeutel, entfernen Sie die Verschmutzungen und spülen Sie ihn gründlich mit sauberem Wasser aus.

5.2 Lagerhinweise

- Laden Sie die Batterie vor der Lagerung vollständig auf, um eine optimale Leistung und Lebensdauer der Batterie sicherzustellen. Schäden, die durch unzureichendes Laden entstehen, sind nicht von der Garantie abgedeckt.
- Verwenden Sie die Originalverpackung oder bedecken Sie das Poolreinigungsgerät mit einem sauberen Tuch, um es vor Staub zu schützen.
- Lagern Sie das Poolreinigungsgerät und dessen Zubehör an einem trockenen, gut belüfteten, frostfreien und dunklen Ort.
- Bewahren Sie das Poolreinigungsgerät außerhalb der Reichweite von Kindern auf.
- Empfohlener Lagertemperaturbereich: 50 °F bis 86 °F (10 °C bis 30 °C).

6. FEHLERBEHEBUNG

 WARNUNG

Um Gefahren zu vermeiden, dürfen alle Installationen, Reparaturen und der Austausch von Komponenten ausschließlich von autorisiertem Servicepersonal durchgeführt werden. Vergewissern Sie sich vor dem Betrieb des Reinigers, dass das Gerät ausgeschaltet und vom Stromnetz getrennt ist.

Problem	Mögliche Ursache	Lösung
Das Reinigungsgerät kann den Schmutz nicht aufnehmen.	Die Batterie ist entladen.	Überprüfen Sie die Kontrollleuchte und laden Sie das Reinigungsgerät auf. Bei vollständiger Ladung beträgt die Betriebsdauer 50–60 Minuten.
	Der Wasserstand im Gerät liegt unter dem Ansaugniveau.	Tauchen Sie das Gerät ein, bis der Wasserstand die Priming-Markierung von 11,8" erreicht.
	Das Laufrad ist beschädigt.	Bitte wenden Sie sich an den Kundendienst: support@inokraft.com
	Das Laufrad ist durch Schmutz blockiert.	Schalten Sie das Reinigungsgerät aus und überprüfen Sie das Laufrad. Lassen Sie Blockaden ggf. von einer Fachkraft entfernen.
	Der Filterbeutel ist voll oder verstopft.	Reinigen Sie den Filterbeutel bei Bedarf.
Schmutz tritt aus dem Bürstenkopf aus.	Das Rückschlagventil ist beschädigt.	Bitte wenden Sie sich an den Kundendienst: support@inokraft.com
	Bürstenkopf, Gehäuseabdeckung oder Filterbeutel sind blockiert.	Überprüfen und reinigen Sie Bürstenkopf, Gehäuseabdeckung und Filterbeutel, um Blockaden zu entfernen.
Schmutz tritt aus dem Filterbeutel aus.	Der Filterbeutel ist nicht korrekt installiert.	Überprüfen Sie die Montage und installieren Sie den Filterbeutel korrekt.
	Der Filterbeutel ist beschädigt.	Ersetzen Sie den Filterbeutel sofort.
	Es wurde eine falsche Filtermaschenweite verwendet.	Überprüfen Sie den verwendeten Filterbeuteltyp: • 180-Mesh-Filterbeutel • 300-Mesh-Filterbeutel
Die Teleskopstange lässt sich nicht verbinden.	Das Verbindungskabel (V-Kabel) ist beschädigt.	Bitte wenden Sie sich an: support@inokraft.com
Das Reinigungsgerät lässt sich nicht laden.	Die Batterie ist beschädigt.	Für den Austausch der Batterie wenden Sie sich bitte an: support@inokraft.com WARNUNG: Verwenden Sie ausschließlich die originale Lithiumbatterie als Ersatz, um Schäden am Gerät zu vermeiden.
	Das Ladegerät ist beschädigt.	Für den Austausch des Ladegeräts wenden Sie sich bitte an: support@inokraft.com WARNUNG: Verwenden Sie ausschließlich das originale Ladegerät als Ersatz, um Schäden am Gerät zu vermeiden.
Das Reinigungsgerät schaltet sich automatisch ein.	Fehlfunktion des Reinigungsgeräts.	Bitte wenden Sie sich an: support@inokraft.com

7. GARANTIE

InoKraft garantiert, dass alle in diesem Dokument genannten und von InoKraft hergestellten Geräte, die den Namen InoKraft tragen, zum Zeitpunkt des Verkaufs an den ursprünglichen Käufer frei von Material- und Verarbeitungsfehlern sind.

Sofern keine besonderen, erweiterten oder eingeschränkten Garantien von InoKraft veröffentlicht wurden, wird InoKraft innerhalb eines Zeitraums von zwölf (12) Monaten ab dem Verkaufsdatum alle Teile des Geräts, die von InoKraft als fehlerhaft eingestuft werden, reparieren oder ersetzen.

Diese Garantie gilt nur, wenn das Gerät gemäß den schriftlichen Empfehlungen von InoKraft installiert, betrieben und gewartet wird.

Diese Garantie deckt nicht ab, und InoKraft haftet nicht für:

- normalen Verschleiß,
- Fehlfunktionen, Schäden oder Abnutzung infolge fehlerhafter Installation, unsachgemäßer Anwendung, Abrieb, Korrosion, unzureichender oder unsachgemäßer Wartung, Fahrlässigkeit, Unfall, Manipulation oder Verwendung nicht von InoKraft stammender Komponenten,
- Fehlfunktionen, Schäden oder Abnutzung aufgrund der Inkompatibilität des Geräts mit Strukturen, Zubehör, Geräten oder Materialien, die nicht von InoKraft geliefert wurden,
- Fehlfunktionen, Schäden oder Abnutzung aufgrund fehlerhafter Konstruktion, Herstellung, Installation, Bedienung oder Wartung von Strukturen, Zubehör, Geräten oder Materialien, die nicht von InoKraft geliefert wurden.

Garantieabwicklung

Diese Garantie setzt voraus, dass das als defekt geltend gemachte Gerät frachtfrei an einen autorisierten InoKraft-Händler zur Überprüfung zurückgesendet wird. Wird der behauptete Defekt bestätigt, repariert oder ersetzt InoKraft die defekten Teile kostenlos. Wird bei der Überprüfung kein Material- oder Verarbeitungsfehler festgestellt, werden Reparaturen gegen eine angemessene Gebühr durchgeführt. Diese Gebühr kann die Kosten für Teile, Arbeitsleistung und Transport umfassen.

Ausschließlichkeit der Garantie

Diese Garantie ist exklusiv und ersetzt alle anderen ausdrücklichen oder stillschweigenden Garantien, einschließlich, aber nicht beschränkt auf Garantien der Marktgängigkeit oder der Eignung für einen bestimmten Zweck. Die einzige Verpflichtung von InoKraft und das einzige Rechtsmittel des Käufers im Falle einer Garantieverletzung sind die oben genannten Leistungen. Der Käufer erklärt sich damit einverstanden, dass keine weiteren Rechtsmittel (einschließlich, aber nicht beschränkt auf Neben- oder Folgeschäden wie entgangene Gewinne, entgangene Umsätze, Personen- oder Sachschäden oder sonstige mittelbare oder unmittelbare Verluste) geltend gemacht werden können. Ansprüche wegen Garantieverletzungen müssen innerhalb von zwei (2) Jahren ab dem Verkaufsdatum geltend gemacht werden.

Produkte anderer Hersteller

InoKraft übernimmt keine Garantie und lehnt alle stillschweigenden Garantien der Marktgängigkeit und der Eignung für einen bestimmten Zweck für Zubehör, Geräte, Materialien oder Komponenten ab, die zwar von InoKraft verkauft, aber nicht von InoKraft hergestellt wurden. Solche Produkte (z. B. Elektromotoren, Schalter, Schläuche usw.) unterliegen gegebenenfalls den Garantiebestimmungen ihres jeweiligen Herstellers. InoKraft unterstützt Käufer in angemessenem

Umfang bei der Geltendmachung von Ansprüchen aus diesen Garantien. In keinem Fall haftet InoKraft für indirekte, zufällige, besondere oder Folgeschäden, die aus der Lieferung, Bereitstellung, Nutzung oder Leistung von Produkten oder sonstigen Waren entstehen, unabhängig davon, ob diese auf Vertragsverletzung, Garantieverletzung, Fahrlässigkeit von InoKraft oder anderen Gründen beruhen.



Einfacher Zugang zum E-Mail-Support

8. REGULATORY COMPLIANCE INFORMATION

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

EU Declaration of Conformity

This device meets the EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection. The full text of the EU declaration of conformity is available at the following: <https://inokraftshop.com/pages/declaration-of-conformity>



9. AUTHENTICATION

EU Declaration of Conformity

This device meets the EU requirements on the limitation of exposure of the general public to electromagnetic fields by way of health protection. Blooming Forest (HK) Limited declares that the product is in compliance with Directive 2014/30/EU and 2014/35/EU. The full text of the EU declaration of conformity is available at the following: <https://inokraftshop.com/pages/declaration-of-conformity>



Restriction of Hazardous Substances Directive (RoHS)

The products, with included parts (cables, cords, and so on) meets the restriction of the use of certain hazardous substances in electrical and electronic equipment 2011/65/EU and its amendment Directive (EU) 2015/863.

Waste Electrical and Electronic Equipment (WEEE) Directive

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.



