



Step-by-Step for running the analysis software


1. Open the “main.m”-file in the Octave GUI and run this file by clicking the green “play”-button.

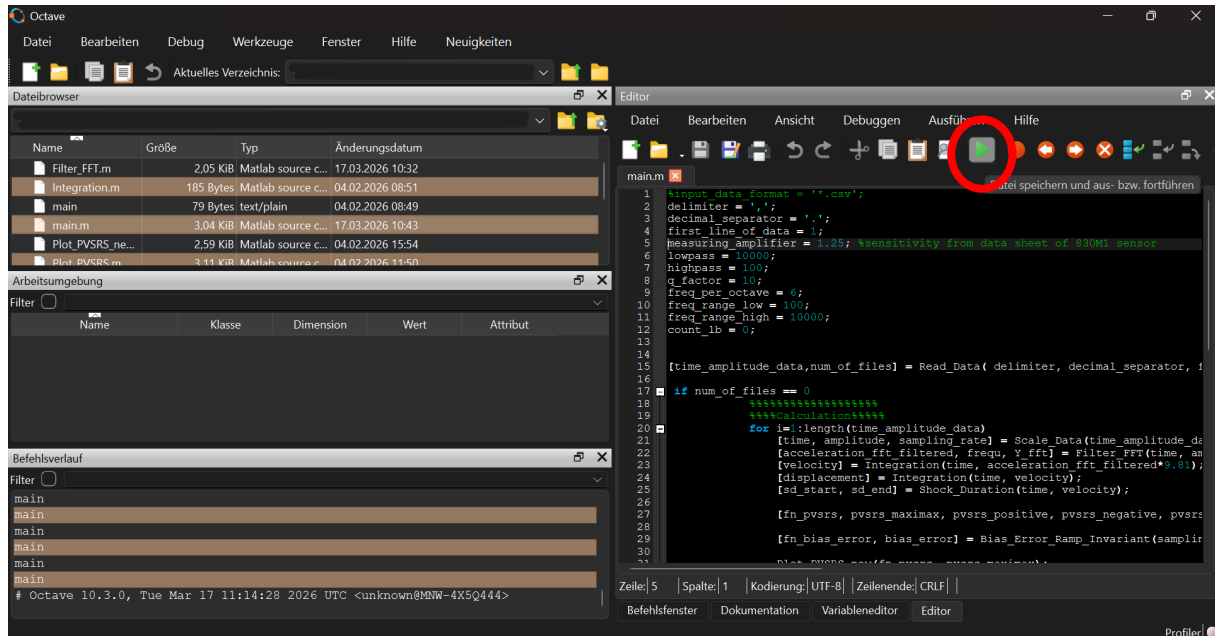

2. Then it opens a new window for selecting the csv- or txt-file you would like to analyse. After selecting the correct file, click on “open”.

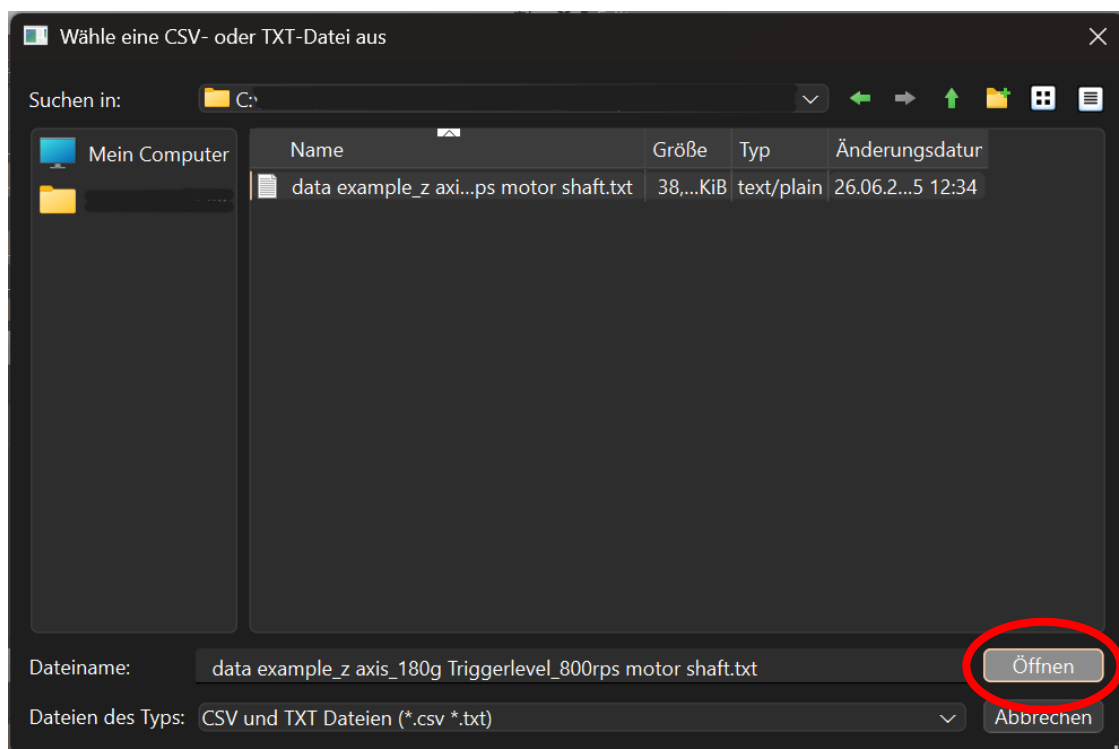

3. The PVSRS is then calculated automatically and plotted on a 4-coordinate graph (4CP). A new window containing the graph will open.

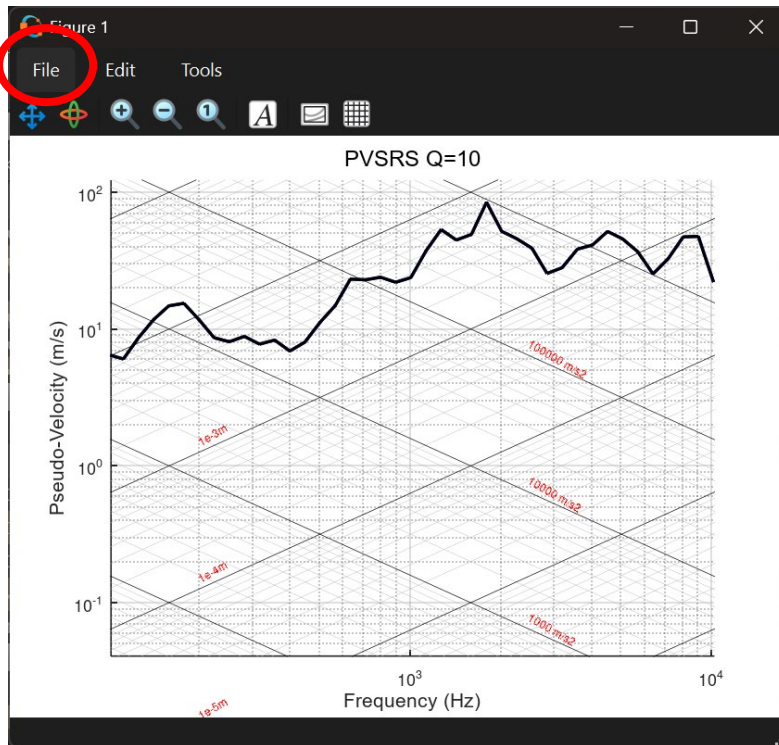

By clicking on “file” you can save the figure in several file formats.

