KORbuild

User manual

First version: Takeoff, Daily and Settings

System version: v165 · Generated on 2026-11-07 15:27 UTC

Contents

Before you start

- What KORbuild is
- Who does what
- How to use this manual

Getting started

- Sign in
- Create your company's account
- Home
- First sign-in with a temporary password
- Download this manual
- Sign out

Settings: the company and the people

- Users
- Access roles
- Contacts
- Job roles
- Company
- My profile

Takeoff: from the plan to the proposal

- The catalog: items and assemblies
- Create the project
- Upload the plans
- Set and check the scale
- Measure
- Materials and labor
- Schedule
- Project overview
- Proposal
- Release for construction

Daily: the daily construction report

- On the phone: filling in the day's report (foreman)
- On the computer: approving the report (administrator or manager)
- Progress on the Gantt

On the iPhone (and Android)

- Install on the iPhone
- Updates
- Without signal
- Sign out

Questions and common problems

Test evidence

Before you start

What KORbuild is

KORbuild brings the work of estimating and following a job into one place: you measure the plans and build the proposal, release the project to the job, and receive the field's daily reports, all on the same data. This first version has three areas:

- **Takeoff:** measures the plans, calculates materials and labor, builds the schedule and issues the proposal.
- **Daily:** the daily report (DDR). The foreman fills it in on the phone, the administrator approves it, and the progress goes into the schedule.
- **Settings:** the company, the people, what each person can do, the contacts and the roles with their hourly rates.

Other areas (time clock, bids) are not released yet and do not appear for you.

Who does what

Access is controlled by **roles**. Four come ready, and the company can create more:

ROLE	FOR WHOM	WHAT THEY DO
Admin	The owner or the person in charge of the account	Registers people, roles, contacts and job roles; sees and changes everything, including Settings (the field's daily report belongs to the foreman). This role is fixed: the company never ends up without someone who manages access.
Project manager	Whoever follows the jobs	Sees the modules and approves, without touching the settings: follows projects and daily reports, approves the field's report and measures in Takeoff.
Foreman	Whoever is on site	Fills in the day's report on the phone. (The crew's time clock comes with Crew, which is not in this version yet.)
Worker	Whoever does the work	Only clocks their own time, a Crew feature. In this version they have no tasks in the system yet.

The administrator registers the people. Each person changes only their own personal data (name and phone) in **My profile**, never their own access role.

How to use this manual


- Each chapter follows the path of a task, in the order it happens.
- Button and menu names appear in **bold**, as on screen.

- The images are real screenshots of the system, taken during the test run described in the last chapter. Names and values (company Northfield Builders, project Mitchell Garage Remodel) are examples.
- Daily was made for the phone. Its screens appear at iPhone size.

Getting started

Sign in

Open the KORbuild address, type your **email** and **password** and tap **Sign in**. Check **Keep me signed in** if the device is yours alone.

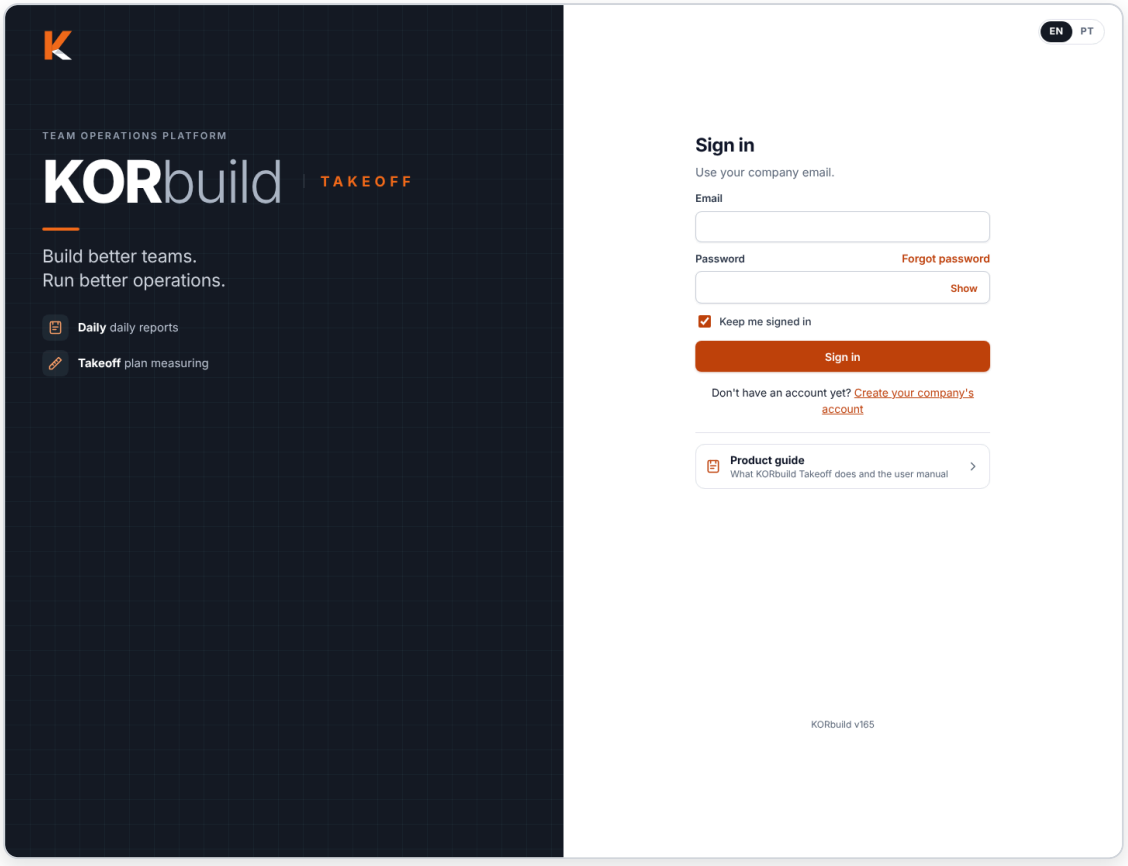


Sign-in screen

Forgot your password? Use **Forgot password**: we email you a link.


Create your company's account

If your company does not use KORbuild yet, tap **Create your company's account** and enter your name, email and a password of at least 8 characters.

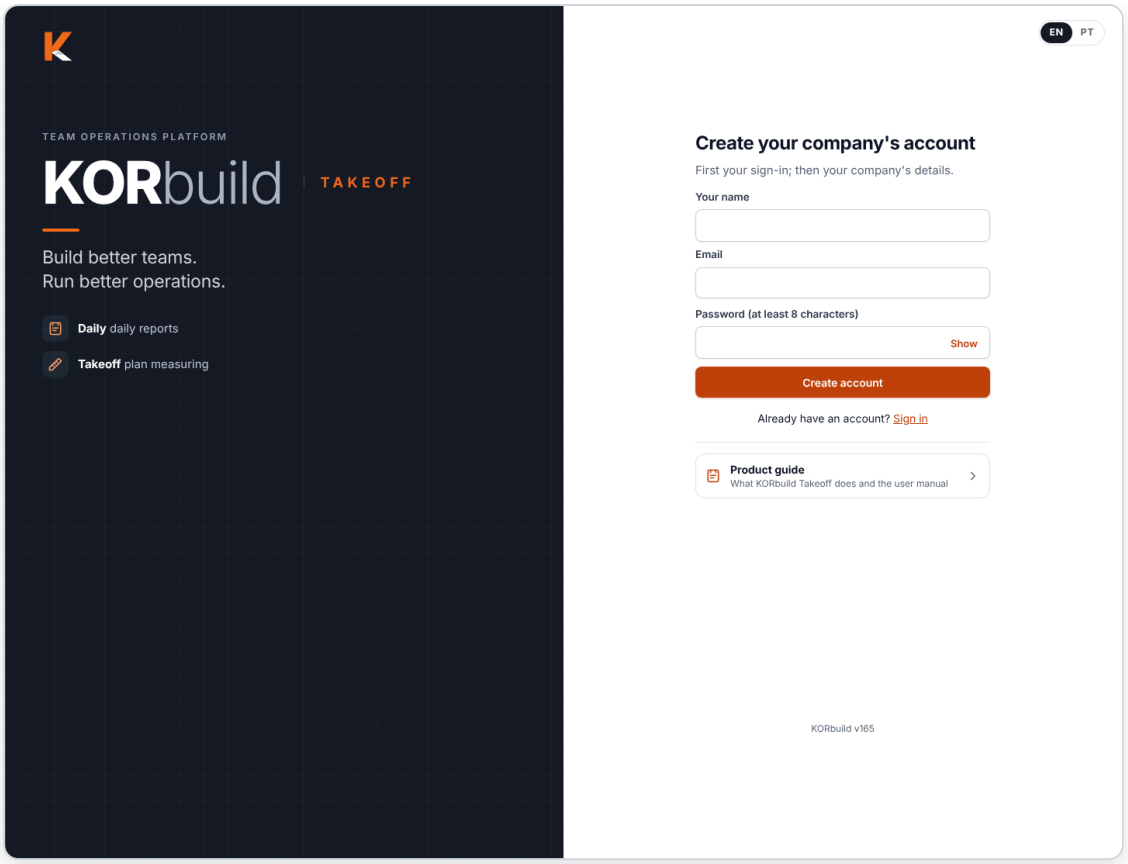

Create the account

After signing in for the first time, the **Your company** screen asks for the company name and **how the company works** (general contractor or subcontractor). Whoever creates the company becomes the **Admin**.

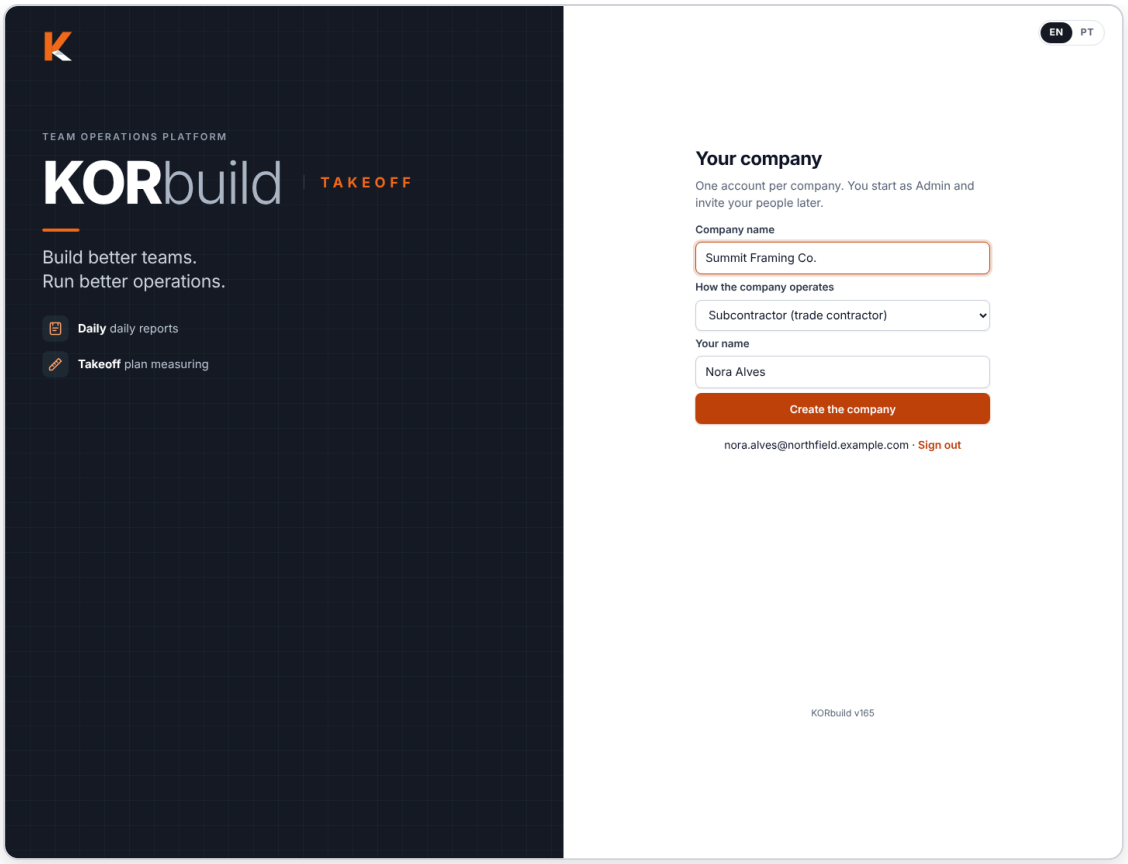


Register the company

> **If the administrator already registered you:** do not create an account. Sign in with the email and temporary password they gave you (see "First sign-in with a temporary password" below).

Home

When you sign in, **Home** shows what needs your attention: projects, deadlines and daily reports awaiting approval.

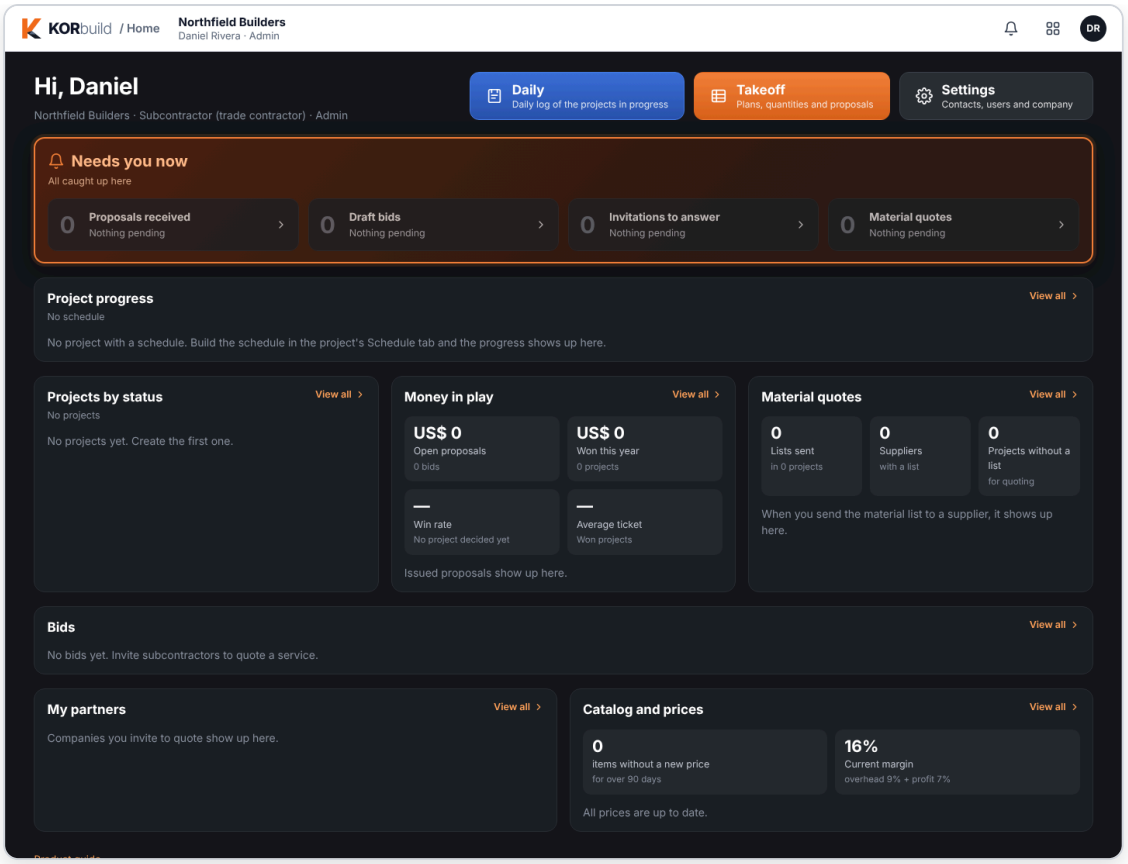

Home

First sign-in with a temporary password

When the administrator registers you, they get a temporary password (three groups of four characters, like `Ab3d-Ef5g-Hj7k`) and pass it on to you. On your first sign-in:

1. Sign in with your email and the temporary password.
2. The system takes you straight to the **new password** screen. Nothing else opens until you choose yours.
3. Choose a password of at least 8 characters and confirm it. Done: the temporary password stops working and only you know yours.

Download this manual

After signing in, open your account menu (your initials) and tap **User manual (PDF)**. The file comes in the language you picked in the system (Portuguese or English).

Sign out


Open your account menu (your initials, top right) and tap **Sign out**. The session ends on this device even if the internet is unstable.

Settings: the company and the people

Settings is where the administrator organizes the company. Every registration screen follows the same design: a create button at the top, **search**, a **grid** with the rows and a **side panel** to create and edit. To leave the panel, use **Cancel**, the **×**, the **Esc** key, or click outside it.

Users


Here are the people who sign in to the system and each person's role. Only the administrator registers and changes them.

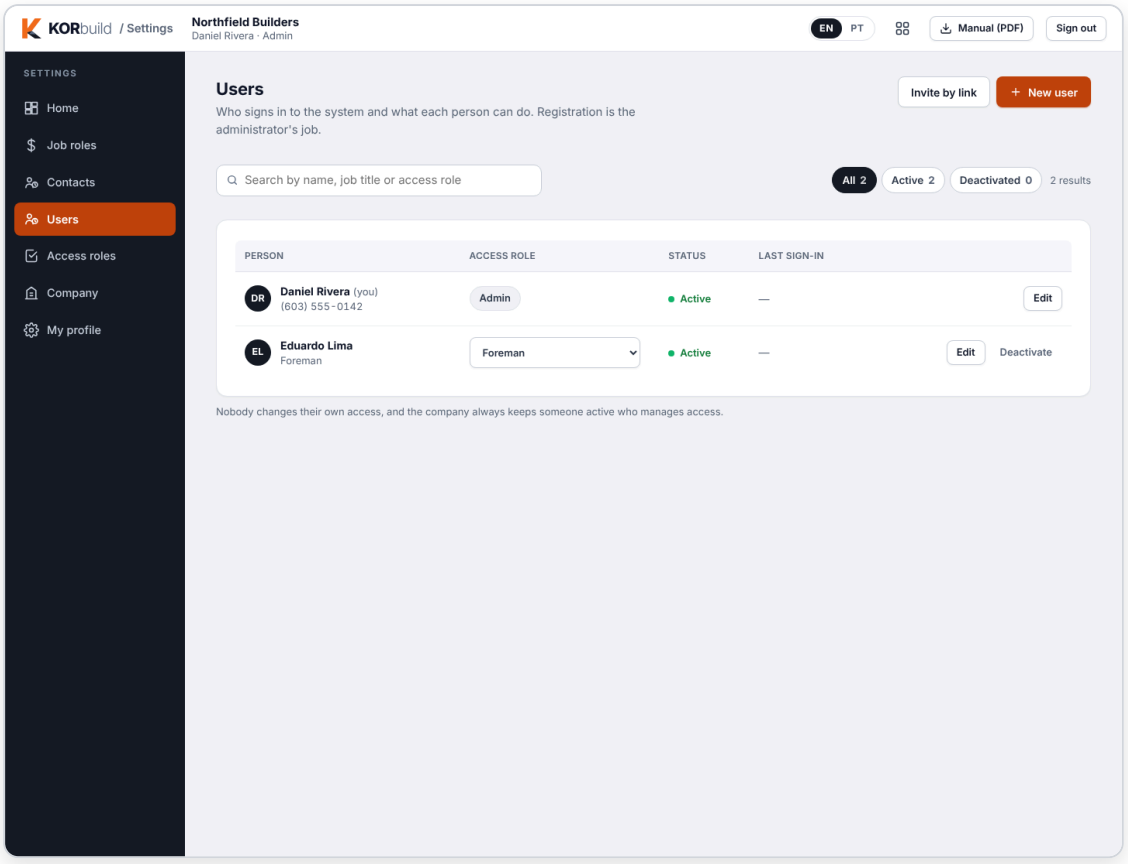

Users


Register a person

1. Tap **New user**.
2. Enter the **name**, the **email** (it is the login), the **phone**, the **job title** and the **access role**.
3. Tap **Create user**.

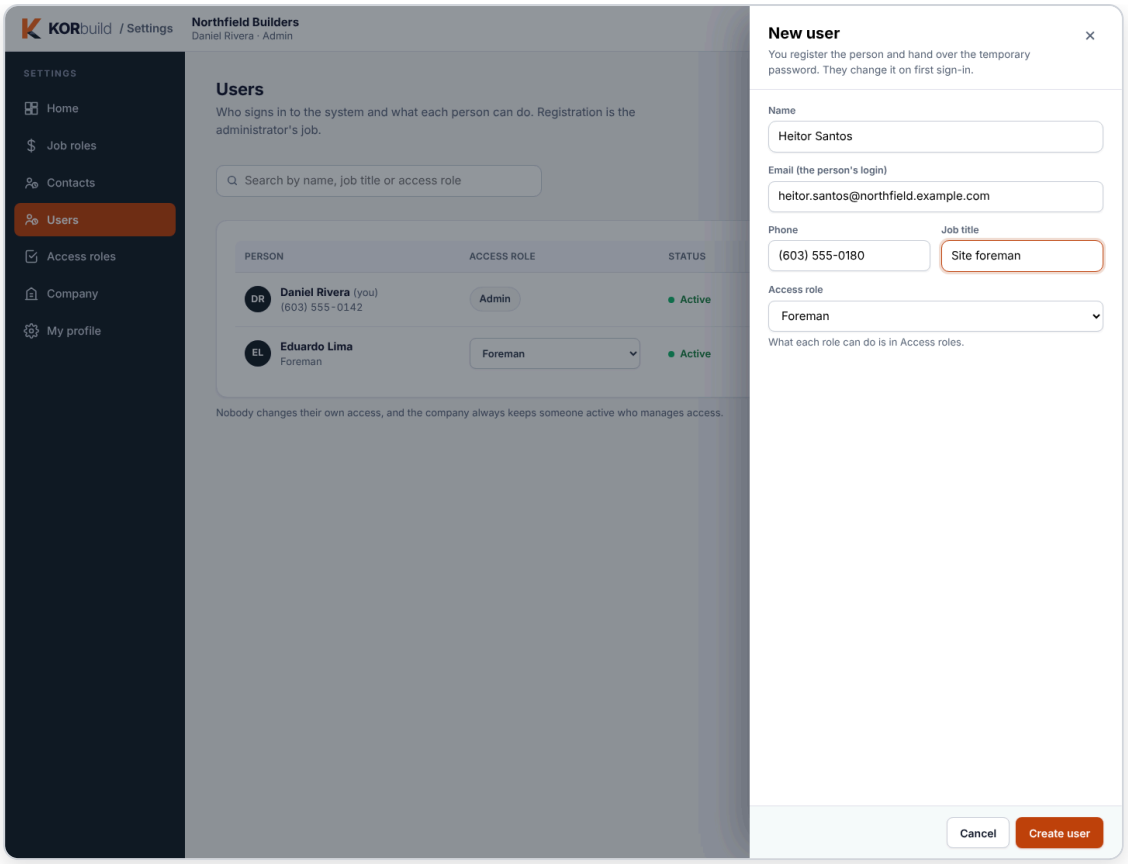

New user

The system creates the login and shows the **temporary password just once**. Use **Copy address, email and password** and send it to the person through a secure channel.

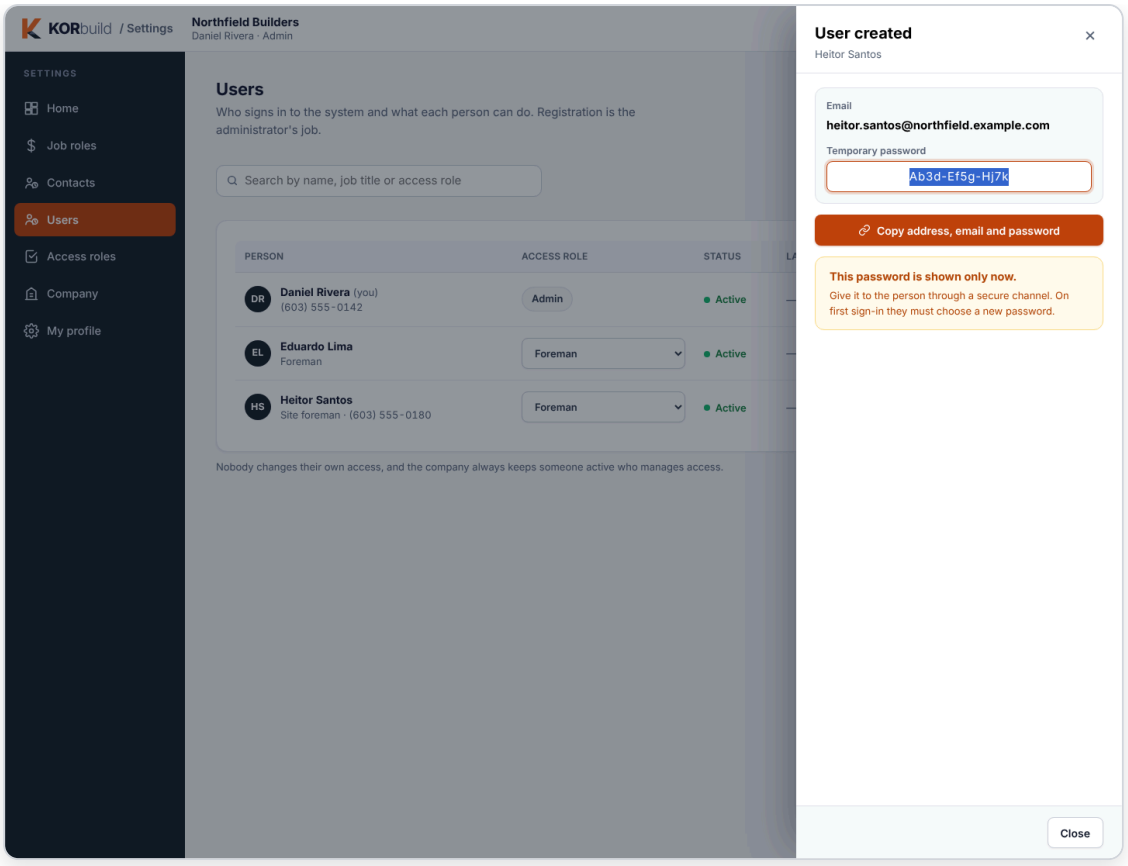


Temporary password

> **Careful:** the temporary password does not appear again. If it gets lost, open the person with **Edit** and use **Generate a new temporary password**. The previous one stops working.

If the email already has a KORbuild account (in another company), the system tells you. In that case use **Invite by link**: the person receives a link and joins your company with the login they already have.

Edit a person

Tap **Edit** on the person's row to change name, phone, job title, role and status. To change only the role, use the selector on the row itself. A deactivated person loses access, and their history stays.

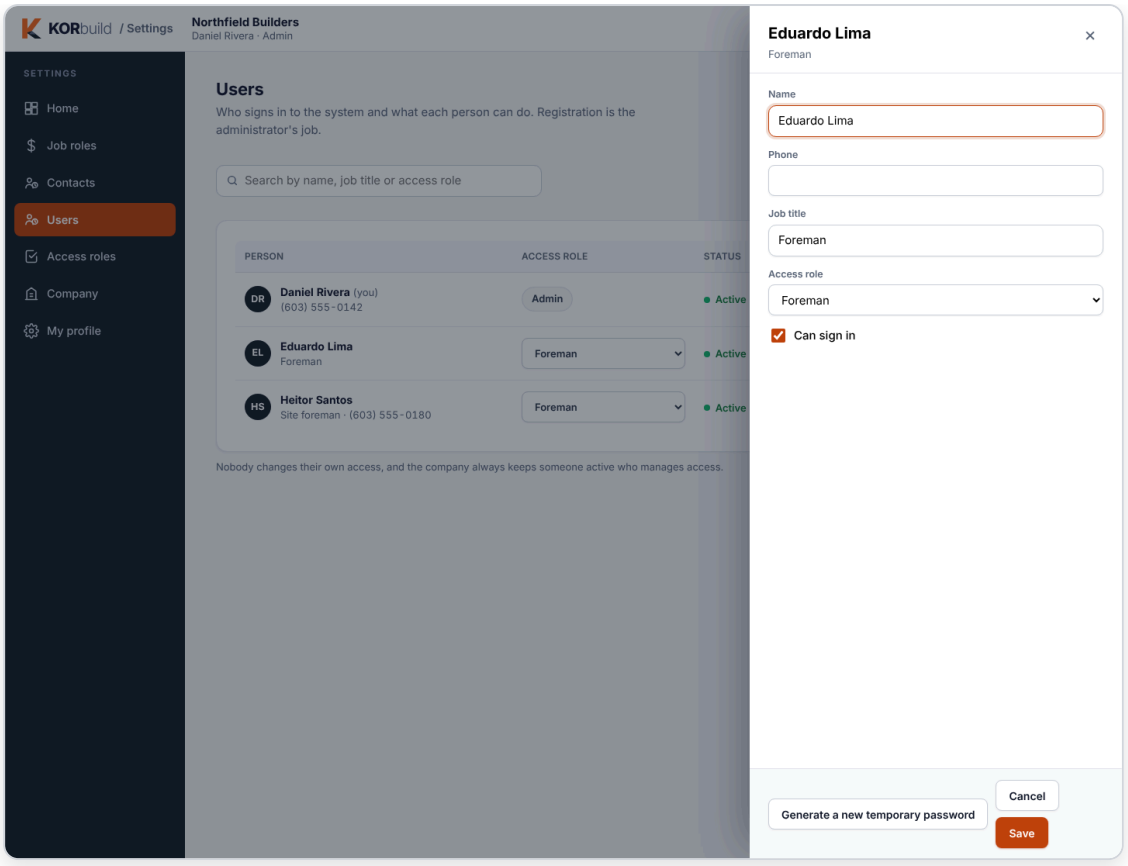


Edit user

Two rules protect the company: nobody changes their own access, and the company always keeps at least one active administrator.


Access roles

Roles define what each person can do. The screen lists the roles, how many permissions each one has and how many people use it.

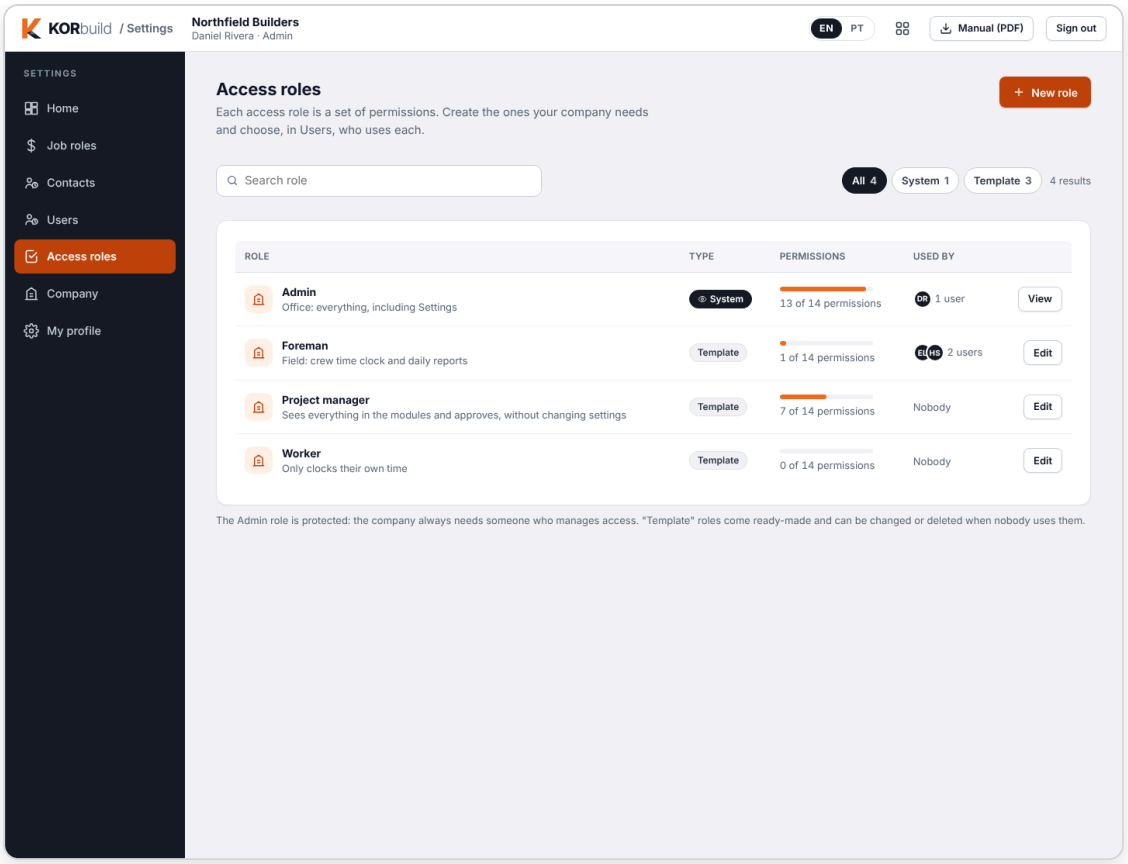


Access roles

Tap **Edit** to see the permissions. They appear as switches, grouped by area. The **Admin** role is locked: it cannot be changed or deleted.

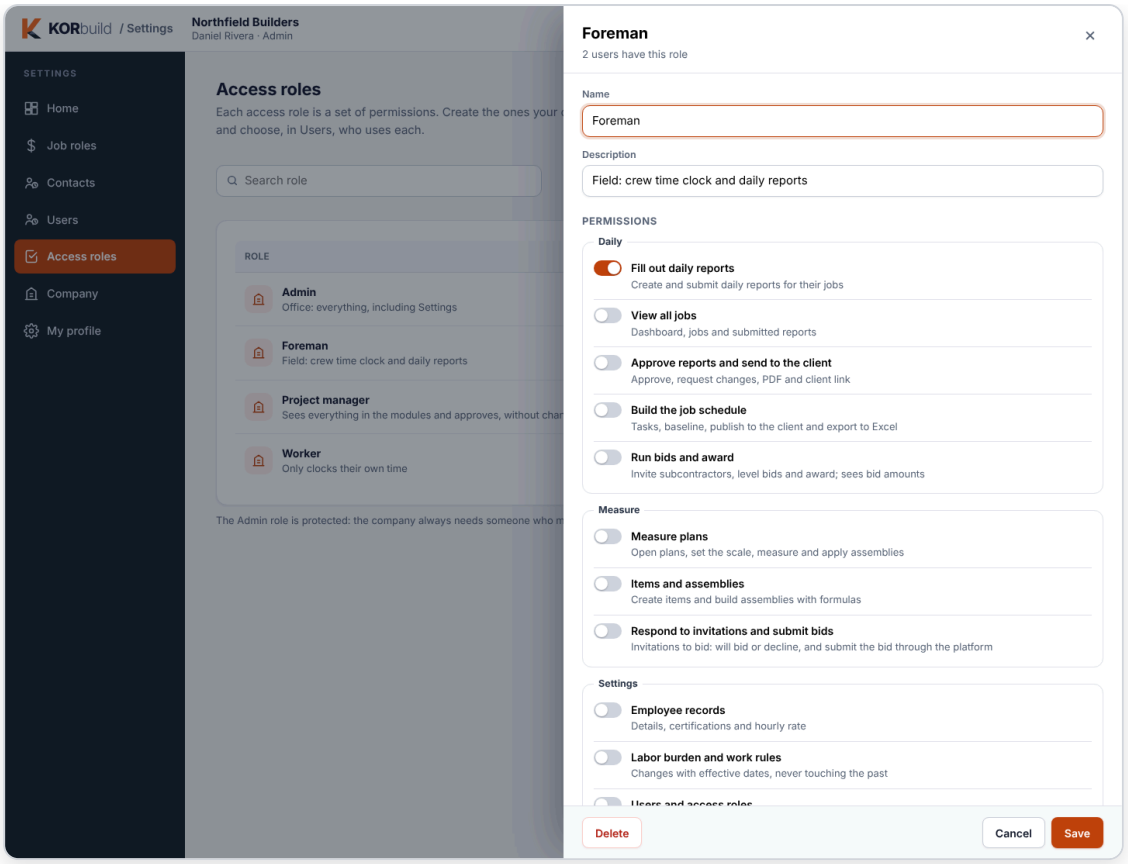

Role editor


To create another role, tap **New role**: start blank or from an existing role and adjust. A role in use cannot be deleted, and the screen says who uses it.

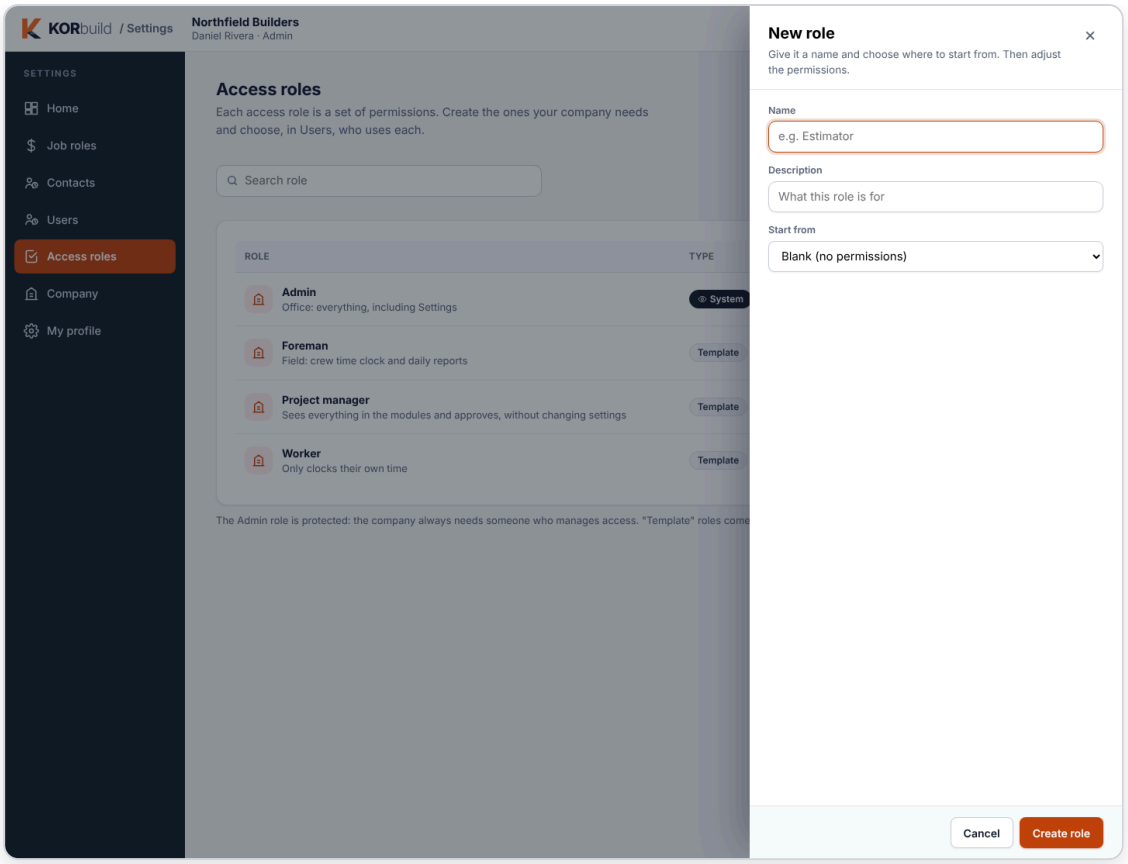

New role


Contacts

The directory of clients, contractors, suppliers and subcontractors. Each contact has **tags** (client, supplier…), and the chips above the grid filter by them.

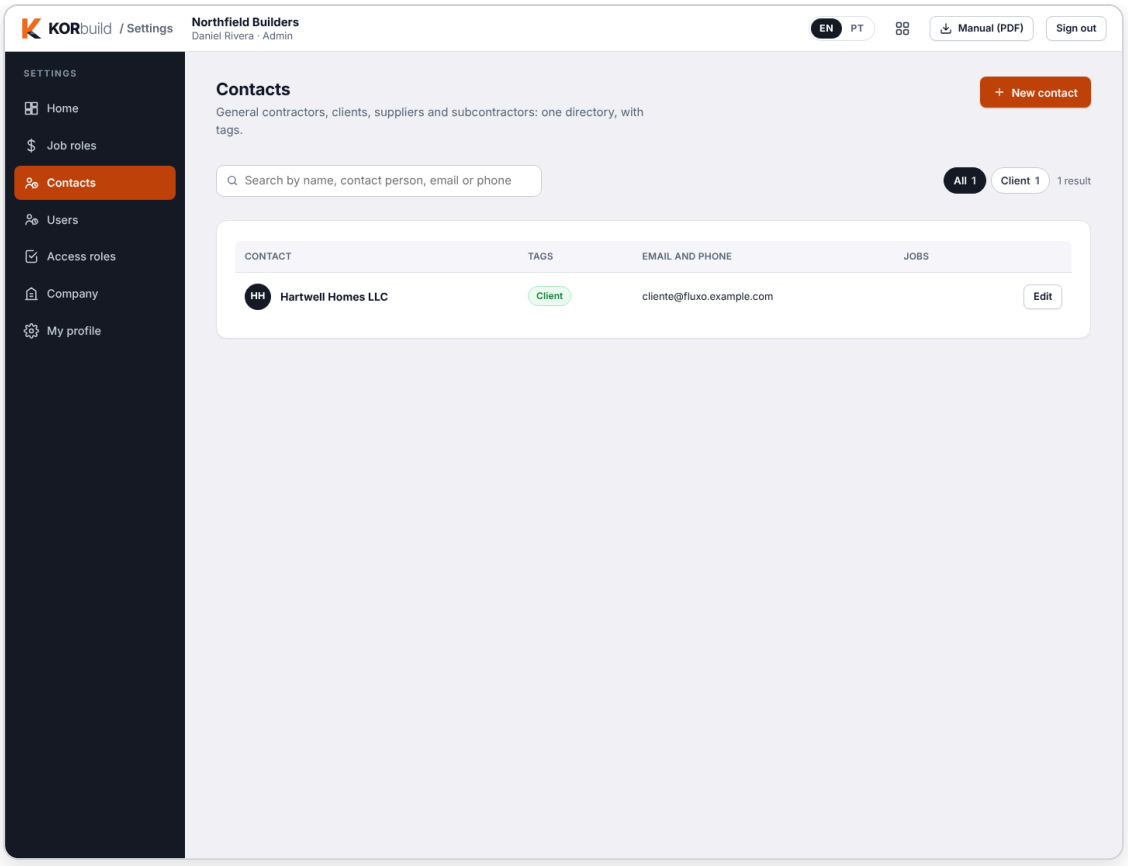

Contacts

Tap **New contact** or **Edit**. The panel keeps the person's and the company's data, the address and notes. A contact needs at least one tag.

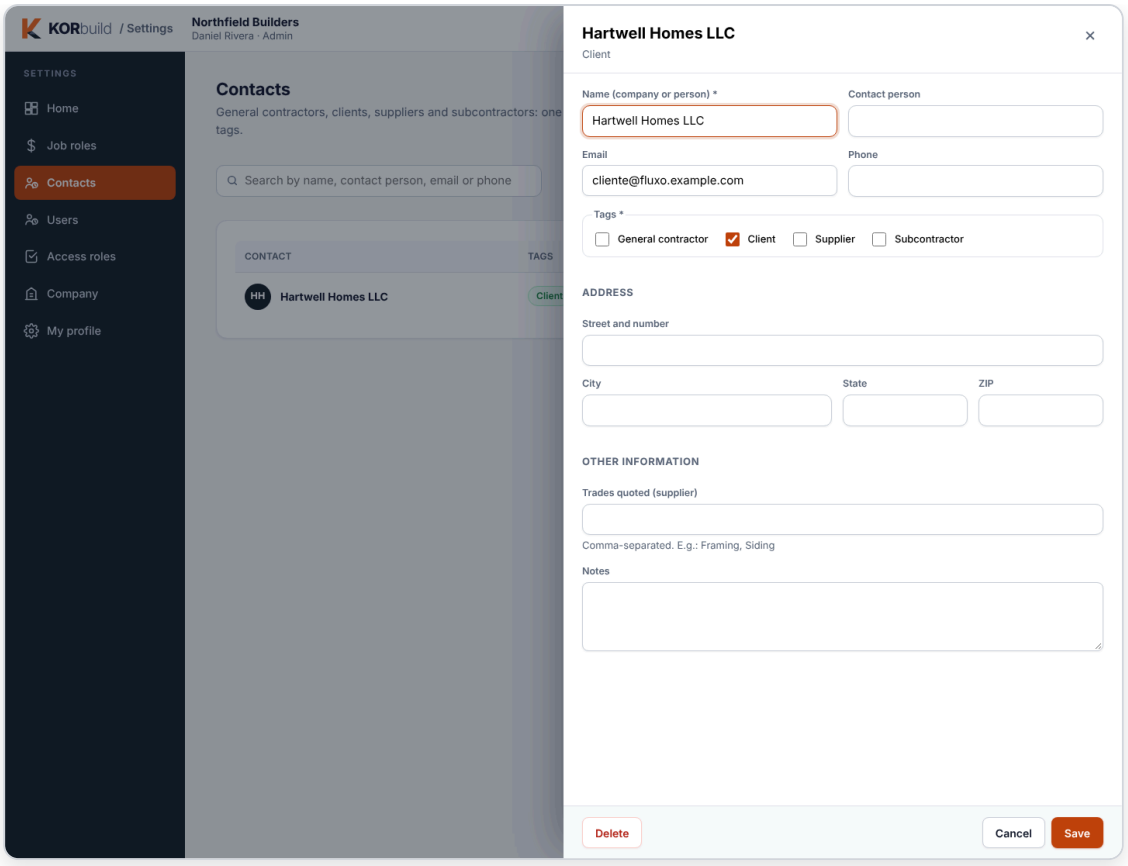


Contact

> Register the client's contact before you create your first project in Takeoff: the project's client is chosen from there.


Job roles

Each job role (Carpenter, Painter...) has an **hourly rate**. Takeoff uses it for labor pricing: a labor item linked to a role takes that role's rate, and you do not type a price on the item.

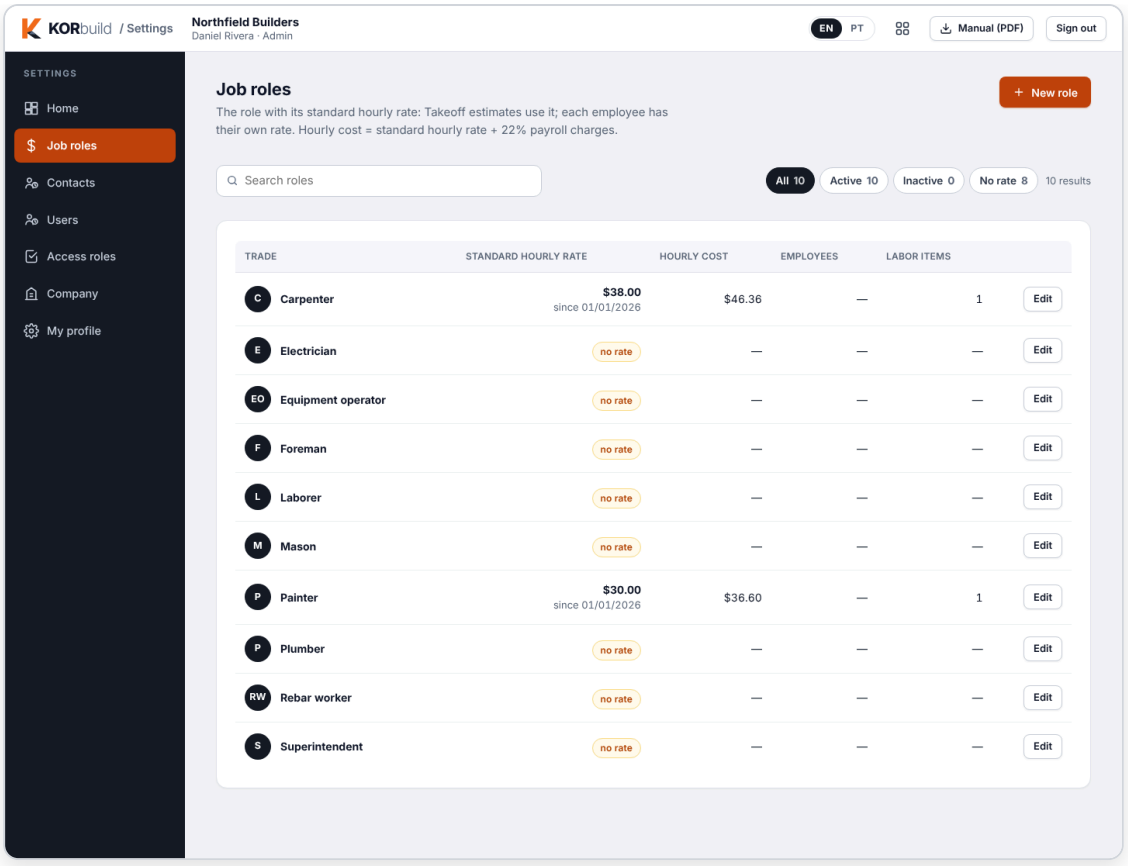

Job roles


Open a role to see the **hourly rate history**. Each rate applies **from a date** and never erases the previous one: a proposal uses the rate that applied on the day it was issued. To change it, tap **New hourly rate** and enter the rate, the date and the reason.

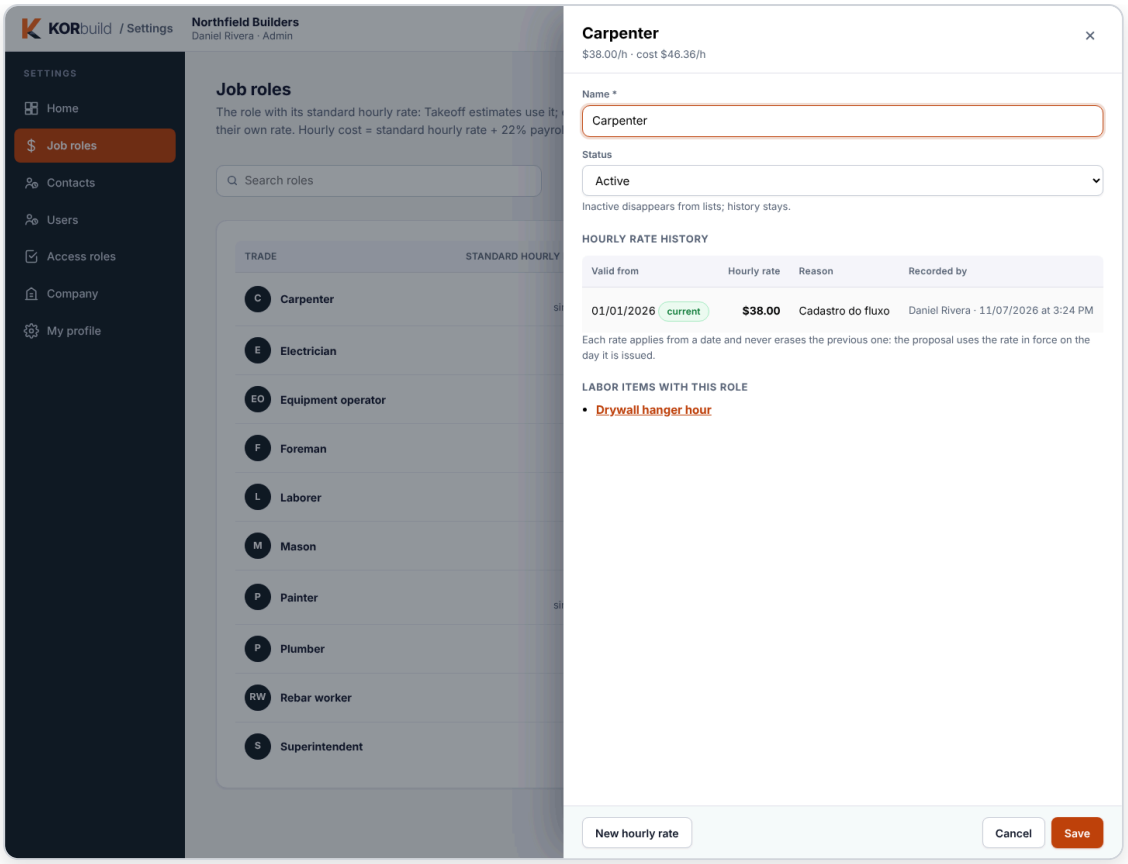

Job role and hourly rate history

Company


The company's data: name, legal name, EIN, address, phone and email. Only someone allowed to manage the account (the administrator) changes it; for everyone else the screen is read-only.

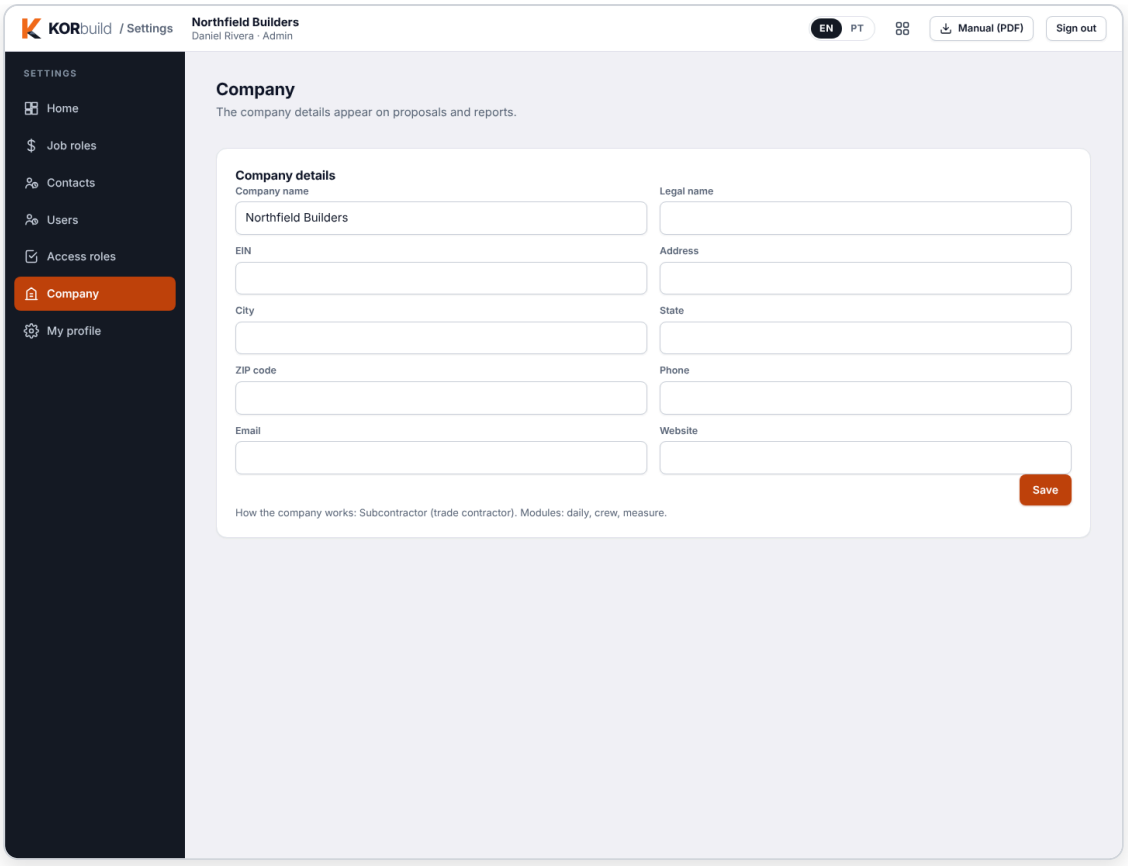

Company

My profile

Your personal data: name and phone, language, sign-in email, password and which notices also arrive by email. Only the administrator changes your access role and permissions.

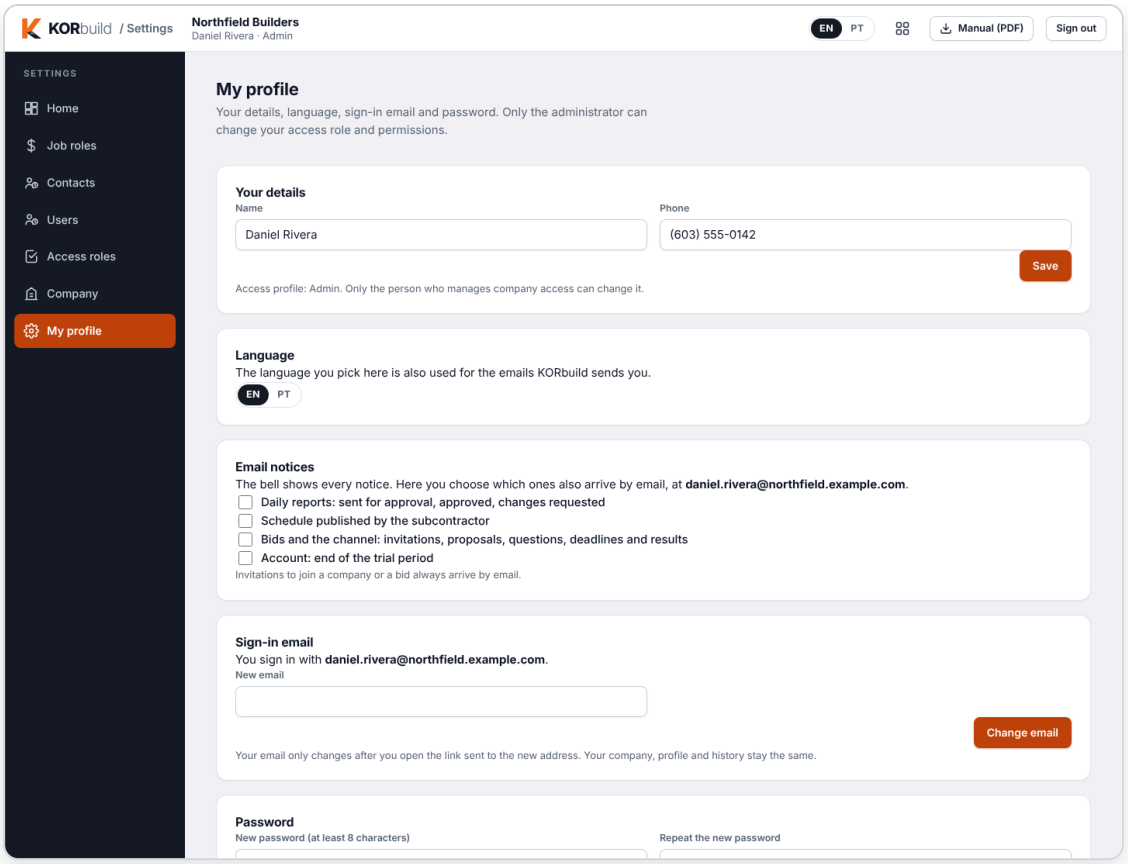
KORbuild / Settings
Northfield Builders
Daniel Rivera · Admin
EN
PT
Manual (PDF)
Sign out
SETTINGS
Home
Job roles
Contacts
Users
Access roles
Company
My profile
My profile
Your details, language, sign-in email and password. Only the administrator can change your access role and permissions.
Your details
Name
Daniel Rivera
Phone
(603) 555-0142
Save
Access profile: Admin. Only the person who manages company access can change it.
Language
The language you pick here is also used for the emails KORbuild sends you.
EN
PT
Email notices
The bell shows every notice. Here you choose which ones also arrive by email, at daniel.rivera@northfield.example.com.
Daily reports: sent for approval, approved, changes requested
Schedule published by the subcontractor
Bids and the channel: invitations, proposals, questions, deadlines and results
Account: end of the trial period
Invitations to join a company or a bid always arrive by email.
Sign-in email
You sign in with daniel.rivera@northfield.example.com.
New email
Change email
Your email only changes after you open the link sent to the new address. Your company, profile and history stay the same.
Password
New password (at least 8 characters)
Repeat the new password

My profile

Takeoff: from the plan to the proposal


Takeoff takes a project from start to finish: **items and assemblies** (the price catalog), **project**, **plans**, **scale**, **measuring**, **materials**, **schedule**, **proposal** and **release to the job**. The project's **Overview** card counts the steps ("5 of 6 steps") and tells you what is missing.

The catalog: items and assemblies

An **item** is a material or an hour of labor, with a code, unit and price. An **assembly** is a recipe: it combines items with formulas. For example, "Drywall, walls" uses one sheet for every 32 sq ft of wall and one labor hour for every 50 sq ft.


To create an item, open **Items › New item**. Pick the category:

- **Material:** you type the price (the price history is kept, with the date of each one).
- **Labor:** pick the **job role**. The price comes from the role's hourly rate (see the previous chapter) and the price field disappears.

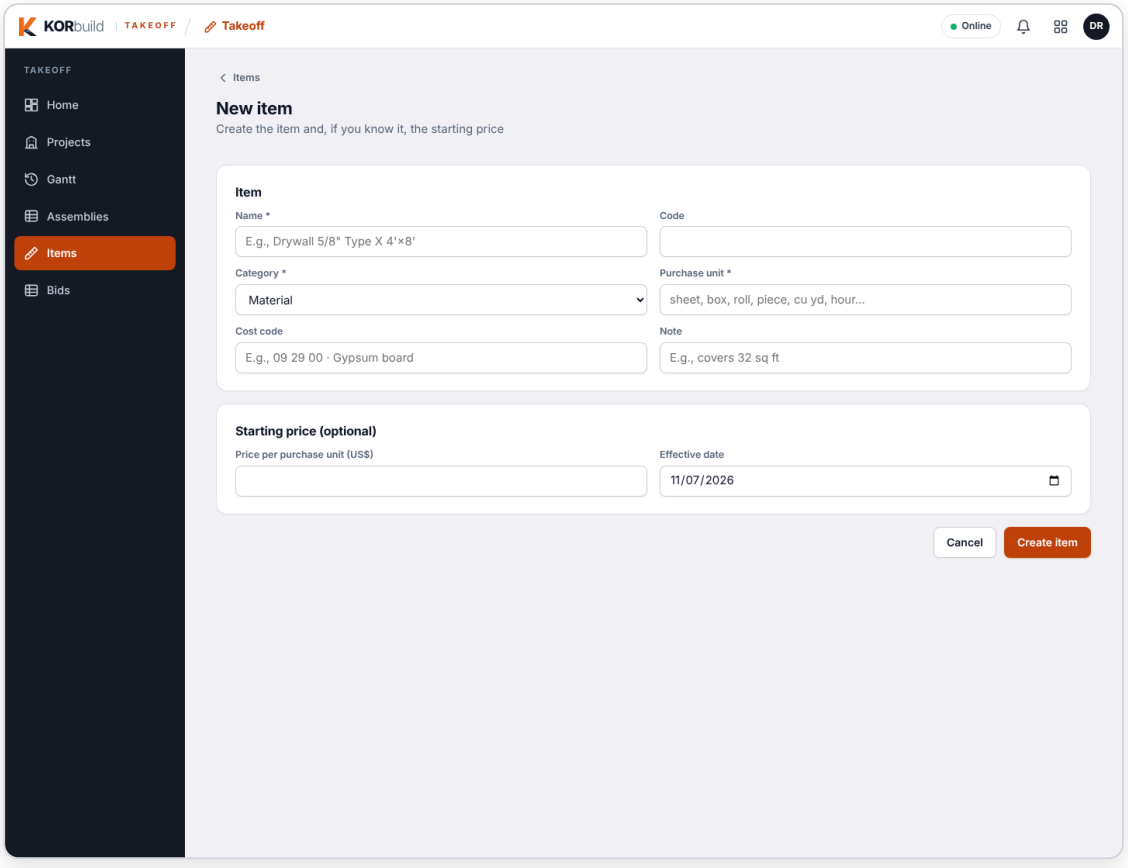


New item

The item's **Pricing** tab shows today's price and the history.

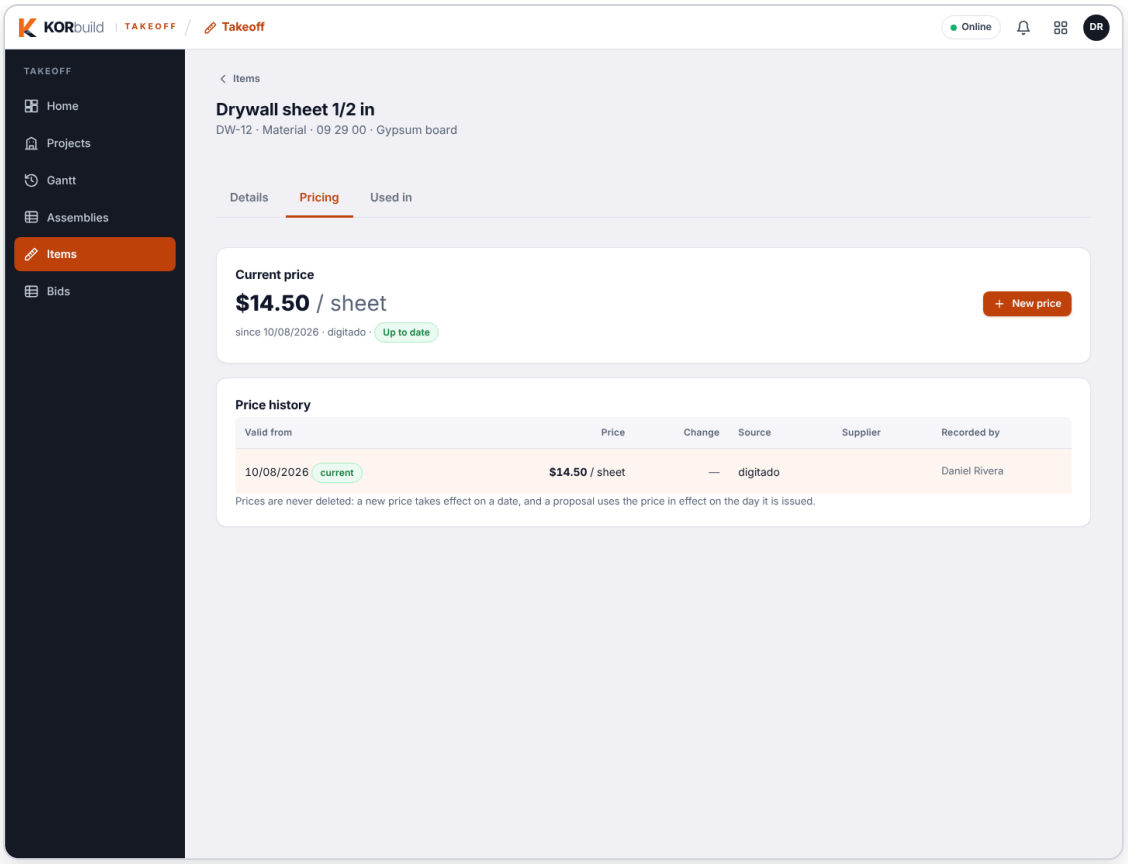


Item: pricing

Assemblies live under **Assemblies**.

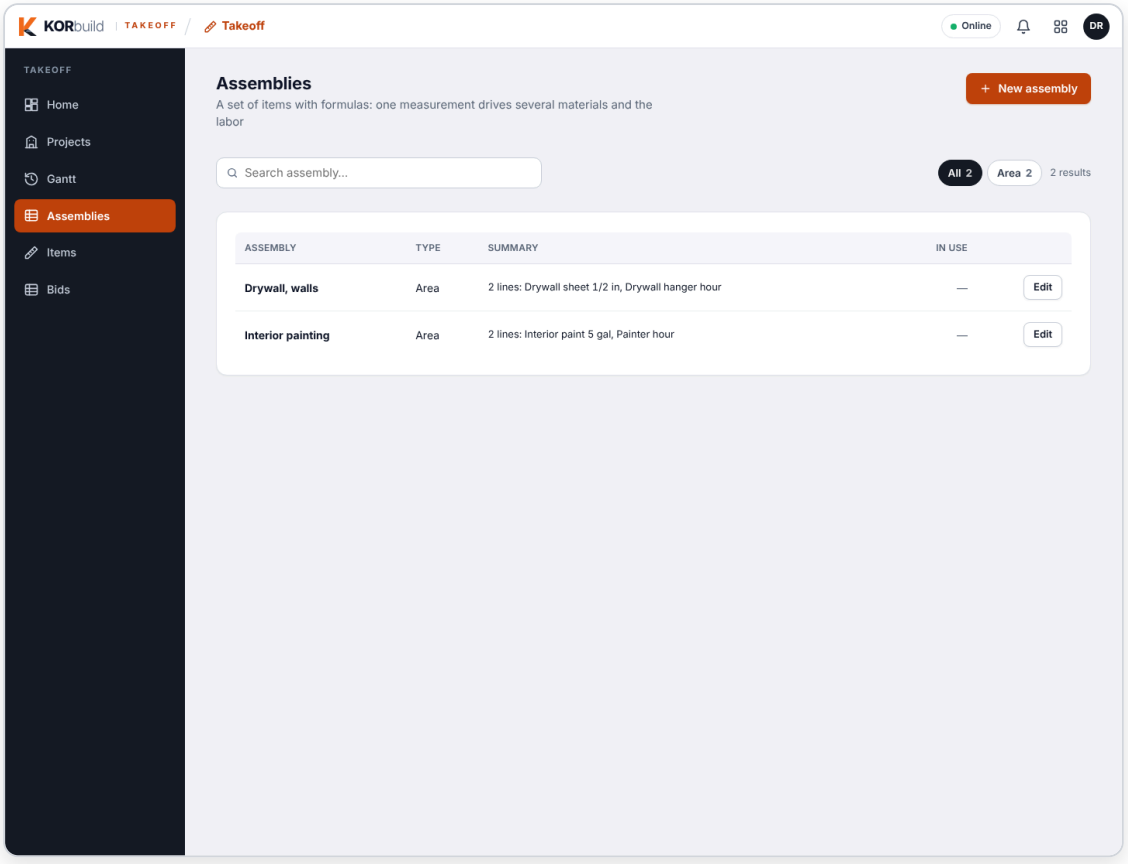

Assemblies


Open an assembly to see its lines. Each line has the item, the **formula** (for example `MeasuredArea / 32`, the measured area divided by 32) and the **waste** percentage.

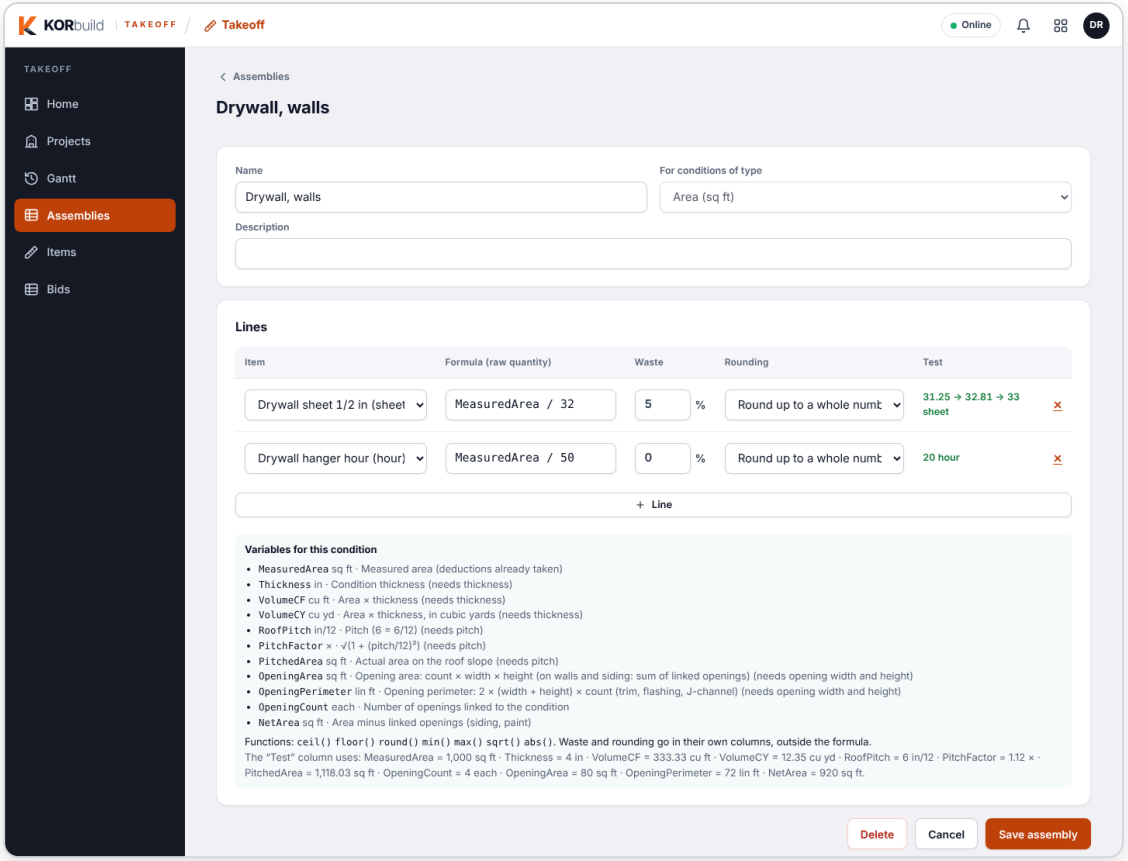

Assembly: lines and formulas

Create the project


Under **Projects › New project**, enter the name, the client (chosen from Contacts), the city and the state. Tap **Continue to plans**.

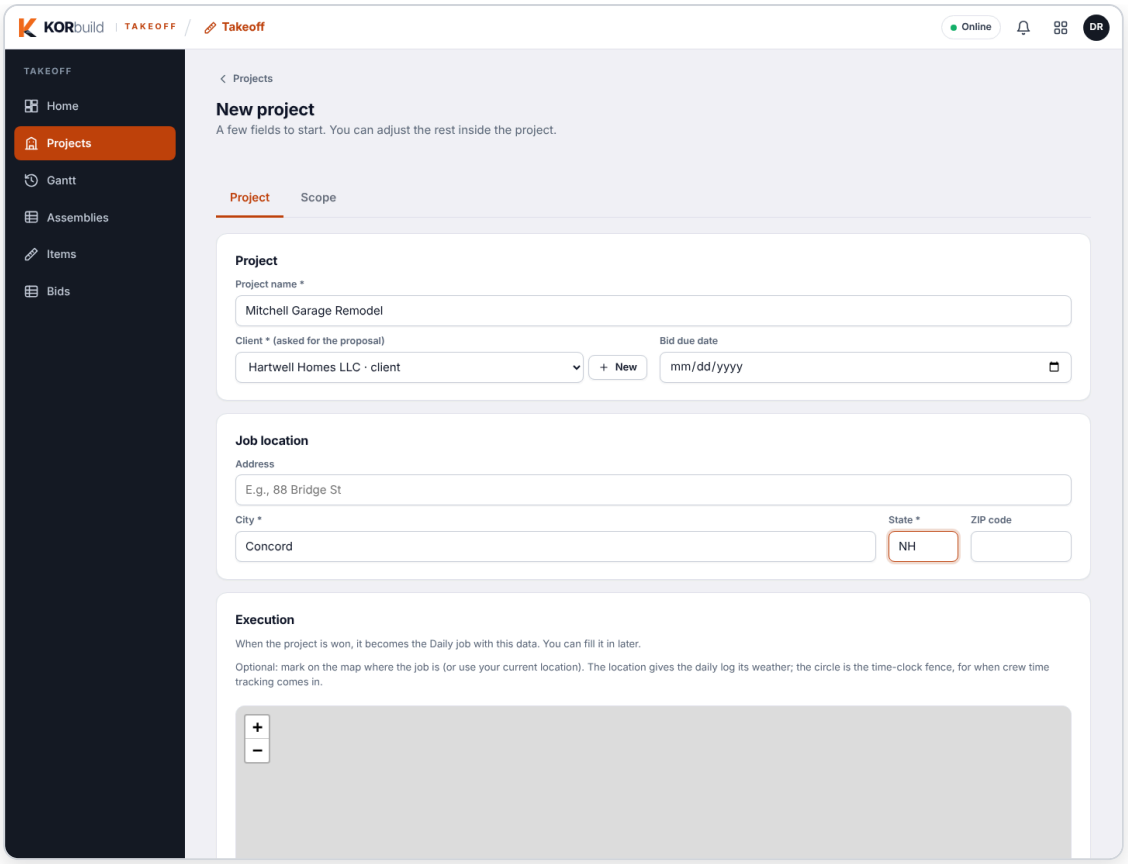


New project

Upload the plans

On the **Plans** tab, upload the PDF. Each page becomes a **sheet** of the project.

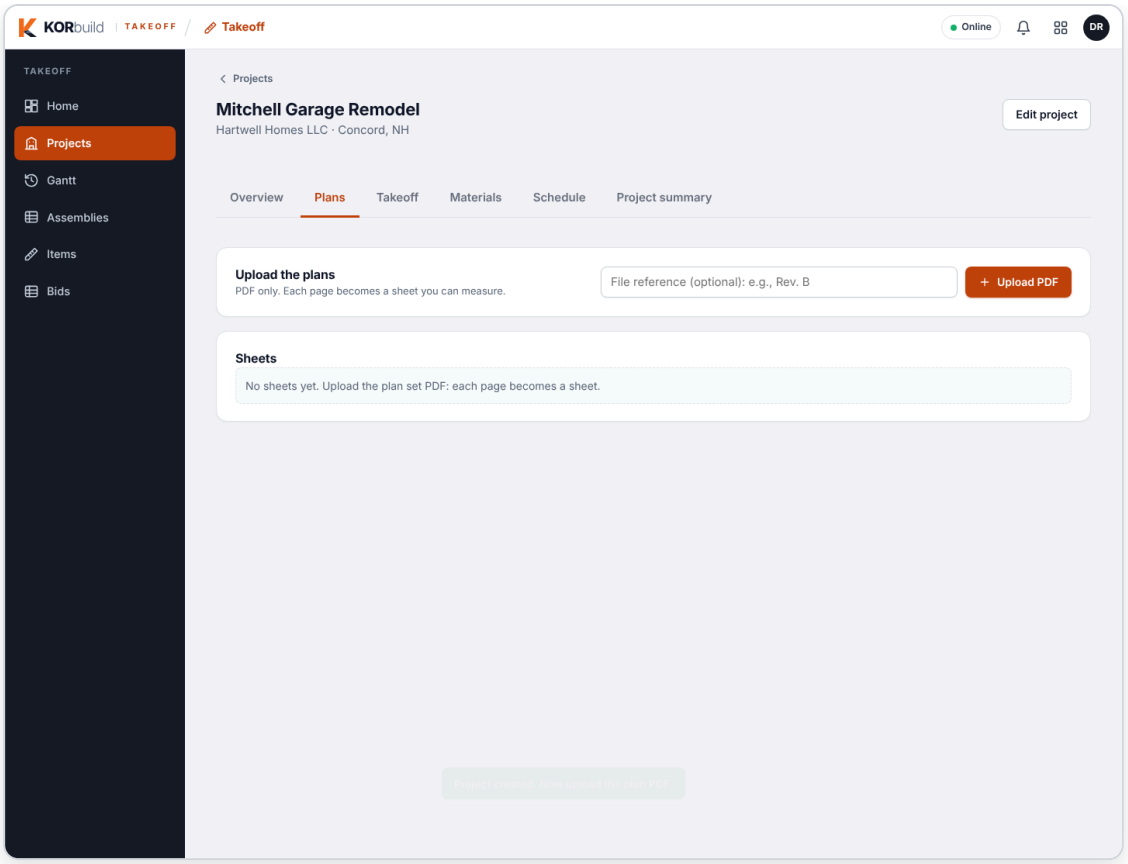


Plans: upload

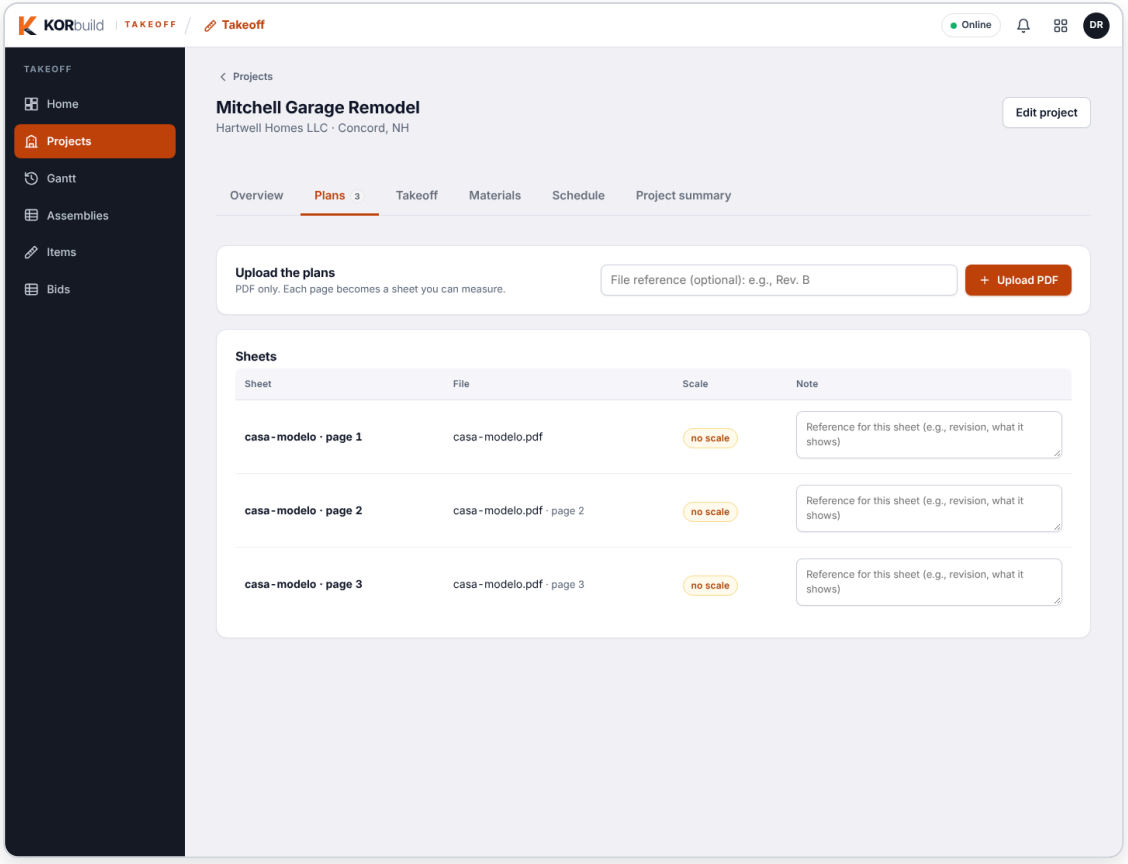

Plans uploaded


Set and check the scale

Before measuring, each sheet needs a **scale**. Open the sheet, tap **Scale** and pick the scale printed on the plan itself (for example 1/4" = 1'-0").

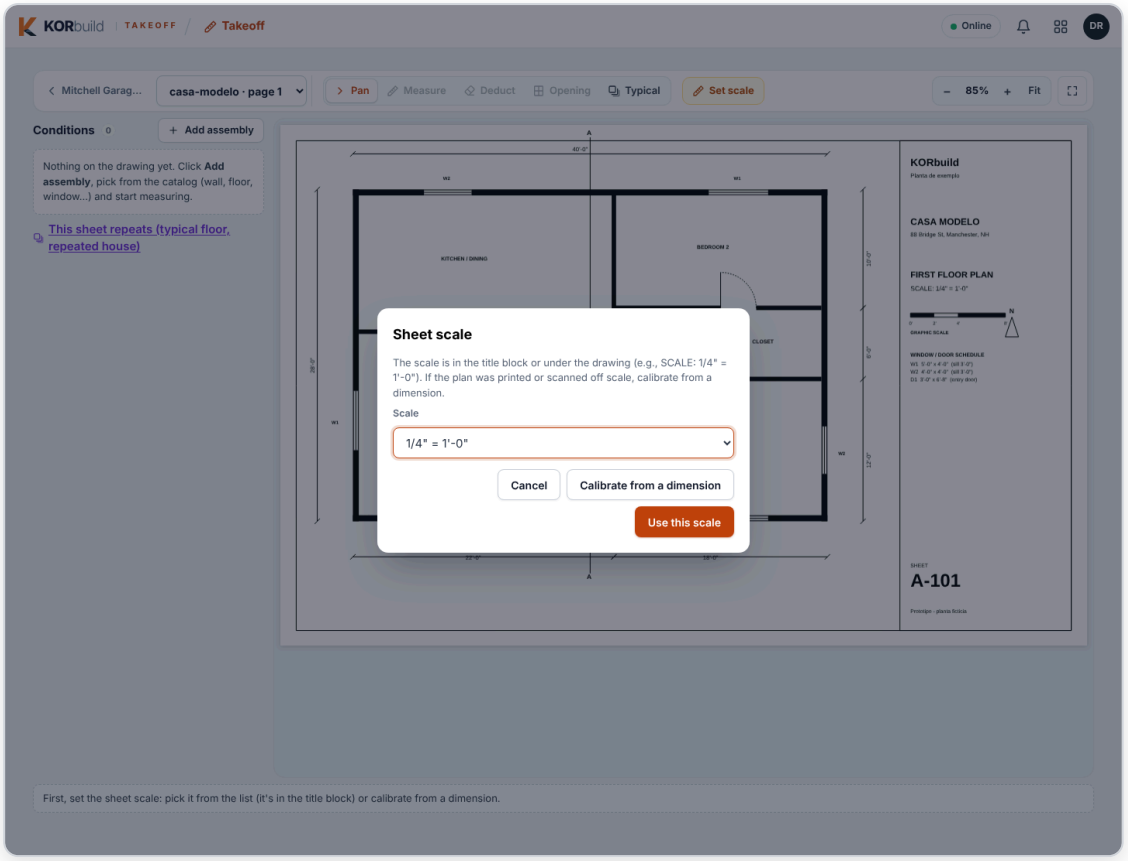

Set the sheet's scale


Then **check** it: mark the two ends of a dimension the plan already shows (for example 40'-0") and enter the real value. The system compares and shows the error. Measuring is only reliable with a checked scale.

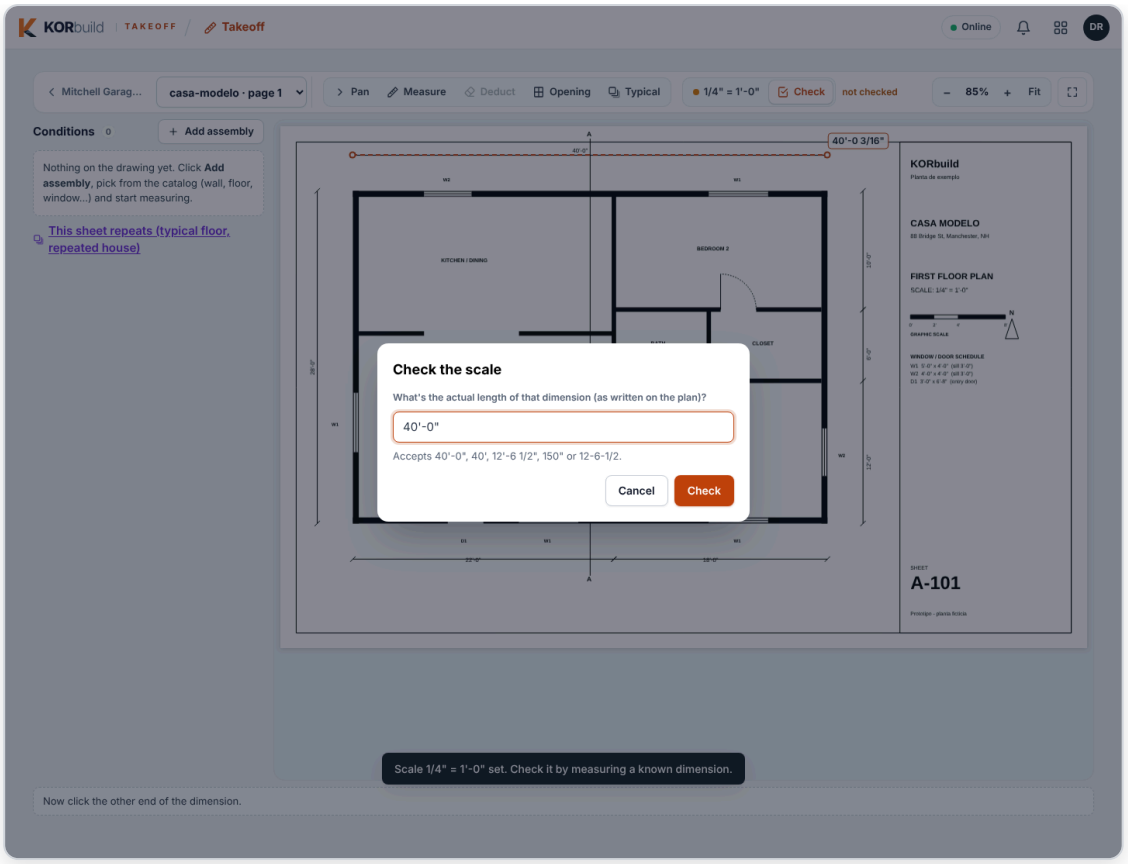


Check the scale on a dimension

Measure

With the scale checked, use **Add assembly** to create a **condition** (for example "Garage floor") linked to an assembly, then measure on the drawing. For an area, click the corners and close on the first point (or double-click). The left panel shows the measurement and the assembly applied.

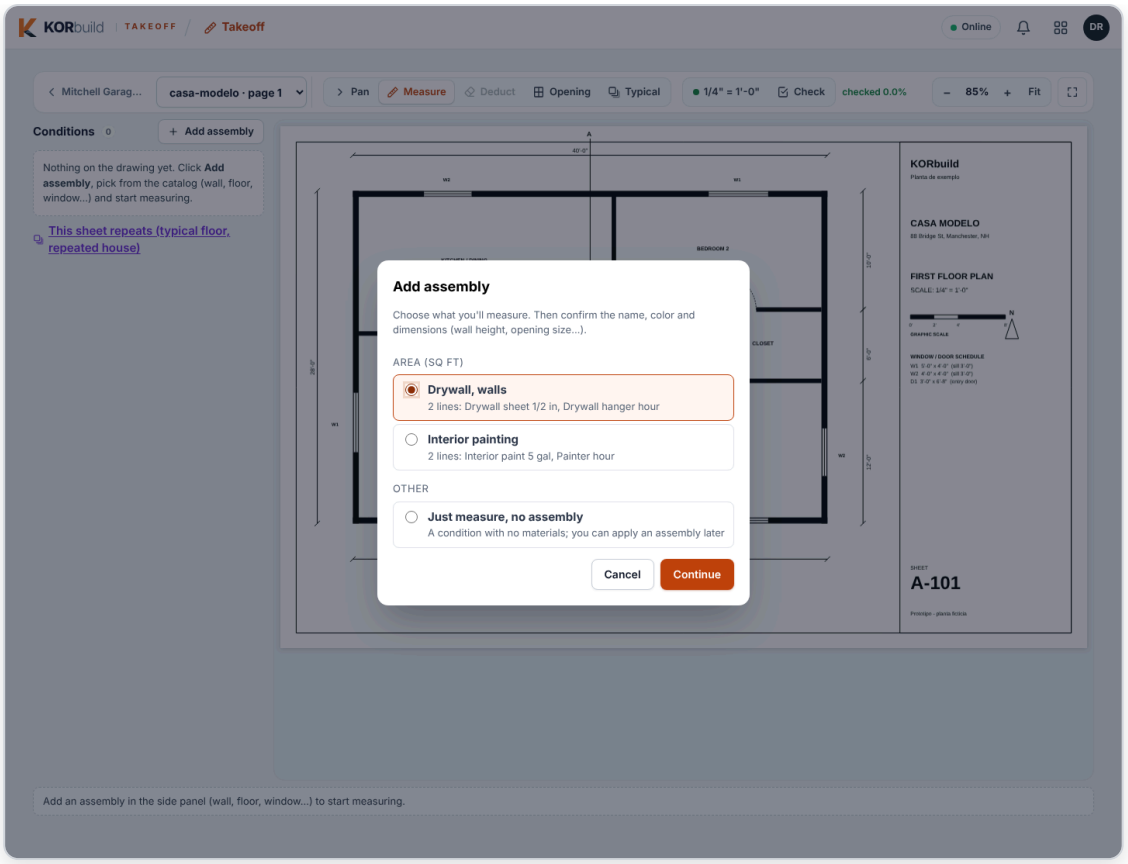

Add an assembly to the drawing

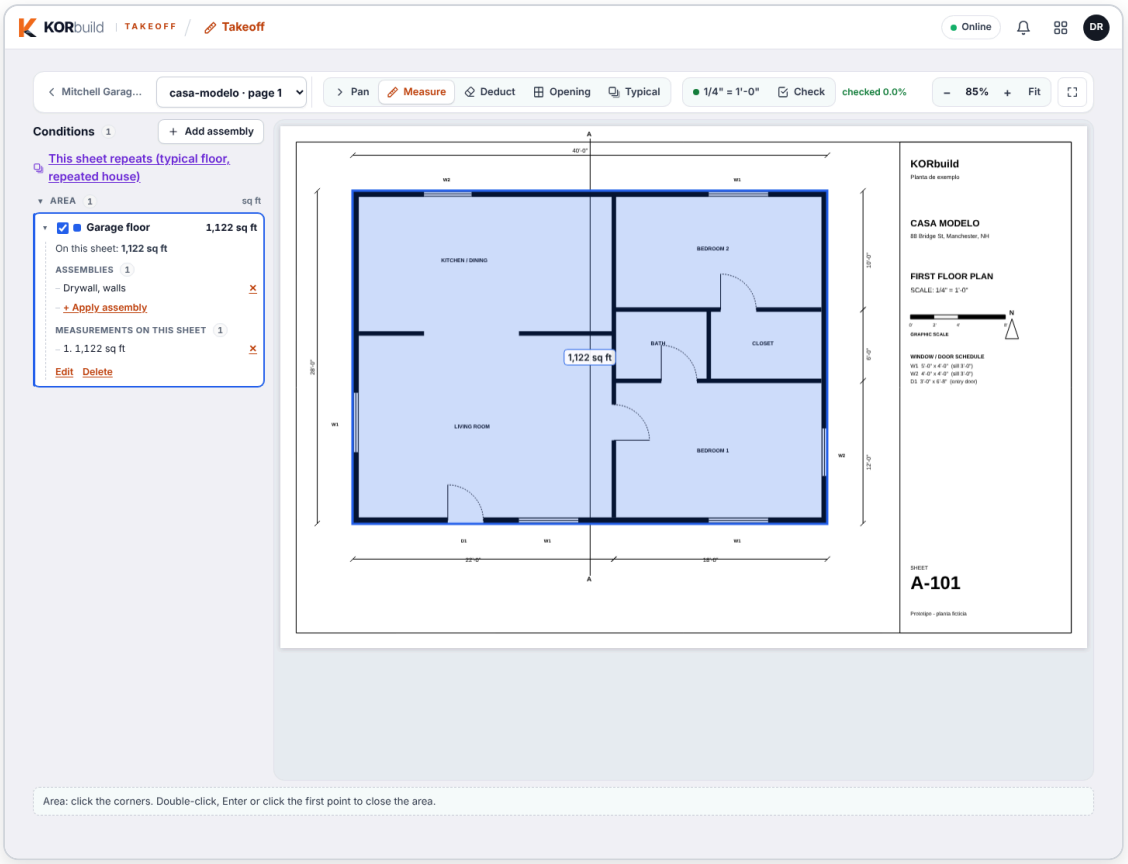


Takeoff: measuring on the drawing

Other tools on the bar: **Pan**, **Deduct**, **Opening** (such as doors and windows), **Typical** (sheets that repeat).

Materials and labor


The **Materials** tab shows what the measurements call for: each material with its quantity and the calculation trail, and the **estimated labor** in hours. Quantities are rounded up.

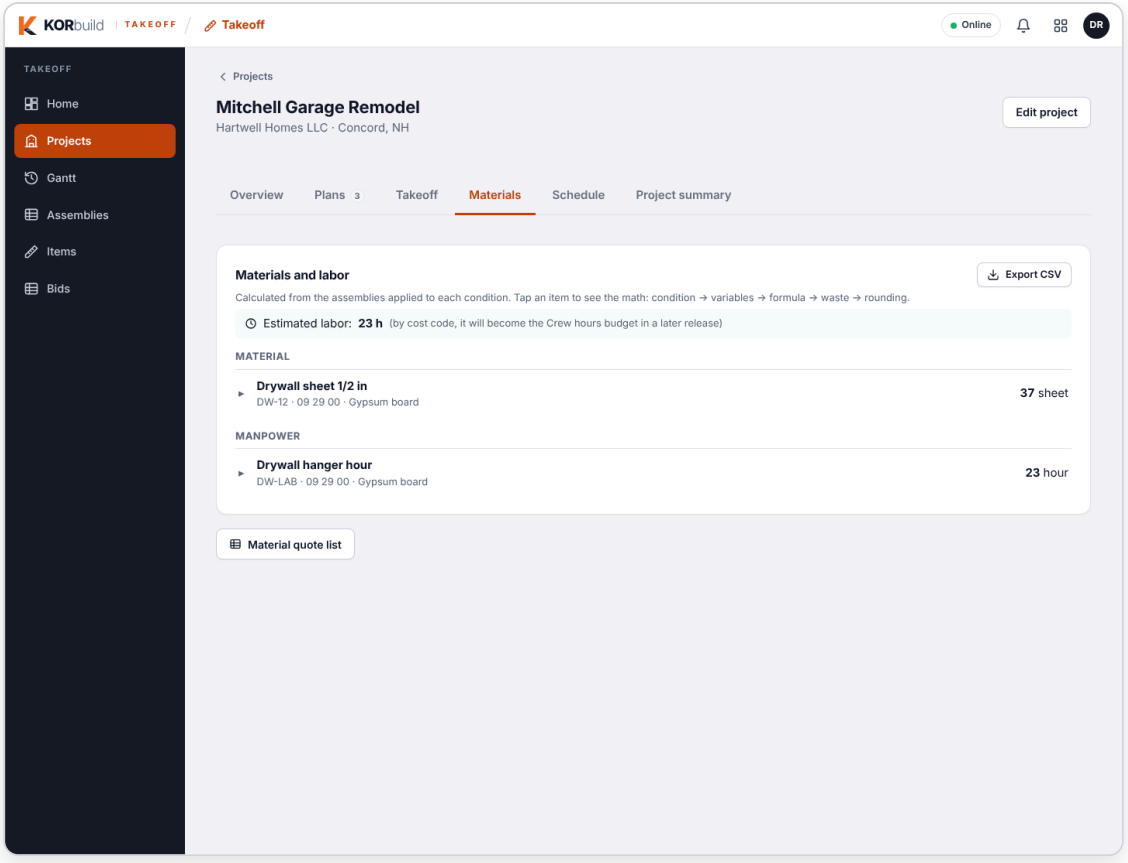

Materials and labor

Schedule

On the **Schedule** tab, add the tasks with a **start** and **duration in days**; the end date is calculated. Under **Who does it**, say whether it is your crew or a subcontractor.

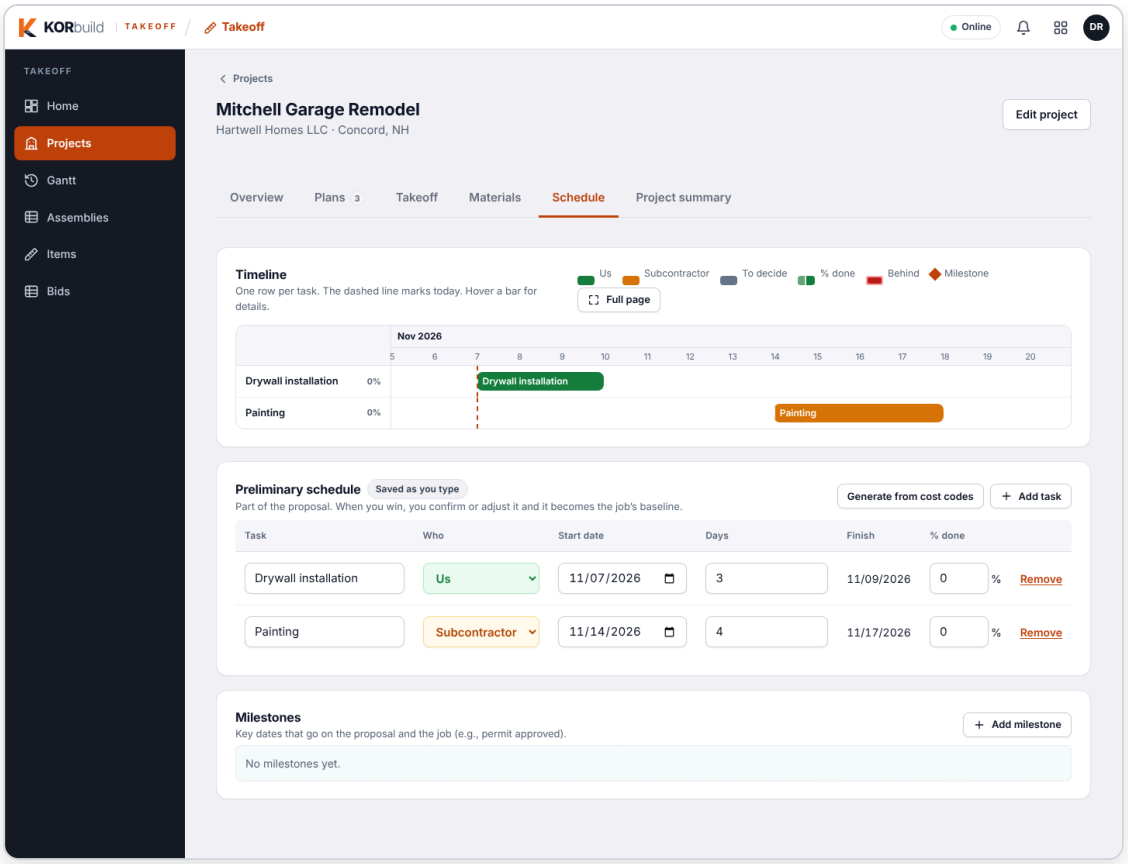


Schedule

The project's **Gantt** draws these tasks and, once Daily starts, shows the progress (see the next chapter).

Project overview


The Overview lists the steps and what is missing. When everything is ready, the **Job** card enables the **Release for construction** button.

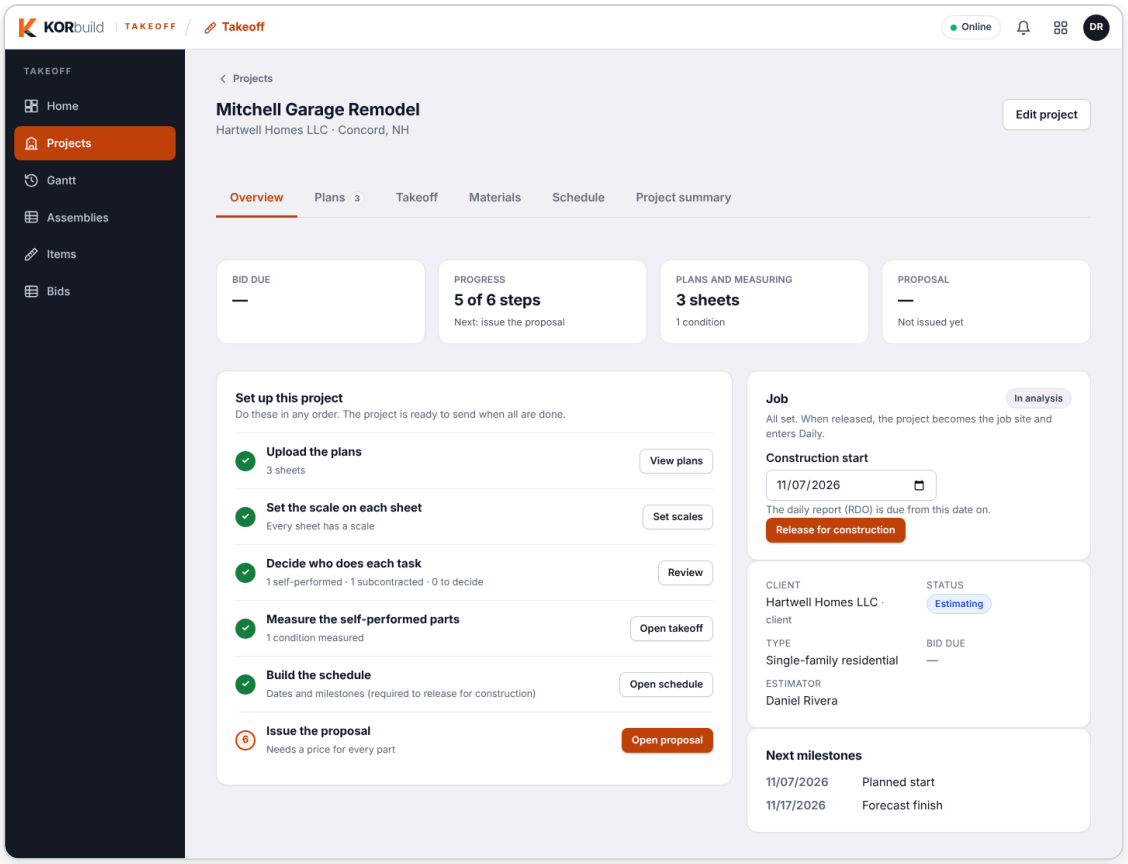

Project overview

Proposal

On the **Proposal** tab, the system builds one line per phase: cost (material + labor) with **overhead** and **profit** applied. Check it and tap **Issue**. The proposal gets a number (P-YYYY-NNN) and is kept.

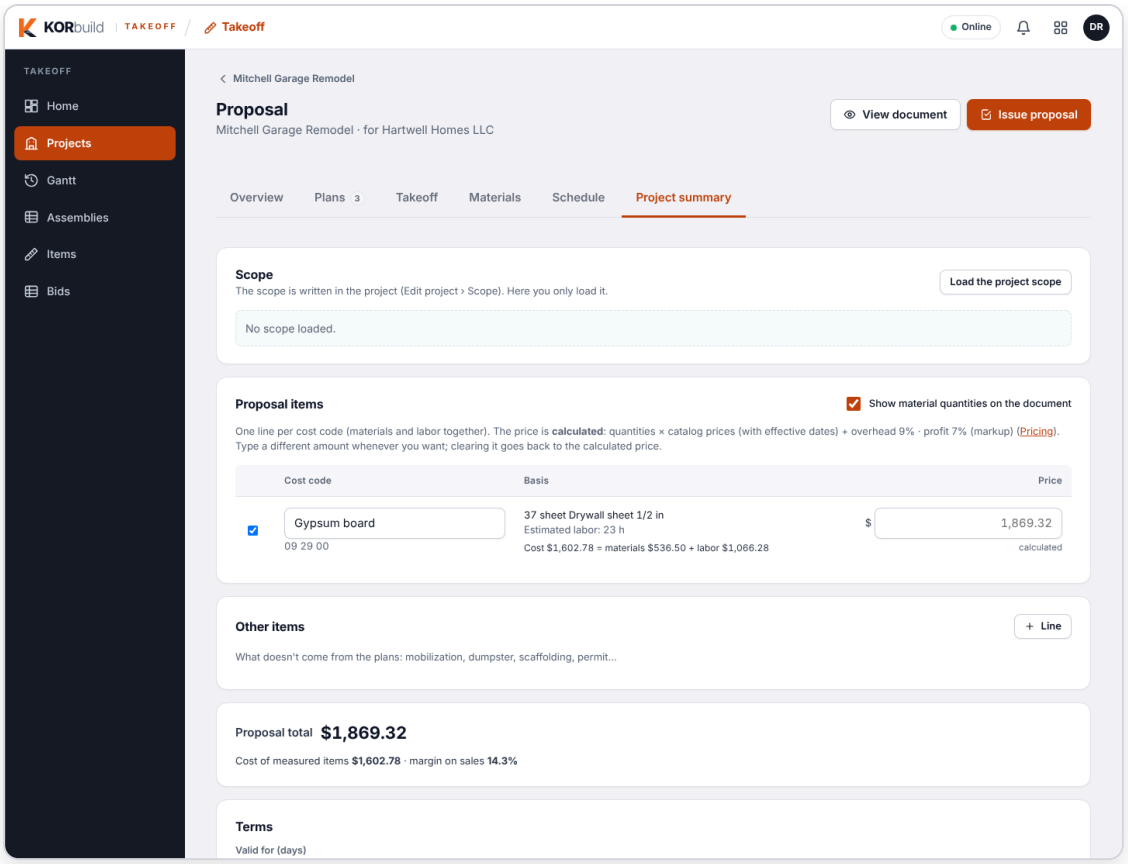


Proposal

The proposal is optional for releasing the job.


Release for construction

On the Overview, check the **Construction start** field (it comes with today's date) and tap **Release for construction**.

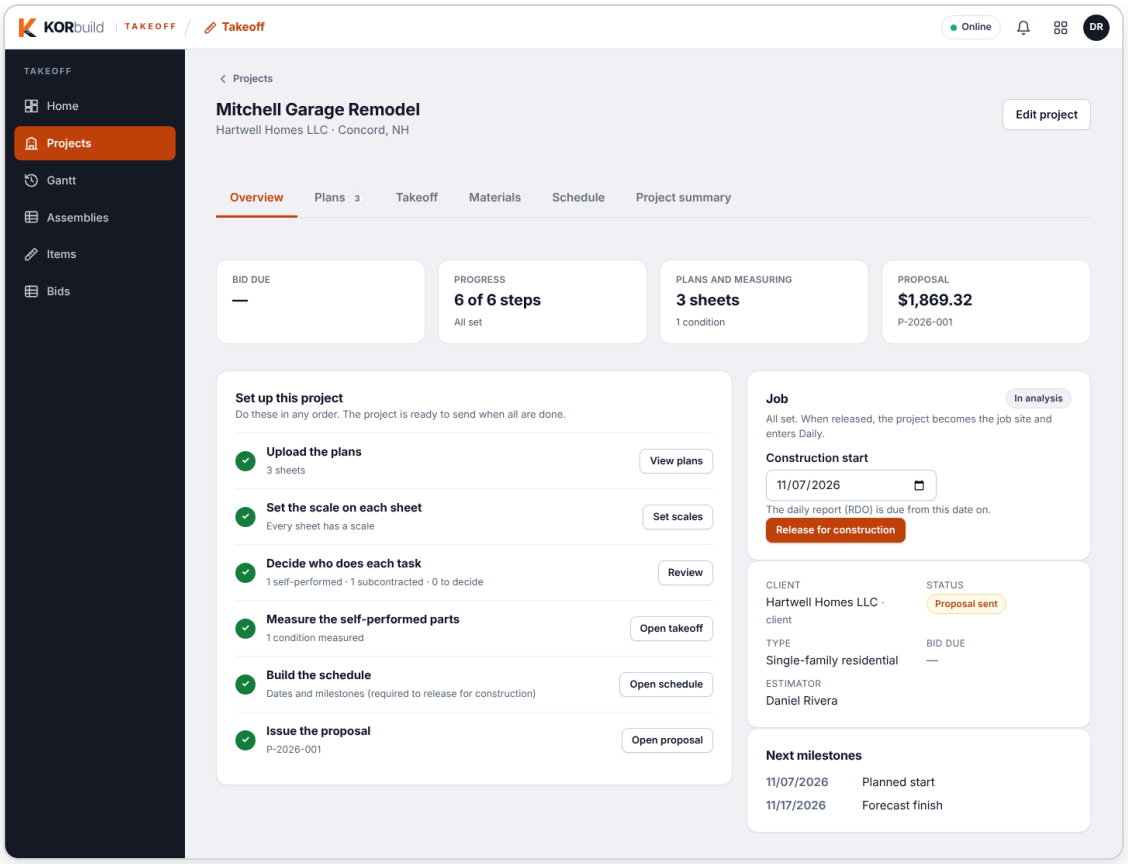

Release for construction

The project becomes a job in **Daily**. The card now shows **Released for construction**, who released it and the **Open in Daily** button. You can still change the start date later, and the job follows. If you need to revisit the estimate, use **Back to analysis**: the job leaves Daily until you release it again.

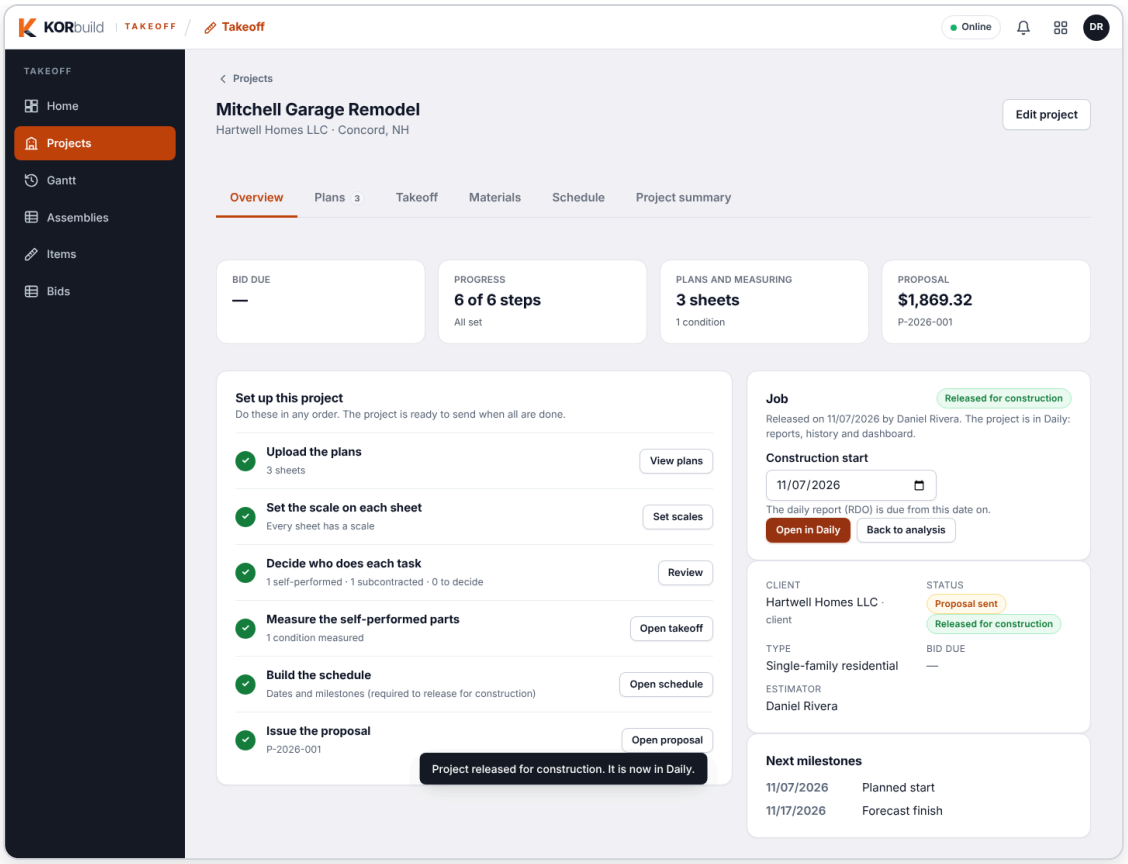

Project released to the job


> **Once the project already has a daily report,** the **Back to analysis** button disappears: a job is already under way.

Daily: the daily construction report

Daily keeps the **daily report** (DDR). The foreman fills it in on the phone, on site; the administrator or the manager reviews it and **approves and seals** it. Only projects that were **released to the job** appear in Daily.


On the phone: filling in the day's report (foreman)

On signing in, the foreman lands on **Today**, with their jobs.

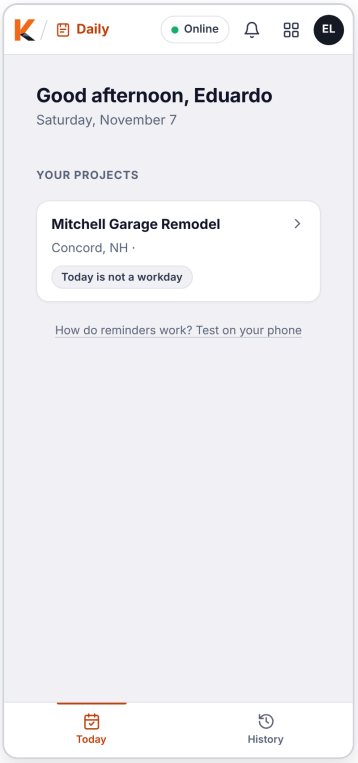


Daily: Today

Tap the job. The page shows the **current phase** (the schedule task in progress today) and the **New daily report** button.

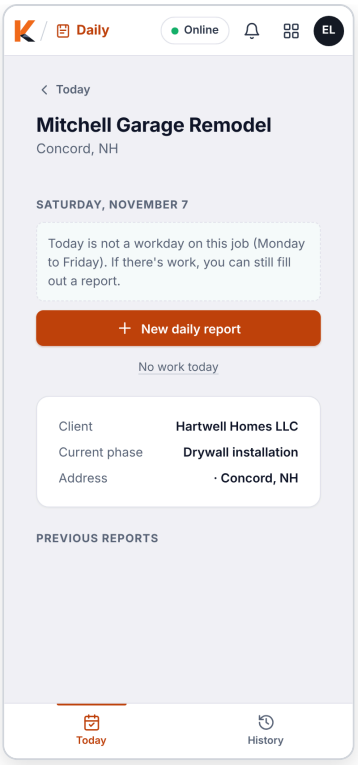

Daily: the project


The report has sections, and each gets a ✓ when it is ready: **Weather**, **Crew**, **Work performed** and **Photos**.

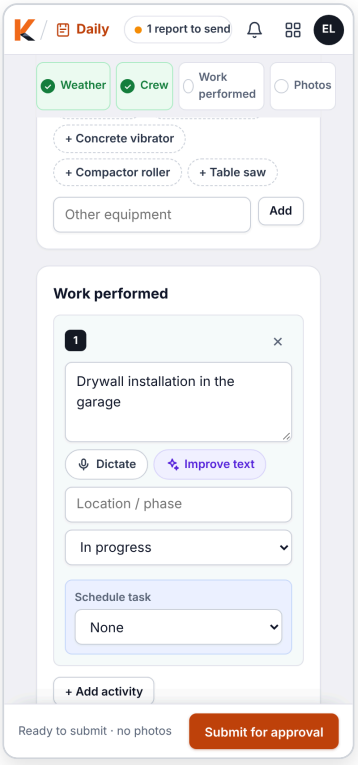

New daily report


1. **Weather:** the app marks the morning and afternoon weather from the job's location; adjust if needed.
2. **Crew:** add who worked and the equipment used.

3. **Work performed:** describe what was done. You can dictate with the microphone.
4. **Schedule task:** on each activity, choose the schedule task it belongs to, and enter the **% done of the task** and the **hours spent** on it today. This is what updates the Gantt after approval.
5. **Photos:** attach the day's photos (optional).

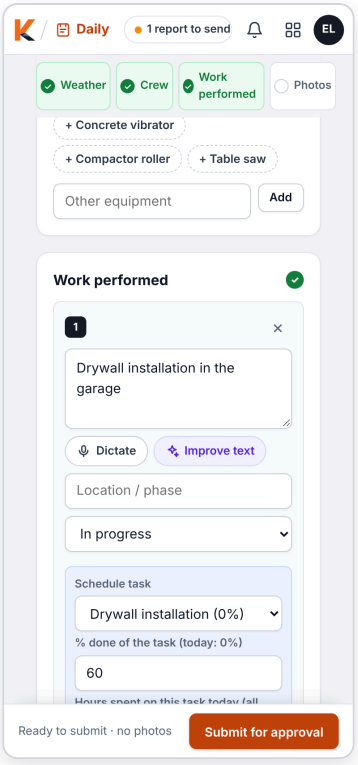


Activity linked to the schedule task

When everything is ready, tap **Submit for approval**. If there are no photos, the app asks and you can **Submit without photos**.

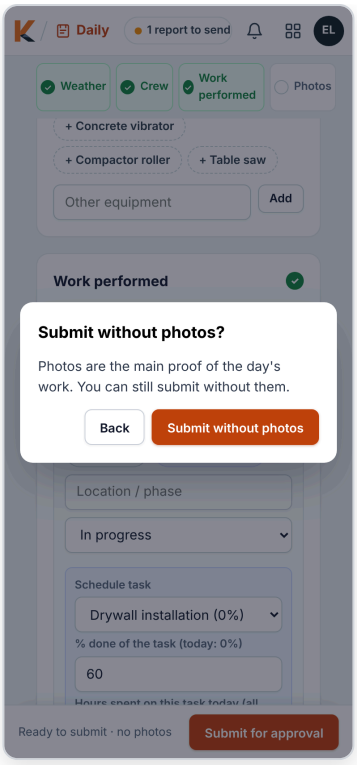

Submit for approval

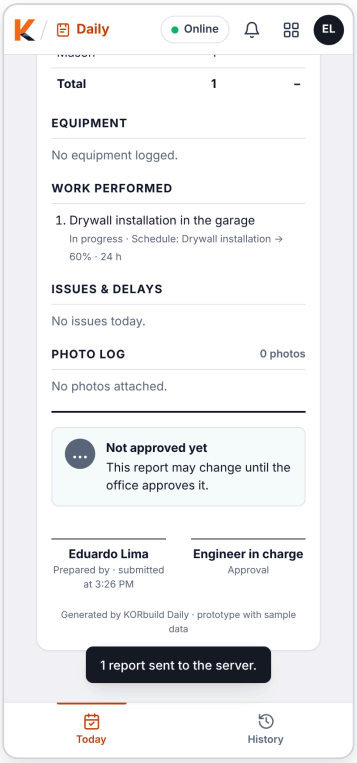


Report submitted

> **No internet?** The report stays on the device and is sent when the signal returns. The indicator at the top shows how many reports are ready to send.


On the computer: approving the report (administrator or manager)

On Daily's **Dashboard**, submitted reports appear under **Awaiting approval** (and under **Approvals** in the menu).

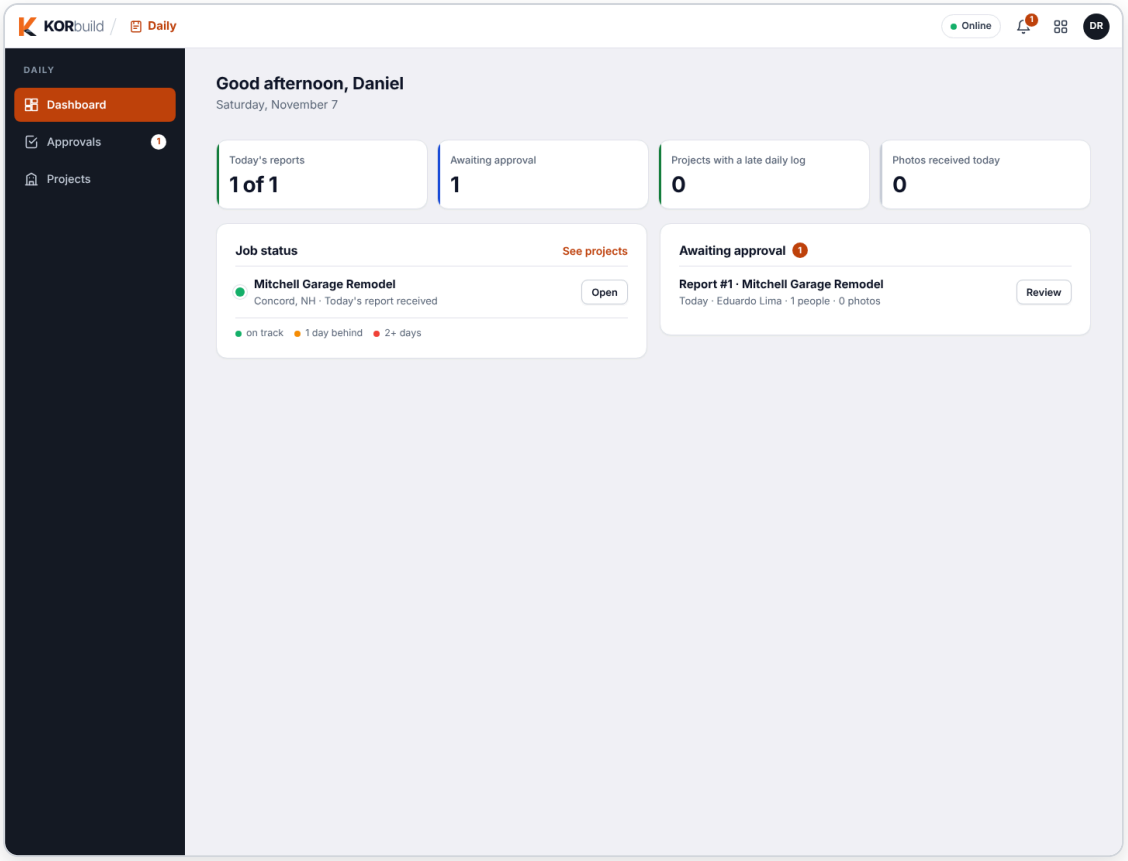


Daily: dashboard

Tap **Review** to read the full report. You can **Approve and seal** it or **Request changes from the field** (the foreman corrects and submits again).

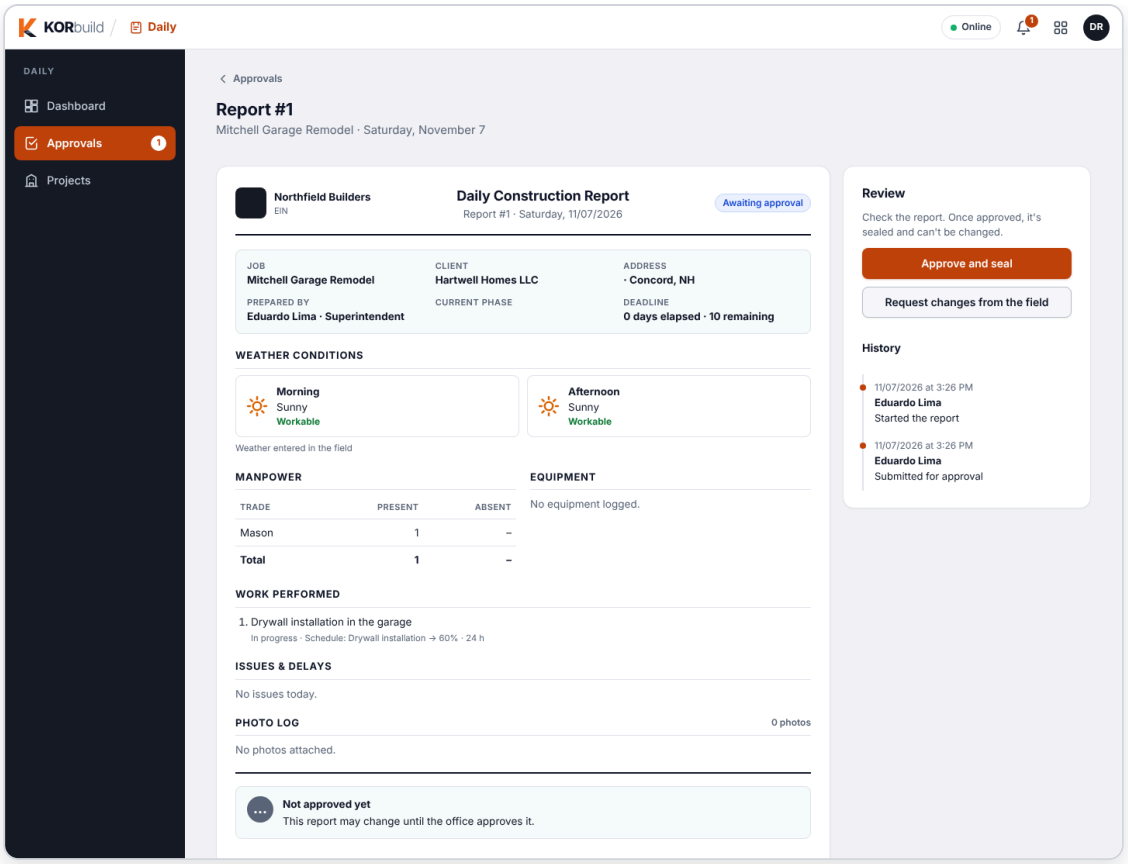

Review the report


On approval the report is **sealed**: it gets a verification code (like `A1B2-C3D4-E5F6`) and can no longer be changed. The system tells you the schedule received the progress.

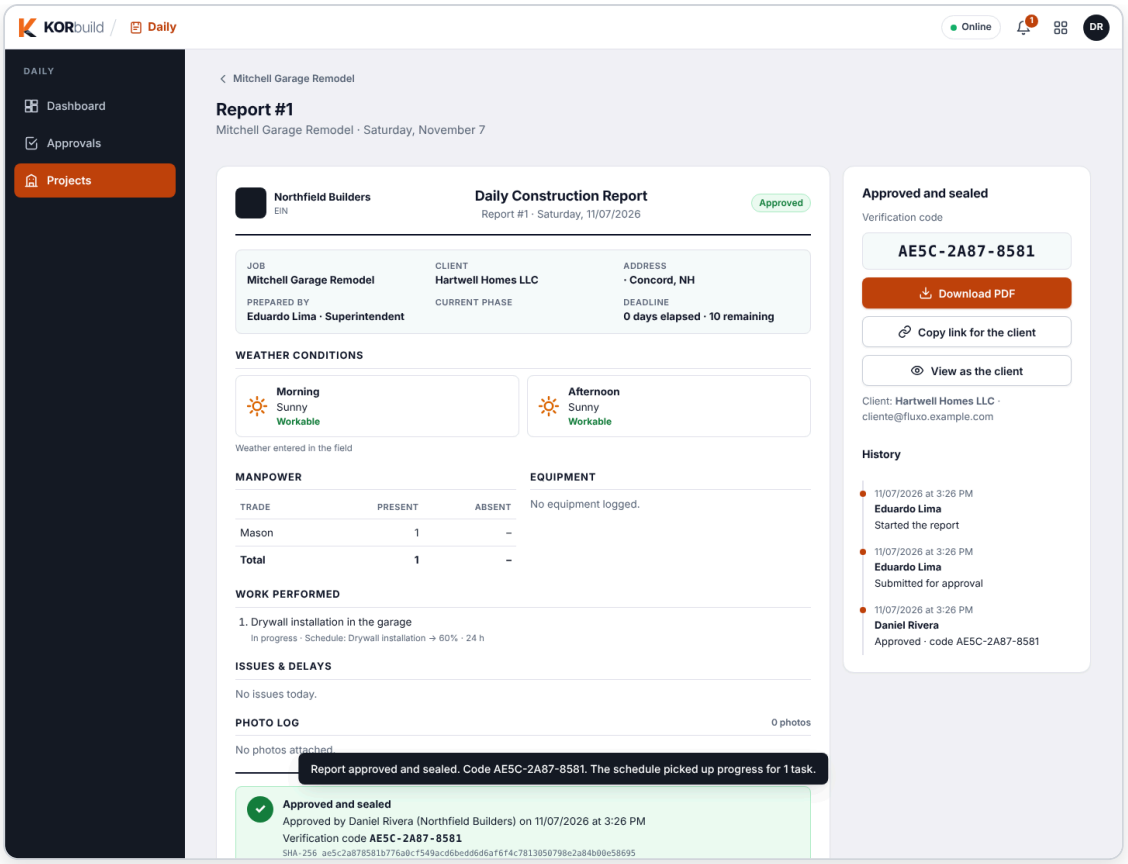

Report approved and sealed


Progress on the Gantt

The % done and the hours entered in the approved report go to the project's schedule. On the **Gantt**, each task shows its % and late tasks appear marked.

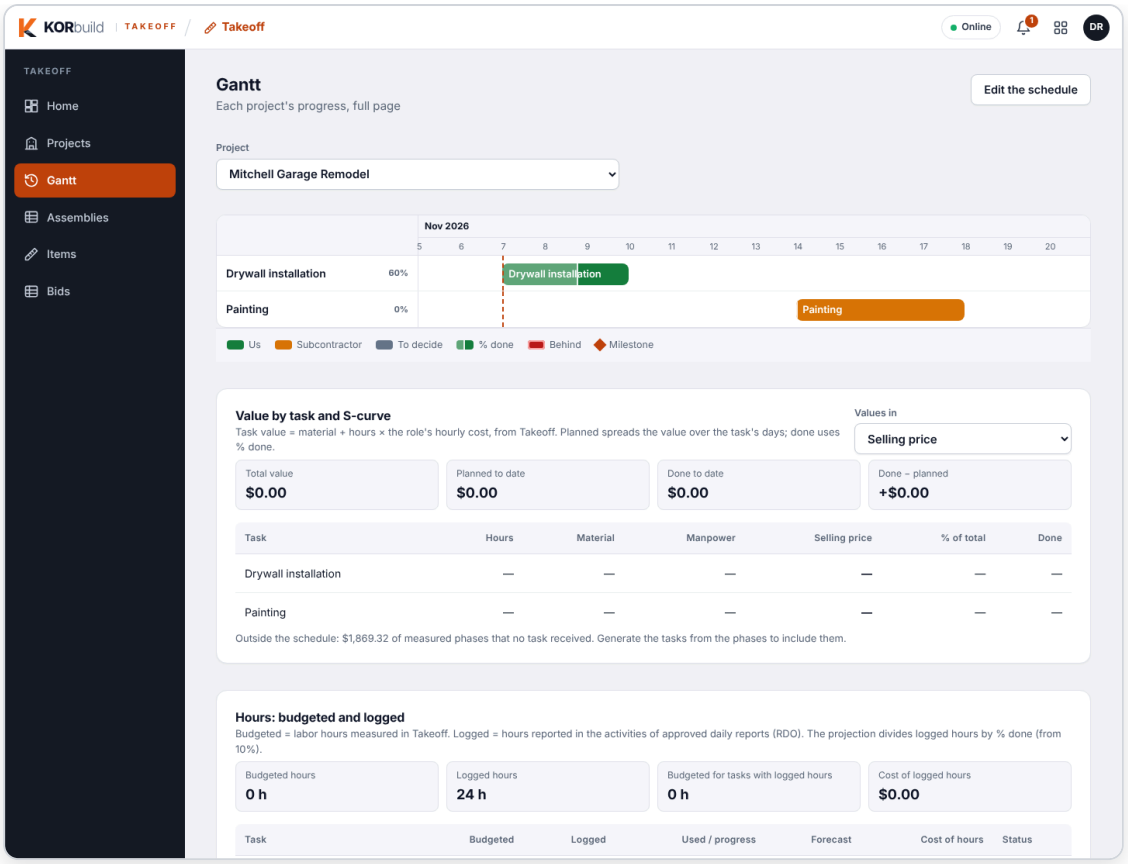

Gantt with the report's progress

Home also summarizes the projects: progress, deadlines and what is late.

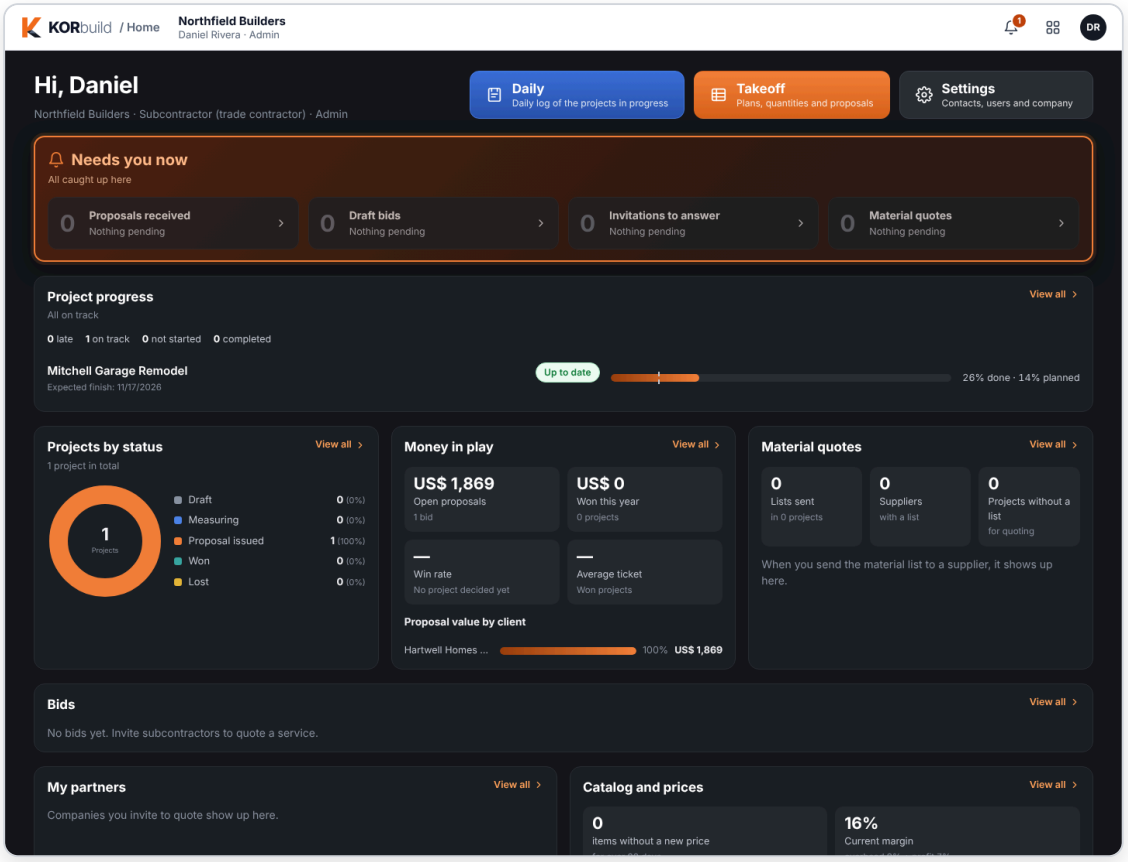

Home with projects under way

On the iPhone (and Android)

KORbuild works like an app, with no app store: you install it from the browser.

Install on the iPhone

1. Open the KORbuild address in **Safari** (other browsers cannot install the app on the iPhone).
2. Tap **Share** (the square with the arrow, on the bottom bar).
3. Scroll and tap **Add to Home Screen**, then **Add**.
4. Always open it from the **icon** on the Home Screen, not from Safari.

On Android, open it in Chrome and use **Install app** or **Add to Home screen** in the browser menu.

Updates

The installed app updates itself. When there is a new version, a bar at the top tells you: **Downloading the new version** and **Updating the app**, and the page reloads. If you are in the middle of a form, the bar offers an **Update now** button, so you choose the moment.

The version in use appears at the bottom of the sign-in screen (for example, "KORbuild v164"). If the app does not update, close it by swiping up and open it again.

Without signal

Daily keeps what you fill in on the device and sends it when the internet is back. Open the job and fill in the report as usual; when the signal returns, sending happens by itself.

Sign out

Account menu (your initials) › **Sign out**. This ends the session on this device.

Questions and common problems

I cannot sign in. Check the email and password. If you forgot it, use **Forgot password**. If the administrator just registered you, use the exact temporary password they gave you, and choose a new password when the system asks.

The temporary password is gone. Ask the administrator: under **Settings › Users › Edit**, they use **Generate a new temporary password**.

I do not see a menu or button. What appears depends on your access role. Ask the administrator to check the permissions under **Access roles**.

"This email already has an account." The person already has a KORbuild login, in another company. Use **Invite by link** instead of creating the user directly.

The project does not appear in Daily. Only projects released to the job appear. In Takeoff, open the project's **Overview** and check that it is **Released for construction**.

The day's report does not open / there is no "New daily report". The report is due from the **Construction start**. Check the date on the project's **Overview**.

The "Release for construction" button is disabled. The **Job** card says what is missing: plans, checked scale, who does each task, measuring and schedule.

The measurement looks wrong. Check the sheet's **scale** against a known dimension. Without a checked scale, measuring is not reliable.

The app shows an old version. Close the app and open it again. The update bar appears when the new version is downloaded.

Test evidence

Every image in this manual was captured by an automated run through the system's screens, the way a person would use them. A capture is only saved if the screen shows what the manual says it shows. The table below is the record of that check.

Summary

Version	v165
Code (commit)	`7583fae`
Run date	2026-11-07 15:26 UTC
Environment	local database with sample data (company Northfield Builders)
Captures checked	**45 / 45 ✓**

Captures

#	SCREEN	FILE	RESULT
1	Sign-in screen	`login.png`	✓ checked
2	Create the account	`criar-conta.png`	✓ checked
3	Register the company	`sua-empresa.png`	✓ checked
4	Home	`inicio.png`	✓ checked
5	Users	`usuarios.png`	✓ checked
6	New user	`novo-usuario.png`	✓ checked
7	Temporary password	`senha-provisoria.png`	✓ checked
8	Edit user	`editar-usuario.png`	✓ checked
9	Access roles	`perfis.png`	✓ checked
10	Role editor	`perfil-editor.png`	✓ checked
11	New role	`novo-perfil.png`	✓ checked
12	Contacts	`contatos.png`	✓ checked
13	Contact	`contato-painel.png`	✓ checked
14	Job roles	`funcoes.png`	✓ checked

#	SCREEN	FILE	RESULT
15	Job role and hourly rate history	`funcao-painel.png`	✓ checked
16	Company	`empresa.png`	✓ checked
17	My profile	`meu-perfil.png`	✓ checked
18	New item	`item-novo.png`	✓ checked
19	Item: pricing	`item-precos.png`	✓ checked
20	Assemblies	`assemblies.png`	✓ checked
21	Assembly: lines and formulas	`assembly-editor.png`	✓ checked
22	New project	`projeto-novo.png`	✓ checked
23	Plans: upload	`plantas-vazio.png`	✓ checked
24	Plans uploaded	`plantas.png`	✓ checked
25	Set the sheet's scale	`escala.png`	✓ checked
26	Check the scale on a dimension	`escala-conferir.png`	✓ checked
27	Add an assembly to the drawing	`takeoff-assembly.png`	✓ checked
28	Takeoff: measuring on the drawing	`takeoff.png`	✓ checked
29	Materials and labor	`materiais.png`	✓ checked
30	Schedule	`cronograma.png`	✓ checked
31	Project overview	`projeto-visao.png`	✓ checked
32	Proposal	`proposta.png`	✓ checked
33	Release for construction	`liberar.png`	✓ checked
34	Project released to the job	`liberado.png`	✓ checked
35	Daily: Today	`daily-hoje.png`	✓ checked
36	Daily: the project	`daily-projeto.png`	✓ checked
37	New daily report	`daily-rdo.png`	✓ checked
38	Activity linked to the schedule task	`daily-atividade.png`	✓ checked
39	Submit for approval	`daily-enviar.png`	✓ checked
40	Report submitted	`daily-enviado.png`	✓ checked
41	Daily: dashboard	`daily-painel.png`	✓ checked
42	Review the report	`daily-revisar.png`	✓ checked

#	SCREEN	FILE	RESULT
43	Report approved and sealed	`daily-aprovado.png`	✓ checked
44	Gantt with the report's progress	`gantt.png`	✓ checked
45	Home with projects under way	`inicio-final.png`	✓ checked

Test flow runs

The test flows exercise the same areas with database checks (what the screen shows and what was saved). Latest run of each:

FLOW	STEPS	CHECKS	WHEN	COMMIT
F01 · New company: account, roles, job roles, contacts, items and assemblies	9/9	31/31	2026-11-07 15:21	`7583fae`
F02 · Project from scratch to "Release for construction"	13/13	55/55	2026-11-07 15:22	`7583fae`
F03 · Job: field daily report, approval and % done on the Gantt	12/12	41/41	2026-11-07 15:22	`7583fae`
F05 · Settings: users, access roles, company and isolation	9/9	43/43	2026-11-07 15:23	`7583fae`

The bids and Crew flows are not part of this version.