


NEW HOME[®]
LIGHT RUNNING

INSTRUCTION BOOK

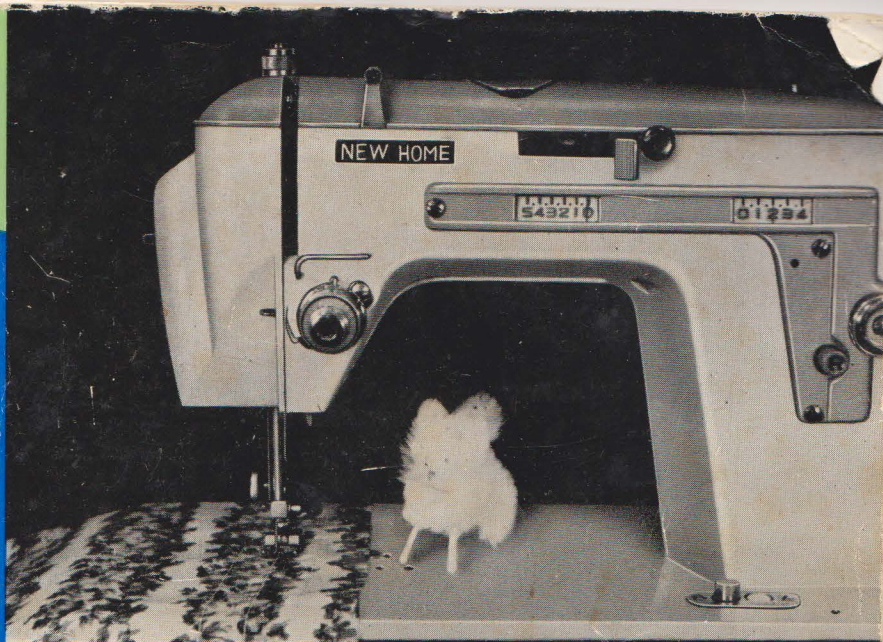

MODEL 534

THE NEW HOME SEWING MACHINE COMPANY

P. O. BOX 25901

LOS ANGELES 25, CALIFORNIA, U. S. A.

FOR YOUR PROTECTION

This sewing machine was accurately adjusted, carefully inspected and thoroughly tested before shipment from the factory.

The New Home Sewing Machine Company guarantees this machine against defect due to faulty workmanship or materials; however, this guarantee is effective only so long as the machine in question is not exposed to abuse beyond the normal wear and tear to which such products may be subjected.

Attachments are not covered; electrical equipment is for one year from date of purchase.

To get extra needles, bobbins, light globes, oil, attachments or sewing accessories see the colourful BUSY SUSAN display at your sewing machine, variety, department or notions store.

THE NEW HOME SEWING MACHINE COMPANY



P. O. BOX 25901,

LOS ANGELES 25, CALIFORNIA, U. S. A.

SINCE 1860, AMERICA'S FINEST SEWING MACHINES

NAME OF EACH PART


- | | |
|----------------------------------|-----------------------------------|
| 1. Arm spool pin | 21. Presser foot |
| 2. Zigzag width stopper screw | 22. Slide plate |
| 3. Zigzag width stopper | 23. Needle plate |
| 4. Zigzag width regulating lever | 24. Feed dog |
| 5. Zigzag width indicator | 25. Shuttle race |
| 6. Cam setting position | 26. Bed |
| 7. Upper arm thread guide | 27. Drop feed button |
| 8. Thread take-up lever | 28. Bed spool pin |
| 9. Patchomatic darner | 29. Bobbin winder tension bracket |
| 10. Top cover | 30. Reverse push button |
| 11. Face plate | 31. Stitch length regulating dial |
| 12. Light switch | 32. Hand wheel |
| 13. Face plate thread guide | 33. Bobbin winder push button |
| 14. Lower arm thread guide | 34. Bobbin winder wheel |
| 15. Thread tension regulator | 35. Bobbin winder spindle |
| 16. Needle bar | 36. Stitch length indicator |
| 17. Needle clamp | 37. Arm |
| 18. Needle | 38. Presser bar lifter |
| 19. Presser bar | 39. Stop motion screw |
| 20. Thumb screw | |

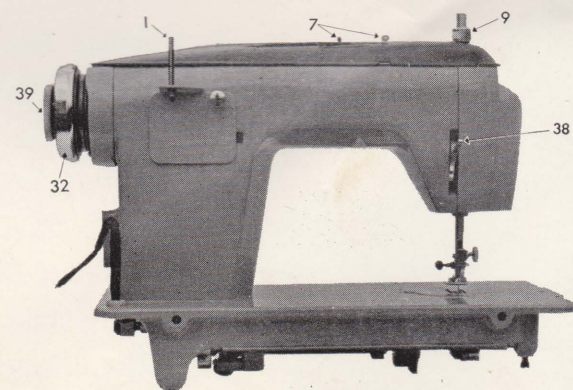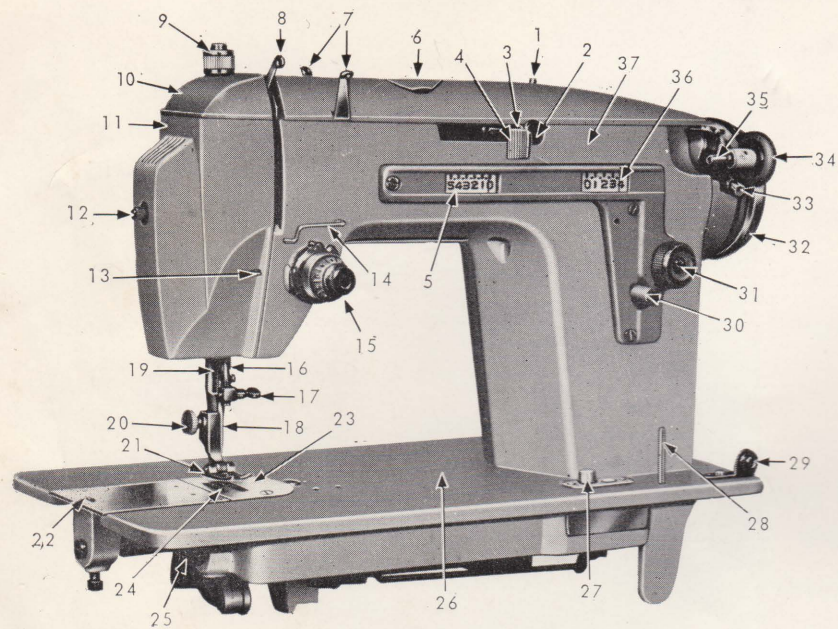

\$259.50

INDEX

Name of Each Part.....	3	To Use The Drop Feed Device...	15
To Remove The Bobbin Case.....	4	To Remove The Work.....	15
To Wind The Bobbin	4	Zigzag Sewing.....	16
To Thread The Bobbin Case.....	6	Satin Stitches	16
To Insert The Bobbin Case.....	7	Automatic Pattern Sewing	17
To Insert The Needle	7	To Insert The Pattern Cam	18
To Thread The Needle	8	Button Sewing.....	19
To Start Sewing.....	9	Buttonhole Sewing.....	20
Thread Tensions	10	Darning and Embroidery.....	22
To Regulate The Upper Thread Tension	11	Hemming.....	23
To Regulate The Lower Thread Tension	11	Braid Sewing	24
To Regulate The Direction of Feed and Stitches	12	Quilting	25
To Regulate The Pressure on The Presser Foot	13	Cloth Guide	26
To Use The Built-In Sew Light...	14	To Clean The Shuttle Race.....	27
		To Oil The Machine.....	28
		Suggestions for Smooth Sewing ...	30
		Right Needle and Thread for Right Cloth...	32

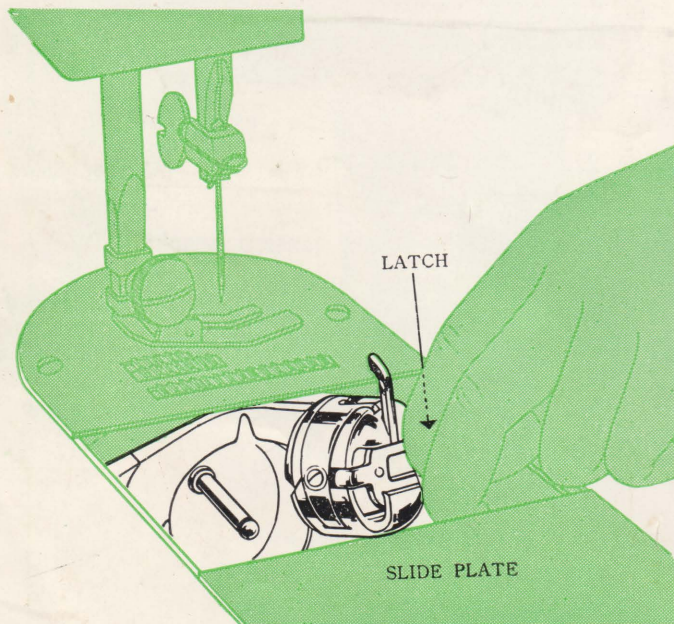

TO REMOVE THE BOBBIN CASE


Raise the needle to its highest point. Open the slide plate in the bed. Open the bobbin case latch and withdraw the bobbin case. On releasing the latch and turning the bobbin case downward, the bobbin will drop out.

TO WIND THE BOBBIN

Disengage the stitching mechanism by turning the stop motion screw over toward you with the right hand, while holding the hand wheel in the left hand. Place a spool of thread on the spool pin on the bed.




Wind the free end of the thread several times round the bobbin and press it onto the spindle passing the thread through the tension bracket. Press the push-button until the latch fits securely into the bobbin. When the bobbin is filled, the latch automatically disengages and stops the winding operation.

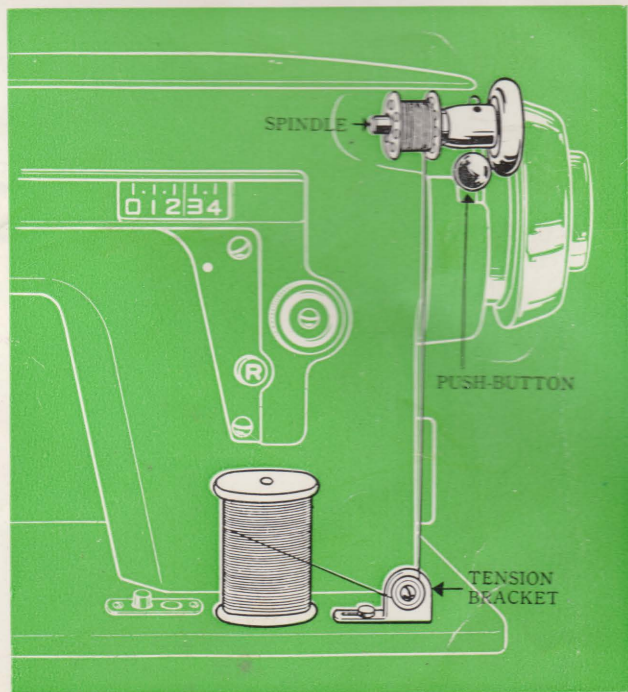


TO THREAD THE BOBBIN CASE


Place the threaded bobbin into the bobbin case.

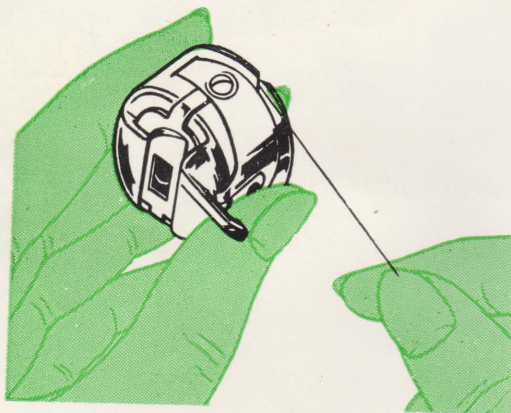

↑
Then pull the thread under the tension spring and into the slot.

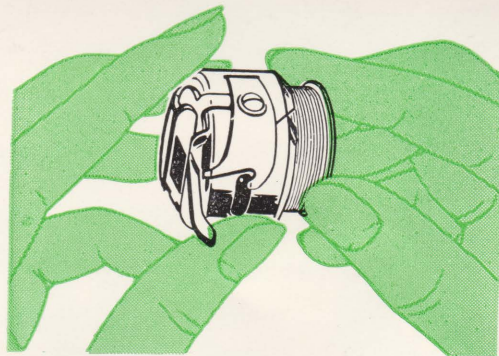


Pull the thread and guide it into the slot in the edge of the bobbin case.

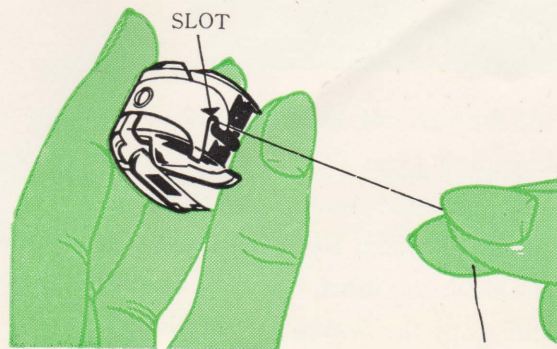

TO INSERT THE BOBBIN CASE

Hold the bobbin case by the latch and place it on the center post of the shuttle.


Release the latch and press the bobbin case back until the latch enters the groove in the center post. Permit the bobbin thread to hang down freely a few inches.

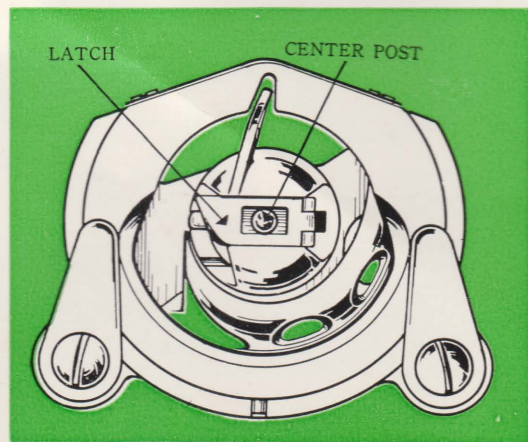

TO INSERT THE NEEDLE

Raise the needle bar to the highest point. Loosen the needle clamp screw and push the thick end of the needle, with the flat side to the right, into the slot of the needle bar.

Insert the needle as far as it will go, then tighten the clamp screw firmly.

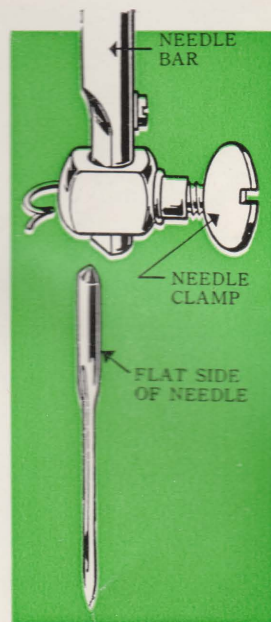

TO THREAD THE NEEDLE

Raise the take-up lever to its highest point.

Place a spool of thread on the spool pin on the back of the machine arm.

Pass the thread through the thread guides (1, 2)

Downward through the thread guide (3)

Between the tension discs (4) from right to left

Up and into the hook of take-up spring (5)

Pull the thread upward so that the thread will drop into the tension thread guard (6)


Then pass through the hole of the take-up lever (7)

Down through the face plate thread guide (8)

Into the wire thread guide (9), at the end of the needle bar

From left to right through the eye of the needle (10).


Draw about four inches of thread through the eye of the needle with which to commence sewing.

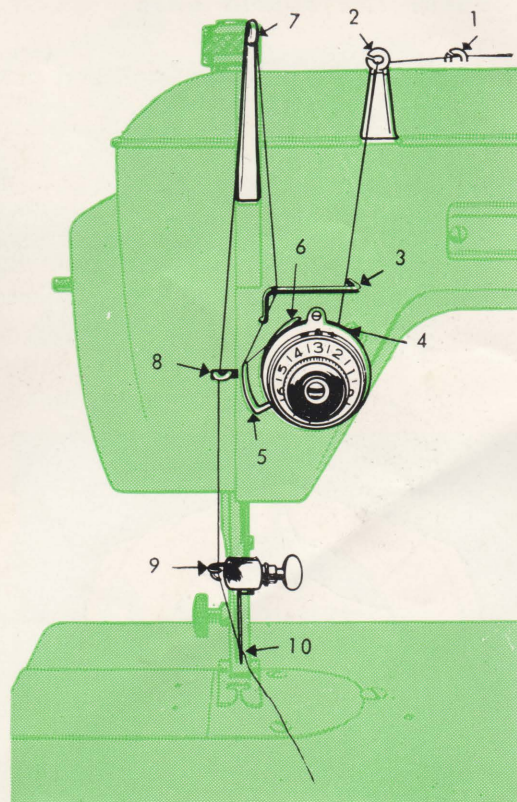

TO START SEWING

Turn the hand wheel toward you with the right hand until the needle moves down and up again to its highest point, thus catching the bobbin thread.

Now pull the end of the thread you are holding and the bobbin thread will be brought up with it through the needle hole. Place both ends of threads back under the presser foot. Place the fabric to be sewn beneath the presser foot, lower the foot upon it and then start sewing.

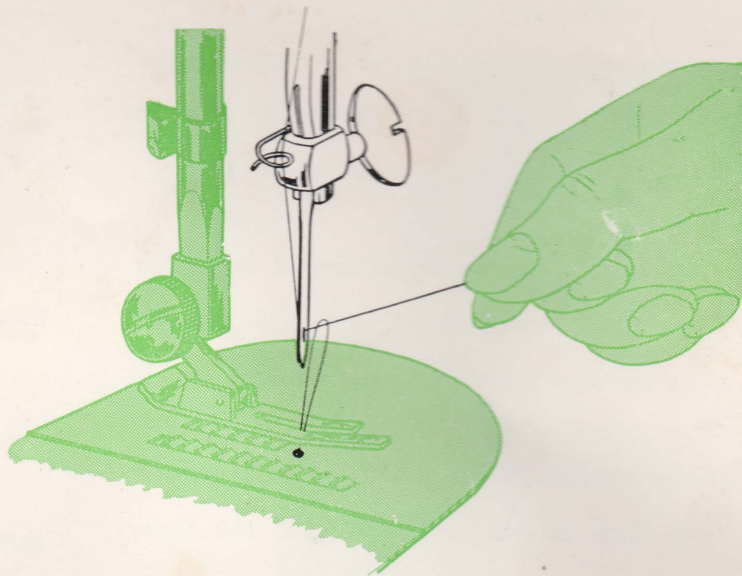

THREAD TENSIONS

For ordinary stitching the tension on the upper and lower threads should be equal so as to lock both threads in the center of the fabric,

If the tension on the upper thread is greater than on the lower thread, it will lie straight along the upper surface of the fabric,

If the tension on the lower thread is greater than that on the upper thread, the lower thread will lie straight along the underside of the fabric,

thus .



thus :



thus :




TO REGULATE THE UPPER

THREAD TENSION


The tension on the upper thread will become stronger when the tension dial is turned in the direction marked (+).

Contrariwise, the upper thread tension becomes weaker when the dial is turned in the direction marked (-).

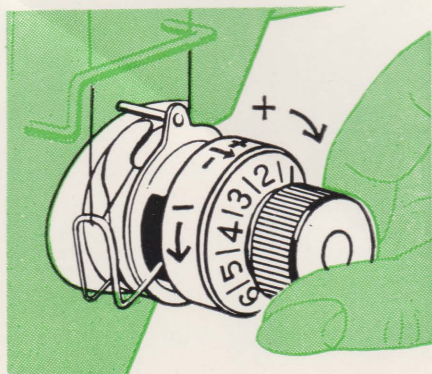

TO REGULATE THE LOWER

THREAD TENSION


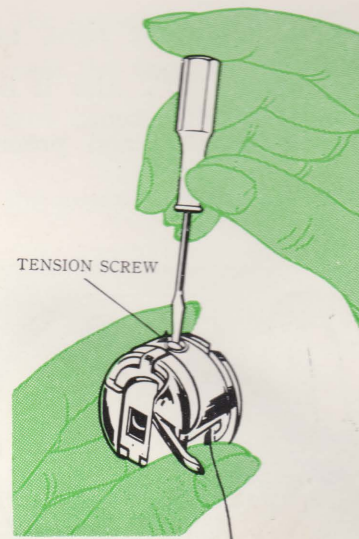


Tension on the lower thread is regulated by the screw on the bobbin case tension spring.

Use a small driver and tighten the screw slightly to increase the tension, or loosen it to slacken the tension.


TO REGULATE THE DIRECTION OF FEED AND STITCHES

For straight sewing, the zigzag width regulating lever must be set to the right, so that the indicator points to "O". Also it is advisable to use the needle plate and presser foot for straight stitching.

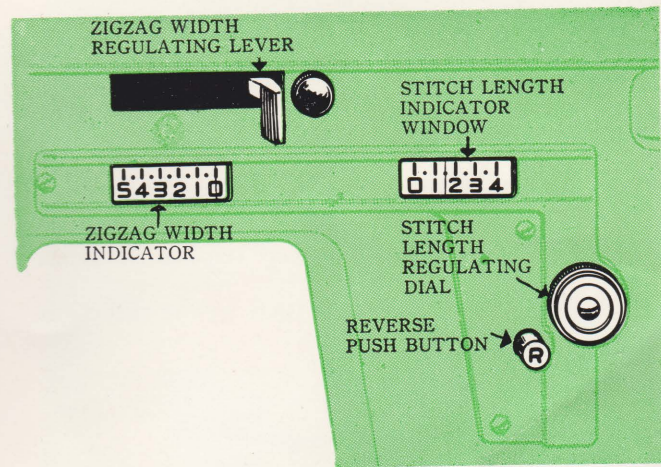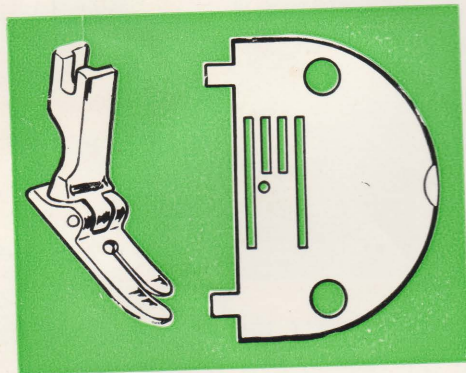


For reverse stitching, keep pressing button "R" until the desired length of stitches are sewn. Reverse stitching is used for reinforcement at the beginning and end of seam. To regulate the length of stitch, turn the stitch length regulating dial to the required length, as shown in the stitch length indicator window.

TO REGULATE THE PRESSURE ON THE PRESSER FOOT

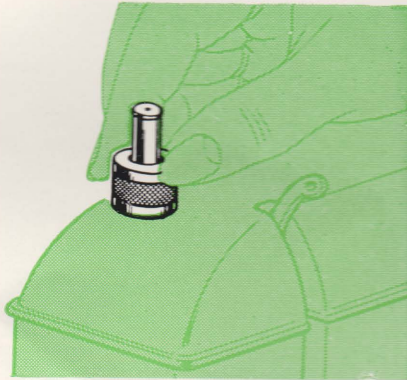

For sewing very thin or heavier materials, the pressure on the presser foot should be regulated so as to prevent the material to pucker or to enable the feed to move the material evenly.

To release the pressure on the presser foot, press down the ring, which allow the bar to spring up to its highest position and leave the material free from any pressure from the presser foot.


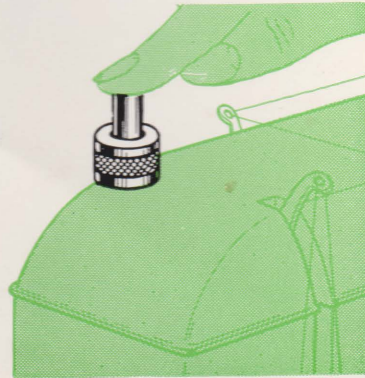


For sewing very thin fabrics, press the top of the bar lightly to get the required light pressure on the presser foot.

For sewing heavier materials, push the top of the bar down further, in order to get a stronger pressure on the presser foot.


TO USE THE BUILT-IN SEW LIGHT

To insert the electric-bulb, loosen the face plate screw and remove the face plate, then the bulb can be easily changed.

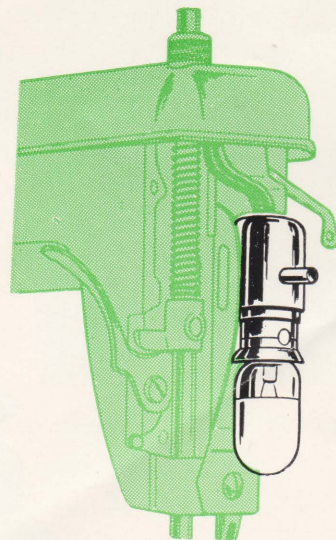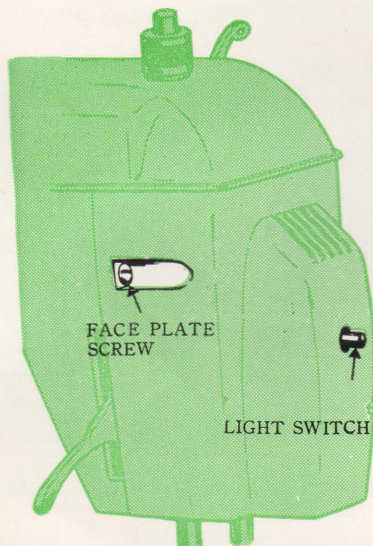

The light is turned on and off by the light switch

TO USE THE DROP FEED DEVICE

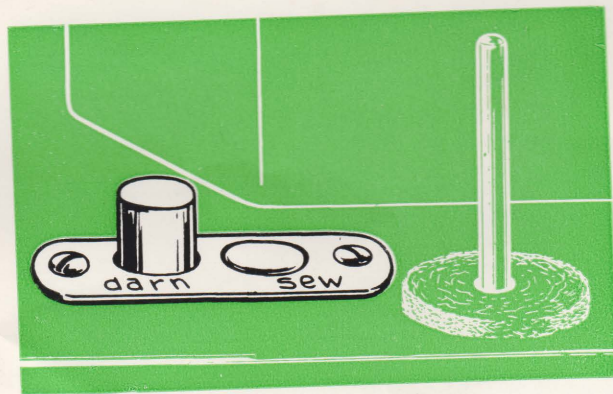

TO REMOVE THE WORK

Darning and embroidering is facilitated by means of the drop feed buttons on the right hand corner of the bed.


Push the button "Darn" and the feed dog drops below the surface of the needle plate so that it will permit the free movement of the cloth.

To move the feed dog to the normal position, push the button "Sew"

Raise the needle bar to its highest point; lift the presser foot and draw the fabric back and cut the ends of threads. Leave the machine threads about four inches long for resuming sewing.

ZIGZAG SEWING



For zigzag sewing, the needle plate and presser foot must be for general use.

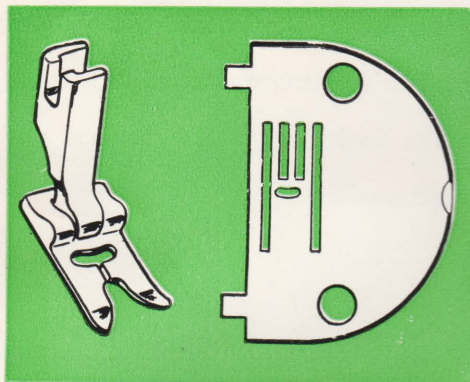

To regulate the width of zigzag stitch, move the lever "A" to the required width as shown in the indicator window, and lock with the stopper "B". To set the stopper "B", move the stopper to the desired position and tighten the stop screw "C".

SATIN STITCHES



For satin stitches, the stitch length should be set at "0.5" or less; also the needle tension be regulated to give a lighter tension than straight stitch. The wider satin stitch requires the lighter tension.

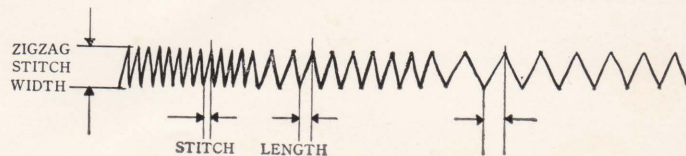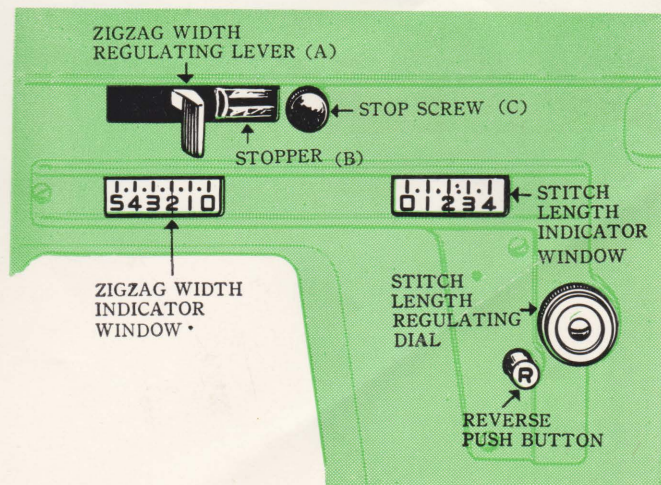

AUTOMATIC PATTERN SEWING


By inserting the Pattern Cam in the zigzag width regulating mechanism, the beautiful decorative patterns are sewn automatically by the operation of cam.

15 cams are supplied with each machine and produce the individual patterns as follows :

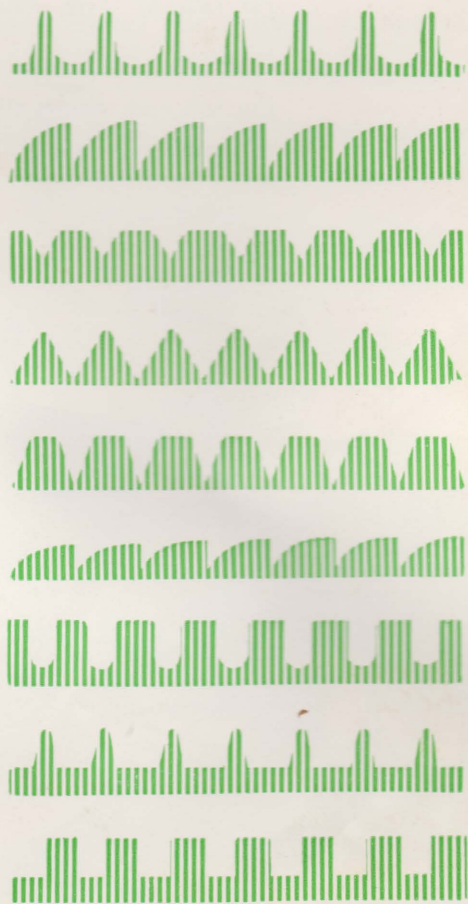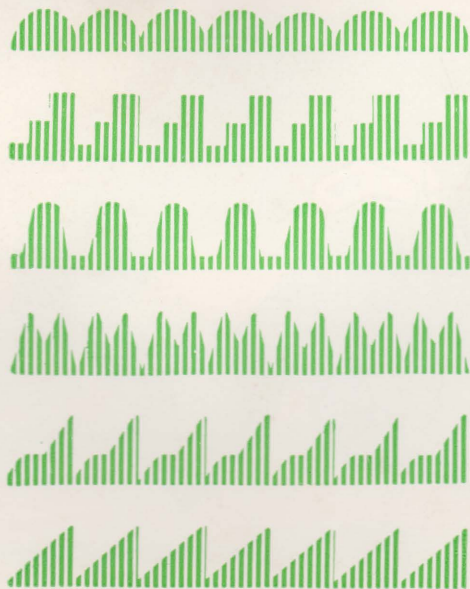

TO INSERT THE PATTERN CAM

Open the lid on the upper arm, pull the zigzag width regulating lever to the left end, insert the cam on the post (A), turn the cam until the retaining pin enters the hole in the base of the cam, and press it down.

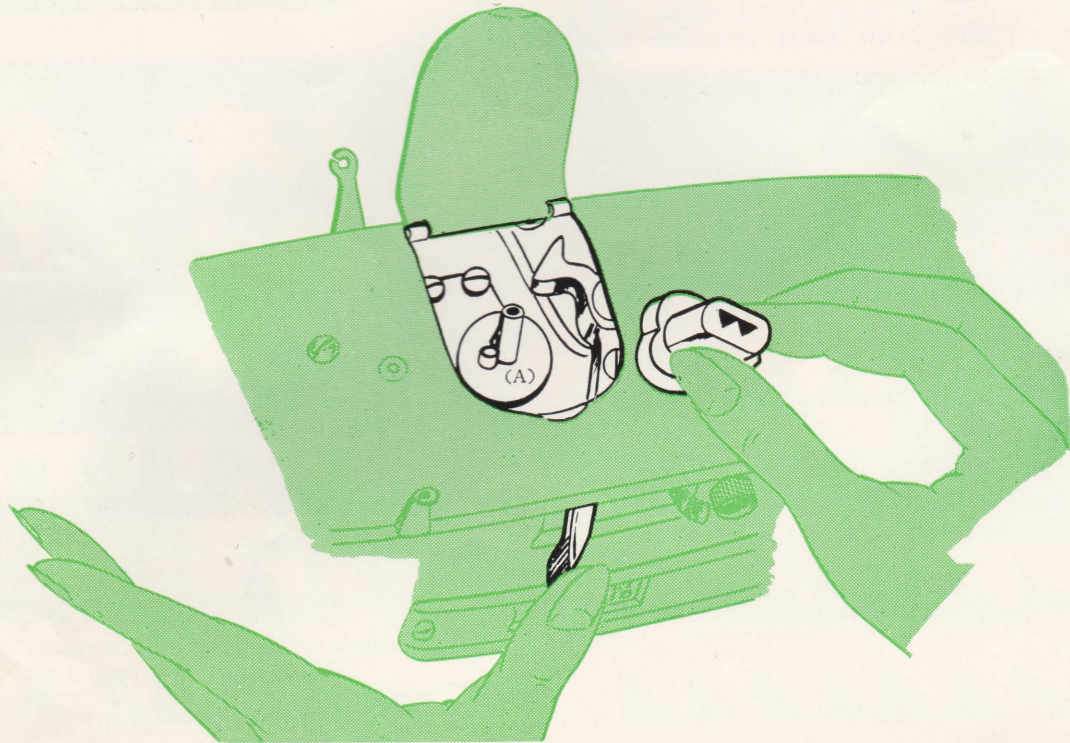

BUTTON SEWING

Remove the regular foot and attach the button sewing foot.



Drop the feed by pressing down the drop feed button "Darn".

Set the zigzag width regulating lever to "5" or less, according to the distance between the holes in the button, and lock the lever with the stopper.

Place the button between the foot and the material, with its holes in a horizontal line and lower the foot upon it.

Turn the hand wheel slowly toward

you, making sure the needle enters the holes in the button. Slowly start the machine, making about six or seven stitches. To knot the thread, set the lever to "O" and make three or four stitches.

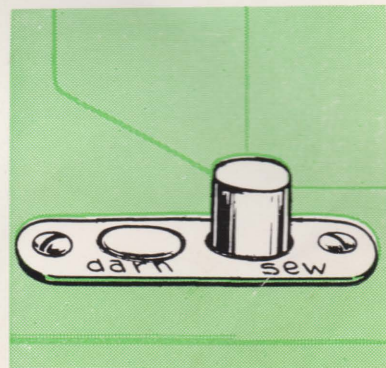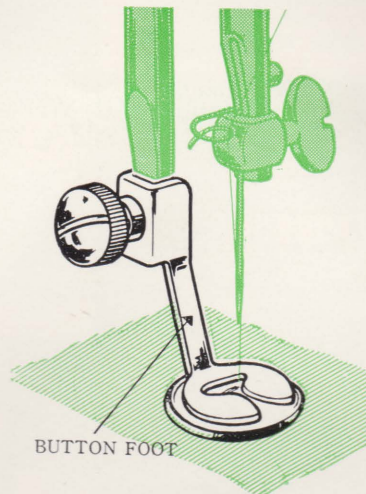


BUTTONHOLE SEWING


Remove the regular foot and attach the buttonhole foot. Set the zigzag width regulating lever to a little less than "2.5".

Set the stitch length regulating dial to obtain closely spaced stitches.

Mark with pencil or chalk the position and exact length of the buttonhole on the fabric.


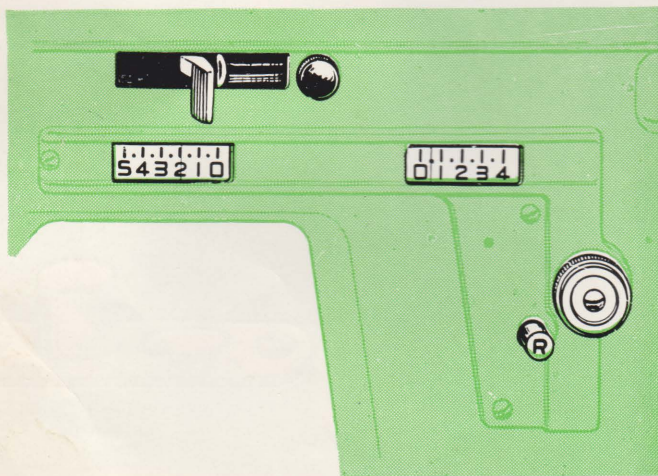


Place the foot on one end of the marking, commence sewing the left buttonhole seam until it reaches the end of the marking. (1)

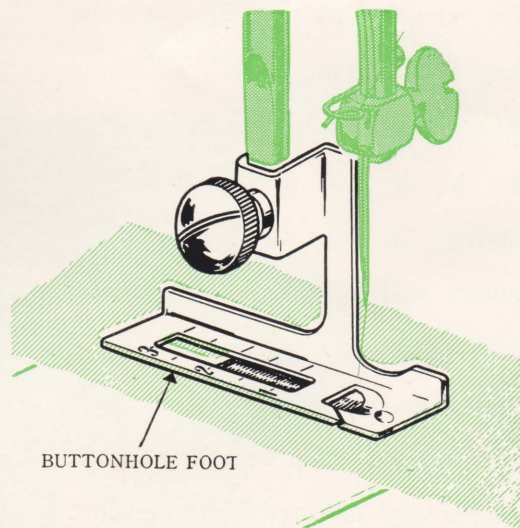


BUTTONHOLE SEWING

To close the end, drop the feed by pressing down the drop feed button "Darn", set the zigzag width regulating lever to "5" and sew three or four stitches. (2)

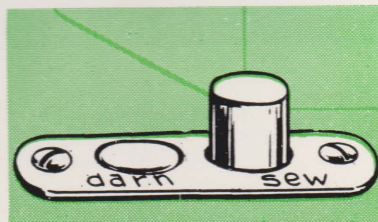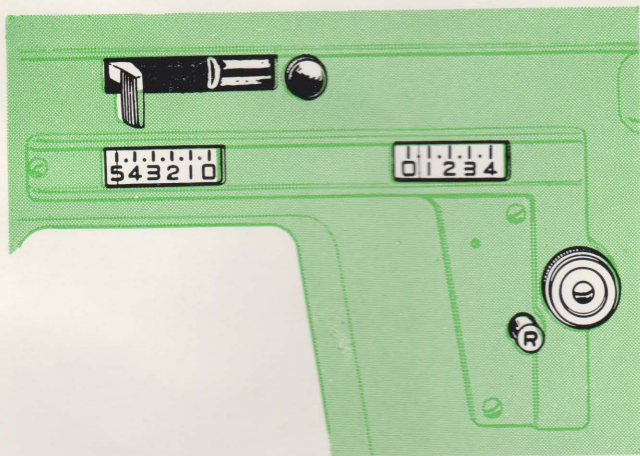

Now to sew the other side of the buttonhole, turn the fabric around 180 degrees, and repeat the procedure as before. (3) (4)

Remove the fabric from the machine and open the buttonhole with a buttonhole cutter or seam ripper.

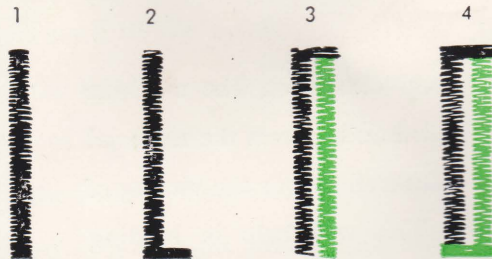

DARNING AND EMBROIDERY

Drop the feed by pressing down the drop feed button "Darn".



Remove the presser foot and replace the needle plate with the needle plate for embroidery.

It is advisable to use an embroidery hoop, in which the material to be fixed and stretched.

Hold the hoop closely on the machine bed with both hands, press the material with your left forefinger in the vicinity of the needle. This will help in holding down the material and will prevent the machine from making skipped stitches. Manipulate work carefully and be sure to keep fingers out of the path of the needle.



Adjust the thread tensions for the best appearance of embroidery work and slightly increase the bobbin thread tension to avoid the lower thread from being pulled up.

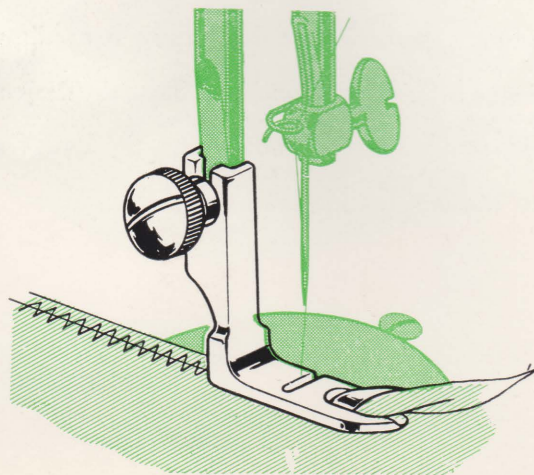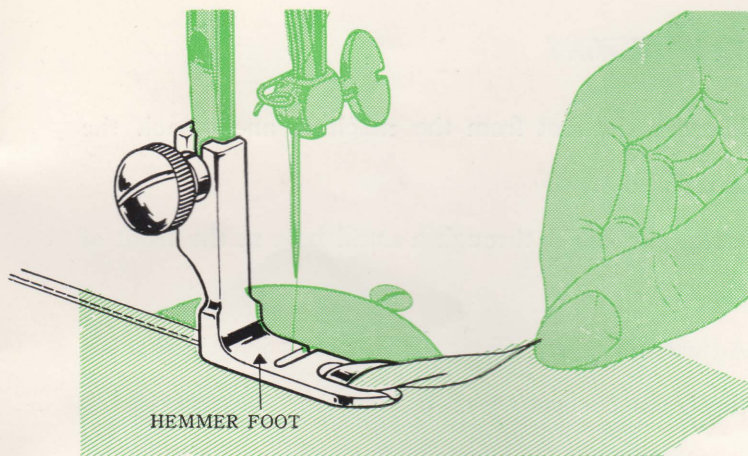

HEMMING


Remove the regular foot and attach the hemmer foot.

Fold over the edge of the fabric approximately $\frac{1}{8}$ inch wide, then fold it over again in the same way for a length of about 2 inches.

Insert this folded end into the scroll of the hemmer foot. Move the fabric back and forth until the hem forms itself in the scroll.

Pull the fabric toward you until the beginning of the hem is just below the needle. Guide the fabric into the hemmer foot while proceeding.

Instead of a straight stitch, you can also use a zigzag stitch for this hemming operation. Be sure, however, to adjust the width of the zigzag stitch so that it is as wide as hem itself.

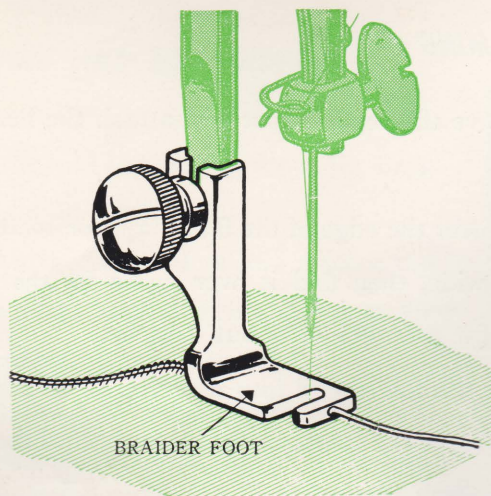

BRAID SEWING


Remove the foot from the machine and attach the braider foot.

Insert the braid through a small hole at the front of the foot.

Adjust the width of zigzag seam and length of stitch to obtain a covering of the braid which appears the most desirable for the material you are sewing.

Braiding is most effective when apply to applique work.

To make braided applique, first baste the design on the fabric, sew with braid outlinning the design and cut away the surplus material.

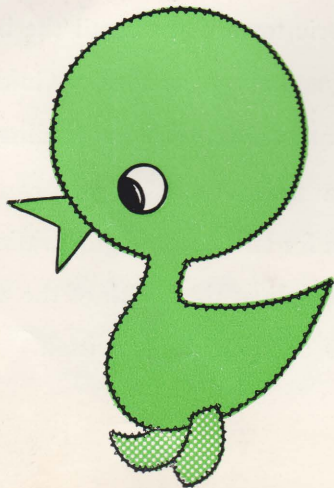


QUILTING

The quilting attachment will enable you to sew equi-distant lines on padded fabric without the necessity of marking them in advance.

To attach the quilter to the presser bar of the machine, raise the presser bar, loosen the thumb screw and clamp the quilter by the thumb screw.

Adjust the curved hook to the desired distance from the needle and adjust it to press into the fabric.


When sewing the hook should follow the preceeding line of stithing.

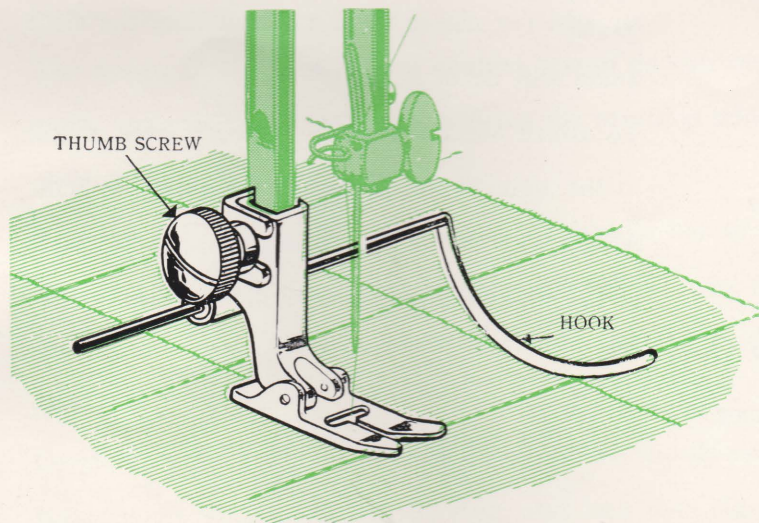

CLOTH GUIDE

When you wish to sew close to the edge of fabric or to make a wide hem up to $1\frac{1}{2}$ inches in a straight (or zigzag) and uniform line, the cloth guide will be of help.

To attach the cloth guide, place it over a hole to the right of the needle in the machine bed. Attach with the thumb screw, adjusting the guide to the desired distance, then tighten firmly.

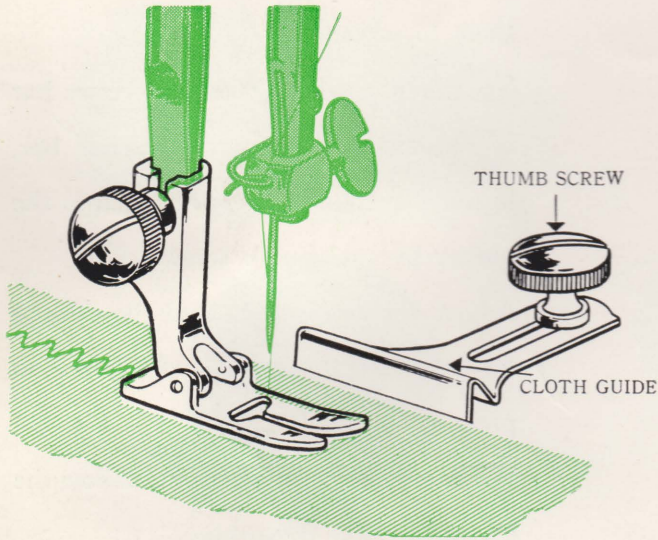


TO CLEAN THE SHUTTLE RACE

It will sometimes be necessary to open the shuttle race in order to remove loose pieces of thread that have been caught in the hook.

The design of the shuttle race enables you to do this most easily and efficiently, without sacrificing the precision which is so essential to these parts.

To open the shuttle race, first raise the needle bar to its highest point and remove the bobbin case. Next, twist the shuttle race ring clasps outward, then take out the shuttle race ring.

Carefully remove the shuttle and clean out the shuttle race. Replace the shuttle, the shuttle ring, and lock with clasps. Be careful not to drop or otherwise damage the shuttle.


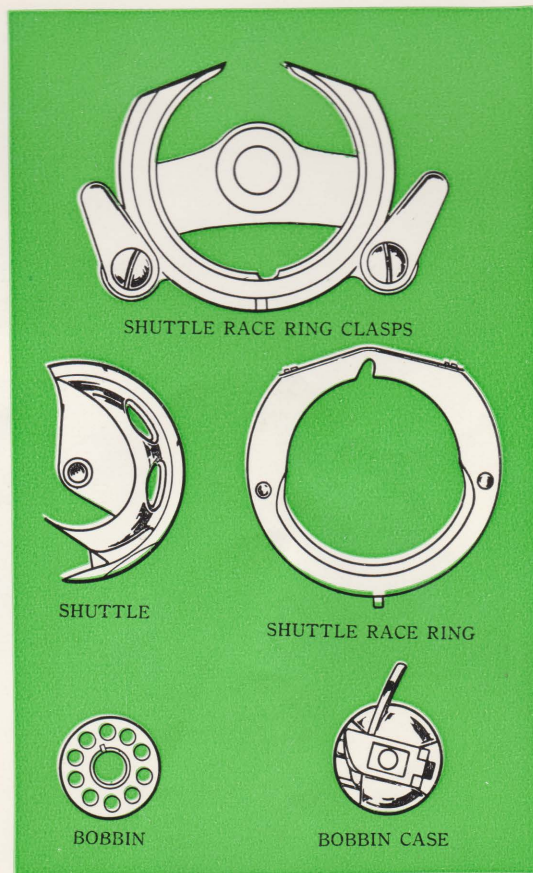


TO OIL THE MACHINE

To ensure easy and free working of the machine, it is necessary that all moving parts be covered with a film of oil and not be allowed to become dry.

The shuttle race should also be oiled frequently.

The machine should be oiled at the places indicated by arrows in the illustrations.

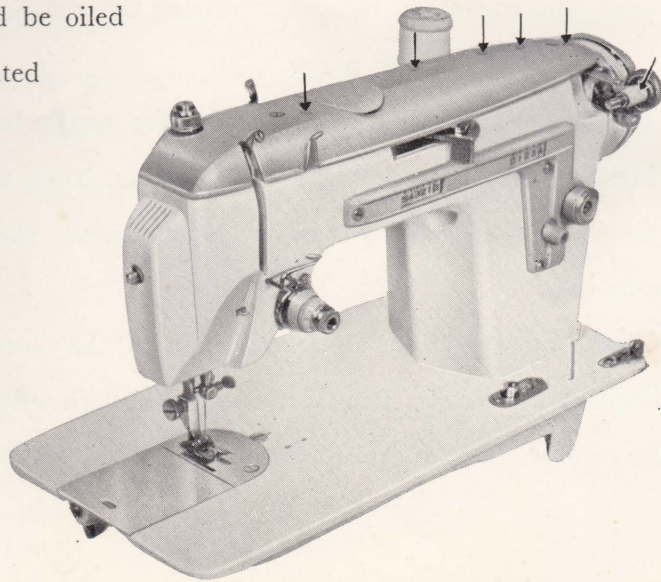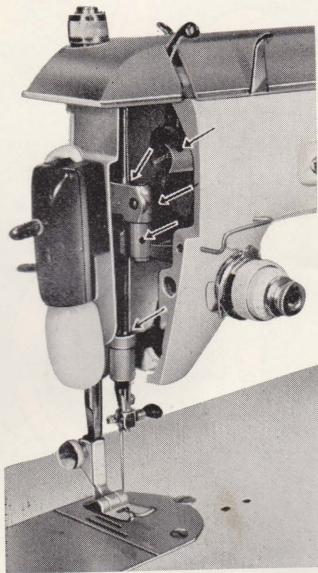


TO OIL THE MACHINE

To avoid soiling of the material apply only a few drops of oil at each oil hole.

After oiling, run the machine rapidly for a few minutes to work the oil into the bearings.

When in constant use the machine should be oiled two or three times a week.

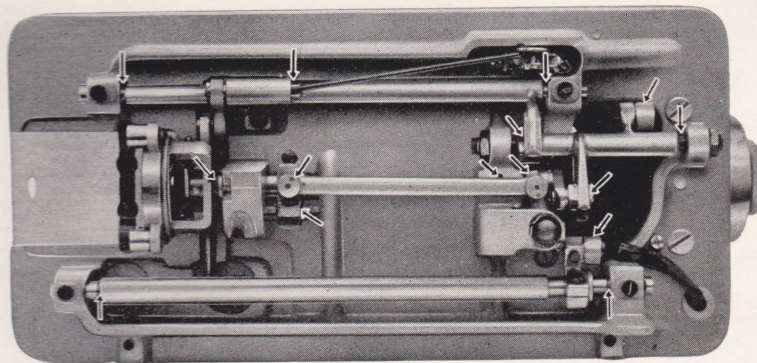

SUGGESTIONS FOR SMOOTH SEWING

Machine Working Heavily

See if the shuttle race, feed and underneath parts of needle plate are clogged with lint. If so, clean out the part.

If the machine works hard after standing for some time, apply a little kerosence in place of oil.

Then run the machine rapidly to clean the bearings, and oil with sewing machine oil. The use of inferior oil is usually the cause of the machine working heavily.

Thread Breaks

If the needle thread breaks, it is probably due to one of the following causes:

The machine being improperly threaded.

The tensions being too tight.

The needle being bent or having a blunt point.

The thread take-up spring broken.

If the lower thread breaks, adjust the bobbin tension; also see that the inside of the bobbin case and the underneath part of the tension spring are free from lint.

SUGGESTIONS FOR SMOOTH SEWING

Skipped Stitches

A bent or blunt pointed needle is often the cause of this. See that the needle is accurately inserted. Remove the needle plate and after ascertaining that the feed is clean and working freely, replace the needle plate.

Needle Breaks

See that the needle is not bent and avoid pulling the material when stitching; either condition will cause the needle to strike on the needle plate and break.

Material Puckers

This generally due to incorrect tension. See that both the bobbin case and the needle are properly threaded; that the thread used is of good quality and the correct size for the needle.

Stitches Loop

This is regulated by the tensions. See that both the bobbin case and the needle are properly threaded; that the thread used is of good quality and the correct size for the needle.

RIGHT NEEDLE AND THREAD FOR RIGHT CLOTH

Size of Needles	Cloth	Size of Threads
No. 9	Thin calico, silk, serge and muslin.	No. 80-100 cotton thread or fine silk thread.
No. 10	Thin calico, cotton cloth, crepe de chine, hosiery and silk.	No. 60-100 cotton thread or ordinary silk thread.
No. 14	Ordinary cotton cloth, serge and thin woolen goods, towels and shirting.	No. 40 - 60 cotton thread or ordinary silk thread.
No. 16	Thick cotton cloth, serge and thin woolen goods.	No. 30 - 60 cotton thread or ordinary silk thread.
No. 18	Ordinary woolen goods, trousers, overcoats, thick calico and children's clothes.	No. 30 - 60 cotton thread or ordinary silk thread.

Note: Use a good quality mercerized cotton thread, if available, to avoid shrinking when laundered.

